

SILENCE BUTTON INSTRUCTIONS

1. INSTALL BATTERY

Remove the cover and snap battery into battery snap.



2. OPERATION

In the default mode, the button will silence the audio buzzer while the LED keeps blinking until the alarm state is corrected. If not in an alarm state, the button tests the circuit.

There is a two second delay to damp any sloshing of the liquid.

A low battery voltage is signaled by a intermittent beeping for 5 seconds every 30 seconds, (to conserve power). The LED will blink continuously.




PUSHBUTTON

3. DIFFERENT MODES

Jumpers C and D work in combination to produce these modes:

MODE	C	D	BEHAVIOR	WIRE TERMINAL	USE
1	OFF	OFF	Pushing button silences alarm, LED continues to blink until level corrected. Snooze alarm every 30 mins.	LS2	Default
2	OFF	OFF	Pushing button silences alarm, LED continues to blink until level corrected No snooze alarm.	LS1	
3	ON	OFF	Buzzer output - for 4 seconds. (one time) LED2 - repeating output every 10 mins.	LS1	Wireless
4	OFF	ON	Two inputs, two separate outputs.	LS1	Special
5	ON	ON	Pushing the button shuts of the buzzer <i>and</i> LED. Automatically resets when level is corrected.	LS1	Shutoff
6	ON	ON	No program.	LS2	Custom

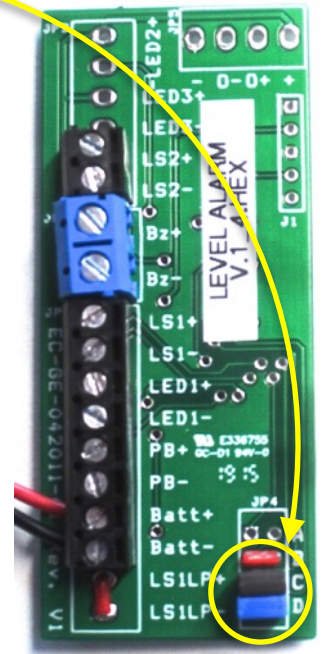

4. BATTERY LIFE

The low power circuit allows the battery to last for 10 years. Any alarms will deplete the battery at a rate of 25mA. The lithium battery included (capacity of 1250mA-hr) will produce a continuous alarm for about 50 hours. Wireless mode will last much longer due to the infrequent alarm and absence of a buzzer.