

GE's
Automation & Controls

Programmable Control Products

**PACSystems* RX3i 1GHz
64MB CPU w/Ethernet
IC695CPE330 Quick Start
Guide**

GFK-2941E

May 2016



Contents

1. User Features	2
1.1. Switches	4
1.2. Light-Emitting Diode Indicators (LEDs)	5
1.3. Ethernet Ports	6
2. Hardware Installation.....	9
2.1. Initial Checks.....	9
2.2. Installation Location	9
2.3. Installation in Hazardous Areas	10
2.4. Grounding.....	10
3. Module Start-up.....	11
3.1. You Will Need:	11
3.2. Basic Installation Steps:.....	11
3.3. Redundancy Configuration.....	12
3.4. PROFINET Controller Configuration	13
3.5. Backward Compatibility with CPU320/CRU320/CPU315	13
3.6. Removable Data Storage Device (RDSD)	16
4. Periodic Maintenance	16
4.1. Real-Time Clock Battery	16
4.2. Spare Parts	16
5. Additional Information	17

1. User Features

The PACSystems* RX3i CPE330 is a richly featured programmable controller CPU equipped with a 1GHz dual-core microprocessor, 64Mbytes of built-in program memory and two independent high-speed Ethernet interfaces. Its metal housing provides superior noise immunity.

The CPE330 is programmed and configured over Ethernet via GE's Proficy* Machine Edition (PME) software. It resides in the RX3i main rack and supports all RX3i I/O and Intelligent Option modules, up to 32K I/O points.

- RX3i Hot Standby Redundancy CPU with support for PROFINET I/O using IC695PNC001 PROFINET Controllers.
- RX3i Hot Standby Redundancy with Ethernet (EGD) & Genius I/O.
- Simplex PROFINET I/O Controller with support for up to 32 I/O devices and update rates of 1 – 512ms. I/O device update rates of 8ms and faster are possible with 16 or fewer devices. When there are more than 16 devices configured, update rates of 16ms and higher are available.
- Supports two independent 10/100/1000 Ethernet LANs. As shown in Figure 1, LAN1 attaches via the upper, dedicated RJ-45 connector. LAN2 attaches via the lower pair of internally-switched RJ-45 connectors.

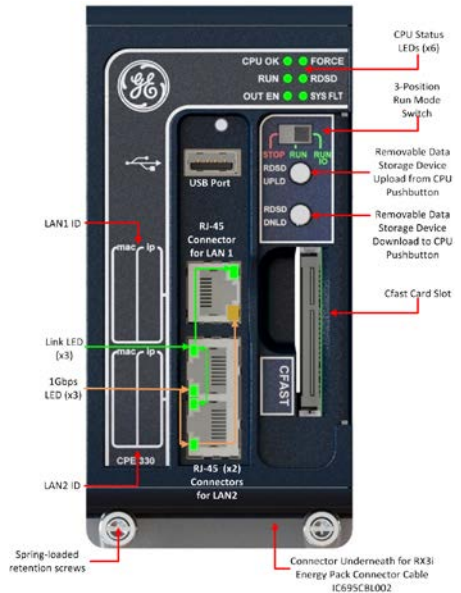


Figure 1: IC695CPE330 Features at a Glance

- The embedded Ethernet interface is supported by a dedicated microprocessor core. This dedicated processing capability permits the CPU to support these two LANs with:
 - up to 48 simultaneous SRTP Server connections;
 - up to 16 simultaneous Modbus/TCP Server connections;
 - 32 Clients are permitted; each may be SRTP or Modbus/TCP.
 - OPC UA Server with support for up to 5 concurrent sessions with up to 10 concurrent variable subscriptions and up to 12,500 variables;
 - up to 255 simultaneous Class 1 Ethernet Global Data (EGD) exchanges;
 - two independent Redundant IP addresses, one for each of the embedded Ethernet LANs.
- Achilles Level 2 Communications Certification¹.
- Optional Energy Pack, IC695ACC402, allows CPE330 to instantly save user memory to non-volatile storage in the event of loss of power.
- Ability to transfer user programs and/or data to and from USB 2.0 A type Removable Data Storage Devices (RDSs).
- HART Pass Through allows the CPE330 to communicate HART asset management data between HART-capable I/O modules and PC-based asset management tools. (Requires additional HART-compatible products.)
- User may program in Ladder Diagram, Structured Text, Function Block Diagram, or C.
- Contains 64Mbytes of configurable data and program memory.
- Supports auto-located Symbolic Variables that can use any amount of user memory.
- Reference table sizes include 32k bits for discrete %I and %Q and up to 32k words each for analog %AI and %AQ. Bulk memory (%W) also supported for data exchanges.
- Supports up to 512 program blocks. Maximum size for a block is 128KB.
- For supported I/O, Communications, Motion, and Intelligent modules, refer to the *PACSystems RX3i System Manual*, GFK-2314.

¹ Achilles Level 2 Communications Certification available in CPE330 R8.80

- Ability to display serial number and date code in PME Device Information Details.
- Operating temperature range 0°C to 60°C (32 °F to 140 °F).

1.1. Switches
















The Run/Stop switch and RDSU UPLD and RDSU DNLD pushbuttons are located behind the protective front door. Switch operation is given in the following table.

<i>RDSU Pushbuttons</i>	<i>Function</i>	
RDSU UPLD	Loads user program or data from CPU to RDSU.	
RDSU DNLD	Stores user program or data from RDSU to CPU.	
<i>Run/Stop Switch Position</i>	<i>A three-position switch which operates as follows:</i>	
	<i>CPU and Sweep Mode</i>	<i>Memory Protection</i>
Run I/O	The CPU runs with I/O sweep enabled.	User program memory is read only.
Run	The CPU runs with outputs disabled.	User program memory is read only.
Stop	The CPU is not allowed to go into Run mode.	User program memory can be written.

The **Run/Stop** switch is enabled by default; it can be disabled in the PME Hardware Configuration (HWC) settings. The memory protection function of this switch can be disabled separately in HWC. The memory protection functionality is disabled by default.

1.2. Light-Emitting Diode Indicators (LEDs)

Status Indicators

LED	LED State	Operating State
CPU OK	 On Green	CPU has passed its power-up diagnostics and is functioning properly. <i>(After initialization sequence is complete.)</i>
	 Off	Power is not applied or CPU has a problem, which may be indicated by blink pattern.
	 Blinking Other LEDs off	CPU in Stop-Halt state; possible watchdog timer fault. If the programmer cannot connect, cycle power with charged Energy Pack attached and refer to fault tables.
CPU OK	 On Amber	CPU indicating CPU320/CRU320 compatibility setting
FORCE	 On Amber	Refer to the section, <i>Backward Compatibility with CPU320/CRU320/CPU315</i> for more information.
RUN OUT EN	 Blinking in unison 	CPU is updating an internal programmable hardware device.
RUN	 On Green	CPU is in Run mode.
	 Off	CPU is in Stop mode.
OUT EN	 On Green	Output scan is enabled.
	 Off	Output scan is disabled.
FORCE	 On Amber	Override is active on a bit reference.
	 Off	No Overrides active in I/O Reference Tables.
RDSD	 On Green	USB Device detected (No Activity)
	 Blinking Green	Port activity detected on USB Interface

LED	LED State	Operating State
	○ Off	No port activity detected on USB Interface
	● On Red	RDSB Failure
	✖ Blinking Red	Target name mismatch: Press same RDSB pushbutton again to dismiss.
SYS FLT	● On Red	CPU is in Stop/Faulted mode: a fatal fault has occurred.
	○ Off	No fatal faults detected.

CPE330 Ethernet Indicators

LED	LED State	Operating State
LINK (upper)	● On Green	The corresponding link is physically connected.
	✖ Blinking Green	Traffic is detected at the corresponding port.
	○ Off	No connection detected at corresponding port.
1Gbps (lower)	● On Amber (LAN1) or ● On Green (LAN2)	Corresponding network data speed is 1 Gbps.
	○ Off	Corresponding network data speed is 100 Mbps or 10 Mbps.

1.3. Ethernet Ports

LAN1 connects to the uppermost RJ-45 connector. It is not switched. LAN2 connects to the two lower RJ-45 connectors. They are switched internally. Record the IP Address of each LAN in the space provided (Figure 1).

Each of the embedded Ethernet interfaces automatically senses the data rate (10 Mbps or 100 Mbps or 1 Gbps), communications mode (half-duplex or full-duplex), and cabling arrangement (straight-through or crossover) of the attached link.

For improved performance, the two Ethernet LANs are serviced by a dedicated microprocessor core. In addition, each Ethernet LAN is serviced by a dedicated Network Interface Controller (NIC). In this way, the servicing of the Ethernet ports is independent of the controller logic and I/O scanning. This superior level of servicing is required at the higher communications rates.

Any of the embedded Ethernet ports may be used to communicate with the PME programming software using the Service Request Transport Protocol (SRTP, a proprietary GE protocol, used primarily for communication with the programmer).

To establish Ethernet communications between the PME programming and configuration software and the CPU, you *first* need to set an IP address. Use the Set IP Address tool (refer to *PACSystems RX3i and RX7i CPU Reference Manual*, GFK-2222V) or use the factory-shipped default settings:

	CPE330 LAN1	CPE330 LAN2
IP Address:	192.168.0.100	10.10.0.100
Subnet Mask:	255.255.255.0	255.255.255.0
Gateway:	0.0.0.0	0.0.0.0

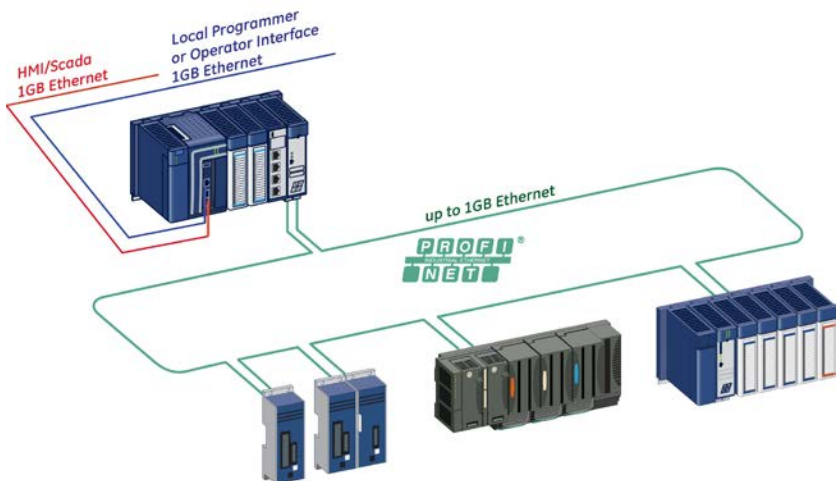


Figure 2: Typical Multi-tier LAN Application

A typical application will take advantage of the two independent LANs. The dedicated LAN1 port will be used for communications with plant-level or supervisory layers. The switched LAN2 will typically be used to communicate with devices within the manufacturing cell or process, including local HMI devices and micro-controllers.

2. Hardware Installation

2.1. Initial Checks

Upon receiving your RX3i equipment, carefully inspect all shipping containers for damage. If any part of the system is damaged, notify the carrier immediately. The damaged shipping container should be saved as evidence for inspection by the carrier.

As the consignee, it is your responsibility to register a claim with the carrier for damage incurred during shipment. GE's Automation & Controls will fully cooperate with you, however, should such action be necessary.

After unpacking the RX3i equipment, record all serial numbers. Serial numbers are required if you should need to contact Customer Care during the warranty period. All shipping containers and all packing material should be saved should it be necessary to transport or ship any part of the system.

Verify that all components of the system have been received and that they agree with your order. If the system received does not agree with your order, contact Customer Care.

2.2. Installation Location

This product is intended for use with the RX3i system. Its components are considered open equipment (having live electrical parts that may be accessible to users) and must be installed in an ultimate enclosure that is manufactured to provide safety. At a minimum, the enclosure shall provide a degree of protection against solid objects as small as 12mm (e.g. fingers). This equates to a NEMA/UL Type 1 enclosure or an IEC60529 IP20 rating providing at least a pollution degree 2 environment. For details about installing RX3i rack systems, refer to the *PACSystems RX3i System Manual*, GFK-2314.

If you need technical help, contact Technical Support. For phone numbers and email addresses, refer to the back cover of this Guide.

2.3. Installation in Hazardous Areas

The following information is for products bearing the UL marking for Hazardous Areas or ATEX marking for explosive atmospheres:

CLASS 1 DIVISION 2 GROUPS ABCD

- This equipment is an open-type device and is meant to be installed in an enclosure suitable for the environment that is only accessible with the use of a tool.
- Suitable for use in Class I, Division 2, Groups A, B, C and D Hazardous Locations, or nonhazardous locations only.



WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.



WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS AREAS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES.

ATEX Zone 2

This module must be mounted in an enclosure certified in accordance with EN60079-15 for use in Zone 2, Group IIC and rated IP54. The enclosure shall only be able to be opened with the use of a tool.

2.4. Grounding

The RX3i rack into which this product will be mounted must be grounded per the instructions provided in *PACSystems RX3i System Manual*, GFK-2314. Also, if an Energy Pack (IC695ACC402) is connected, its ground-strap must be grounded as described in *PACSystems RX3i Energy Pack IC695ACC402 Quick Start Guide*, GFK-2939.

3. Module Start-up

3.1. You Will Need:

- An RX3i Universal Backplane: IC695CHS007, IC695CHS012 or IC695CHS016.
- This PACSystems RX3i CPU. This CPU occupies two backplane slots.
- An RX3i rack-mounted Power Supply Module and compatible power source (AC² or DC).
- A computer running Proficy Machine Edition (PME) configuration and programming software. PME Version 8.60 SIM 8 or later supports all features in this document.
- Ethernet cable for connecting the PME programmer computer to the RX3i CPU.
- Phillip's head screwdriver.
- Very small slotted screwdriver (1.4mm jeweler's size).

3.2. Basic Installation Steps:

For startup and configuration of the CPE330, complete the following steps. For full details on CPE330 operation, refer to the *PACSystems RX3i and RX7i CPU Reference Manual*, GFK-2222V or later.

1. Turn power off at the RX3i rack and install the CPE330 in a double-slot which is CPU-compatible (refer to *PACSystems RX3i System Manual*, GFK-2314 Chapter 3). Typically, the CPU is located in the left-most slot pair, or in the pair of slots to the right of the power supply module.
2. If used, mount the compatible RX3i Energy Pack (IC695ACC402) within 3 feet of the CPU. The dedicated interconnect cable attaches to the underside of CPE330. Follow interconnect and grounding instructions in *PACSystems RX3i Energy Pack*

² Note: on lightly-loaded racks, use IC695PSA040H or later, or IC695PSA140D or later, otherwise power-up may be unsuccessful. Alternately, fill out the empty slots in the rack so as to draw more current.

IC695ACC402 Quick Start Guide, GFK-2939. Secure the two retention flat-head screws with a very small slotted screwdriver.

3. Set the pair of hook tabs at top rear of the CPU module into two adjacent notches on the alignment rail of the RX3i rack backplane. This aligns the module with the intended slots in the main rack and with the right-side connector of this pair.
4. Swing the module down until the rear connector on the CPU module engages the mating backplane connector. Firmly engage the connectors.
5. Visually inspect the module to be sure it is properly seated.
6. Using a Phillip's head screwdriver, secure the two captive M3x5 machine screws into the matching threaded holes in the backplate of the RX3i I/O rack. The two screws are located at the bottom rear of the CPU module. Tighten.
7. Apply power to the rack.

Note: When the ACC402 Energy Pack is powered up, a period of time is required to charge it up to its operating level. During this time, the Energy Pack will indicate this condition via its LEDs (refer to *PACSystems RX3i Energy Pack IC695ACC402 Quick Start Guide*, GFK-2939).

The CPE330 will begin its boot cycle once ACC402 is charged. This typically takes 90 seconds or less. In the event the ACC402 is faulty or is not communicating, CPE330 commences operation without the Energy Pack.

3.3. Redundancy Configuration

PROFICY Machine Edition 8.60 SIM 8 or later may be used to create native CPE330 redundant applications. To enable redundancy in a CPE330 project, select the CPE330 target in the *PME Navigator* and use the *Property Inspector* to change the *Enable Redundancy* target property to *True*.

3.4. PROFINET Controller Configuration

PROFICY Machine Edition 8.60 SIM 13, PME 9.00 SIM 4 or later may be used to configure an Embedded PROFINET Controller in the CPE330 Hardware Configuration on LAN 2. To enable the PROFINET Controller in a CPE330 project, select the CPE330 target in the *PME Navigator* and open the Hardware Configuration. On the *Settings* tab, change the *LAN 2 Mode* to *PROFINET*. The *PROFINET Controller* node description now displays that it is using LAN 2 as a submodule under the CPE330.













3.5. Backward Compatibility with CPU320/CRU320/CPU315

The CPE330 also serves as a drop-in replacement for the CPU320, CRU320, and CPU315 Controllers without the need to upgrade PME. To download projects intended for the CPU320/CRU320 to a CPE330 with versions of PME that do not support the CPE330, you must change the CPE330's compatibility setting. To change the compatibility setting, perform the following operations:

1. Power off the CPE330 and remove any USB stick that might be attached to its USB connector.
2. Place the CPE330's RUN/STOP switch in the STOP position.
3. Hold down the RDS D UPLD button and turn power on to the CPE330. Continue to depress the RDS D UPLD button until the CPE330 powers up and displays one of the following patterns on the LEDs.

CPU Status Indicators

 On
  Blinking
  Off

CPE330 LED	LED State	Operating State
CPU OK FORCE RUN RDS D OUT EN SYS FLT	 On Amber  On Amber  Off  On Red  Off  On Red	Normal mode. (Compatible with CPU320)
CPU OK FORCE RUN RDS D OUT EN SYS FLT	 On Amber  On Amber  On Red  Off  Off  On Red	CRU320 Compatibility mode.

- To toggle the compatibility setting, press the RDS D DNL D button. The compatibility indication will toggle between the Normal (CPU320) and CRU320 compatibility patterns each time the RDS D DNL D button is pressed.
- When the desired compatibility setting is displayed, press the RDS D UPL D button to save the setting and allow the CPE330 to continue its normal startup procedures with the new setting. The setting is maintained over a power cycle and firmware upgrade.

Note that with versions of PME that do not have native CPE330 support, only CPU320 projects can be stored to CPE330s that are in Normal (CPU320) compatibility mode and only CRU320 projects can be stored to CPE330s that are in CRU320 compatibility mode. Users of a CPE330 with PME version 8.60 SIM 8 or later do not need to change this compatibility setting if the project is converted to a CPE330 application. By factory default, the CPE330 is set to Normal (CPU320) compatibility mode.

Migration of CPU315 applications to the CPE330 is possible with no upgrade to PME by converting them to a CPU320 application and storing the project to the CPE330.

Note that CPE330s with firmware versions 8.45 through 8.60 support compatibility with the CPU320 and CPU315 only. The compatibility setting using the RDS buttons is not supported for these firmware versions. Beginning with firmware version 8.70, CPE330s support compatibility with the CPU320, CPU315, and CRU320 using the RDS buttons to set the compatibility mode.

The compatibility setting may be viewed at any time using the CPE330's firmware update web page. When the compatibility setting is Normal (CPU320), the catalog number is listed as "IC695CPE330". When the compatibility setting is CRU320 compatibility mode, the catalog number is listed as "IC695CPE330 CRU320 Compatibility Mode".

3.6. Removable Data Storage Device (RDSD)

The CPE330 user program and/or memory contents may be saved to a USB device via the RDSD UPLD pushbutton or loaded into the CPU from a USB device via the RDSD DNLD pushbutton. Similarly, data can be selected and saved. In this way, an application may be cloned and copied from one device to another.

4. Periodic Maintenance

4.1. Real-Time Clock Battery

The CPE330 is shipped with a real time clock (RTC) battery installed (see Figure 3). Over time, this battery will need to be replaced. No action is required during initial installation.

Should the RTC battery fail, the CPU date and time will be reset to 12:00 AM, 01-01-2011 at start-up. The CPU operates normally with a failed or missing RTC battery; however, the initial CPU time-of-day (TOD) clock information will be incorrect.

There are no diagnostics or indicators to monitor RTC battery status. The RTC battery has an estimated life of 5 years and must be replaced every 5 years on a periodic maintenance schedule.

For complete procedure, refer to *Replacement of Real-Time Clock Battery on CPE330 in PACSystems RX3i and RX7i CPU Reference Manual, GFK-2222V* or later.

4.2. Spare Parts

IC690ACC001 Battery, Lithium BR2032-BA Coin Cell 3V 190mAh -40°C to +85°C

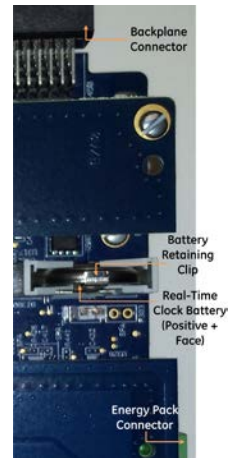


Figure 3: RTC Battery

5. Additional Information

<i>Proficy Logic Developer-PLC Getting Started</i>	GFK-1918
<i>PACSystems RX3i & RX7i CPU Reference Manual</i>	GFK-2222
<i>PACSystems RX3i & RX7i TCP/IP Ethernet Communications User's Manual</i>	GFK-2224
<i>PACSystems TCP/IP Ethernet Communications Station Manager Manual</i>	GFK-2225
<i>PACSystems RX3i System Manual</i>	GFK-2314
<i>PACSystems RXi, RX3i, and RX7i Controller Secure Deployment Guide</i>	GFK-2830
<i>PACSystems RX3i Energy Pack IC695ACC402 Quick Start Guide</i>	GFK-2939
<i>PACSystems RX3i IC695CPE330 CPU Important Product Information</i>	GFK-2942
<i>PACSystems RX3i and RX7i CPU Programmer's Reference Manual</i>	GFK-2950
<i>PACSystems HART Pass Through User Manual</i>	GFK-2929
<i>PACSystems Hot Standby CPU Redundancy User Manual</i>	GFK-2308
<i>PACSystems RX3i PROFINET IO Controller User Manual</i>	GFK-2571
<i>PROFINET I/O Devices Secure Deployment Guide</i>	GFK-2904

User manuals, product updates and other information sources are available on the Support website, www.geautomation.com under *Controllers and IO, RX3i Controllers*.

GE's Automation & Controls

Contact Information

Americas: 1-800-433-2682 or 1-434-978-5100

Global regional phone numbers are available on our web site

www.geautomation.com



Copyright © 2014-2016 General Electric Company. All Rights Reserved.

* Trademark of General Electric Company and/or its subsidiaries.

All other trademarks are property of their respective holders

GFK-2941E