

GE
Automation & Controls

Programmable Control Products

PACSystems* RSTi-EP EPSCPE100

Enhanced performance standalone controller for RSTi-EP Platform

CPU Quick Start Guide

GFK-3012

April 2017



Contents

1. User Features	3
1.1. Membrane Run/Stop push button	4
1.2. LED Indicators (LEDs).....	5
1.3. Ethernet Ports	6
2. Hardware Installation.....	8
2.1. Initial Checks.....	8
2.2. Installation Location	8
2.3. Grounding.....	11
3. Module Start-up.....	12
3.1. You Will Need:	12
3.2. Basic Installation Steps:.....	12
4. Programming the EPSCPE100	13
4.1. Backwards Compatibility.....	13
4.2. PROFINET Controller Configuration	13
5. Firmware upgrade procedure	14
6. Product Limitations.....	16
7. Troubleshooting.....	17
8. Additional Information	18

1. User Features

The PACSystems* RSTi-EP EPSCPE100, is an enhanced performance standalone 1GHz programmable controller equipped with 1MB of user memory and four Ethernet ports to run real time deterministic control applications. LAN1 is dedicated to highspeed Ethernet and LAN2 comprised of 3 switched ports configurable as either an embedded Ethernet controller or an embedded PROFINET controller, which provides the PROFINET functionality and supports only simplex mode of operation. It is a standalone PLC that supports distributed I/O. From now on in rest of the document this controller will be referred to as CPE100.

The CPE100 is programmed and configured over Ethernet via GE's Proficy Machine Edition (PME) software. It can control/process up to 2K I/O points.

Highlights include:

- A built-in PACSystems RSTi-EP PLC CPU
 - User may program in Ladder Diagram, Structured Text, Function Block Diagram.
 - Contains 1Mbytes of configurable data and program memory.
 - Supports auto-located Symbolic Variables that can use any amount of user memory.
 - Reference table sizes include 2k bits for discrete %I and %Q and up to 2k words each for analog %AI and %AQ. Bulk memory (%W) also supported for data exchanges.
 - Supports up to 512 program blocks. Maximum block size is 128KB.
- Supports two independent 10/100 Ethernet LANs. LAN1 has only one port and is dedicated to highspeed Ethernet and whereas LAN2 comprises of 3 switched ports configurable as either an embedded Ethernet controller or an embedded

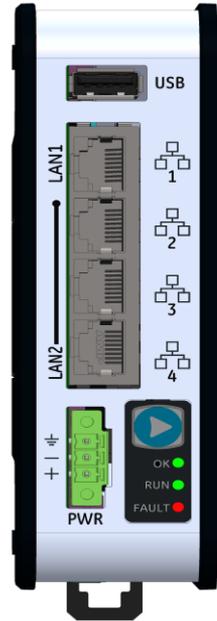


Figure 1: EPSCPE100 Features at a Glance

PROFINET controller. All four ports are located on the front panel, as shown in **Figure 1**.

- The embedded communications interface has dedicated processing capability, which permits the CPU to independently support LAN1 and LAN2 with:
 - up to 16 combined SRTP Server and Modbus TCP Server connections out of which Modbus TCP cannot exceed more than 8 connections (or) up to 16 simultaneous SRTP Server connections (or) up to 8 simultaneous Modbus TCP Server connections.
 - 8 Clients are permitted; each may be SRTP or Modbus TCP or a Combination of both.
 - up to 8 simultaneous Class 1 Ethernet Global Data (EGD) exchanges.
 - When used in combination for optimal performance, user must not exceed 4 Channels for Server (Modbus/SRTP) & 4 Channels for client (Modbus/SRTP), 8 PROFINET nodes and 8 EGD data exchanges.
- Ability to display serial number and date code in PME Device Information Details.
- Operating temperature range -40°C to 70°C (-40°F to 158°F).

1.1. Membrane Run/Stop push button



Pressing Membrane Run/Stop push button briefly, will change the state of CPU from the state it is in to the next state. Switch operation state as given in the following state diagram:



The **Run/Stop** switch is enabled by default; it can be disabled in PME Hardware Configuration (HWC) settings.

1.2. LED Indicators (LEDs)

Ethernet Status Indicators

There are two LEDs (Yellow/Green) for each Ethernet ports of LAN1 and LAN2, which are embedded in the RJ-45 connectors. The green LED indicates an Ethernet connection has been established. The yellow LED indicates packet traffic.

Module status Indicators



There are three LEDs and one Membrane Push Button on the front panel (The one in blue color) as shown in the figure. The below table describes the behavior of each module LED:

Push Button: Toggles the current mode of the PLC.

LED	LED State	Operating State
OK	 On Green	PLC has passed its power-up diagnostics and is functioning properly
	 Off	Power is not applied or PLC has a problem.
	 Blinking; All other LEDs off	PLC in STOP/Halt state; possible watchdog timer fault. If the programmer cannot connect, cycle power and refer to the fault tables.
RUN	 On Green	PLC is in RUN mode.
	 Off	PLC is in STOP mode.
	 Blinking; All other LEDs off	Indicates that PLC has encountered a fatal error and is blinking the error code.
Fault	 On Green	PLC is in STOP/Faulted mode: a fatal fault has occurred.
	 Off	No fatal faults detected.

1.3 Ethernet Ports

LAN 1 connects to the uppermost RJ-45 connector. It is not switched. LAN2 connects to the three lower RJ-45 connectors. They are switched internally.

The embedded Ethernet interfaces automatically senses the link data rate (10 Mbps or 100 Mbps), communications mode (half-duplex or full-duplex), and cabling arrangement (straight-through or crossover).

The embedded Ethernet LAN 1 port may be used to communicate with PME programming software using the Service Request Transport Protocol (SRTP, a proprietary GE protocol, used primarily for communication with the programmer).

To establish Ethernet communications between the PME programming package and the CPU, you first need to set an IP address.

EPSCPE100	LAN1	LAN2
Default IP Address:	192.168.0.100	0.0.0.0
Subnet Mask:	255.255.255.0	0.0.0.0
Gateway:	0.0.0.0	0.0.0.0

Note: LAN2 will not be operational unless it is configured from the programmer with a valid IP address.

A typical application will take advantage of the two independent LANs. The dedicated LAN 1 port will be used for communications with plant-level or supervisory layers. The

switched LAN 2 will be used to communicate with devices over PROFINET within the manufacturing cell or process.

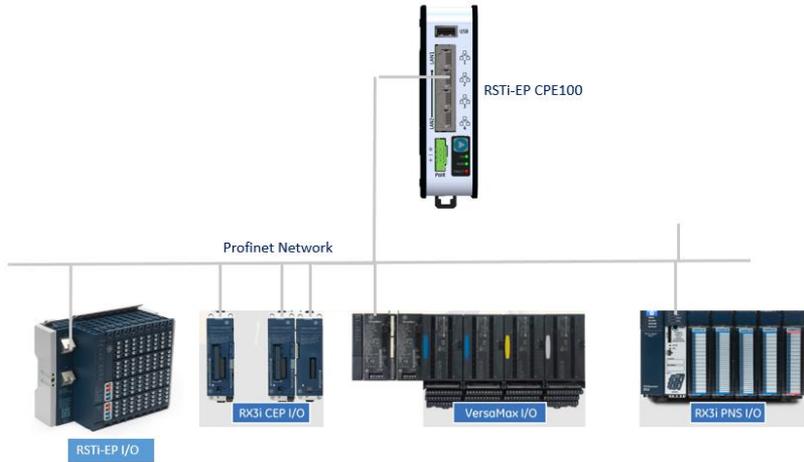


Figure 2: Typical Multi-Tier LAN Application (supports only Star/Bus network topology)

2. Hardware Installation

2.1. Initial Checks

Upon receiving your equipment, carefully inspect all shipping containers for damage. If any part of the system is damaged, notify the carrier immediately. The damaged shipping container should be saved as evidence for inspection by carrier.

As the consignee, it is your responsibility to register a claim with the carrier for damage incurred during shipment. GE Automation & Controls will fully cooperate with you, however, should such action be necessary.

After unpacking the equipment, record all serial numbers. Serial numbers are required if you should need to contact Customer Care during the warranty period. All shipping containers and all packing material should be saved should it be necessary to transport or ship any part of the system.

Verify that all components of the system have been received and that they agree with your order. If the system received does not agree with your order, contact Customer Care.

2.2. Installation Location

As shipped, the CPE100 is intended for mounting on a DIN rail. An optional panel-mount adaptor is also available with part number (ICMFAACC001-AA). If panel-mounting is required, replace the DIN-rail adaptor with the panel-mount adaptor using the screws supplied with that adaptor. Both adaptors attach to the rear of the CPE100 chassis using four Torx M3 screws. Torque newly-installed screws to 5.3 in-lbs (0.6 Nm) if installing a new adaptor plate.

Thermal Requirements:

When mounting the CPE100, allow a minimum clearance of 50mm on the left & right side of the unit and a minimum clearance of 100mm on the top & bottom sides.

Instructions to mount the CPE100 on a DIN Rail:

The CPE100 snaps easily onto the DIN rail. No additional tools are required.

(1) Incline the unit so that the upper hooks of the DIN rail adaptor engage with the upper edge of the DIN rail.

(2) Press on the lower part of the unit until you hear a click. The click indicates that the lower hooks of the DIN rail adaptor have engaged with the lower edge of the DIN rail.

If you need any technical help, please contact Technical Support. For phone numbers and email addresses, refer to the back cover of this Guide.



Figure 3: Mounting positions of the EPSCPE100 on DIN rail

Instructions to mount the CPE100 on a Panel

(1) Attach the panel mount plate to the rear side of CPE100 using the four M3 screws supplied with the adapter.

(2) Fasten the tabs of panel mount adapter in the appropriate location of panel with the four screws. The screw size used for each panel mount tab should not exceed M5.

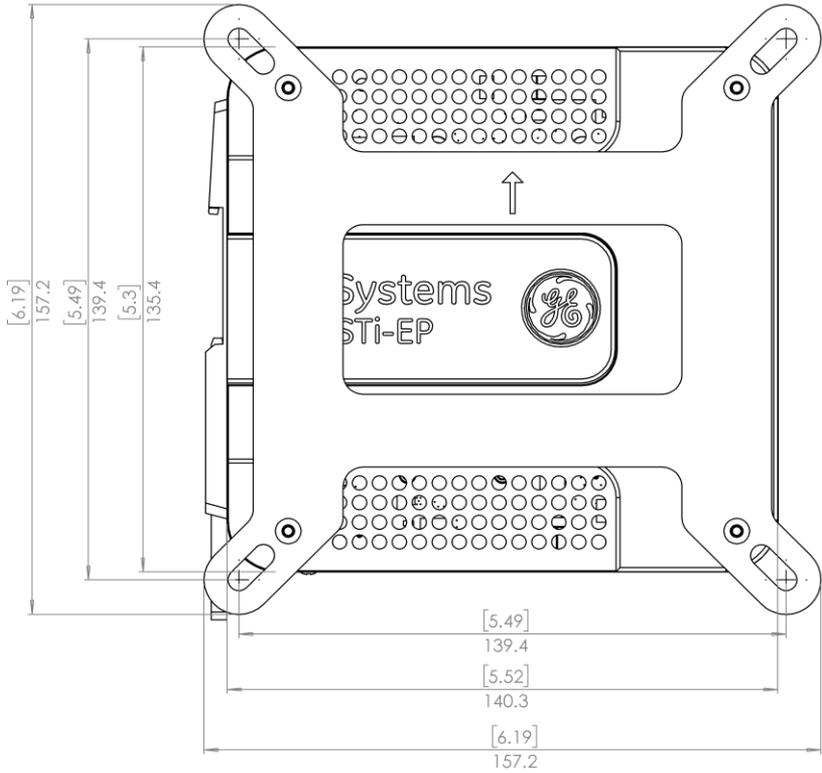


Figure 4: Mounting position of the EPSCPE100 in panel

2.3. Grounding

Proper grounding of the CPE100 is essential using the provided ground terminal as shown in the below figure. Use a 16-22 AWG braided wire with lugs to connect the ground terminal of CPE100 to DIN Rail. The DIN rail into which this product will be mounted must be grounded as per the instructions provided in *RSTi-EP System Manual*, GFK-2958.

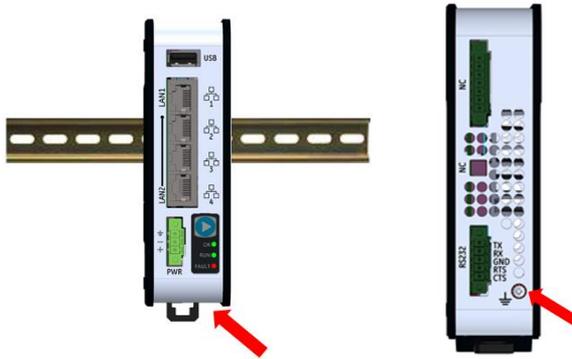


Figure 5: Ground Terminal of EPSCPE100

 
3. Module Start-up

3.1. You Will Need:

- This PACSystems standalone controller RSTi-EP CPE100.
- Generic power source which can output 9-30 V DC, 5 W.
- A DIN rail, typically mounted in an enclosure, as discussed above. Alternately, mount the unit using the (optional) compatible panel-mount adaptor.
- A computer running Proficy Machine Edition (PME) configuration and programming software. PME Version 9.50 & SIM 1 or later.
- Ethernet cable for connecting the PME programmer computer to the EPSCPE100.
- Very small slotted screwdriver (1.4mm jeweler's size).

3.2. Basic Installation Steps:

For startup and configuration of the EPSCPE100, complete the following steps.



1. Be sure to disconnect the power to EPSCPE100,
2. The ESCPE100 is designed to be DIN-rail-mounted.
3. An external power supply 9- 30 V DC provided by a Class II power supply marked as "double insulated", Limited Power Source (LPS), or a SELV source with a minimum 32 V dc listed fuse with 3 A max rating is required to power the EPSCPE100. Wire sizes: 22 to 16 AWG Screw torque: 2 in-lb. Temperature rating for copper wire: 80 °C. Wiring to power input terminals shall be limited to 30 meters in length.
4. Plug the Ethernet cable for Programmer & Protocol (SRTP, Modbus, EGD) on LAN 1 port.
5. Plug the Ethernet cable for PROFINET network in LAN 1 port.
6. Apply power to EPSCPE100.

5. Firmware upgrade procedure

EPSCPE100 comes with the default IP address 192.168.0.100 assigned to the Ethernet Port of LAN1, user can change the default IP address through PME (Proficy Machine Edition). Use the Ethernet Port of LAN1 to connect to the webserver of CPE100 through which user can upgrade the Firmware.

It is always recommended to check if there are any new firmware updates available for this product at our support site prior to proceeding with upgrading the module firmware.

Steps are as below (For detailed instructions follow upgrade instructions manual provided with upgrade kit):

1. Copy the firmware upgrade file (PAC) to any directory on your PC.
2. Use programming software or the controller's Run/Stop switch place the Controller module in Stop Disabled mode.
3. If your PC uses a proxy server, it may be necessary to modify your Network Settings to disable the proxy server (or disable use of automatic proxy configuration scripts).
4. Open a browser window and go to the EPSCPE100 Controller's homepage using the IP address you have configured for Programmer communications (e.g. <http://192.168.0.100>).
5. At the EPSCPE100 Controller's homepage, you will be prompted for a user name and password. Username is "update" (without the quotes). Password is "sierra" (without the quotes). Click on Log On.



6. Click on “Choose File” and navigate to the location of the firmware update file obtained and saved earlier. Select the file and click “Open”.



7. Click on “Upload File” to get the file upload started. The EPSCPE100 Controller’s Firmware Update web page will indicate the upload progress.

8. The firmware upgrade process may take up to four minutes to complete depending on the module being upgraded. Do not power cycle the EPSCPE100 Controller during the update process as this may place the module being updated in an unrecoverable and unusable state. Once the file upload is completed, EPSCPE100 will automatically reset

9. When the firmware upgrade completes successfully the browser will remain on the Firmware Update web page and will indicate that the upgrade process is complete. Note: The processing is complete when the DONE status is displayed.

10. If the firmware upgrade is not successful, a Firmware Update Status page is displayed with an error status.

11. When you have successfully completed the firmware upgrade:

- Close your browser window.
- Mark or label your EPSCPE100 to indicate the new firmware version. Ensure the label does not cover any vents.

12. Return the EPSCPE100 Controller to Run Enabled mode using the programming software.

6. Product Limitations

1. MRP (Media Redundancy Protocol) is not supported on Release 1.0.
2. C Toolkit is not supported in Release 1.0.
3. Timed interrupt blocks are not supported.
4. RDSB not supported in Release 1.0.

Note: The above features may be supported in the subsequent FW release. Refer to the data sheet.

7. Troubleshooting

1. Resetting of the IP Address to default one i.e. 192.168.0.100 or to restore the controller from undermined state, user need to press the Run/Stop switch during the power-up (till it gets powered up, approx. 60 sec), this action will reset IP address back to default one i.e. 192.168.0.100 in addition to this it will also clear the contents of Flash and RAM.

8. Additional Information

<i>Proficy* Logic Developer-PLC Getting Started</i>	GFK-1918
<i>PACSystems* RX3i, RX7i and RSTi-EP CPU Reference Manual</i>	GFK-2222
<i>PACSystems* RX3i, RX7i and RSTi-EP TCP/IP Ethernet Communications User's Manual</i>	GFK-2224
<i>PACSystems* RX3i System Manual</i>	GFK-2314
<i>PACSystems* RXi, RX3i, RX7i and RSTi-EP Controller Secure Deployment Guide</i>	GFK-2830
<i>PACSystems* Rx3i & RSTi-EP PROFINET IO-Controller User Manual</i>	GFK-2571
<i>PACSystems* RX3i, RX7i and RSTi-EP CPU Programmer's Reference Manual</i>	GFK-2950
<i>RSTi-EP User's Manual</i>	GFK-2958

User manuals, product updates and other information sources are available on the Support website, https://ge-ip.force.com/communities/CC_Home, under *Controllers and IO, RX3i Controllers*.

GE Automation & Controls

Contact Information

Americas: 1-800-433-2682 or 1-780-420-2010 (if toll free 800 option is unavailable)

Global regional phone numbers are available on our web site

www.geautomation.com



Copyright © 2017 General Electric Company. All Rights Reserved.

* Trademark of General Electric Company and/or its subsidiaries.

All other trademarks are property of their respective holders