

Addendum

For ¼ DIN Setpoint Programmer Operators Manual

3.14 ENABLE MODE

The Enable Mode controls which modes are readily available to the operator. If a mode is disabled or off, it will not be displayed when the MODE key is pressed in Base Mode. If a mode is set to Read Only that mode is not available to be changed by the operator, such as the Setpoint Change and Auto Tune Settings.

To enter the Enable Mode from Base Mode:

1. Press the MODE key until Enable appears in the message display.
2. Press and hold the SCROLL key for (5) seconds to access the Enable Mode.
3. With PassCode displayed in the message display, use the UP and Down keys to set the pass code in the numerical display.
4. With the proper pass code displayed, press the SCROLL key.

If a proper pass code has been entered, the control will enter the Enable Mode, with EnAB shown in the lower display. If an improper pass code has been entered, the control will revert back to the enable prompt.

Once the Enable Mode has been accessed, if no key is pressed for more than one minute, the instrument will automatically revert to Base Mode.

Press the SCROLL key to step through the parameters. Press the UP or DOWN keys to change the parameter setting.

<u>STEP</u>	<u>MODE</u>	<u>DISPLAY</u>	<u>AVAILABLE SETTINGS</u>
1	Profile Parameters	Prof Par	Enable or Disable
2	Setpoint Change	Setpoint	Enable or Disable
3	Pre- Tune Facility	PreTune	Enable or Read Only or OFF
4	Auto – Tune Facility	AutoTune	Enable or Read Only or OFF

<u>STEP</u>	<u>MODE</u>	<u>DISPLAY</u>	<u>AVAILABLE SETTINGS</u>
5	Alarm Parameters	Alarm	Enable or Disable
6	Tuning Parameters	TunePar	Enable or Disable
7	Configuration Parameters	ConfPar	Enable or Disable
8	Test	Test	Enable or Disable
9	Calibration	Calib	Enable or Disable
10	Manual control of output	Manual	Enable or Disable
11	Setpoint ramp rate	SPRate	Enable or Disable
12	Communications Write	ComWrite	Enable or Disable
13	Auto Pre-Tune*	AutoPT	Enable or Disable
14	Units	Units	Enable or Disable
15	Password Change	PassCh	0 – 9999

* This setting does not determine access. It determines whether the Pre-tune facility is automatically activated when power is applied to the instrument.

To return to Base Mode:

- 1. Press the Mode key until Basemode appears in the message display.**
- 2. Press the SCROLL key to return to Base Mode.**