

# E126-P-EG

## FLOWCOMPUTER

*with temperature and pressure compensation  
for corrected gas volume*



- Signal input:**      *Flowmeter - type P: Pulse, NAMUR and coil  
Pressure - type IA: (0)-20mA  
Temperature - type TP: PT100 2-, 3- or 4-wire  
Temperature - type TA: (0)-20mA*
- Signal output:**    *Analog - 4-20mA ref. corrected flowrate  
Pulse - scaled pulse ref. corrected total*
- Remote control:**    *External reset with clear-lock*
- Options:**            *Modbus communication, USB communication*



# TABLE OF CONTENTS

<b>1</b>	<b>ABOUT THIS MANUAL.....</b>	<b>4</b>
1.1	How to use this manual .....	4
1.2	Use of pictograms .....	4
1.3	Warranty and technical support .....	4
1.4	Model Reference .....	4
<b>2</b>	<b>SAFETY .....</b>	<b>5</b>
2.1	Personal safety .....	5
2.2	End-user responsibilities .....	5
2.3	Potential equipment damage .....	5
2.4	Disposal of electronic waste .....	5
<b>3</b>	<b>INTRODUCTION.....</b>	<b>6</b>
3.1	System description .....	6
3.2	Product features .....	7
3.3	Installation example .....	8
<b>4</b>	<b>OPERATION.....</b>	<b>9</b>
4.1	Introduction .....	9
4.1.1	Operating modes .....	9
4.2	Control panel .....	9
4.2.1	Display .....	9
4.2.2	Optical keys .....	10
4.2.3	Backlight .....	11
4.3	Operator functions .....	11
4.3.1	Functions of the keys in operator mode.....	11
4.3.2	Selecting displayed information .....	12
4.3.3	Clearing Total .....	12
4.4	Displayed information .....	13
4.4.1	Flowrate .....	13
4.4.2	Total and Accumulated Total.....	13
4.4.3	Current day total and Previous day total.....	13
4.4.4	Line Pressure and Temperature .....	14
4.5	Operator alarms .....	14
4.5.1	Low battery .....	14
4.5.2	Range error.....	14
4.5.3	Internal error .....	15
<b>5</b>	<b>CONFIGURATION.....</b>	<b>16</b>
5.1	Introduction .....	16
5.2	Operating the Main Electronics Module (MEM) .....	16
5.2.1	Configuring using PC Configuration tool.....	17
5.2.2	Mechanical keys .....	17
5.2.3	Optical keys switch .....	17
5.2.4	Saving battery lifetime (type PB) .....	18
5.3	Configuring using SETUP mode .....	18
5.3.1	Entering SETUP mode .....	18
5.3.2	Navigating the SETUP menu .....	18
5.3.3	Changing configuration settings .....	19
5.3.4	Returning to Operator Mode .....	20
5.4	SETUP menu overview .....	20
5.5	SETUP menu explanations.....	22
5.5.1	Menu 1: Total .....	22
5.5.2	Menu 2: Flowrate .....	23
5.5.3	Menu 3: Display .....	24
5.5.4	Menu 4: Flowmeter .....	25
5.5.5	Menu 5: Temperature - with type TP (PT100) .....	27
5.5.6	Menu 5: Temperature - with type TA (4-20mA) .....	28
5.5.7	Menu 6: Pressure .....	29
5.5.8	Menu 7: Formula .....	30
5.5.9	Menu 8: Analog output .....	31
5.5.10	Menu 9: Pulse output .....	32
5.5.11	Menu 10: Modbus communication .....	33
5.5.12	Menu 11: Others .....	33
<b>6</b>	<b>INSTALLATION.....</b>	<b>35</b>
6.1	Installation / environmental conditions .....	35

6.2	Handling the E-Series enclosure .....	36
6.2.1	Main parts .....	36
6.2.2	Identification.....	37
6.2.3	Opening, assembling and closing the unit.....	38
6.2.4	Test unit.....	39
6.3	Mechanical installation.....	40
6.3.1	Installation precautions.....	40
6.3.2	Mechanical dimensions .....	41
6.3.3	Mounting the unit .....	41
6.4	Electrical installation .....	43
6.4.1	Electrical precautions.....	43
6.4.2	Grounding of the enclosure .....	44
6.4.3	Electrical ratings .....	45
6.4.4	Voltage selection sensor supply .....	45
6.4.5	Terminal connectors – MEM.....	46
6.4.6	Terminal connectors – RSM.....	47
6.4.7	Terminals P1-P2 or P5-P6: Power supply – type PD/PX.....	47
6.4.8	Terminals P3: Sensor supply - type PD.....	47
6.4.9	Terminals R1-R2 and R10-R11: Digital outputs D1 and D5.....	48
6.4.10	Terminals S1-S3: Flowmeter input .....	48
6.4.11	Terminals T1-T4: Temperature input PT100 - Type TP.....	51
6.4.12	Terminals S4-S5: Temperature input (0)4-20mA - Type TA.....	52
6.4.13	Terminals E1-E2: Pressure input (0)4-20 mA.....	52
6.4.14	Terminals E1-E3: External reset with clear-lock - Type IB .....	53
6.4.15	Terminals C1-C4: Communication RS232/RS485/USB - Type CB/CH/CU.....	53
6.4.16	Terminals A1-A2: Isolated analog output – Type AH.....	54
<b>7</b>	<b>MAINTENANCE.....</b>	<b>55</b>
7.1	Check for wear or damage .....	55
7.2	Clean unit.....	55
7.3	Battery replacement instructions .....	55
7.3.1	Supply battery replacement.....	56
7.4	Replace silica gel sachet .....	56
	<b>APPENDIX A - TECHNICAL SPECIFICATION .....</b>	<b>57</b>
A.1	General .....	57
A.2	Input.....	58
A.3	Output .....	59
A.4	Operational .....	59
A.5	Standards and approvals.....	60
	<b>APPENDIX B - TROUBLESHOOTING .....</b>	<b>61</b>
	<b>APPENDIX C - MODBUS COMMUNICATION.....</b>	<b>63</b>
C.1	Introduction .....	63
C.2	Runtime variables of the unit .....	64
C.3	Configuration variables of the unit .....	66
	<b>APPENDIX D - REMOTE CONFIGURATION TOOL .....</b>	<b>70</b>
D.1	Introduction .....	70
D.2	Cable connection .....	70
D.3	Download and install.....	71
	<b>APPENDIX E - LEGAL INFORMATION.....</b>	<b>72</b>
E.1	Declaration of Conformity .....	72

# 1 ABOUT THIS MANUAL

## 1.1 HOW TO USE THIS MANUAL

This operation manual is divided into two main parts:

- The daily use of the E126-P-EG is described in **Section 4: Operation [»9]**. These instructions are meant for users.
- All subsequent sections and appendices are meant for electricians/technicians. These provide a detailed description of all software settings and hardware installation guidance.

Always follow the instructions in this manual, especially the safety information. For additional information, please contact your supplier.

## 1.2 USE OF PICTOGRAMS

A hazardous situation may occur if the unit is not used for the purpose it was designed for or is used incorrectly. The following pictograms inform you of important information:



A warning indicates a hazardous situation that could cause injury or death.



A caution indicates a condition that could cause:

- moderate/minor personal injury or equipment damage.
- incorrect functioning of the unit or connected instruments.



A note informs you of important information.

## 1.3 WARRANTY AND TECHNICAL SUPPORT

For warranty and technical support on your Fluidwell products, visit our internet site [www.fluidwell.com](http://www.fluidwell.com) or contact us at [support@fluidwell.com](mailto:support@fluidwell.com).

## 1.4 MODEL REFERENCE

Hardware version:	13.03.xx
Software version:	03.07.xx
Document version:	FW_E126-P-EG_M_v0302-02_EN
© Copyright 2023	Fluidwell B.V. - The Netherlands

**Information in this document is subject to change without prior notice. The manufacturer is not responsible for mistakes in this material or for incidental damage caused as a direct or indirect result of the delivery, performance or use of this material.**

**© All rights reserved. No parts of this publication may be reproduced or used in any form or by any means without written permission of your supplier.**

## 2 SAFETY

### 2.1 PERSONAL SAFETY

- Explosion hazard: Never open the unit when explosive atmosphere is present, and the unit is connected to a power supply or consuming device like the internal battery supply.
- Risk of electric shock: Only open the unit if all leads are free of potential electrical energy.
- Immediately inform the person responsible for the installation if you disagree with the safety precautions or if you detect errors or danger.

### 2.2 END-USER RESPONSIBILITIES

- Installation, use, and servicing of the unit must be done by authorized technicians.
- This unit is not designed for use in life support appliances, devices, or systems where malfunction of the product could result in personal injury. Customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify the manufacturer and supplier for any damages resulting from such improper use or sale.
- Check all connections, settings and technical specifications of all peripheral devices supplied with the unit.
- The unit must be installed in accordance with the EMC (Electro Magnetic Compatibility) guidelines.
- Connect Protective Earth (PE) / proper grounding to the metal enclosure as indicated in [Section 6.4.2: Grounding of the enclosure \[»44\]](#).
- If the unit is used on a ship, truck or somewhere else with no Protective Earth (PE) connection available, connect an alternative grounding suitable for the application to the metal enclosure.
- The Protective Earth (PE) wire (or alternative grounding) may never be disconnected or removed.
- The local labor and safety laws, and regulations must be adhered to.
- Modifying the unit without prior written consent from the manufacturer will result in the immediate termination of product liability and warranty period.
- The manufacturer accepts no responsibility whatsoever if the safety information and instructions in this manual are not observed.

### 2.3 POTENTIAL EQUIPMENT DAMAGE

- Before installing the unit, check the mains voltage and information on the manufacturer's label for product configuration.
- Electro Static Discharge (ESD) causes irreparable damage to electronics. When installing or opening the unit, the technician should first discharge him- or herself by touching a well-grounded object.
- Never touch the electronic components.
- Never expose the unit to conditions that may exceed the enclosure classifications as indicated by the manufacturer's label and [Section 6.1: Installation / environmental conditions \[»35\]](#).

### 2.4 DISPOSAL OF ELECTRONIC WASTE




At the end of its life this product should be disposed of according to the (inter)national regulations regarding waste electronic equipment. If a battery is installed in this product, it should be disposed of separately. The separate collection and recycling of your waste equipment will help to conserve natural resources and ensure that it is recycled in a manner that protects the environment.

### 3 INTRODUCTION


#### 3.1 SYSTEM DESCRIPTION

The flow computer model E126-P-EG (also referred to as a unit) is an explosion proof microprocessor-driven instrument for the calculation of compensated volumetric flowrate or mass flowrate for gas applications using flow equations.

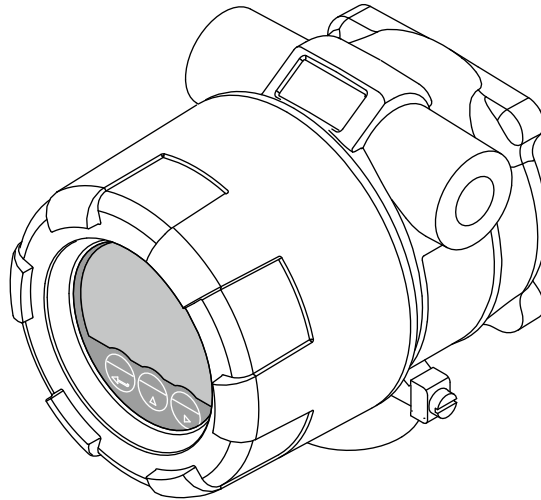

**Fig. 1: The E126-P-EG**

This manual describes the daily use, configuration and installation of the standard unit (with pulse input from a flowmeter) and its available options. The following figure shows the E126-P-EG used in a typical application.

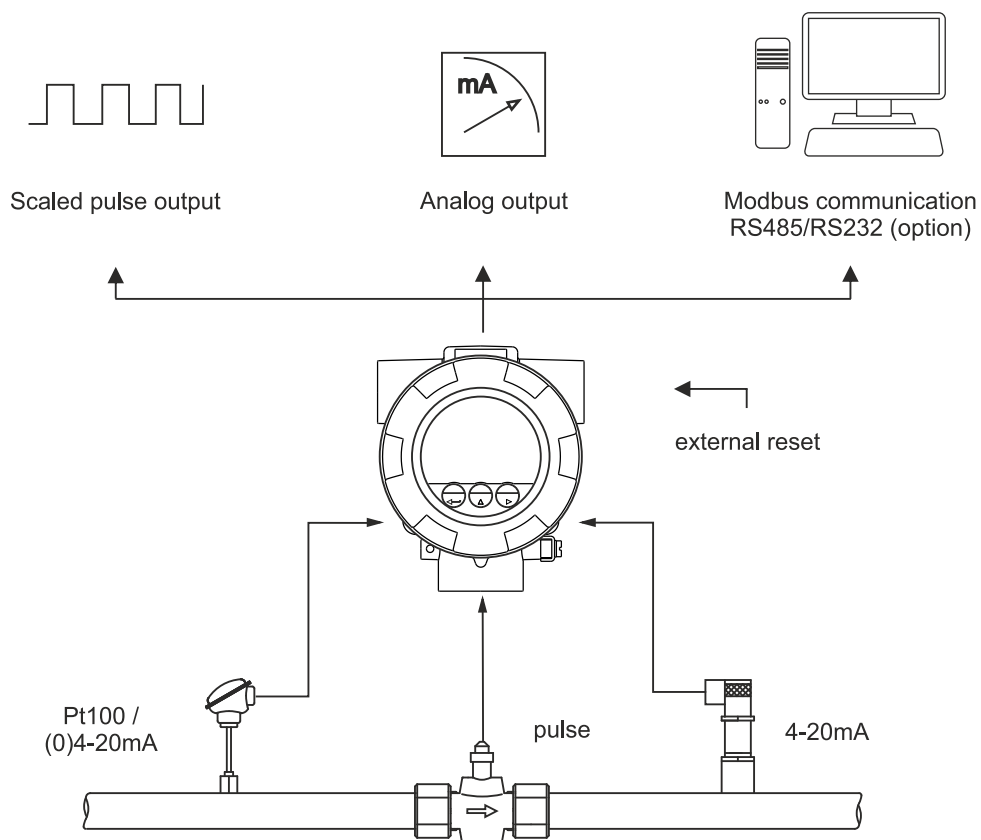

**Fig. 2: Typical application**

## 3.2 PRODUCT FEATURES

The main features of the unit are:

- User-friendliness: optical keys for through-the-glass operation (no need to touch the glass or remove the cover).
- Bright backlight enables good readings in full sunlight and darkness.
- Usability: wide operational temperature, high ingress protection rating and international certification.
- PC configuration software making configuration quick and easy.
- Rugged design for harsh environments: not just designed to be explosion proof.
- Aluminum enclosure with high quality industrial two component coating or stainless steel 316L enclosure for offshore applications.
- Mounting flexibility: multiple solutions for sensor mounting, including 1" NPT or M25 bottom entry; suitable for wall or pipe mount applications.
- Installation friendly design: spacious cabling area, plug and play cable connection and easy to remove electronic module.
- Ability to process any type of sensor signal.
- Multiple power supply options to suit any application, including long-life battery supply.
- Configurable pulse and analog signal outputs and optional communication outputs.

### Standard inputs

- One flowmeter with a passive or active pulse, NAMUR or coil signal output can be connected to the E126-P-EG. Several options are available for powering the sensor.
- Status input to reset total remotely or to lock the 'clear total' key.
- For the temperature input, the following options are available:
  - PT100 (type TP)
  - 4-20mA (type TA).
- For the pressure input, a 4-20mA input (type IA) is available.

### Standard outputs

- Configurable pulse output to transmit pulses representing a certain compensated total quantity. The pulse length can be set as desired with a maximum frequency of 500 Hz.
- Unscaled frequency output for retransmission of the incoming pulses as robust square wave forms.
- Configurable linear 4-20mA isolated analog output with 12-bits resolution representing the actual compensated flowrate. Flowrate levels and the minimum and maximum signal output can be tuned.

### Control panel

The unit is equipped with a control panel with three optical keys and a large backlit Liquid Crystal Display (LCD) with various symbols and digits to display/control measurement units, status information, trend-indication, and key-word messages.

### Configuration

The unit can be used for many types of application and has both a SETUP mode as well as a PC connection for configuring it to your requirements. It includes several important features, such as K-Factor, measurement units and signal selection.

All settings are stored in an EEPROM memory so they will not be lost if there is a power failure or the battery is drained. For information on how to extend the battery life, consult [Section 5.2.4: Saving battery lifetime \(type PB\) \[»18\]](#).


### Options

Available options are:

- Power and sensor supply.
- Mechanical relay.
- Full Modbus communication over RS232, RS485 or USB (also battery powered).

### 3.3 INSTALLATION EXAMPLE

Following parts can be recognized in below installation example.

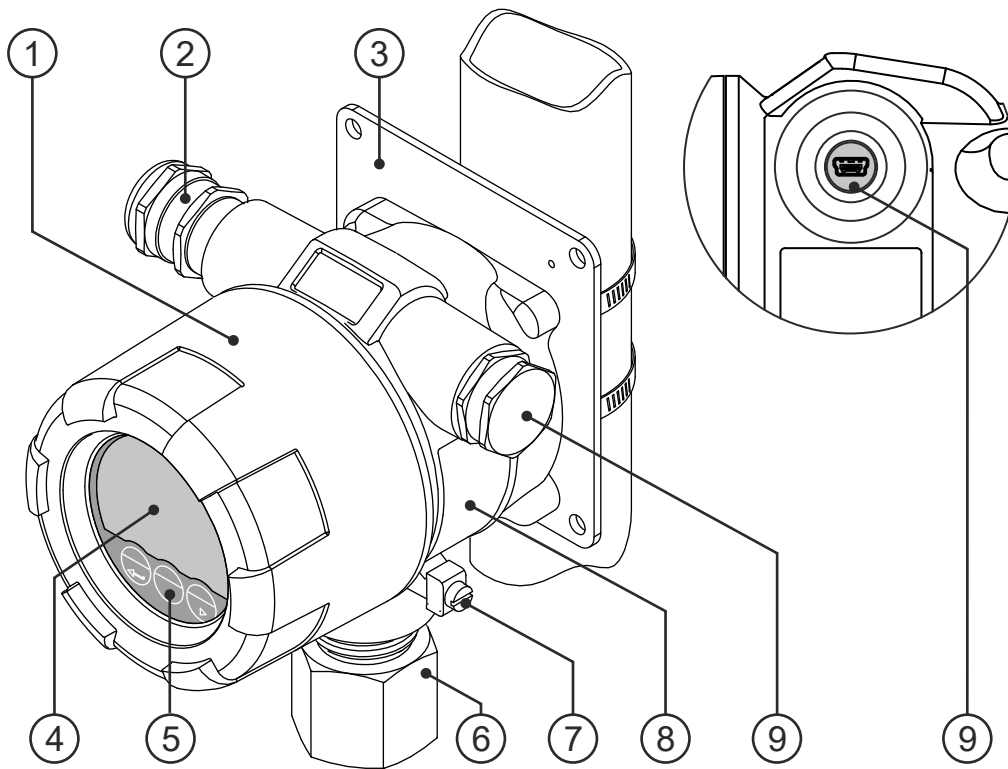

**Fig. 3: Installation example E126-P-EG**

1. Cover	4. Display	7. Grounding
2. Armed cable connection	5. Optical touch keys	8. Labels
3. Pipe mounting plate	6. Process mount	9. USB connection (option)

## 4 OPERATION



This unit may only be operated by authorized and trained personnel who have read and understood this manual, particularly [Section 2: Safety \[»5\]](#).

### 4.1 INTRODUCTION

This chapter describes the daily use and operation of the E126-P-EG. For this, the unit is equipped with a control panel that provides the operator with various functions, information and operating modes.

#### 4.1.1 OPERATING MODES

The following operating mode are available:

- **OPERATOR-mode**  
This is the default mode of operation and mode indicator **RUN** is shown on the display. This mode is available for all operators and gives access to most other modes. The available functions and rights depend on the type of unit and configured settings. The unit will always return to this mode when there is no user interaction for some time in any of the other modes.
- **LOG-mode**  
When the unit is equipped with a logging function (like historical day totals), this mode is used to access the logged data. The mode indicator **LOG** is shown on the display and, depending on the type of unit, functions like logbook-selection and printing become available.
- **SETUP-mode**  
This mode allows to review all configuration settings using a SETUP-menu. The mode indicator **SETUP** is shown on the display and access can be restricted via a password. After selecting a configuration item, it can be changed using the PROGRAM-mode.
- **PROGRAM-mode**  
This mode is used to change settings in the SETUP-menu, enter values in OPERATOR-mode or enter a password. When a setting is being changed, this is indicated by the mode indicator **PROG** on the display.

The following paragraphs describe the modes of operation in more detail. SETUP-mode and PROGRAM-mode are described in [Section 5: Configuration \[»16\]](#).

### 4.2 CONTROL PANEL

The control panel is located on the front side of the E-Series and consists of the following parts:

- A Liquid Cristal Display (LCD) to show process values and various other information.
- Three optical keys (PROG, SELECT, CLEAR) to control the unit during operation.
- A backlight to illuminate the display.

When the front cover is removed (only during service in non-hazardous area), the following parts also become available:

- The Main Electronics Module (MEM)
- Three mechanical keys to control the unit during service.
- A switch to completely disable the optical keys.

These parts are explained in [Section 5.2: Operating the Main Electronics Module \(MEM\) \[»16\]](#).



**Explosion risk: never open the housing when explosive atmosphere is present.**

Opening and servicing of the unit may only be carried out by authorized and trained personnel who have read and understood this manual, particularly [Section 2: Safety \[»5\]](#).


#### 4.2.1 DISPLAY

Inside the E126-P-EG, all inputs (such as sensors and switches) and outputs (such as relays and current loop) are continuously processed in the background. The relevant process information is then displayed on a selection of screens when the unit is in OPERATOR-mode.

Normally, the information shown on the display is updated depending on the refresh rate selected in the configuration settings. However, by pressing any of the keys, the display switches to refreshing the information 8 times per second. After 30 seconds of key inactivity, the display returns to the configured refresh rate.

The display contains one line with large digits at the top and one line with small digits at the bottom. The top line is mainly used to display key process information, while the bottom line usually displays less important information or system messages.


Both lines are surrounded by various symbols to indicate operating mode, function, status and measurement unit. The following image shows this in more detail:

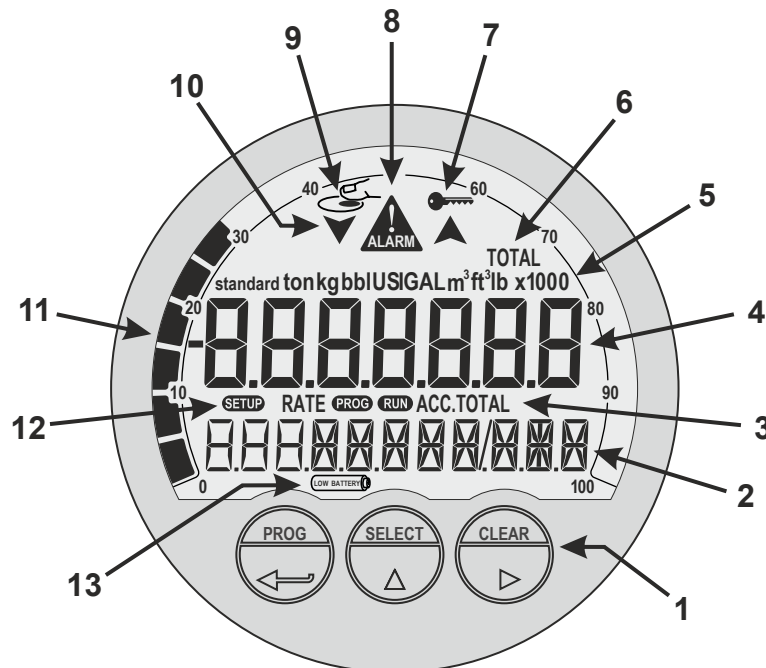

**Fig. 4: Display layout and important symbols**

- |                                       |   |
|---------------------------------------|---|
| 1. Optical keys: PROG, SELECT, CLEAR  | 8. Alarm indication symbol                        |
| 2. Small digits – bottom line         | 9. Optical keys activation indicator              |
| 3. Current function – bottom line     | 10. Trend indication arrows (increase / decrease) |
| 4. Large digits – top line            | 11. Speedometer                                   |
| 5. Measuring unit – top line          | 12. Mode indicators: RUN, SETUP, PROG             |
| 6. Current function – top line        | 13. Low battery indicator                         |
| 7. Key lock symbol (for optical keys) |   |

#### 4.2.2 OPTICAL KEYS

The optical keys are used to control the unit 'through the glass' without the need to open the enclosure. To activate an optical key, position a finger (clean and without gloves) in front of the glass above the indicated area for PROG, SELECT or CLEAR. Correct key operation will result in the activation indicator  to show on the display. After the indicator is shown, the finger can be removed and the selected key 'is pushed'.

The optical keys only work reliably when the glass is clean. Try to avoid actually touching the glass as this could leave smudges. Clean the glass regularly with a lint free cloth dampened with (soapy) water.

False activation or bad responses of the optical keys can also be caused by:


- Dirt, grease or dust on the glass.
- Shiny surfaces positioned up to 100 mm (4 inches) in front of the display.


#### Key lock function

To prevent any erroneous operations due to false optical key activation, a key lock function is implemented. When the function is enabled (default), the optical keys are automatically locked if no optical key is activated for 30 seconds.




- False optical key activations can cause erroneous operation and reduce the battery lifetime significantly. Therefore, it is advised to keep the key lock function enabled.
- When battery powered, the backlight will only come on after the unlock sequence is finished.

The Key lock symbol  appears on the display to indicate that the keys are locked or disabled:

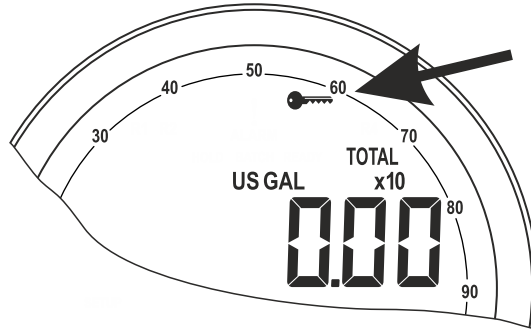


**Fig. 5: Key lock symbol**

To unlock the optical keys, an unlock sequence needs to be performed. Start the unlock sequence by activating any of the optical keys. The display will now prompt the operator to activate each optical key in sequence: PROG > SELECT > CLEAR.

When successful, the Key lock symbol  disappears and the optical keys can be used to control the unit. To lock the optical keys again, wait for 30 seconds or push the PROG and CLEAR keys simultaneously for 3 seconds.

**(Temporarily) Disabled optical keys**

 To save battery lifetime and to prevent unwanted access or operation, the optical keys can be disabled completely. Additionally, after using the mechanical pushbuttons, the optical keys are automatically disabled for 30 seconds.

When the optical keys are disabled, the Key lock symbol  is shown continuously and the display does not prompt for the unlock sequence. See [Section 5.2: Operating the Main Electronics Module \(MEM\) \[»16\]](#) for more information.


**4.2.3 BACKLIGHT**

The E126 is equipped with a backlight to illuminate the display for improved readability. Depending on the type of supply the backlight functions as follows:

- When the unit is powered by an external power supply, the backlight is on continuously and its intensity can be adjusted in the configuration settings.
- When the unit is battery powered, the backlight remains off until a key is pressed or the unlock sequence is finished. To save battery life, the backlight operates at a fixed minimum intensity and turns off again after 3 seconds of inactivity.
- When the unit is only powered by the analog output (Type AH), the backlight will not come.

**4.3 OPERATOR FUNCTIONS**



*Before operating the unit, check that the  symbol is not shown on the display. Otherwise, unlock the optical keys as described in [Section 4.2.2: Optical keys \[»10\]](#).*

**4.3.1 FUNCTIONS OF THE KEYS IN OPERATOR MODE**

**Functions of the keys in operator mode**

The following functions are available:



**PROG-key**

This key is used to gain access to SETUP mode, see [Section 5: Configuration \[»16\]](#). The PROG-key is also used to program and save new values or settings.



**SELECT-key**

This key is used to select the displayed information, like accumulated total and flowrate.



**CLEAR-key**

This key is used to clear the value of total. The CLEAR-key also provides access to the LOG-mode, to review historical day totals.

### 4.3.2 SELECTING DISPLAYED INFORMATION

By pressing the SELECT-key, all relevant information can be reviewed on the display. When no key is pressed for 20 seconds, the display will jump back to the main screen. The following image of the display shows the main screen with Total shown on the top line and Flowrate on the bottom line.

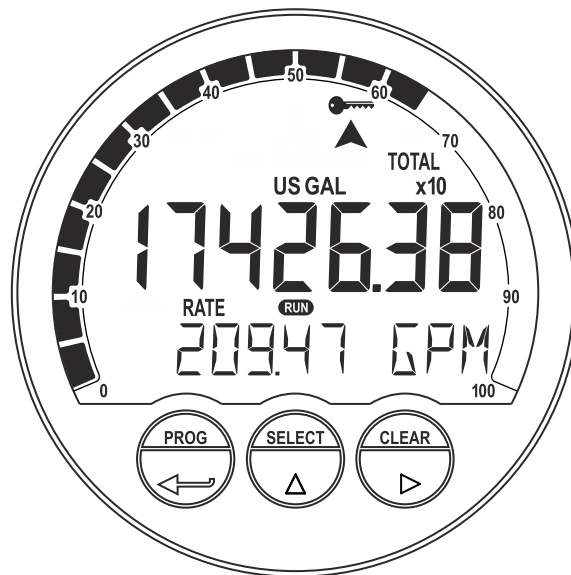


Fig. 6: Example of display information

The following table shows the available display information screens, determined by the configuration settings for Display. If an operator alarm occurs, this will also be shown on the same screen – see [Section 4.5: Operator alarms \[»14\]](#).

Display information	SETUP 3.1: DISPLAY > FUNCTION [»24]		
	= TOTAL	= FLOWRATE	= ACC. TOTAL
MAIN SCREEN	Total <sup>1)</sup> Flowrate	Flowrate	Total <sup>1)</sup> Acc. Total
SCREEN 1	Total <sup>1)</sup> Acc. Total	Total <sup>1)</sup> Acc. Total	Total <sup>1)</sup> Flowrate
SCREEN 2 <sup>2)</sup>	Current day Total		
SCREEN 3 <sup>2)</sup>	Previous day Total		
SCREEN 4	Line Pressure		
SCREEN 5	Line Temperature		
INTERNAL ERROR <sup>3)</sup>	Internal alarm code		

<sup>1)</sup> When total is shown on the display, it can be cleared (reset to '0') by pressing the CLEAR-key twice.  
<sup>2)</sup> Only available when day totals are enabled in [SETUP 3.2: DISPLAY > DAY TOTALS \[»25\]](#).  
<sup>3)</sup> If an internal error occurs, an additional screen becomes available to show the internal alarm code.



NOTE

All totals and flowrate values shown on the display represent normal or standard values (i.e. temperature, pressure and compressibility compensated).

When the toggle function is enabled in configuration settings for Display, pressure and temperature information is shown on the bottom line of the main screen, alternating with the normal information shown on the display.

### 4.3.3 CLEARING TOTAL

The measured flow is added to the various counters (like Total) of the unit. Only Total is resettable, Accumulated total and day totals are non-resettable.

The operator can clear Total by executing following steps:

1. Make sure Total is shown on the display.
2. Push the CLEAR-key.  
The display shows 'PUSH CLEAR' on the bottom line and the value of Total on the top line.
3. To clear Total, push the CLEAR-key again. To cancel the operation, push any other key or wait for 20 seconds.
4. Check that Total is reset to '0' (this action DOES NOT reset the Accumulated total).



- If a password is assigned in **SETUP 1.5: TOTAL > CLEAR PASSWORD** [»23], the operator is prompted to enter the password before Total can be reset.
- Type IB – External reset allows to clear Total via an external pushbutton. This clear action operates in parallel with the clear total procedure of the control panel but does not require any extra confirmation or password. When the external pushbutton connection is permanently closed, Total continues to count but cannot be reset to zero via the control panel anymore.

## 4.4 DISPLAYED INFORMATION

### 4.4.1 FLOWRATE

The main screen shows the primary process values of the unit. By default, Total is shown on the upper line of the display and Flowrate on the bottom line:

- The flowrate calculation is based on the configuration settings for **SETUP 2: FLOWRATE** [»24], and Flowrate is shown with the configured number of decimals.
- The configured unit and time unit are indicated on the bottom line of the display. If there isn't enough room available, the display will toggle between unit and time unit.
- "-----" indicates that the flowrate value is too large to be displayed.
- The arrows ▲ and ▼ indicate the trend (increase or decrease) of the flowrate.
- The flowrate is calculated and processed 8 times per second. To obtain a readable value, the flowrate shown on the display is updated once every second.

### Speedometer

A speedometer view of the actual flowrate can be shown along the top edge of the display. It contains 20 segments from 0 to 100%. The speedometer is configured in **SETUP 3: DISPLAY** [»24].

### 4.4.2 TOTAL AND ACCUMULATED TOTAL

Measured flow is added to the counters for Total and Accumulated total continuously. When displayed, Total is shown on the upper line and Accumulated total on the lower line:

- Total will count up to 9.999.999 before rolling over to '0' and can be reset to zero by the operator – see **Section 4.3.3: Clearing Total** [»12].
- Accumulated total will count up to 99.999.999.999 before rolling over to '0' and cannot be reset.
- Measurement unit and number of decimals of the counters are set in **SETUP 1: TOTAL** [»22].

### 4.4.3 CURRENT DAY TOTAL AND PREVIOUS DAY TOTAL

Two additional non-resettable totals are available: Current Day Total and Previous Day Total. These totals are shown in the same unit and decimals as set in the configuration settings for Total. Enable or disable the day totals in **SETUP 3.2: DISPLAY > DAY TOTALS** [»25].

At a specific time of day, the Current Day Total is copied to the Previous Day Total after which the measurement of Current Day Total is restarted (reset to zero). The moment at which this action is performed is called 'contract hour'. The contract hour can be configured in **SETUP 1.6: TOTAL > CONTRACT HOUR** [»23] in steps of 1 hour.



- 'Current Day Total' is often referred to as 'Daily Total'.
- The Current Day Total shows the 'running' quantity that is measured since last contract hour. The Previous Day Total shows the 'fixed' quantity that was measured the day before.
- Both Current Day Total and Previous Day Total cannot be reset manually.

## Historical day totals

Besides directly reviewing the Current Day Total and Previous Day Total, a list of the last 15 Previous Day Totals is saved.

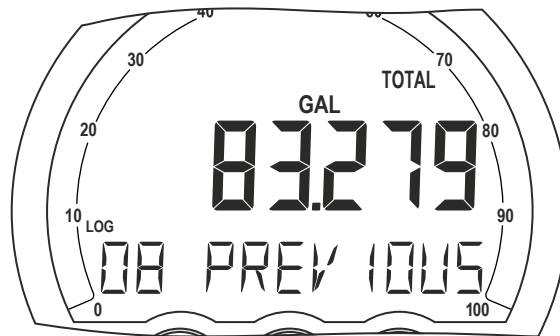


Fig. 7: Example of historical day total from 8 days ago

The list can be reviewed in LOG-mode in the following way:

1. From OPERATOR-mode, press the CLEAR-key for 3 seconds.
2. Press the SELECT- and CLEAR-keys to scroll up and down through the list of Previous Day Totals. The number that is displayed on the left of the bottom line indicates the age of the shown Previous Day Total, in days. Note that the entry with age '00' represents the (running) Current Day Total.
3. To return to the OPERATOR-mode, press the PROG-key for 3 seconds or wait for 2 minutes.

### 4.4.4 LINE PRESSURE AND TEMPERATURE

Several times a second, the input value of the pressure and temperature sensors is measured. Pressure and temperature are calculated based on the configuration settings for **SETUP 6: PRESSURE** [»29] and **SETUP 5: TEMPERATURE - WITH TYPE TA (4-20MA)** [»28] or **SETUP 5: TEMPERATURE - WITH TYPE TP (PT100)** [»27] and shown on the display with the configured number of decimals and (display) unit. Note that the pressure is always indicated as an absolute pressure value.

## 4.5 OPERATOR ALARMS

### 4.5.1 LOW BATTERY

When a battery is used to supply the unit (Type PB) and the battery voltage becomes too low during operation, the battery indicator comes on to warn that the unit is becoming less reliable. It is advised to install a new battery (as soon as possible) as described in **Section 7.3: Battery replacement instructions** [»55].

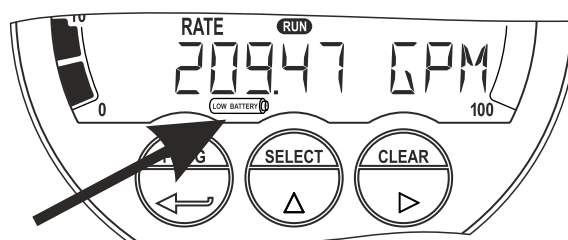


Fig. 8: Low battery alarm

### 4.5.2 RANGE ERROR

When the input value of the pressure or temperature sensor is out of the calibrated measurement range (e.g. due to a wire break or a faulty sensor), a range error is raised: The alarm flag starts flashing and the text RANGE ERROR is shown on the pressure or temperature screen.



### 4.5.3 INTERNAL ERROR

When an internal error occurs, the alarm flag starts flashing to indicate this.

If the alarm flag shows because of an internal error, the alarm code can be displayed by pushing the SELECT-key repeatedly until the internal alarm screen is shown.

See [Section B: Troubleshooting \[»61\]](#) for a description of the codes.

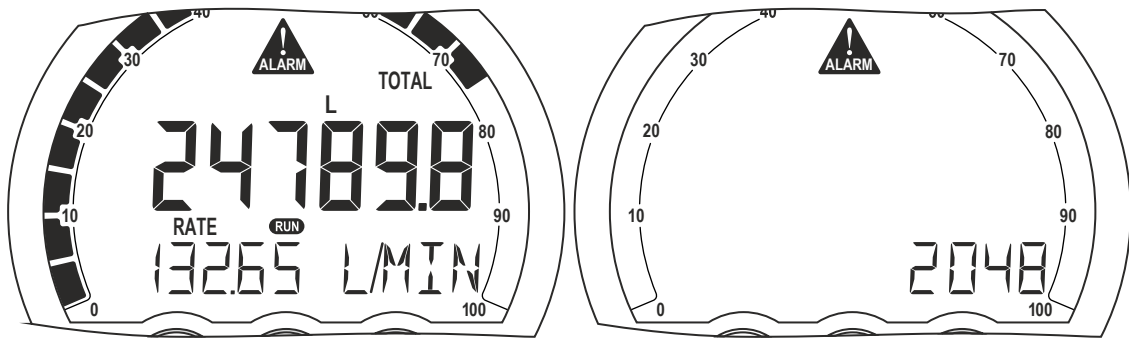


Fig. 9: Display with alarm flag and internal alarm screen

## 5 CONFIGURATION

### 5.1 INTRODUCTION

This chapter describes how technicians can use configuration settings to configure the unit for optimal functionality.

Configuration of the E126-P-EG can be done through:

- SETUP-mode using the optical keys (with cover installed)
- SETUP-mode using the mechanical keys (push buttons) (without cover)
- PC configuration tool using a communication option

### 5.2 OPERATING THE MAIN ELECTRONICS MODULE (MEM)




**Explosion risk: never open the housing when explosive atmosphere is present.**

Opening and servicing of the unit may only be carried out by authorized and trained personnel who have read and understood this manual, particularly [Section 2: Safety \[»5\]](#).



Before opening the enclosure, consult [Section 6.2.3: Opening, assembling and closing the unit \[»38\]](#).

During normal operation, the cover of the unit is installed and all configuration settings can be reviewed and changed in SETUP-mode using the optical keys. When the cover is removed during installation and servicing, the optical keys do not function and the Main Electronics Module becomes available, which offers different possibilities to configure the unit.

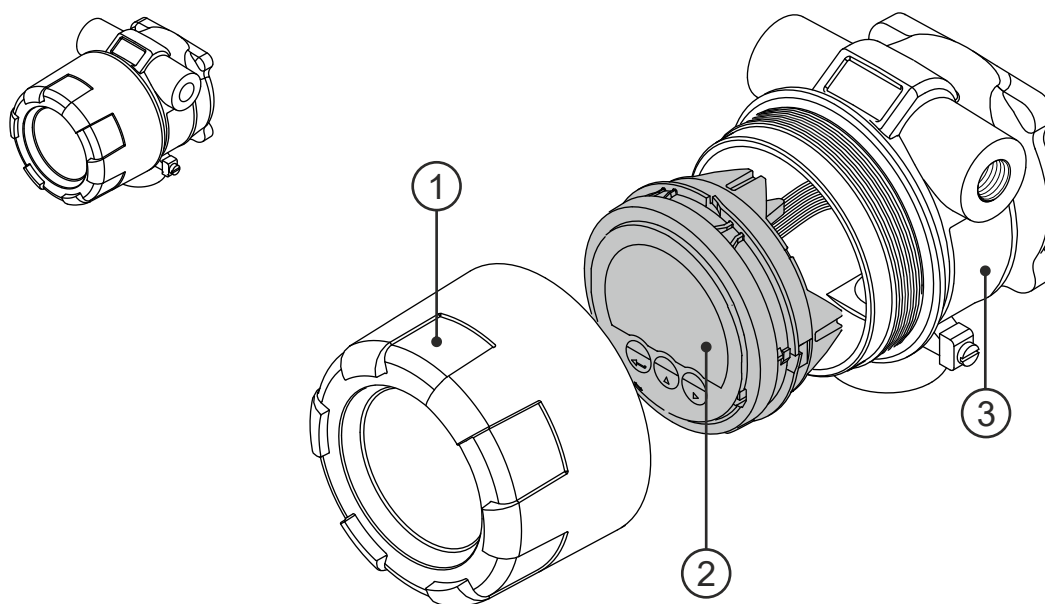

**Fig. 10: Exploded view indicating main components**

1. Cover	2. Main Electronics Module (MEM)	3. Body
----------	----------------------------------	---------

### 5.2.1 CONFIGURING USING PC CONFIGURATION TOOL

Configuration of the E126-P-EG can be done using a PC with our free of charge Remote Configuration Tool software. Consult [Section D: Remote Configuration Tool \[»70\]](#) for details. Connection to a PC is made by means of the communication port, located at the back side of the MEM.

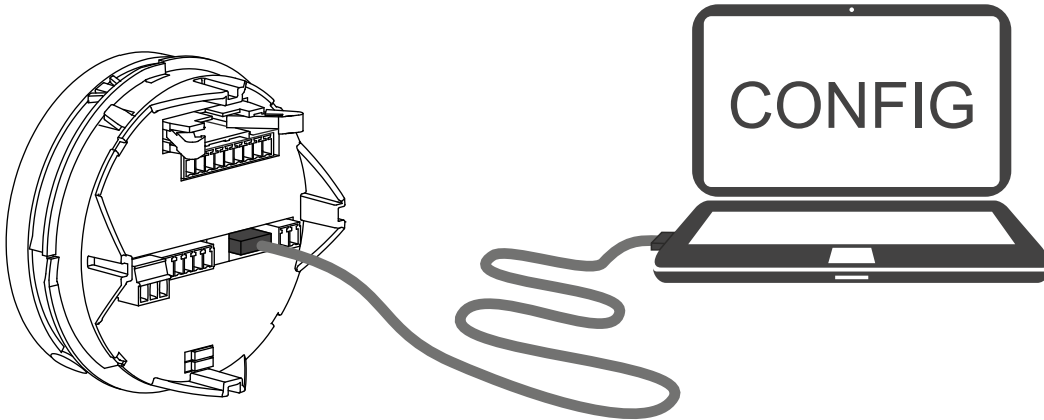


Fig. 11: USB connection between MEM and PC

All settings available in the PC Configuration tool correspond with menu items available in SETUP-mode. Please see [Section 5.5: SETUP menu explanations \[»22\]](#).

### 5.2.2 MECHANICAL KEYS

A quick and convenient way to configure the E126-P-EG is by means of SETUP-mode and three mechanical keys (push buttons) at the side of the MEM (available with the cover removed).

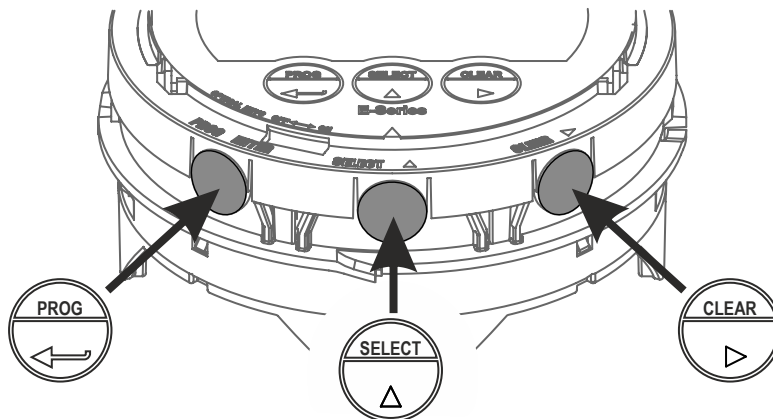

 



Fig. 12: Control panel pushbuttons

The mechanical keys copy the functionality of the corresponding optical keys at the front side of the MEM. After operating the mechanical keys, the optical keys are disabled for 30 seconds to avoid interference and to allow to replace the cover. The Key lock symbol  indicates that the optical keys are temporarily disabled, see [Section 4.2.2: Optical keys \[»10\]](#).

### 5.2.3 OPTICAL KEYS SWITCH

The optical keys can be disabled to save battery power or to avoid false activation under some circumstances. The switch can be found at the outside rim of the MEM.

The Key lock symbol  is shown on the display when the optical keys are disabled, see [Section 4.2.2: Optical keys \[»10\]](#). The mechanical keys always remain active.

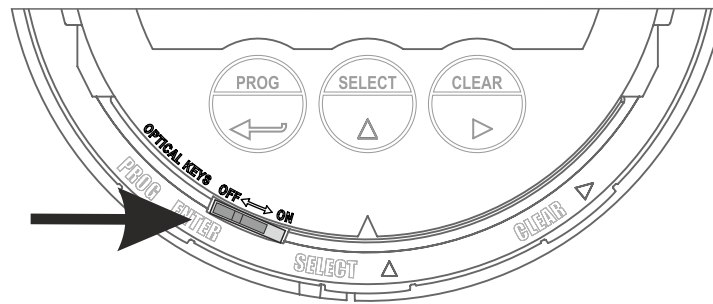

**Fig. 13: Disable switch for optical keys**

Use this switch to permanently disable the optical keys:

- **Enable:** move to the right / ON position.
- **Disable:** move to the left / OFF position.

#### 5.2.4 SAVING BATTERY LIFETIME (TYPE PB)

In case of a battery powered application, lifetime of the battery is an important subject. To prolong the battery lifetime as much as possible, it is strongly advisable to use only necessary functions, and disable functions if not in use. Factors that influence battery life are:

- Analog output signal
- Display update: the fast display update setting uses significantly more power
- Pulse output signal
- Communication
- Optical key activity
- Low temperatures: the available power will be less due to battery chemistry
- NPN and PNP inputs consume more energy than coil inputs
- High input frequency.



*For battery powered applications, disable the optical keys with the switch on the MEM where possible to significantly reduce power consumption.*

### 5.3 CONFIGURING USING SETUP MODE



For an overview of Operating modes, see [Section 4.1.1: Operating modes \[»9\]](#).



#### Changing settings may influence current operation

In SETUP mode the unit remains fully operational. Make sure the product is not being used for any application when changing settings.

#### 5.3.1 ENTERING SETUP MODE

1. Check if the Key lock symbol  is displayed on the screen. If necessary, unlock the keys by entering the unlock sequence (see [Section 4.2.2: Optical keys \[»10\]](#)).
2. Press the PROG-key for 7 seconds making sure  is continually displayed while pressing. You may be prompted to enter a password (do so as described in [Section 5.3.3: Changing configuration settings \[»19\]](#)).
3. The **SETUP** indicator is now activated on the display and the **RUN** indicator is deactivated.

#### 5.3.2 NAVIGATING THE SETUP MENU

The SETUP menu contains several menu groups, which each contain various menu items. Each menu item has a unique number which is displayed below the **SETUP** indicator at the bottom of the display. Additionally, each menu item is expressed with a keyword.

The menu number is a combination of two figures separated by a dot:

- the first figure indicates the selected menu group (e.g. 1. TOTAL).
- the second figure indicates the menu item (e.g. 1.1 UNIT).

The following image shows the layout of the menu structure:

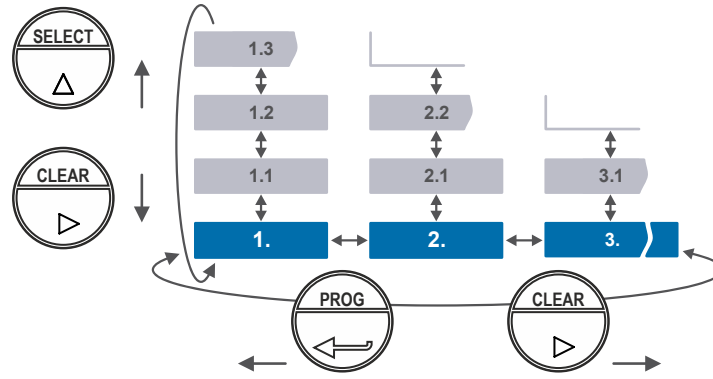


Fig. 14: SETUP menu layout and navigation

**Navigate the SETUP menu with the following functions:**



**PROG-key**

When a menu item is selected (e.g. 1.1), this key is used to start the programming sequence.

When a menu group is selected (and no function), this key is used to scroll back a group (e.g. 3. → 2. → 1. → 3. → 2. ...)



**SELECT-key**

This key is used to select the next menu item in the list (e.g. 1. → 1.1 → 1.2 → 1.3 → 1. ...). When the top of the list is reached, it will wrap around and return to the menu group selection.



**CLEAR-key**

This key is used to select the previous menu item in the list (e.g. 1.3 → 1.2 → 1.1 → 1. → 2. ...). When the bottom the list is reached, it returns to the menu group selection.

When a menu group is selected (and no item), this key is used to scroll to the next group (e.g. 1. → 2. → 3. → 1. → 2. ...)

**5.3.3 CHANGING CONFIGURATION SETTINGS**

A menu item either contains a value (a number with optionally a decimal point and sign, e.g. -123.45) or a selection list (e.g. L – m<sup>3</sup> - USGAL). After a menu item is selected in the SETUP menu, a new value can be programmed by performing the following steps. During the programming sequence, the **PROG** indicator is flashing on the display.

**Step 1: Start the programming sequence:**



**PROG-key**

When a menu item is selected in the SETUP menu, this key is used to start the programming sequence.

**Step 2a: Change a value**



**SELECT-key**

This key is used to increment the selected digit or to select the next position of the decimal point.

 
When the entered value is out of range, the increase sign ▲ or decrease-sign ▼ will be displayed; the value will be automatically brought within range when confirmed later.



**CLEAR-key**

This key is used to select the next digit. If a decimal point can be set, this will be included in the sequence as well (e.g. [decimal point] → digit 1 → digit 2 → digit 3 → [decimal point]).

The selected decimal point is flashing when it can be changed. When no decimal point is selected, all available decimals will be flashing on the display to indicate this when the sequence reaches the decimal point.

**SELECT-key + CLEAR-key**

The combination of the SELECT-key and CLEAR-key is used to select a negative value. When a value can also be entered as a negative number, pressing the SELECT-key and CLEAR-key simultaneously will toggle the '-' (minus) sign on and off.

**Step 2b: Change the selection in a list****SELECT-key**

This key is used to select the next item in the list (e.g. L → m<sup>3</sup> → USGAL).

At the end of the list, the selection will wrap around to the first selection.

**CLEAR-key**

This key is used to select the previous item in the list (e.g. USGAL → m<sup>3</sup> → L).

At the bottom of the list, the selection will wrap around to the last selection.

**Step 3: Finish the programming sequence****PROG-key**

During the programming sequence, this key is used to confirm the new value and return to SETUP mode. To cancel the operation, either press the PROG-key for 3 seconds or wait for 20 seconds: the programming sequence is cancelled and the former value is reinstated.

**5.3.4 RETURNING TO OPERATOR MODE**

When all configuration settings are set correctly, return to OPERATOR mode by pressing the PROG-key for three seconds, or do not press any key for 2 minutes to return automatically. The **RUN** indicator is now activated on the display and the **SETUP** indicator is deactivated.

**5.4 SETUP MENU OVERVIEW**

All unit settings can be configured from the control panel. You can also use the Remote Configuration Software, which can be downloaded from our website or is available from your supplier (see [Section D: Remote Configuration Tool \[»70\]](#)).



NOTE

*The available settings for the **Temperature** menu depend on type of temperature input ordered (indicated by type TP for PT100 and type TA for 4-20mA).*

1	TOTAL		DEFAULT
1.1	UNIT	L, m3, US gal, l gal, cf, oil bbl, kg, ton, US ton, lb, (none)	L
1.2	DECIMALS	0, 0.1, 0.02, 0.003	0
1.3	K-FACTOR	auto, 0.000010 - 9999999	auto
1.4	FACTOR-X	x1, x10, x100, x1000	x1
1.5	CLEAR PASSWORD	000 - 999 (000 = disabled)	000
1.6	CONTRACT HOUR	00:00 (24h format)	00:00
1.7	CURRENT DAY TOTAL	xxxxxxx	-
1.8	PREVIOUS DAY TOTAL	xxxxxxx	-

2	FLOWRATE		DEFAULT
2.1	UNIT	mL, L, m3, mg, g, kg, ton, US ton, US gal, l gal, Oil bbl, lb, cf, rev, none, scf, nm3, nL, p	L
2.2	TIME	/sec - /min - /hour - /day	/min
2.3	DECIMALS	0, 0.1, 0.02, 0.003	0
2.4	K-FACTOR	auto, 0.000010 - 9999999	auto
2.5	FILTER	01 - 99 (01 = off)	10
2.6	PERIOD	0.1 - 99.9 seconds	30.0 sec

<b>3 DISPLAY</b>			<b>DEFAULT</b>
3.1	FUNCTION	total, flowrate, acc. total	total
3.2	DAY TOTALS	off, operate, hidden	off
3.3	TOGGLE	enable, disable	disable
3.4	LCD NEW	fast, 1 sec, 3 secs, 15 secs, 30 secs, off	1 sec
3.5	BACKLIGHT (BRIGHTNESS)	0%, 20%, 40%, 60%, 80%, 100%	100%
3.6	BARGRAPH	enable, disable	enable
3.7	RATESPAN	0000000 - 9999999	1000
<b>4 FLOWMETER</b>			<b>DEFAULT</b>
4.1	SIGNAL	NPN, NPN_LP, REED, REED_LP, PNP, PNP_LP, NAMUR, Coil_Hi, Coil_Lo, Act_8.2 (8.2V DC), Act_24 (24V DC)	Coil_Lo
4.2	UNITS	hand, auto-vol, auto-mass	auto-vol
4.3	UNIT	Auto-vol: L, m3, US GAL, IGAL, cf, oil bbl Auto-mas: kg, ton, US ton, lb	L
4.4	K-FACTOR	0.000010 - 9999999	1
<b>5 TEMPERATURE - WITH TYPE TP (PT100)</b>			<b>DEFAULT</b>
5.1	DISPLAY	°C, °F, K	°C
5.2	NO. OF WIRES	2, 3, 4	2
5.3	FILTER	01 - 99 (01 = off)	01
<b>5 TEMPERATURE - WITH TYPE TA (4-20MA)</b>			<b>DEFAULT</b>
5.1	DISPLAY	°C, °F, K	°C
5.2	SPAN	0.00000 - 999999 K	100 K
5.3	OFFSET	0.01 - 9999.99 K	273.15 K
5.4	FILTER	01 - 99 (01 = off)	01
5.5	CALIB-LOW	default, calibrate, calibrate set	default
5.6	CALIB-HIGH	default, calibrate, calibrate set	default
<b>6 PRESSURE</b>			<b>DEFAULT</b>
6.1	UNIT	mbar, bar, psi	bar
6.2	SPAN	0.00000 - 999999	10.000 bar
6.3	OFFSET	0.001 - 9999.999	1.013 bar
6.4	FILTER	01 - 99 (01 = off)	01
6.5	CALIB-LOW	default, calibrate, calibrate set	default
6.6	CALIB-HIGH	default, calibrate, calibrate set	default
<b>7 FORMULA</b>			<b>DEFAULT</b>
7.1	EQUATIONS TYPE	EG - (fixed)	EG
7.2	T-NORMAL (TEMPERATURE)	0.00 - 99999.99 K	0.00 K
7.3	P-NORMAL (PRESSURE)	0.000 - 9999.999	0.000
7.4	C-NORMAL (COMPRESSIBILITY)	0.000000 - 9.999999	0.000000
7.5	COMPRESSIBILITY	0.000000 - 9.999999	0.000000

8 ANALOG OUTPUT			DEFAULT
8.1	OUTPUT	enable, disable	disable
8.2	RATE MIN (4MA)	0.000 - 9999999	0
8.3	RATE MAX (20MA)	0.000 - 9999999	99999
8.4	CUT-OFF	0.0 - 9.9 %	0.0 %
8.5	TUNE MIN (4MA)	0000 - 9999	-
8.6	TUNE MAX (20MA)	0000 - 9999	-
8.7	FILTER	01 - 99 (01 = off)	01
9 PULSE OUTPUT			DEFAULT
9.1	MODE	disable, scaled, retransmit	disable
9.2	WIDTH	0.000 - 9.999 sec (0.000 = off)	0.000
9.3	AMOUNT	0000.000 - 9999999 per pulse	1000
10 MODBUS COMMUNICATION			DEFAULT
10.1	SPEED	1200, 2400, 4800, 9600, 9600HP, 19200, 38400	9600
10.2	ADDRESS	001 - 247	1
10.3	MODE	off, bus asc, bus rtu	bus rtu
10.4	DATABITS	8 bits, 7 bits	8 bits
10.5	PARITY	none, even, odd	none
11 OTHERS			DEFAULT
11.1	MODEL	-	-
11.2	SOFTWARE VERSION	xx.xx.xx	-
11.3	SERIAL NUMBER	xxxxxxx	-
11.4	TIME	00:00:00 - 23:59:59 (hh.mm.ss)	00:00:00
11.5	PASSWORD	0000 - 9999 (0000 = off)	0000
11.6	KEY LOCK	enable, disable	enable
11.7	TAG NUMBER	0000000 - 9999999	0000000

## 5.5 SETUP MENU EXPLANATIONS

### 5.5.1 MENU 1: TOTAL






First set up the flowmeter in 4: FLOWMETER as this directly affects the settings/measurement units in the **Total** menu.

If the measurement unit is changed in 4.2: FLOWMETER > UNITS, the unit in 1.1: TOTAL > UNIT will change to the default setting.



When a different unit is selected, the actual total values are NOT recalculated.

1 TOTAL		
1.1	UNIT	<p>Determines the measurement unit for total, accumulated total, and the scaled pulse output.</p> <p>The available measurement units are controlled by the type of units selected in <b>SETUP</b> 4.2: FLOWMETER &gt; UNITS:</p> <ul style="list-style-type: none"> <li>• <b>Auto-vol:</b> L – m3 – US gal – l gal – cf – Oil bbl – nL – nm3</li> <li>• <b>Auto-mas:</b> kg – ton – US ton – lb</li> <li>• <b>Hand:</b> L – m3 – US gal – l gal – cf – Oil bbl – kg – ton – US ton – lb – nL – nm3 – ---- (no unit)</li> </ul>
1.2	DECIMALS	Determines for Total and Accumulated Total the number of digits after the decimal point.

1		TOTAL
1.3	K-FACTOR	<p>This value is used to convert the flowmeter pulse signals into a total unit. The <b>K-Factor</b> is based on the number of pulses generated by the flowmeter per selected measurement unit, as defined in 1.1: TOTAL &gt; UNIT. The more accurate the <b>K-Factor</b>, the more accurate the system.</p> <p><i>This setting can only be changed if the automatic unit conversion in <b>SETUP 4.2: FLOWMETER &gt; UNITS</b> is set to Hand. Otherwise, K-factor conversion will be Auto.</i></p> <p><i>After pressing PROG, the decimal point will start to flash. The decimal position can then be changed by pressing the SELECT-key, then press the CLEAR key to set the digits.</i></p> <p> NOTE</p> <p> NOTE</p>
1.4	FACTOR-X	<p>Determines the multiplication factor of Total and Accumulated Total. It also applies to the Current and Previous Day Totals. This makes it possible to display up to 3 more digits of the Total/accumulated Total. The amount is shown as a rounded number.</p>
1.5	CLEAR PASSWORD	<p>A password can be set up to prevent the operator from accidentally clearing the Total. This password can have up to 3 digits, for example 123.</p> <p>To disable password protection, enter three zeros (000).</p>
1.6	CONTRACT HOUR	<p>The contract hour can be set to any hour of the day in steps of 1 hour. When the system clock reaches the time set in <b>Contract hour</b>:</p> <ul style="list-style-type: none"> <li>the <b>Current Day Total</b> is copied to the <b>Previous Day Total</b>.</li> <li>the <b>Current Day Total</b> measurement is then restarted (reset to zero).</li> </ul> <p><b>Clock, the clock will be interrupted if there is a power down. When the unit is powered up again, the operator will be prompted to enter the correct system time.</b></p> <p><b>If the clock is not initialized, all measurements and calculations are done as normal. However, when the Daily Total feature is enabled, detection of Contract hour and the updating of Current day total and Previous day total will not be done at the correct time.</b></p> <p> CAUTION</p>
1.7	CURRENT DAY TOTAL	<p>Shows the amount/volume of totalized product since the last contract hour. This a 'running' totalizer and cannot be reset to zero.</p> <p>See <a href="#">Section 4.4.3: Current day total and Previous day total [»13]</a> for information on reviewing more day totals.</p>
1.8	PREVIOUS DAY TOTAL	<p>Shows the amount/volume of totalized product between the last contract hour and the contract hour before that. This totalizer cannot be reset to zero.</p> <p>See <a href="#">Section 4.4.3: Current day total and Previous day total [»13]</a> for information on reviewing more historical day totals.</p>

## 5.5.2 MENU 2: FLOWRATE






First set up the flowmeter in **SETUP 4: FLOWMETER** as this directly affects the settings/measurement units in this menu (**Flowrate**).

If the type of flowmeter unit is changed in **SETUP 4.2: FLOWMETER > UNITS** or **4.3: FLOWMETER > UNIT**, the units in **2.1: FLOWRATE > UNIT** will change to the default setting of the selected flowmeter.






If the settings in **SETUP 2.1: FLOWRATE > UNIT**, **2.2: FLOWRATE > TIME**, or **2.3: FLOWRATE > DECIMALS** are changed, this will directly affect the analog output settings in **8.2: ANALOG OUTPUT > RATE MIN (4MA)**, **8.3: ANALOG OUTPUT > RATE MAX (20MA)**, and the displayed bargraph in **3.7: DISPLAY > RATESPAN**.

Therefore, you should first determine the required settings for the flowrate.

2		FLOWRATE
2.1	UNIT	<p>Determines the measurement unit for the flowrate. The type of unit that can be selected depends on the flowmeter unit (volumetric or mass) selected in 4.2: FLOWMETER &gt; UNITS.</p> <p>The following can be selected:            AUTO-VOL: mL - L - m3 - US GAL - I GAL - cf - Oil bbl - nL - nm3 - scf            AUTO-MAS: mg - g - kg - ton - lb - US ton            Hand: mL - L - m3 - US GAL - I GAL - cf - Oil bbl - nL - nm3 - scf - mg - g - kg - ton - lb - US ton - rev - P - (no unit)</p>
2.2	TIME	Determines the time interval (sec, min, hour or day) for calculating the flowrate.
2.3	DECIMALS	Determines the number of decimals for the flowrate.
2.4	K-FACTOR	<p>This value is used to convert the flowmeter pulse signals to a flowrate unit. The <b>K-factor</b> is based on the number of pulses generated by the flowmeter per measurement unit selected in 2.1: FLOWRATE &gt; UNIT.</p> <p>The more accurate the <b>K-factor</b>, the more accurate the system.</p> <p> <i>This setting can only be changed if the automatic unit conversion in <b>SETUP</b> 4.2: FLOWMETER &gt; UNITS is set to Hand. Otherwise, K-factor conversion will be Auto.</i></p> <p> <i>After pressing PROG, the decimal point will start to flash. The decimal position can then be changed by pressing the SELECT-key, then press the CLEAR key to set the digits.</i></p>
2.5	FILTER	<p>Stabilizes the flowrate reading. This digital filter setting produces a more stable but less actual reading. The filter principal is based on three input values: the filter level (01-99), the last calculated flowrate, and the last average value.</p> <p>The higher the filter level, the longer the response time of a changed value. Use trial and error to find the best setting for your application.</p>
2.6	PERIOD	<p>This value is used to calculate the flowrate by counting the number of pulses within a certain time, for example 1 second. The longer the time, the more accurate the flowrate.</p> <p></p> <ul style="list-style-type: none"> <li>• <i>This setting directly influences the update time for the analog output. If the output response is too slow, decrease the number of pulses.</i></li> <li>• <i>The shorter the update time, the higher the power consumption of the unit (important for battery-powered applications).</i></li> </ul>

### 5.5.3 MENU 3: DISPLAY

3		DISPLAY
3.1	FUNCTION	<p>Determines which information is shown on the main screen.</p> <ul style="list-style-type: none"> <li>• <b>Total:</b> Total is displayed with the large 12 mm (0.47") digits; Flowrate is displayed with the 7 mm (0.28") digits simultaneously.</li> <li>• <b>Flowrate:</b> Only Flowrate is displayed with the large 12 mm (0.47") digits together with the measuring unit.</li> <li>• <b>Accumulated total:</b> Total is displayed with the large digits; Accumulated total is displayed with the small digits simultaneously.</li> </ul> <p>When SELECT is pressed on the main screen, the operator can scroll through the various process values. See <a href="#">Section 4: Operation [»9]</a> for more information on operator information and functions.</p>

3 DISPLAY		
3.2	DAY TOTALS	<p>A basic data log function is available to register Current Day Total and Previous Day Total. This setting determines the availability at the operator level:</p> <ul style="list-style-type: none"> <li>• <b>Off:</b> Current Day Total and Previous Day Total are not available.</li> <li>• <b>Operator:</b> Current Day Total and Previous Day Total are available at the operator level by pressing the SELECT key several times. At setup level, they can be viewed at <b>SETUP 1.7: TOTAL &gt; CURRENT DAY TOTAL</b> and <b>1.8: TOTAL &gt; PREVIOUS DAY TOTAL</b>.</li> <li>• <b>Hidden:</b> Current Day Total and Previous Day Total are only available at <b>SETUP 1.7: TOTAL &gt; CURRENT DAY TOTAL</b> and <b>1.8: TOTAL &gt; PREVIOUS DAY TOTAL</b>.</li> </ul> <p> <i>When this function is enabled, a list of the last 15 historical day totals is available and can be reviewed from the operator level. See <a href="#">Section 4: Operation [p9]</a> for information on reviewing historical day totals.</i></p>
3.3	TOGGLE	<p>When enabled, the pressure and temperature information is shown on the main screen (see <a href="#">Section 4: Operation [p9]</a>) and is alternated with the normal information shown on the bottom line of the display.</p>
3.4	LCD NEW	<p>Calculating the display information significantly affects the power consumption. When the application does not require a fast display refresh rate, it is strongly advised to select a slow refresh rate. Information will not be lost, every pulse will be counted, and the output signals will be generated in the normal way. The following can be selected: fast, 1 sec, 3 secs, 15 secs, 30 secs, off</p> <p>When "off" is selected, the display switches off automatically. When an update rate other than "fast" is selected, pressing a key will switch the update rate to "fast" for 30 seconds. After this time, the display will return to the configured update rate (or switch off).</p> <p> <i>Save battery lifetime by choosing an update time of 1 second or longer.</i></p> <p> <i>After the operator has pressed a button, the display refresh rate will always switch to fast for 30 seconds. When 'OFF' is selected, the display will: temporarily turn on after one of the keys is touched; and automatically turn off after 30 seconds.</i></p>
3.5	BACKLIGHT (BRIGHTNESS)	<p>The unit has a backlight. The backlight brightness can be adjusted from off (0%) to max (100%) in steps of 20%.</p> <ul style="list-style-type: none"> <li>• <i>The brightness cannot be adjusted for battery powered units.</i></li> <li>• <i>When the unit is only loop powered, it cannot use the backlight. An external supply is required instead.</i></li> </ul> <p></p>
3.6	BARGRAPH	<p>The unit has a speedometer/bar graph around the edge of the display that gives a quick impression of the actual flowrate. The following can be selected:</p> <ul style="list-style-type: none"> <li>• <b>Enable:</b> the bar graph is switched on.</li> <li>• <b>Disable:</b> the bar graph is switched off.</li> </ul>
3.7	RATESPAN	<p>Sets the range of the speedometer. The display shows 0 – 100 and has 20 blocks. Therefore, each block represents 5% of the total range.</p> <p> <i>The number of decimals displayed depends on <b>SETUP 2.3: FLOWRATE &gt; DECIMALS</b>.</i></p>

#### 5.5.4 MENU 4: FLOWMETER

To simplify the configuration of the Flowmeter, Total and Flowrate settings, the E126-P-EG has an automatic unit conversion feature. To use this feature, you only have to enter the average K-factor and the related measurement unit.

##### Advantages/features:

- The same K-factor calculation is used for Total and Flowrate.
- All configuration is done in the Flowmeter menu.

The measurement units can be set for volume or mass units. Refer to the test/calibration certificate provided with your flowmeter. The automatic unit conversion feature can be set to 'Hand', allowing for independent configuration of total and flowrate, for example, when:

- measurement units are not supported, i.e. 'revolutions', or
- volume and mass units are used simultaneously.

Use the following procedure to set up the automatic unit conversion:

1. 4.1: FLOWMETER > SIGNAL: Select the correct type of flowmeter signal.
2. 4.2: FLOWMETER > UNITS: Select the type of measurement unit (volume or mass) shown on the certificate.
3. 4.3: FLOWMETER > UNIT: Select the measuring unit shown on the certificate.
4. 4.4: FLOWMETER > K-FACTOR: Enter the (average) K-factor shown on the certificate.
5. 1.1: TOTAL > UNIT: Select the desired measuring units for (accumulated) Total.
6. 2.1: FLOWRATE > UNIT: Select the desired measuring units for Flowrate.

For a detailed description and tutorials on the automatic unit conversion feature, refer to our website (or ask your supplier).

**Example:** How to manually calculate the K-factor for total or flowrate:


- The Flowmeter generates 65.231 pulses per US gallon.
- The required measurement unit is cubic feet (ft<sup>3</sup>).
- A cubic foot = 7.48052 gallons.




#### Formula

Pulse per US gallon x cubic foot (in gallons) = **K-factor**

$$65.231 \times 7.48052 = \mathbf{487.9618}$$

For this example, enter **487.9618** as the K-factor for total or flowrate.

4 FLOWMETER					
4.1	SIGNAL	<p>Selects the type of flowmeter pickup / signal. The unit can process several types of input signal. The settings with LP are used to apply a built-in low-pass filter. Also see <b>Section 6.4.10: Terminals S1-S3: Flowmeter input [»48]</b> for more information.</p> <p><i>The selections "Active pulse input" offer a pulse detection level of about 50% of the selected active pulse voltage.</i></p>			
FLOWMETER SELECTION CHARACTERISTICS					
	TYPE OF SIGNAL	EXPLANATION	RESISTANCE	FREQ / mVpp	REMARKS
	NPN	NPN input	100 kΩ pull-up	max. 6 kHz	Open collector
	NPN - LP	NPN input with low pass filter	100 kΩ pull-up	max. 2.2 kHz	Open collector Less sensitive
	REED	Reed-switch input	1 MΩ pull-up	max. 1.2 kHz	
	REED - LP	Reed-switch input with low pass filter	1 MΩ pull-up	max. 120 Hz	Less sensitive
	PNP	PNP input	51 kΩ pull-down	max. 6 kHz	
	PNP - LP	PNP input with low pass filter	51 kΩ pull-down	max. 700 Hz	Less sensitive
	NAMUR	NAMUR input	820 Ω pull-down	max. 4 kHz	External sensor power required
	COIL HI	Coil input high sensitivity	-	min. 20 mVpp	Sensitive for interference!
	Type ZF			min. 10 mVpp	
	Type ZG			min. 5 mVpp	
	COIL LO	Coil input low sensitivity	-	min. 90 mVpp	Normal sensitivity
	8-2 DC	Active pulse input detection level 3.9 Vdc	3k9 Ω pull-down	max. 10 kHz	External power required
	24 DC	Active pulse input detection level 11 Vdc	3 k Ω pull-down	max. 10 kHz	External power required

4 FLOWMETER		
4.2	UNITS	<p>This setting activates the automatic unit conversion function which converts the selected flowmeter unit to measurement units for Total and Flowrate. The following can be selected:</p> <ul style="list-style-type: none"> <li>• <b>Auto-vol</b>: Automatic unit conversion is enabled for volumetric flow. Flowmeter, Total and Flowrate show volumetric measurement units.</li> <li>• <b>Auto-mas</b>: Automatic unit conversion is enabled for mass flow. Flowmeter, Total and Flowrate show mass measurement units.</li> <li>• <b>Hand</b>: Automatic unit conversion is disabled. Total and Flowrate show all available units and should be configured individually.</li> </ul> <p>When <b>Hand</b> is selected, menu items 4.3: FLOWMETER &gt; UNIT and 4.4: FLOWMETER &gt; K-FACTOR disappear and the correct K-factors must be entered at <b>SETUP</b> 1.3: TOTAL &gt; K-FACTOR and 2.4: FLOWRATE &gt; K-FACTOR.</p> <ul style="list-style-type: none"> <li>• <b>To make use of automatic unit conversion, Total and Flowrate must be configured in a convertible unit. If this is not possible, automatic unit conversion cannot be used and Hand should be chosen.</b></li> <li>• <b>If the type of measurement unit is changed <b>SETUP</b> 1.1: TOTAL &gt; UNIT and 2.1: FLOWRATE &gt; UNIT will automatically change back to their default setting.</b></li> </ul> <div style="text-align: center;">  <p>CAUTION</p> </div>
4.3	UNIT	<p>Determines the measurement unit for the flowmeter. When automatic unit conversion is used, the units for Total and Flowrate are derived from this setting.</p> <p><i>Changing the flowmeter unit will not change the amount displayed for Total and Accumulated Total.</i></p> <div style="text-align: center;">  <p>NOTE</p> </div>
4.4	K-FACTOR	<p>Converts the flowmeter pulse signals to a quantity. The K-factor is based on the number of pulses generated by the flowmeter per measurement unit selected in 4.3: FLOWMETER &gt; UNIT.</p> <p>The more accurate the K-factor, the more accurate the system.</p> <p><i>After pressing PROG, the decimal point will start to flash. The decimal position can then be changed by pressing the SELECT-key, then press the CLEAR key to set the digits.</i></p> <div style="text-align: center;">  <p>NOTE</p> </div>

**5.5.5 MENU 5: TEMPERATURE - WITH TYPE TP (PT100)**

5 TEMPERATURE - WITH TYPE TP (PT100)					
5.1	DISPLAY	Sets the temperature unit for the operator. This setting does not influence the actual calculations.			
5.2	NO. OF WIRES	Sets the number of wires for the PT100 sensors.			
5.3	FILTER	<p>Stabilizes the temperature reading. This digital filter setting produces a more stable but less actual reading.</p> <p>The filter principal is based on three input values: the filter level (01-99), the last calculated temperature, and the last average value. The higher the filter level, the longer the response time of a changed value. Use trial and error to find the best setting for your application.</p>			
RESPONSE TIME ON STEP CHANGE OF INPUT VALUE (IN % OF END VALUE)					
	Filter value	50%	75%	90%	99%
	01	filter disabled	filter disabled	filter disabled	filter disabled
	10	7 sec	14 sec	22 sec	44 sec
	20	14 sec	28 sec	45 sec	90 sec
	30	21 sec	41 sec	68 sec	136 sec
	50	35 sec	69 sec	114 sec	228 sec
	75	52 sec	104 sec	172 sec	344 sec
	99	69 sec	137 sec	227 sec	454 sec

## 5.5.6 MENU 5: TEMPERATURE - WITH TYPE TA (4-20MA)




NOTE

A "fixed" line temperature value can be used for the calculations. This feature requires the Type TA: 4-20mA input.

Enter the fixed line temperature for offset (5.3: TEMPERATURE - WITH TYPE TA (4-20MA) > OFFSET) and set span to zero (5.2: TEMPERATURE - WITH TYPE TA (4-20MA) > SPAN).

When no temperature sensor is connected, calibrate the low input value manually (5.5: TEMPERATURE - WITH TYPE TA (4-20MA) > CALIB-LOW) to remove the range error alarm.

5		TEMPERATURE - WITH TYPE TA (4-20MA)			
5.1	DISPLAY	Programs the displayed temperature unit. This setting does not influence the actual calculations.			
5.2	SPAN	Determines the measurement range in Kelvin (K) of the (0)4-20 mA temperature sensor. <b>Example: Calculating the span for temperature.</b> <i>The sensor generates:</i> <ul style="list-style-type: none"> <li>the minimum signal (4 mA) at a temperature of - 100°C (173.15 K).</li> <li>the maximum signal (20 mA) at a temperature of 250°C (523.15 K).</li> </ul> Therefore, the span should be set at (523.15 – 173.15 =) 350 K. <i>After pressing PROG, the decimal point will start to flash. The decimal position can then be changed by pressing the SELECT-key, then press the CLEAR key to set the digits.</i>			
		 NOTE			
5.3	OFFSET	Calculations are based on temperature values in Kelvin (K). The flow computer needs to know the measured temperature at minimum signal. In the above example 173.15 K must be entered.			
5.4	FILTER	Stabilizes the temperature reading. This digital filter setting produces a more stable but less actual reading. The filter principal is based on three input values: the filter level (01-99), the last calculated temperature, and the last average value. The higher the filter level, the longer the response time of a changed value. Use trial and error to find the best setting for your application.			
RESPONSE TIME ON STEP CHANGE OF INPUT VALUE (IN % OF END VALUE)					
	Filter value	50%	75%	90%	99%
	01	filter disabled	filter disabled	filter disabled	filter disabled
	10	7 sec	14 sec	22 sec	44 sec
	20	14 sec	28 sec	45 sec	90 sec
	30	21 sec	41 sec	68 sec	136 sec
	50	35 sec	69 sec	114 sec	228 sec
	75	52 sec	104 sec	172 sec	344 sec
	99	69 sec	137 sec	227 sec	454 sec
5.5	CALIB-LOW	Calibrates the input value for (0)4 mA. This setting is used because the signal from the temperature sensor might not be exactly 4.0 mA (or 0.0 mA) at minimum temperature. This function measures the real output value at minimum temperature.  <b>Make sure the offered signal is correct before calibration takes place as this has a major effect on the accuracy of the system.</b> After pressing PROG, three settings can be selected: <ul style="list-style-type: none"> <li>CALIB: Calibrates the input with the actual "(0)4 mA" value. After pressing enter, CAL SET is displayed as soon as calibration is completed. From that moment, the analog value must be more than the calibrated value before the signal will be processed.</li> <li>DEFAULT: Reinstalls the manufacturer's value.</li> <li>CAL SET: Selects the last calibrated value.</li> </ul>			

5 TEMPERATURE - WITH TYPE TA (4-20MA)		
5.6	CALIB-HIGH	<div style="text-align: center;">  </div> <p>Calibrates the input value for 20 mA as the signal from the temperature sensor might not be exactly 20.0 mA at maximum temperature. This function will measure the real output value at maximum temperature.</p> <p><b>Make sure the offered signal is correct before calibration takes place as this has a major effect on the accuracy of the system.</b></p> <p>After pressing PROG, three settings can be selected:</p> <ul style="list-style-type: none"> <li>• CALIB: Calibrates the input with the actual “20 mA” value. After pressing enter, CAL SET is displayed as soon as the calibration is completed. From that moment, the analog value must be less than the calibrated value for a reliable measurement.</li> <li>• DEFAULT: Reinstalls the manufacturer’s value.</li> <li>• CAL SET: Selects the last calibrated value.</li> </ul>

**5.5.7 MENU 6: PRESSURE**





A “fixed” line pressure value can be used for the calculations:

Enter the fixed line pressure for offset (6.3: PRESSURE > OFFSET) and set the span to zero (6.2: PRESSURE > SPAN).

When no pressure sensor is connected, manually calibrate the low input value at 6.5: PRESSURE > CALIB-LOW to remove the range error alarm.

6 PRESSURE		
6.1	UNIT	Programs the displayed unit of measurement for pressure. This setting does not influence the actual calculations.
6.2	SPAN	<p>Determines the measurement range of the (0)4-20 mA pressure sensor according to the selected measurement unit.</p> <p><b>Example: Calculating the span for pressure.</b></p> <p><i>The sensor generates:</i></p> <ul style="list-style-type: none"> <li>• the minimum signal (4 mA) at a pressure of 2.5 bar.</li> <li>• the maximum signal (20 mA) at a pressure of 50 bar.</li> </ul> <p><i>Therefore, the span should be set at (50 - 2.5 =) 47.5 bar.</i></p>
6.3	OFFSET	<p>Calculations are based on absolute pressures.</p> <p>The flow computer must know the measured pressure at minimum signal. In the above example 2.500 bar must be entered.</p> <p>When using a gauge type pressure indicator, enter an offset to compensate for environmental pressure (for example, air pressure, 1.013 bar).</p>
6.4	FILTER	<p>Stabilizes the pressure reading.</p> <p>This digital filter setting produces a more stable but less actual reading. The filter principal is based on three input values: the filter level (01-99), the last calculated pressure, and the last average value. The higher the filter level, the longer the response time of a changed value. Use trial and error to find the best setting for your application.</p>
RESPONSE TIME ON STEP CHANGE OF INPUT VALUE (IN % OF END VALUE)		
	Filter value	50%      75%      90%      99%
	01	filter disabled      filter disabled      filter disabled      filter disabled
	10	7 sec      14 sec      22 sec      44 sec
	20	14 sec      28 sec      45 sec      90 sec
	30	21 sec      41 sec      68 sec      136 sec
	50	35 sec      69 sec      114 sec      228 sec
	75	52 sec      104 sec      172 sec      344 sec
	99	69 sec      137 sec      227 sec      454 sec





6 PRESSURE		
6.5	CALIB-LOW  	<p>Calibrates the input value for (0)4 mA. This setting is used because the signal from the pressure sensor might not be exactly 4.0 mA (or 0.0 mA) at minimum pressure. This function measures the real output value at minimum pressure.</p> <p><b>Make sure the offered signal is correct before calibration takes place as this has a major effect on the accuracy of the system.</b></p> <p>After pressing PROG, three settings can be selected:</p> <ul style="list-style-type: none"> <li>• CALIB: Calibrates the input with the actual (0)4 mA value. After pressing enter, CAL SET is displayed as soon as calibration is completed. From that moment, the analog value must be more than the calibrated value before the signal will be processed.</li> <li>• DEFAULT: Reinstalls the manufacture's values.</li> <li>• CAL SET: Selects the last calibrated value.</li> </ul>
6.6	CALIB-HIGH  	<p>Calibrates the input value for 20 mA. This setting is used because the signal from the pressure sensor might not be exactly 20.0 mA at maximum pressure. This function measures the real output value at maximum pressure.</p> <p><b>Make sure the offered signal is correct before calibration takes place as this has a major effect on the accuracy of the system.</b></p> <p>After pressing PROG, three settings can be selected:</p> <ul style="list-style-type: none"> <li>• CALIB: Calibrates the input with the actual 20 mA value. After pressing enter, CAL SET is displayed as soon as calibration is completed. From that moment, the analog value must be less than the calibrated value for a reliable measurement.</li> <li>• DEFAULT: Reinstalls the manufacture's values.</li> <li>• CAL SET: Selects the last calibrated value.</li> </ul>


### 5.5.8 MENU 7: FORMULA

7 FORMULA		
7.1	EQUATIONS TYPE	<p>Shows the formula. The type EG stands for Equations Gas - flow computer for corrected gas volume.</p> <p>The formula used:</p> $Q_{normal} = Q \times \frac{P}{P_{normal}} \times \frac{T_{normal}}{T} \times \frac{C_{normal}}{C}$ <p> <math>Q_{normal}</math> = calculated volume at reference conditions  <math>Q</math> = measured volume  <math>P</math> = line pressure  <math>P_{normal}</math> = reference pressure  <math>T_{normal}</math> = reference temperature  <math>T</math> = line temperature  <math>C_{normal}</math> = reference compressibility factor  <math>C</math> = compressibility factor </p>
7.2	T-NORMAL (TEMPERATURE)	<p>Enter the reference temperature <math>T_{normal}</math> with two decimals in Kelvin (K). In most applications, the volume is calculated at 0°C, which is 273.15 K. The temperature compensation is disabled with value zero (0).</p>
7.3	P-NORMAL (PRESSURE)	<p>Enter the reference pressure <math>P_{normal}</math> with three decimals in the selected pressure unit. In most applications, the volume is calculated at 1.013 Bar. The pressure compensation is disabled with value zero (0).</p>
7.4	C-NORMAL (COMPRESSIBILITY)	<p>Enter the reference compressibility factor <math>C_{normal}</math> for the gas at reference conditions. The compressibility compensation is disabled with value zero (0).</p>
7.5	COMPRESSIBILITY	<p>Enter the compressibility factor <math>C</math> for the gas at operating conditions. The <math>C</math> factor indicates how a real gas behaves with respect to an ideal gas (with <math>C=1</math>), that exactly obeys the ideal gas law (<math>PV/T=nR</math>). The compressibility compensation is disabled with value zero (0).</p>

### 5.5.9 MENU 8: ANALOG OUTPUT

An analog 4-20 mA signal is generated according to the flowrate with a 12 bits resolution. The settings for Flowrate influence the analog output directly and should be configured first. The relationship between rate and analog output is set with the following functions.

8		ANALOG OUTPUT																						
8.1	OUTPUT	 <p>If the analog output is not used, it can be disabled to minimize power consumption and save battery life. When the output is disabled, a current of about 2 mA is generated and the unit can still be supplied from this signal (provided a power supply is connected).</p> <p><i>While powering-up the loop, the initial current is approximately 2 mA. When the output is enabled, it can take a few seconds before the correct current is generated.</i></p>																						
8.2	RATE MIN (4MA)	 <p>Enter the flowrate at which the output should generate the minimum signal (4 mA) – in most applications at flowrate “0”.</p> <p>The number of decimals displayed depends on the settings in <b>SETUP 2.3: FLOWRATE &gt; DECIMALS</b>.</p> <p>The measuring units and the time (L/min for example) depend on the settings in <b>SETUP 2.1: FLOWRATE &gt; UNIT</b> and <b>2.2: FLOWRATE &gt; TIME</b> and are displayed during editing.</p> <p><i>If required, you can program the analog output 'up-side-down'. The 4 mA then represents the maximum flowrate. For example, enter 800 L/min.</i></p>																						
8.3	RATE MAX (20MA)	 <p>Enter the flowrate at which the output should generate the maximum signal (20 mA) – in most applications at maximum flow.</p> <p>The number of decimals displayed depends on the settings in <b>SETUP 2.3: FLOWRATE &gt; DECIMALS</b>.</p> <p>The measuring units and the time (L/min for example) depend on the settings in <b>SETUP 2.1: FLOWRATE &gt; UNIT</b> and <b>2.2: FLOWRATE &gt; TIME</b> and are displayed during editing.</p> <p><i>If required, you can program the analog output 'up-side-down'. The 20 mA then represents the minimum flowrate. For example, enter 0 L/min.</i></p>																						
8.4	CUT-OFF	<p>A low flow cut-off can be set as a percentage of the full range of 16 mA, for example, to ignore leakage.</p> <p>When the flow is less than the required rate, the current will be the minimum signal (4 mA, or 20mA when the analog output is programmed 'up-side-down').</p> <p style="text-align: center;">CUT-OFF CALCULATION EXAMPLES</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Cut-off</th> <th>Rate-min 4 mA</th> <th>Rate-max 20 mA</th> <th>Required rate before reading</th> <th>Output at required rate</th> </tr> </thead> <tbody> <tr> <td>2.0%</td> <td>0 L/min</td> <td>100 L/min</td> <td><math>(100-0)*2.0\% + 0 = 2.0 \text{ L/min}</math></td> <td><math>4 + (16*2.0\%) = 4.32 \text{ mA}</math></td> </tr> <tr> <td>3.5%</td> <td>20 L/min</td> <td>800 L/min</td> <td><math>(800-20)*3.5\% + 20 = 27.3 \text{ L/min}</math></td> <td><math>4 + (16*3.5\%) = 4.56 \text{ mA}</math></td> </tr> <tr> <td>3.5% up-side-down</td> <td>800 L/min</td> <td>20 L/min</td> <td><math>(800-20)*3.5\% + 20 = 27.3 \text{ L/min}</math></td> <td><math>20 - (16*3.5\%) = 19.44 \text{ mA}</math></td> </tr> </tbody> </table>			Cut-off	Rate-min 4 mA	Rate-max 20 mA	Required rate before reading	Output at required rate	2.0%	0 L/min	100 L/min	$(100-0)*2.0\% + 0 = 2.0 \text{ L/min}$	$4 + (16*2.0\%) = 4.32 \text{ mA}$	3.5%	20 L/min	800 L/min	$(800-20)*3.5\% + 20 = 27.3 \text{ L/min}$	$4 + (16*3.5\%) = 4.56 \text{ mA}$	3.5% up-side-down	800 L/min	20 L/min	$(800-20)*3.5\% + 20 = 27.3 \text{ L/min}$	$20 - (16*3.5\%) = 19.44 \text{ mA}$
Cut-off	Rate-min 4 mA	Rate-max 20 mA	Required rate before reading	Output at required rate																				
2.0%	0 L/min	100 L/min	$(100-0)*2.0\% + 0 = 2.0 \text{ L/min}$	$4 + (16*2.0\%) = 4.32 \text{ mA}$																				
3.5%	20 L/min	800 L/min	$(800-20)*3.5\% + 20 = 27.3 \text{ L/min}$	$4 + (16*3.5\%) = 4.56 \text{ mA}$																				
3.5% up-side-down	800 L/min	20 L/min	$(800-20)*3.5\% + 20 = 27.3 \text{ L/min}$	$20 - (16*3.5\%) = 19.44 \text{ mA}$																				
8.5	TUNE MIN (4MA)	 <p>Use this setting to precisely tune the minimum analog output value (initial value is 4 mA). This value can differ slightly due to ambient influences such as temperature.</p> <p><b>Before tuning the signal, make sure the analog signal is not being used for any application.</b></p> <p>After pressing PROG, the current will be about 4 mA. The current can be increased / decreased with the arrow-keys and is directly active. Press PROG to store the new value.</p>																						

8		ANALOG OUTPUT				
8.6	TUNE MAX (20MA)	 <p>Use this setting to precisely tune the maximum analog output value (initial value is 20 mA). This value can differ slightly due to ambient influences such as temperature.</p> <p><b>Before tuning the signal, make sure the analog signal is not being used for any application.</b></p> <p>After pressing PROG, the current will be about 20 mA. The current can be increased / decreased with the arrow-keys and is directly active. Press PROG to store the new value.</p>				
8.7	FILTER	<p>Stabilizes the analog output signal. The output value is updated 8 times a second. This digital filter setting produces a more stable but less actual reading. The filter principal is based on three input values: the filter level (01-99), the last analog output value, and the last average value.</p> <p>The higher the filter level, the longer the response time of a changed value.</p>				
RESPONSE TIME ON STEP CHANGE OF INPUT VALUE (IN % OF END VALUE)						
		Filter value	50%	75%	90%	99%
		01	filter disabled	filter disabled	filter disabled	filter disabled
		02	0.1 sec	0.2 sec	0.4 sec	0.7 sec
		03	0.2 sec	0.4 sec	0.6 sec	1.2 sec
		05	0.4 sec	0.7 sec	1.1 sec	2.1 sec
		10	0.7 sec	1.4 sec	2.2 sec	4.4 sec
		20	1.4 sec	2.8 sec	4.5 sec	9 sec
		30	2.1 sec	4.1 sec	7 sec	14 sec
		50	3.5 sec	7 sec	11 sec	23 sec
		75	5 sec	10 sec	17 sec	34 sec
		99	7 sec	14 sec	23 sec	45 sec

### 5.5.10 MENU 9: PULSE OUTPUT

The "Pulse" menu configures the behavior of the digital output signals. As standard, one transistor output is available (Type OT): D1. Its function is based on the mode selected at 9.1: PULSE OUTPUT > MODE.



Optionally, one relay output is available (Type OR): D5. Its output functionality corresponds to the functionality of output D1.



The digital (transistor) output D1 has a maximum frequency of 500 Hz (scaled pulse output).


Make sure the output frequency of the optional digital (relay) output D5 does not exceed 0.5 Hz, otherwise the relay lifetime and reliability will be reduced significantly.

9		PULSE OUTPUT			
9.1	MODE	<p>The following modes of operation are available for the digital outputs:</p> <ul style="list-style-type: none"> <li>• <b>Disabled:</b> the output is switched off.</li> <li>• <b>Scaled:</b> each time the accumulated total has increased with the Amount set at 9.3: PULSE OUTPUT &gt; AMOUNT, a pulse will be sent on the output with the Width set at 9.2: PULSE OUTPUT &gt; WIDTH.</li> <li>• <b>Retransmit:</b> the unscaled incoming pulse from the flowmeter is retransmitted on the output.</li> </ul> <p><i>The <b>Retransmit</b> mode is often used when sinus / non-square wave input signals are present (for example, coil signals) that need to be transmitted as robust square wave forms. The max. frequency is 10kHz with 50% duty cycle and a minimum on and off time of 50µs.</i></p>			
		<p>When <b>Retransmit</b> is selected, the menus 9.2: PULSE OUTPUT &gt; WIDTH and 9.3: PULSE OUTPUT &gt; AMOUNT will disappear.</p>			

9 PULSE OUTPUT		
9.2	WIDTH	<p>When scaled pulse output is selected, the pulse width determines the time that the output will be active, that is, the duration of the pulse. The pulse width is set in milliseconds in the range 0.001 – 9.999 sec. The value “zero” will disable the pulse output.</p> <p> <b>NOTE</b></p> <p><i>The scaled pulse signal always has a 50% duty cycle. This means the minimum time between pulses is equal to the pulse width setting. If the frequency goes out of range (for example when the flowrate increases), an internal buffer stores the missed pulses. As soon as the flowrate slows down, the buffer is emptied.</i></p> <p><i>Pulses can be missed due to a buffer-overflow, therefore it is advisable to program this setting within its range.</i></p>
9.3	AMOUNT	<p>One pulse is generated for every X-quantity measured. For example, if 100 pulses per gallon are required, enter 0.01 GAL. 0.01 GAL x 100 pulses = 1 gallon</p> <p> <b>NOTE</b></p> <p><i>After pressing PROG, the decimal point will start to flash. The decimal position can then be changed by pressing the SELECT-key, then press the CLEAR key to set the digits.</i></p>




### 5.5.11 MENU 10: MODBUS COMMUNICATION

The E126-P-EG can optionally be equipped with a communication interface that uses the Modbus protocol (Type CB/CH/CU). See [Section C: Modbus communication \[»63\]](#) for a detailed explanation of the protocol, data types, and available registers.

10 MODBUS COMMUNICATION		
10.1	SPEED	<p>Sets the baud rate. This setting should match the speed used on the communications bus. The following communication speeds can be selected:</p> <p>1200, 2400, 4800, 9600, 9600HP, 19200, 38400</p> <p> <b>NOTE</b></p> <p><i>Communication speeds from 9600HP and upwards are more power consuming. When used with battery power, it is advised to set the speed at 9600 or lower.</i></p>
10.2	ADDRESS	Configures the bus address of your device on the communication bus.
10.3	MODE	Configures the communication mode of your device on the communication bus. The following modes can be selected: OFF, BUS ASC, BUS RTU
10.4	DATABITS	Configures the number of data bits. This setting should match the number used on the communications bus. Select 8 bit for Modbus RTU and 7 or 8 bits for Modbus ASCII.
10.5	PARITY	Configures the parity mode. This setting should match the parity mode used on the communications bus. The following modes can be selected: NONE, EVEN, ODD

### 5.5.12 MENU 11: OTHERS

11 OTHERS		
11.1	MODEL	Provides important information on your unit. This information may be required for maintenance, support and upgrade purposes.
11.2	SOFTWARE VERSION	Provides important information on your unit. This information may be required for maintenance, support and upgrade purposes.
11.3	SERIAL NUMBER	Provides important information on your unit. This information may be required for maintenance, support and upgrade purposes.


11		OTHERS
11.4	TIME	<p>Shows and sets the system clock. The system clock is used by the Daily Total feature to detect when the contract hour (set at <b>SETUP 1.6: TOTAL &gt; CONTRACT HOUR</b>) is reached.</p> <p>The format is HH.MM.SS in 24 hour notation.</p> <p> <i>The accuracy of the system clock is limited and it will be interrupted if there is a power-down. When the unit is powered up again and the Daily Total feature is enabled, the operator will be prompted to enter the correct system time.</i></p> <p> <b>If the clock is not initialized, all measurements and calculations are performed as normal. However, when Daily total is enabled, detection of Contract hour and the updating of Current day total and Previous day total will not be done at the correct time.</b></p>
11.5	PASSWORD	<p>All SETUP values can be password protected.</p> <p>A four-digit password can be programmed, for example 1234.</p> <p>To disable password protection, enter four zeros (0000).</p>
11.6	KEY LOCK	<p>To prevent misuse of the optical keyboard it can be locked automatically after 30 seconds by enabling this function.</p> <p> <b>In battery supplied applications, the backlight can come on each time the keyboard is activated. As this can quickly degrade the battery, it is advised to leave the keyboard lock function enabled so that the backlight only comes on when an optical key is pressed for at least one second. The keyboard lock function also uses less battery power.</b></p>
11.7	TAG NUMBER	<p>For identification of the unit and communication purposes, a unique tag number of maximum seven digits can be entered.</p>

## 6 INSTALLATION



- Mounting, electrical installation, start-up and maintenance of this instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
- The E126-P-EG may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.
- Take careful notice of the [Section 2: Safety \[»5\]](#) at the front of this manual.

### 6.1 INSTALLATION / ENVIRONMENTAL CONDITIONS

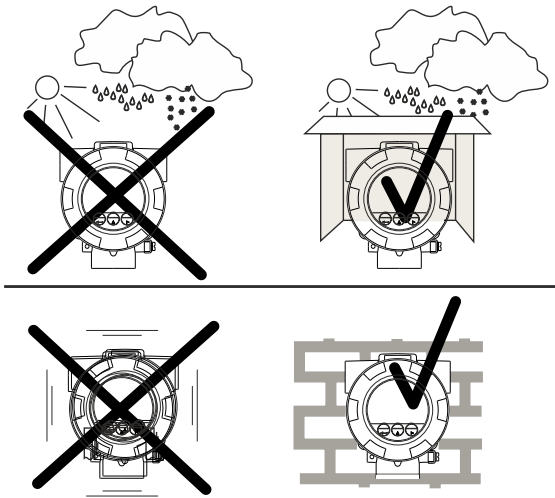

Take the relevant IP classification of the enclosure into account (see identification plate). Even an enclosure rated for IP67 / TYPE 4(X) should NEVER be exposed to strongly varying (weather) conditions.


When used in very cold environment or varying climatic conditions, inside the instrument case, take the necessary precautions against moisture. Mount the E126-P-EG onto a solid structure to avoid vibrations.

For use in Safe Areas, also known as Ordinary Locations, and Hazardous Locations, the following conditions apply:

Relative humidity:	< 90% RH
IP and Type rating:	IP66, IP67 and Type 4X, Type 7, Type 9
Supply voltage fluctuation:	+/- 10% unless stated otherwise
Means of protection:	Class I
Over-voltage category:	II
Pollution degree:	2 (internal environment), 3 (external environment)
Ambient temperature:	Aluminum enclosure: -40 °C to +70 °C (-40 °F to +158 °F) Stainless steel enclosure: -40 °C to +67 °C (-40 °F to +153 °F)
Altitude:	up to 2000 meters (6600 feet)


## 6.2 HANDLING THE E-SERIES ENCLOSURE

### 6.2.1 MAIN PARTS

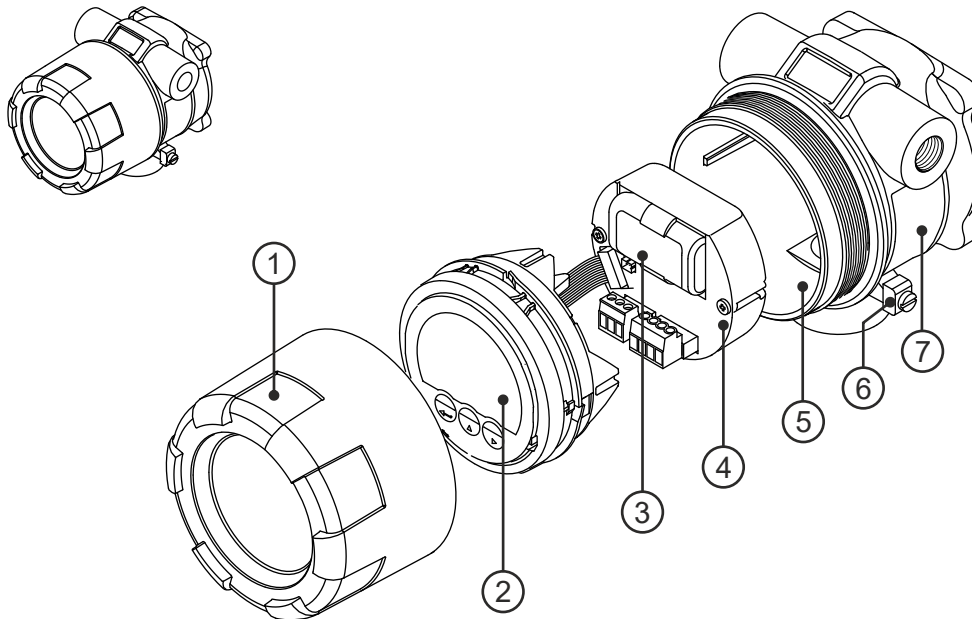

**Fig. 15: Exploded view**

- |                                  |                       |
|----------------------------------|-----------------------|
| 1. Cover                         | 5. Body               |
| 2. Main Electronics Module (MEM) | 6. Grounding terminal |
| 3. Battery                       | 7. Label              |
| 4. Supply Module (RSM or BSM)    |                       |

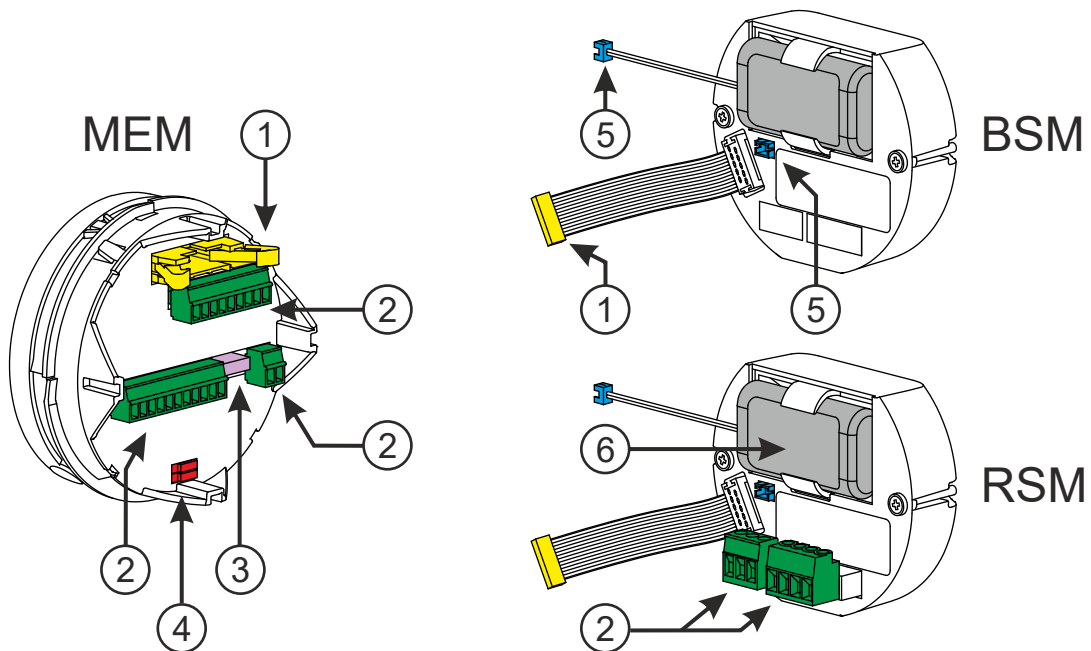

**Fig. 16: Main Electronic Module and two types of Supply Module (BSM, RSM)**

- |   |   |
|---|---|
| 1. Flatcable connector                        | 4. Sensor supply voltage selection switches |
| 2. Terminal connectors                        | 5. Battery connector                        |
| 3. PC configuration / communication connector | 6. Battery                                  |

### 6.2.2 IDENTIFICATION

Your product is supplied with two external and several internal labels.

#### Configuration label

All E-Series enclosures are supplied with a weatherproof configuration label placed on the outside of the unit. Information on this label includes the configuration options chosen for your product.

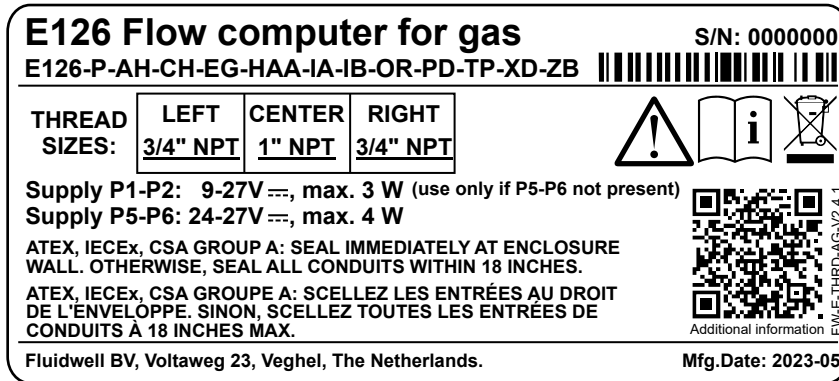


Fig. 17: Configuration label

#### Certification label

Also located on the outside, the Certification Label shows important certification information of your product.

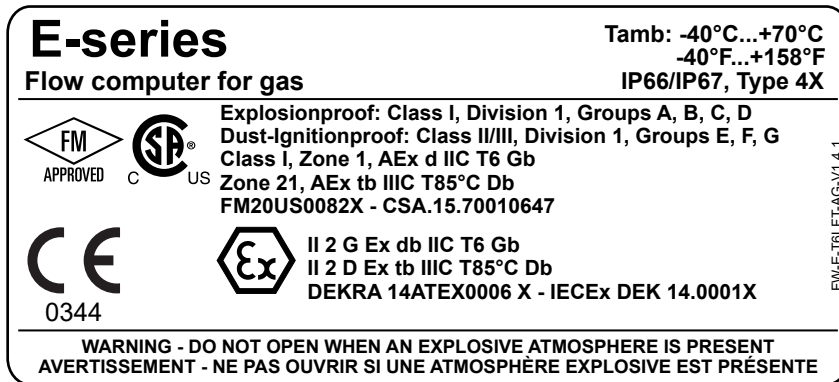


Fig. 18: Certification label

#### Installation labels

At the inside, several labels can be found. These labels indicate serial number of the electronics, product configuration and connectors, and more. The MEM is supplied with two labels:

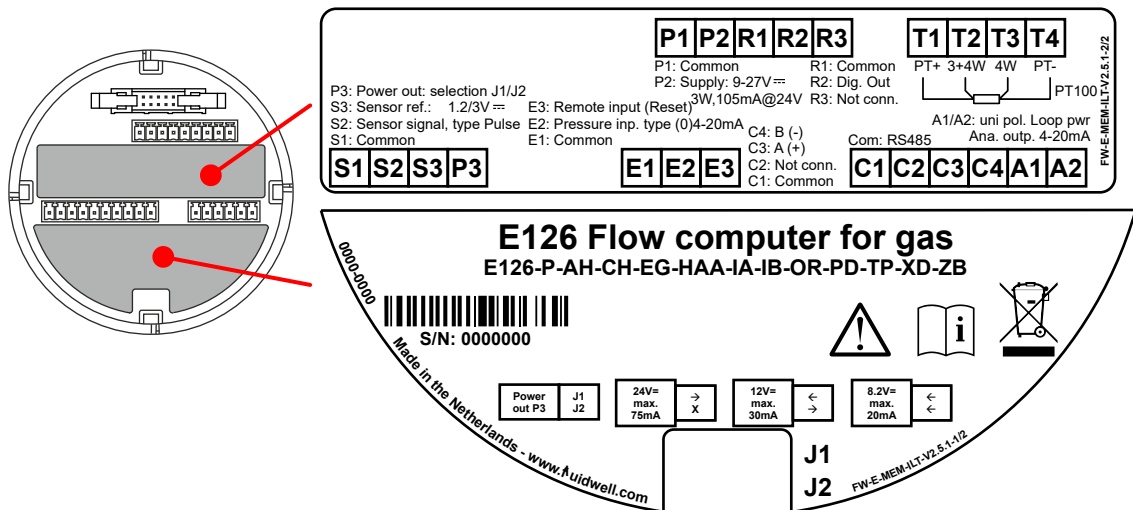


Fig. 19: Example MEM labeling

Depending on product type, the optional Supply Module (RSM or BSM) is also labeled:

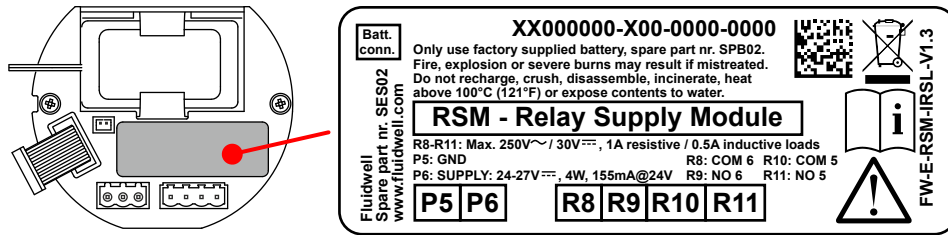


Fig. 20: Example RSM labeling (Type OR or Type PB-OR)

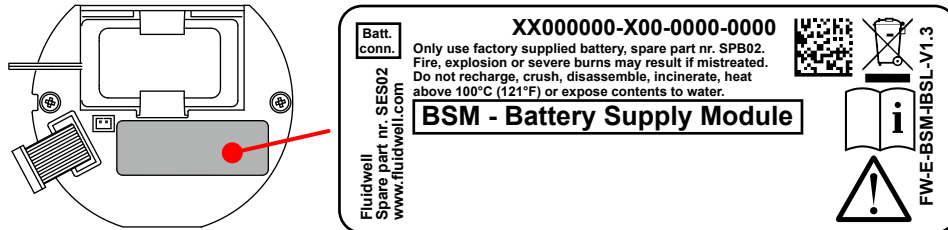


Fig. 21: Example BSM labeling (Type PB)

### 6.2.3 OPENING, ASSEMBLING AND CLOSING THE UNIT




**Explosion risk: never open the housing when explosive atmosphere is present.**

**Safety risk: do not open an installed enclosure when circuits are alive.**


**Pollution risk: prevent any contamination or dirt to enter the enclosure or mounting threads.**

#### Opening the cover

1. Before opening the enclosure, make sure that the immediate surroundings are clean and free of dirt to prevent any pollution or contamination entering the enclosure or mounting threads.
2. Loosen the fixing screw.

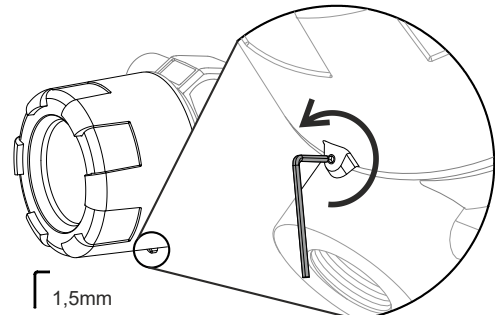


3. By hand (or gently with a wrench if tight), turn the cover counter-clockwise until it is free of the housing. Make sure the MEM inside doesn't fall out or gets damaged. Remove the cover carefully.
4. Store the cover in a safe location. Make sure the mounting thread and glass screen are protected and the fixing screw is not lost.

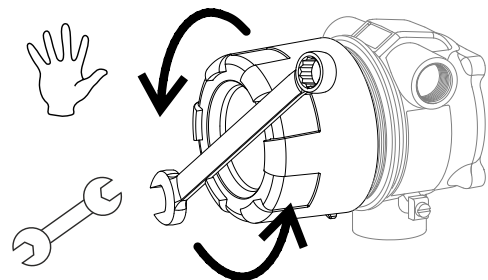


#### Removing the MEM

1. Carefully pull the MEM out of the housing until the connectors and wiring become available.
2. Disconnect all cable connectors from the MEM.
3. If applicable: unlock and disconnect the flat cable.
4. Store the MEM in a clean, safe location so LCD and keyboard are protected.
5. Protect the housing and connectors against ingress of moist or contamination.

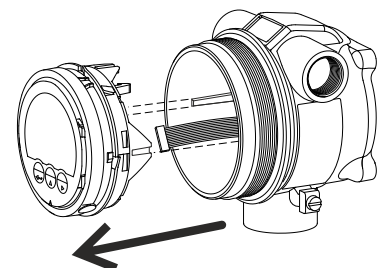




## Re-assembling the unit

1. If applicable: check that the battery is correctly inserted and connected to the supply module (BSM / RSM). See [Section 7.3: Battery replacement instructions \[»55\]](#).
2. If applicable: plug the cable connectors with connected wiring into the RSM.
3. Rotate the MEM to the required position (0°, 90°, 180° or 270°) and position it in front of the housing.
4. If applicable: connect the flat cable and lock it.
5. Plug the cable connectors with connected wiring into the back of the MEM.
6. Insert the MEM into the housing, making sure the wiring is not damaged or pinched.

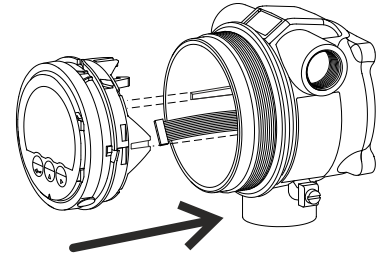



## Closing the cover

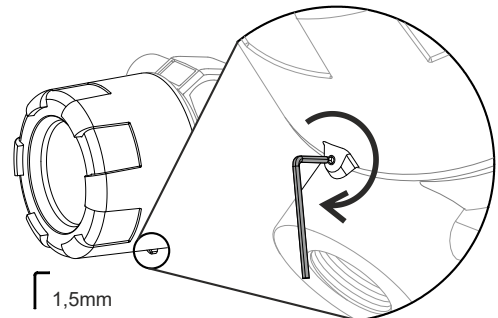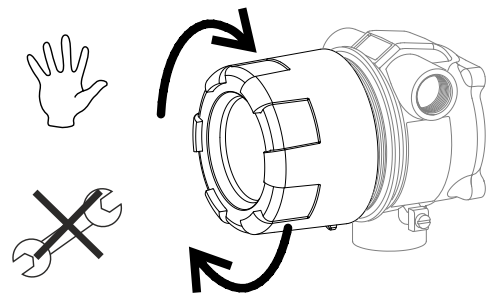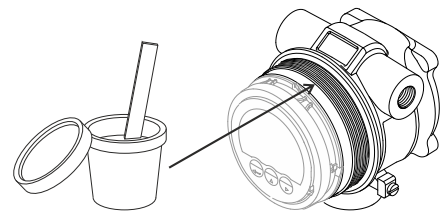1. Apply a very thin layer of the specified anti-seize compound (see [Section A: Technical specification \[»57\]](#)) on the first two wire threads and O-ring of the housing.
2. Hold the cover in the correct position for installation.
3. By hand, screw the cover clockwise onto the housing until the O-ring is tight to meet the required IP or TYPE protection rating.
4. Lock the cover in place with the fixing screw.



## 6.2.4 TEST UNIT

After powering up the unit, check the functions of the display to ensure all connections are correct:

- Check that the  indicator and the  indicator are not lit. See [Section 4.5: Operator alarms \[»14\]](#).
- Test the optical keys (if applicable), for example by entering SETUP mode and moving around the menu (see [Section 4.2.2: Optical keys \[»10\]](#)).
- Verify the process accuracy and correct functioning of all inputs and outputs. Consult [Section B: Troubleshooting \[»61\]](#) in case of any errors.

## 6.3 MECHANICAL INSTALLATION

### 6.3.1 INSTALLATION PRECAUTIONS

Please adhere to the following instructions and conditions:



**Explosion hazard: The unit must be installed and maintained as follows to avoid danger of ignition due to electrostatic discharge:**

- Use only in fixed installations.
- Do not place unit in areas with rapid airflow.
- Clean only with a moist cloth.



**Seal conduits / enclosure**

- For ATEX, IECEx and CSA Group A: "SEAL ALL CONDUIT ENTRIES IMMEDIATELY AT ENCLOSURE WALL".
- For CSA Group B,C,D: "SEAL ALL CONDUIT ENTRIES WITHIN 18 INCHES".
- For FM Group A,B,C,D: "SEAL ALL CONDUIT ENTRIES WITHIN 18 INCHES".



**Use certified cable glands and conduit sealing devices.**

**All flameproof joints are designed for:**

- Volume:  $500 \text{ cm}^3 < V \leq 2000 \text{ cm}^3$ .
- Group IIC enclosures.

### Flameproof joints

The E126-P-EG has 4 flameproof joints:

- Cement between glass and cover (length  $\geq 10$  mm)
- Thread between body and cover: M100x1.5 (8 full threads available)
- Thread for conduit opening left and right:
  - M20 x 1.5, M25 x 1.5, (8 full threads available)
  - $\frac{1}{2}$  NPT,  $\frac{3}{4}$  NPT
- Thread for process opening:
  - M20 x 1.5, M25 x 1.5 (8 full threads available)
  - $\frac{1}{2}$  NPT,  $\frac{3}{4}$  NPT, 1 NPT
- All metric threads comply with fit class 6g/6H (ISO 965-1 + 965-3)
- All NPT threads comply with ANSI/ASME B1.20.1.
- When the enclosure is supplied with a process connection utilizing a cylindrical joint (not covered in this manual), please contact the manufacturer directly or through your supplier for detailed information.

### Connecting enclosures and mounting on flowmeters

The E126-P-EG may be connected to another certified enclosure under following conditions:

- The connected enclosure is certified for the used type of protection and certified for its own internal electrical equipment (i.e. pickup coil or other sensors).
- Any parts used to connect the enclosures are certified for the used type of protection.
- The connected enclosure, including any connection part, may not:
  - Generate any heat that could increase the temperature of the E126-P-EG.
  - Add any electrical energy to the E126-P-EG.
  - Add an empty volume of more than  $13.5 \text{ cm}^3$  to the E126-P-EG (e.g. by sealing the opening).

### 6.3.2 MECHANICAL DIMENSIONS


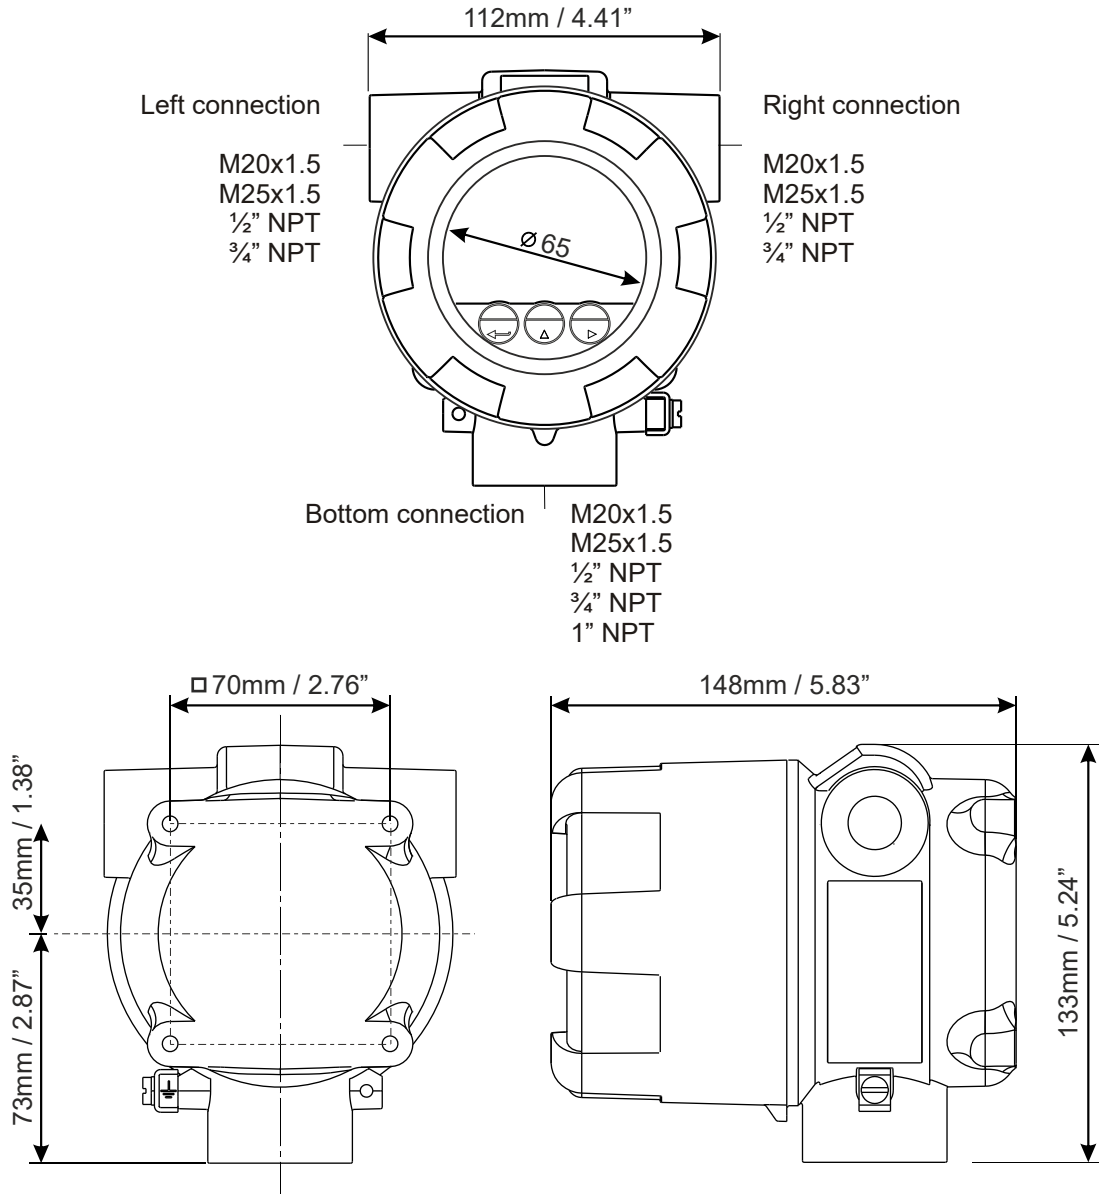


Fig. 22: Mechanical dimensions of the E-Series enclosure

### 6.3.3 MOUNTING THE UNIT

The Main Electronics Module (MEM) can be placed into the body in 4 directions (0° – 90° – 180° – 270°). This allows the unit to be mounted in any direction while still allowing the MEM to be installed in a 'readable' position.

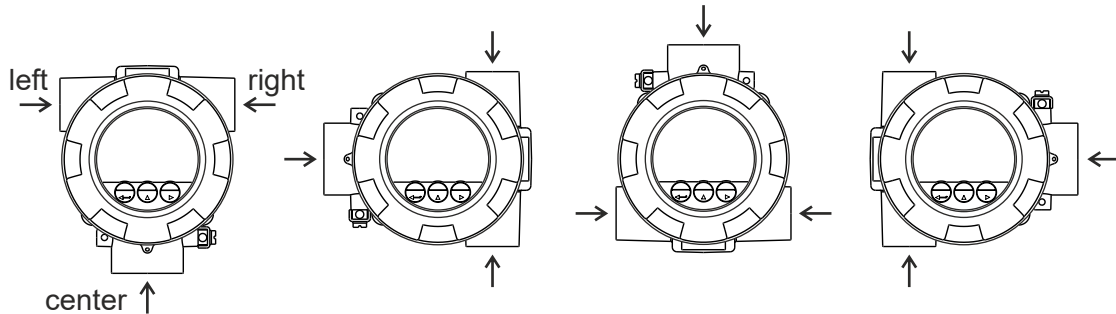

By rotating the unit, the process and conduit openings can be placed in the required direction. Note that the thread sizes of the openings indicated by "left – right – center" correspond with the information on the configuration label attached to the outside of the product.




When mounting the unit, leave the cover on as much as possible to prevent damage to the thread winding. Only remove cover and MEM after mounting.

The following options are available to mount the unit:

- Directly on a panel.
- Directly onto the flowmeter using the large connector on the bottom of the housing.
- On a pipe using the bracket and hose clamps (accessory ACE04).
- On a wall using the wall mounting plate (accessory ACE03).


### Mount unit on a panel

1. Mount the unit with four M6 bolts as shown. The thread depth in the body is max. 10mm (0.39")
2. Remove the cover and the MEM (see [Section 6.2.3: Opening, assembling and closing the unit \[»38\]](#))
3. Attach electrical cabling (see [Section 6.4: Electrical installation \[»43\]](#))

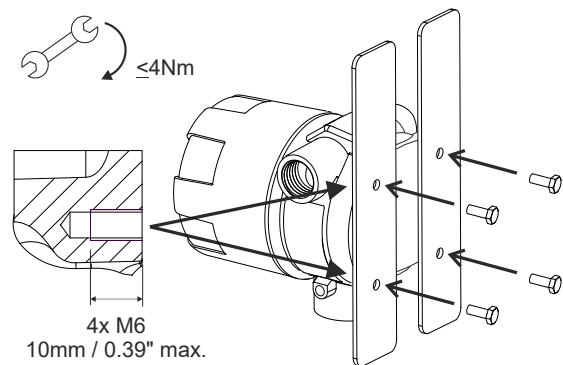


### Mount unit on a flowmeter

1. Remove the cover and the MEM (see [Section 6.2.3: Opening, assembling and closing the unit \[»38\]](#))
2. If present, remove the cap from the bottom connector of the housing.
3. Position the unit over the connector on the flowmeter.
4. Carefully insert the required cabling from the flowmeter through the connector opening into the base of the housing.
5. Add approved lubricating oil onto the windings of the bottom connector, and screw the housing clockwise onto the flowmeter connector until it is sufficiently tight to meet the required IP or TYPE protection rating.
6. Attach the electrical cabling (see [Section 6.4: Electrical installation \[»43\]](#)).

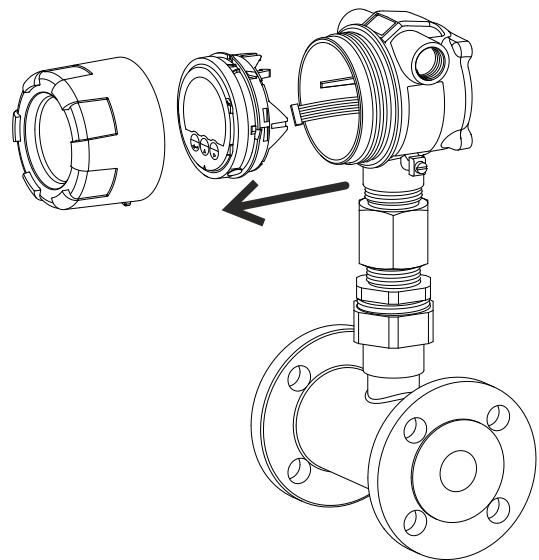


### Mount unit on a pipe

1. Use the pipe mount accessories (ACE04) to attach the unit as shown and follow the Assembly Instructions as supplied with the accessory.
2. Remove the cover and the MEM (see [Section 6.2.3: Opening, assembling and closing the unit \[»38\]](#)).
3. Attach the electrical cabling (see [Section 6.4: Electrical installation \[»43\]](#)).

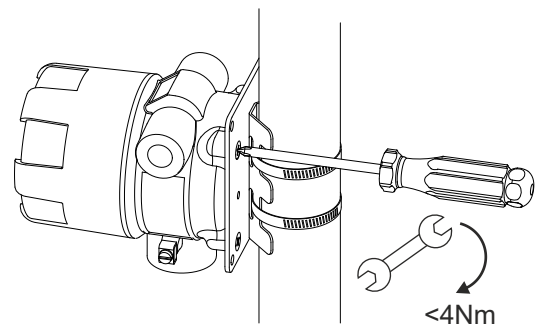

## Mount unit on a wall

1. Use the wall mount accessories (ACE03) to attach the unit as shown and follow the Assembly Instructions as supplied with the accessory.
2. Remove the cover and the MEM (see [Section 6.2.3: Opening, assembling and closing the unit \[»38\]](#)).
3. Attach the electrical cabling (see [Section 6.4: Electrical installation \[»43\]](#)).

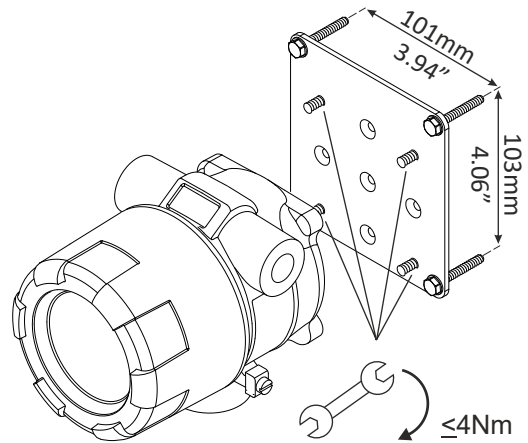

## 6.4 ELECTRICAL INSTALLATION

When connecting cabling to the MEM and RSM (if applicable), always pull the cabling first through the appropriate housing connector without stretching the cabling.

Remove the numbered connectors from the rear of the MEM to connect all cabling. After connecting cabling, plug the connectors into the RSM first and then into the rear of the MEM when reinserting the MEM back into the housing.

### 6.4.1 ELECTRICAL PRECAUTIONS



#### Explosion hazard

- A live circuit can cause an explosion. Do not open a powered-up unit when an explosive atmosphere is present.
- For battery powered equipment, never open the enclosure when an explosive atmosphere is present.
- When installed in a potentially explosive atmosphere that requires apparatus of equipment protection level Gb and Db, the unit must be installed such that, even in the event of rare incidents, an ignition source due to impact or friction sparks between the enclosure and aluminum/steel is excluded.
- Due to internal dissipation, the enclosure temperature can rise above the current ambient temperature. At the specified maximum ambient temperature (70 °C / 158 °F for aluminum and 67 °C / 153 °F for stainless steel enclosures), the enclosure will always remain below the maximum T6 temperature of 85 °C / 185 °F.
- When mounted directly on or near a process, the process temperature shall not exceed the specified maximum ambient temperature (70 °C / 158 °F for aluminum and 67 °C / 153 °F for stainless steel enclosures). If this is not possible, a suitable thermal separator should be used to limit the temperature rise at the outside of the unit, to its maximum ambient temperature.
- Always use suitable cable and cable glands to withstand the maximum temperature of the installation. This is typically 20 °C / 36 °F higher than the installations maximum ambient temperature but is never higher than 85°C / 185 °F. Cable running along a high temperature process, should be suitable for that process temperature as well.



#### Equipment damage

- Electro static discharge can inflict irreparable damage to electronics! Before installing cabling, always first discharge yourself by touching a well-grounded object.
- Always install the unit according to the EMC guidelines (Electro Magnetic Compatibility) and according to local requirements (e.g. in Canada, the Canadian Electrical Code, C22.1, Part 1 and in USA, the National Electrical Code, NFPA 70 and ANSI/ISA-RP 12).
- Use an effective shielded cable for sensor input signals and ground its screen either to the appropriate ground terminal (GND) AND the housing, or to the sensor itself, whichever is appropriate for the application.



### Electrical precautions

- Ensure the unit is correctly wired according to the wiring diagrams and complies with local codes and regulations.
- A suitable power supply should be considered in end-use equipment to power the unit. This supply should comply with a limited-energy circuit (maximum available current of 8 A) such as a “SELV” circuit per IEC 61140 (formerly per IEC 60950-1).  
If this is not possible, install a suitable overcurrent protection device (e.g. a fuse) close to the instrument with adequate breaking capacity:
  - Fuse type: Time-lag (approved according to IEC60127-2 and/or UL248-14)
  - Fuse rating: Current: 5 A
- All I/O connections made to the unit, except those for the relay outputs R8 to R11, must comply with the requirements for limited energy and must be low voltage defined as “SELV” circuit per IEC 61140 (formerly per IEC 60950-1).
- All connections made to the relay outputs R8 to R11 of the unit, shall be suitably protected for the ratings of the relays not to be exceeded. This shall be considered in the end use.
- Segregation and insulation between mains wiring and secondary wiring shall be considered in the end use.
- In case this instrument is connected to a supply by means of a permanent connection, a suitable switch or circuit-breaker shall be included in the installation. This must be:
  - Installed near the unit and within easy reach of the operator.
  - Marked as the disconnecting device for the unit.
- For all connected sensors, please ensure that:
  - They are suitable (both electrically and mechanically) for the area they are installed into.
  - Connections and mounting (if applicable) match with the used type of protection of the unit.
- Use cable glands suitable for the type of protection with effective IP67 / Type 4X seals when connecting cables.  
Use blind plugs suitable for the type of protection with effective IP67 / Type 4X seals to close unused entries.
- The cable entry plugs mounted in the housing must comply with the requirements set for the used type of protection.

### 6.4.2 GROUNDING OF THE ENCLOSURE

Make sure to apply proper in- and external grounding to the PE terminals, as shown below. When the internal ground terminal is used, apply a suitable cable lug.  
Wire requirements: stranded conductor 4 mm<sup>2</sup>, single conductor 6 mm<sup>2</sup>.

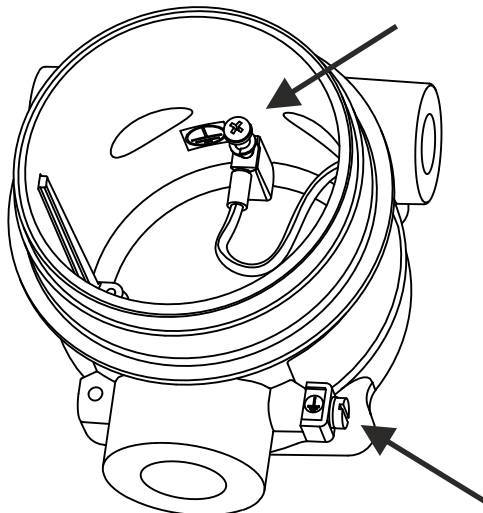


Fig. 23: Grounding of enclosure

### 6.4.3 ELECTRICAL RATINGS

#### Power supply (Type AH, PX, PD)

The following supply ratings apply to the E-Series when the indicated options are installed (other options have negligible influence on the ratings) and should be used to select a suitable power supply and overcurrent protection:

Type	Input	Supply voltage	Power rating	Current @24V	Remarks
PD-OR	P6	24-27 VDC	4W	155 mA	With relay(s) and sensor supply
PD-OT	P2	9-27 VDC	3W	105 mA	Without relay(s), with sensor supply
PX	P2	9-27 VDC	1W	30 mA	Without relay(s) and sensor supply
AH	A1/A2	11-27 VDC	0.7W	25 mA	Analog output circuit that also powers the unit. Requires an additional supply on terminal P2 or P6 when combined with relay(s), sensor supply or backlight.



Only use terminal P2 when terminal P6 is not present.

#### Relays outputs (Type OR)

The relays (up to two) that come with Type OR have the following contact ratings, which should be used to select a suitable power supply and overcurrent protection for the circuits connected to the relay outputs R8 to R11:

Load type & voltage	Maximum voltage	Maximum switch current
Resistive load at	30 VDC / 250 VAC	Max. 1 A
Inductive load (for pilot duty applications)	30 VDC / 250 VAC	Max. 0.5 A

The relays must be suitably protected for their ratings not to be exceeded. This shall be considered in the end use.

### 6.4.4 VOLTAGE SELECTION SENSOR SUPPLY

#### Type PB / PX – Pickup element supply

Terminal S3 provides a limited supply voltage of 3.2 VDC (coil signals 1.2 V) for the flowmeter signal output. Output impedance is 2700 ohms and power is limited to 3.3 mW under short circuit conditions.




#### Limited power

*This voltage MAY NOT be used to power the flowmeter electronics, converters, etc. as it will not provide adequate sustained power! All energy used by the flowmeter pickup will directly influence battery life (type PB). It is strongly advised to use a “zero power” pickup such as a coil or reed-switch when operating without external power. You can use some low power NPN or PNP output signals, but battery life will be significantly reduced (consult your distributor).*

**Type PD: Sensor supply: 8.2 VDC – 12 VDC or 24 VDC (Vin P2 minus 1 V)**

This option provides a supply derived from the input supply. Adjust the P3 output voltage using switches J1 and J2 on the bottom rear of the MEM (Main Electronics Module) - see following figure.

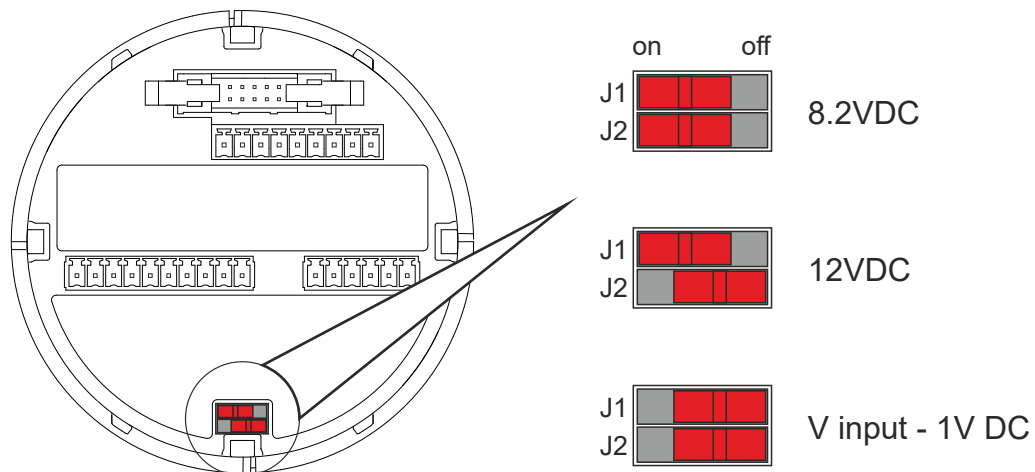

**Fig. 24: Voltage selector switch (terminal connector P3)**

Power supply 10 – 30 V DC (OFF = right position)			
J1	J2	External sensor supply voltage	Required supply voltage
ON	ON	8.2 V DC (max. output 20 mA)	9 – 27 V DC
ON	OFF	12 V DC (max. output 30 mA)	13 – 27 V DC
OFF	OFF	Supply voltage - 1 V DC (max output 75 mA)	Up to 27 V DC




NOTE

**Power overload**

The sensor supply is protected against a power overload but an overload may affect the functionality of the unit (i.e. shutdown).

**6.4.5 TERMINAL CONNECTORS – MEM**

The following terminal connectors are available for the Main Electronics Modus (MEM).

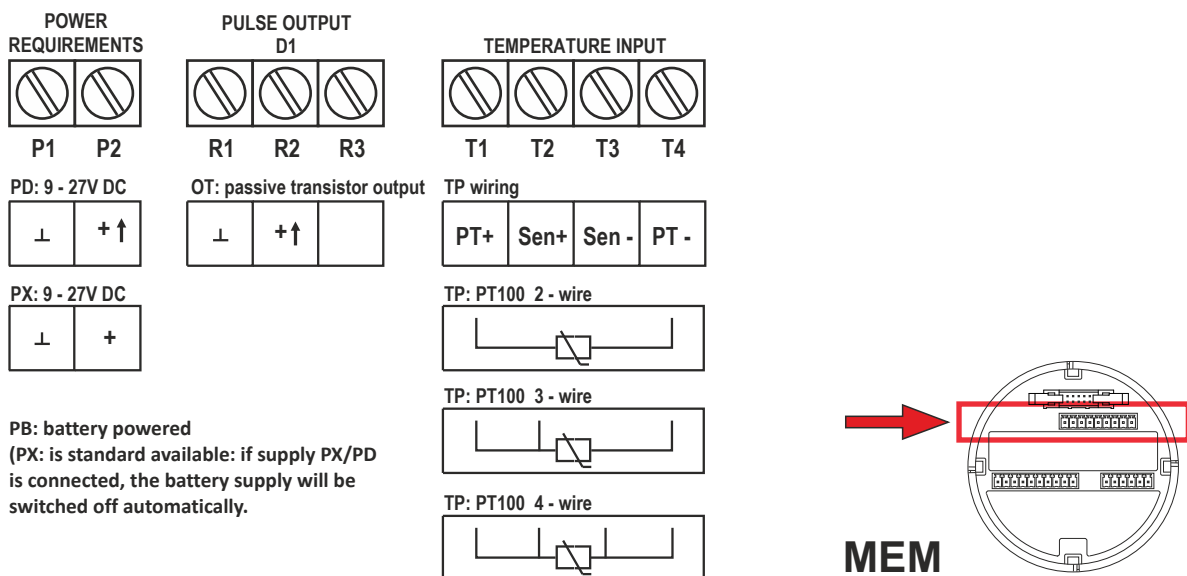

**Fig. 25: Terminal connectors MEM - upper row**

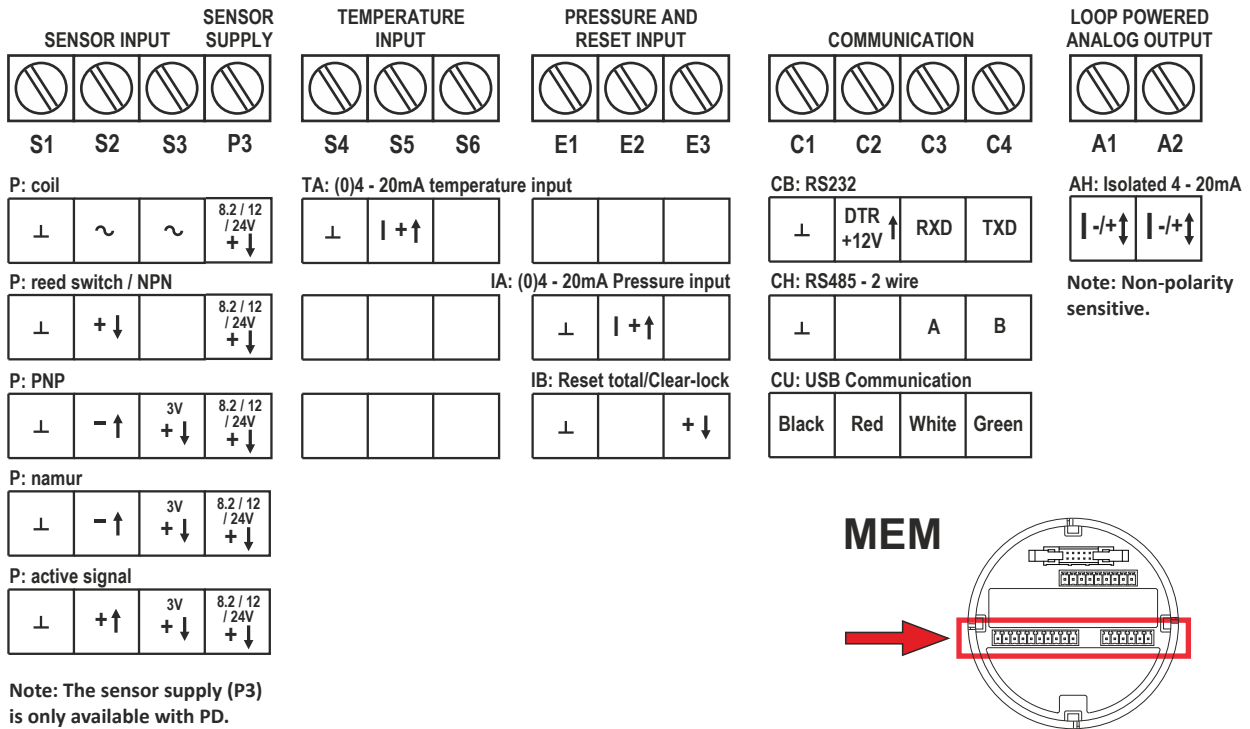


Fig. 26: Terminal connectors MEM - lower row

### 6.4.6 TERMINAL CONNECTORS – RSM

The following terminal connections are available for Relay Supply Module (RSM; option OR).

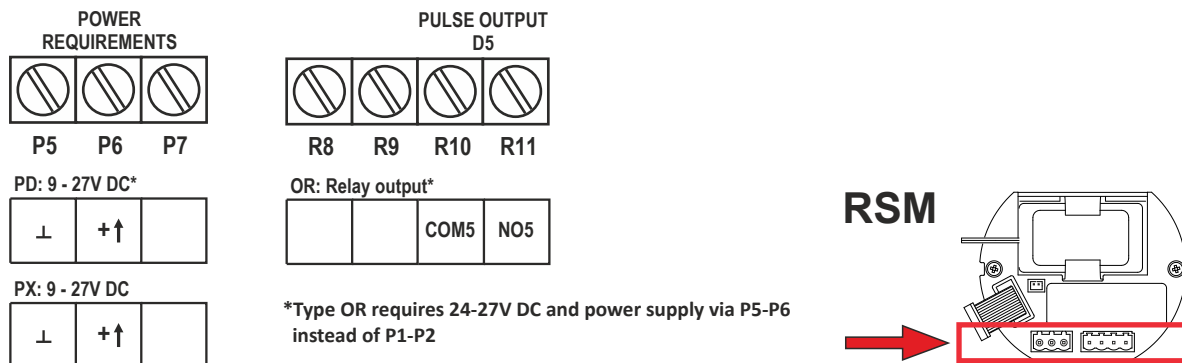


Fig. 27: Terminal connectors RSM

### 6.4.7 TERMINALS P1-P2 OR P5-P6: POWER SUPPLY – TYPE PD/PX



**Power connection differs with or without Type OR**

- Without Type OR, power should be connected to MEM terminals P1 and P2.
- With Type OR, power should be connected to RSM terminals P5 and P6.

Connect an external 9-27 VDC power supply to these terminals.

When power is applied to these terminals, discharge of the (optional) internal battery will be disabled. See also [Section 6.4.3: Electrical ratings \[»45\]](#).

### 6.4.8 TERMINALS P3: SENSOR SUPPLY - TYPE PD

This terminal may be used for sensor supply. See [Section 6.4.4: Voltage selection sensor supply \[»45\]](#) for relevant information.

Power requirements for sensor supply P3:

- 8.2 V sensor supply requires 9-27 V
- 12 V sensor supply requires 13-27 V
- 24 V = V-input – 1V (max 27 V)

### 6.4.9 TERMINALS R1-R2 AND R10-R11: DIGITAL OUTPUTS D1 AND D5

The functionality of the digital output is programmed through **SETUP 9: PULSE OUTPUT** [»32].

- The digital output D1 has a maximum frequency of 500Hz for scaled pulse and 10kHz for pulse retransmission.
- When retransmit mode is selected, output D1 retransmits the flowmeter signal.
- The optional digital output D5 has a maximum frequency of 0.5Hz and follows the functionality selected for output D1. However, when retransmit mode is selected, the output will not be activated.

#### Type OT

One passive transistor output (D1) is available with a maximum frequency and driving capacity of 500 Hz, 300 mA, 50 VDC.

- Terminals R1 and R3 are common ground (GND) terminals.
- When retransmit mode is selected the maximum frequency for D1 is 10kHz with a 50% duty cycle and a minimum on and off- time of 50µs.

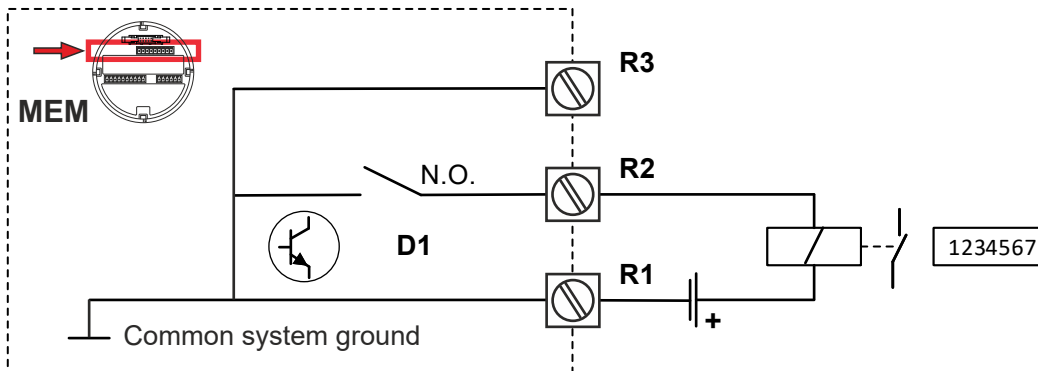


Fig. 28: Terminals R1-R3: Transistor output D1

#### Type OR

One mechanical normally open relay output (D5) is available with a maximum frequency and switching power of 0.5 Hz, 250 VAC / 30 VDC, 1A resistive / 0.5 A inductive. With Type OR:

- Use power supply terminals P5-P6. Required supply voltage is 24 – 27 VDC.
- Be sure that the output frequency does not exceed 0.5 Hz, else the relay lifetime and reliability will be reduced significantly.
- The functionality of output D5 corresponds with the functionality of digital output D1.
- When retransmit mode is selected, the relay is not activated.

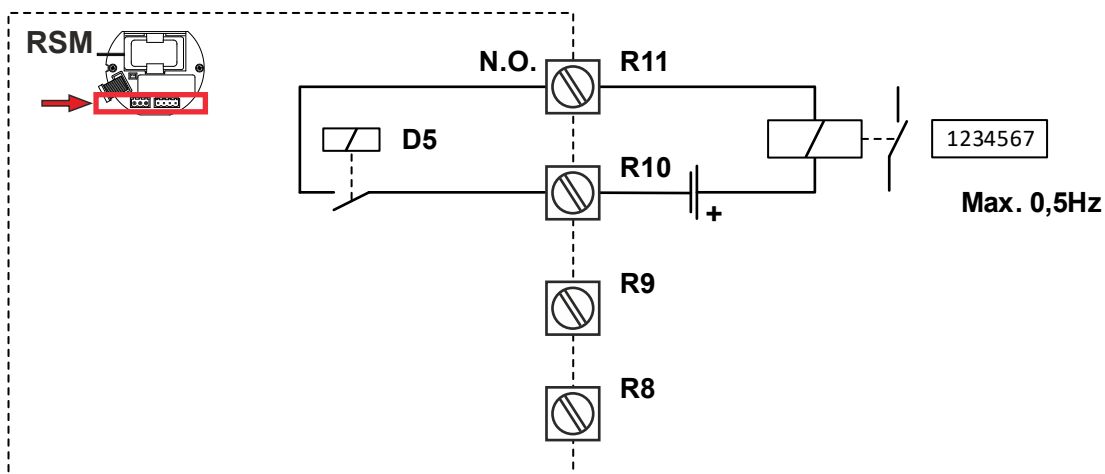


Fig. 29: Terminals R10-R11: Mechanical relay output D5

### 6.4.10 TERMINALS S1-S3: FLOWMETER INPUT


Three basic types of flowmeter signals can be connected to the unit: pulse, active pulse or sine-wave (coil). The screen of the signal wire must be connected to the common ground terminal (unless earthed at the sensor itself).

The sensor output should match with the selected flowmeter setting of **SETUP 4: FLOWMETER** [»26].

**Sine-wave signal (Coil)**

The unit can be used with flowmeters which have a coil output signal. Two sensitivity levels can be selected (see **SETUP 4: FLOWMETER** [»26]):

- COIL LO: sensitivity 90 mVpp.
- COIL HI: sensitivity 20 mVpp. (with Type ZF: 10 mVpp; with Type ZG: 5 mVpp).

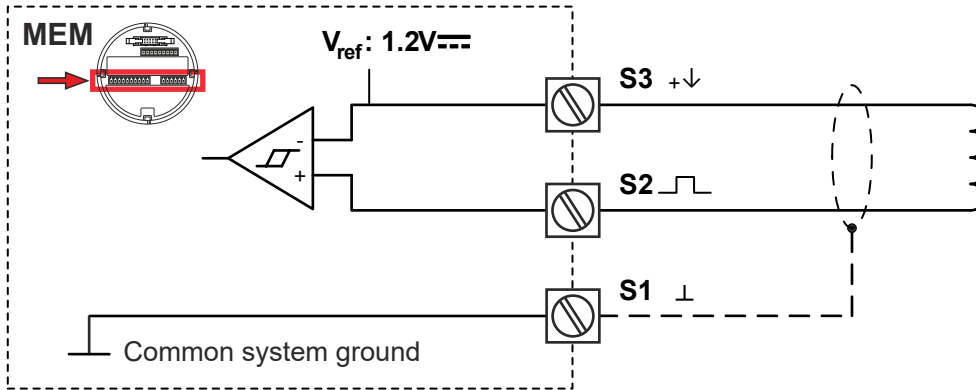


**Fig. 30: Terminals S1-S3: Coil signal input**

**Pulse-signal NPN / NPN-LP**

The unit is suitable for use with flowmeters which have a NPN output signal:

- For reliable pulse detection, the signal must always be above 1.4 V or below 1.0 V.
- Preferably use a sensor which is normally open and briefly closed (less power consumption).
- For better noise immunity (and if no high sensor input frequencies are expected), select signal setting NPN-LP – low-pass signal noise filter which limits the maximum input frequency and avoids pulse bounce (see **SETUP 4: FLOWMETER** [»26]).

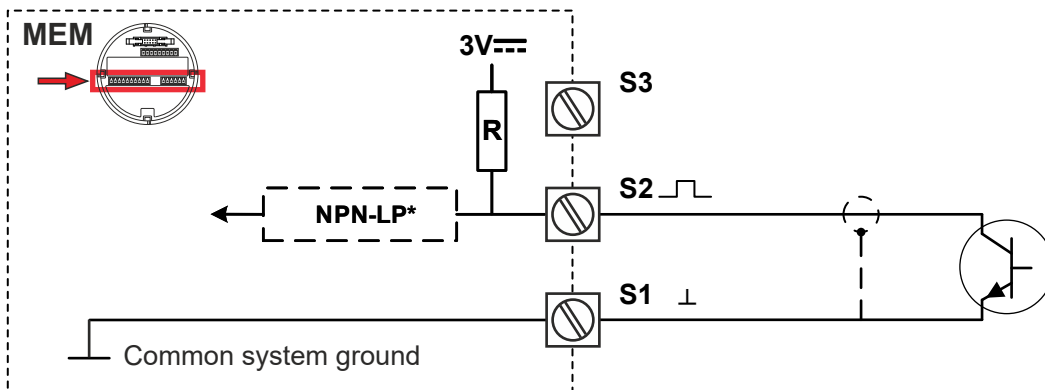

**Fig. 31: Terminals S1-S2: Pulse signal input NPN**

**Pulse-signal PNP / PNP-LP**

The unit is suitable for use with flowmeters which have a PNP output signal:

- 3.0 V is offered on terminal S3 which must be switched by the sensor to terminal S2 (SIGNAL).
- For reliable pulse detection, the signal must always be above 1.4 V or below 1.0 V.
- For less power consumption, use a sensor which is normally open and briefly closed.
- For better noise immunity and if no high sensor input frequencies are expected, select signal setting PNP-LP (low-pass signal noise filter) which limits the maximum input frequency to avoid pulse bounce (see **SETUP 4: FLOWMETER** [»26]).

Power supply type PD provides a sensor supply voltage of 8.2, 12, or 24 VDC.

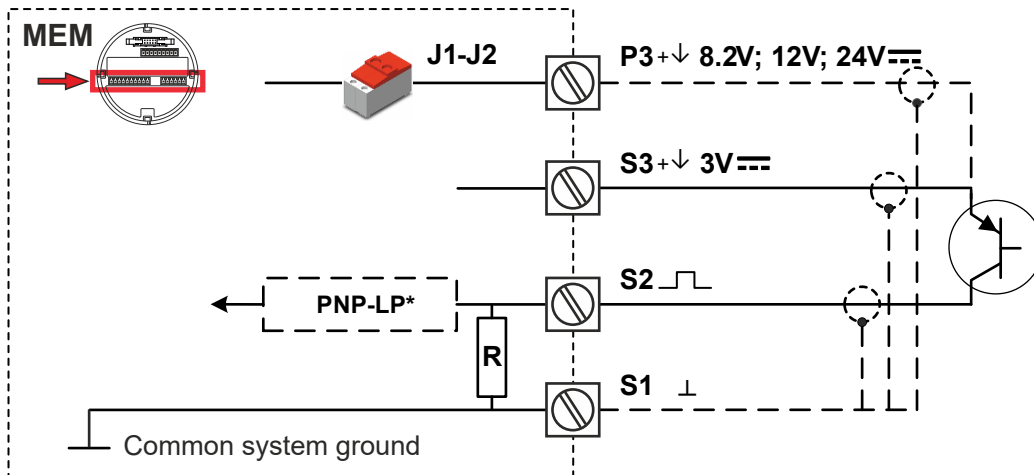


Fig. 32: Terminals S1-S3 and P3: Pulse signal input PNP

### Reed switch

The unit can be used with flowmeters which have a reed switch. To avoid pulse bounce from the reed switch, it is advised to select REED LP – low-pass noise filter, which limits the maximum input frequency (see [SETUP 4: FLOWMETER \[p26\]](#)). Make sure the contact resistance of the reed switch is less than  $1V@2\mu A=500\text{ k}\Omega$ .

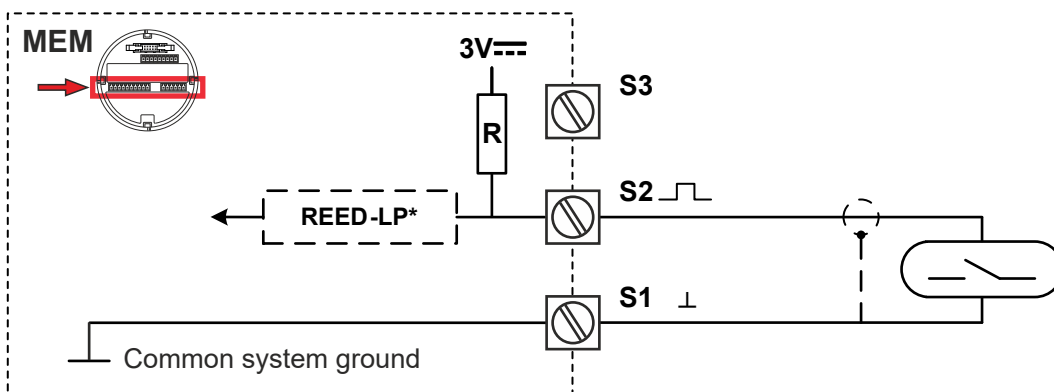


Fig. 33: Terminals S1-S2: Reed switch input

### NAMUR signal

The unit is suitable for flowmeters with a NAMUR signal (units with PX cannot power the NAMUR sensor). If required the NAMUR sensor can be supplied via the 8.2 V sensor supply (terminal P3), only available with power supply type PD. See [SETUP 4: FLOWMETER \[p26\]](#) for more information.


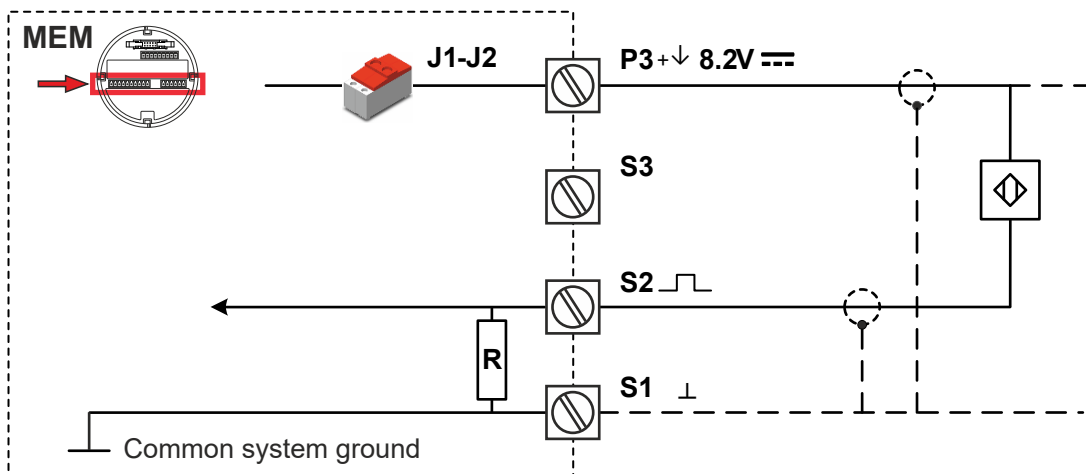


Fig. 34: Terminals S1-S2 and P3: NAMUR input signal

**Active signals 8.2 V and 24 V**

The unit is suitable for flowmeters with an Active signal. The detection levels are about 50% of the selected supply voltage; approximately 4 V (ACT\_8.1) or 12 V (ACT\_24). See **SETUP 4: FLOWMETER** [»26] for more information.

Active signal selection may be desired in the case of power supply type PD being supplied for sensor supply.

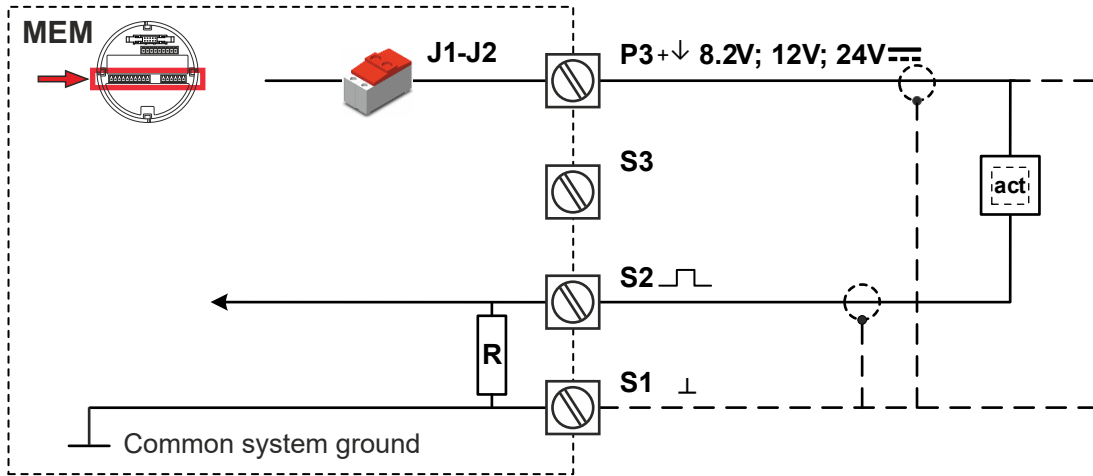


**Fig. 35: Terminals S1-S2 and P3: Active signal inputs 8.2 V and 24 V**

**6.4.11 TERMINALS T1-T4: TEMPERATURE INPUT PT100 - TYPE TP**

The E126-P-EG type TP requires a PT100 element (RTD) as temperature sensor. The E126-P-EG uses the International Temperature Scale of 1990 Temperature vs Resistance table (ITS-90) to calculate the measured temperature. See **Menu 5: Temperature - with type TP (PT100)** [»27] for configuring the temperature input.

The sensor can be connected in 2, 3 or 4 wire configuration, as indicated in the figure below.

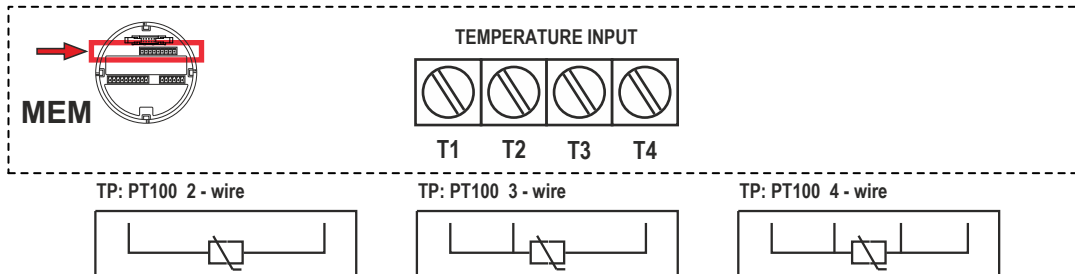

**Fig. 36: Terminals T1-T4: Temperature input – Type TP**

### 6.4.12 TERMINALS S4-S5: TEMPERATURE INPUT (0)4-20MA - TYPE TA

The E126-P-EG type TA option requires a (0) 4-20 mA signal from the temperature sensor. The input is not isolated. See [Menu 5: Temperature - with type TA \(4-20mA\) \[»28\]](#) for configuring the temperature input.

When the sensor supply voltage P3 is set to 24 V, this voltage can also be used to power the temperature sensor.

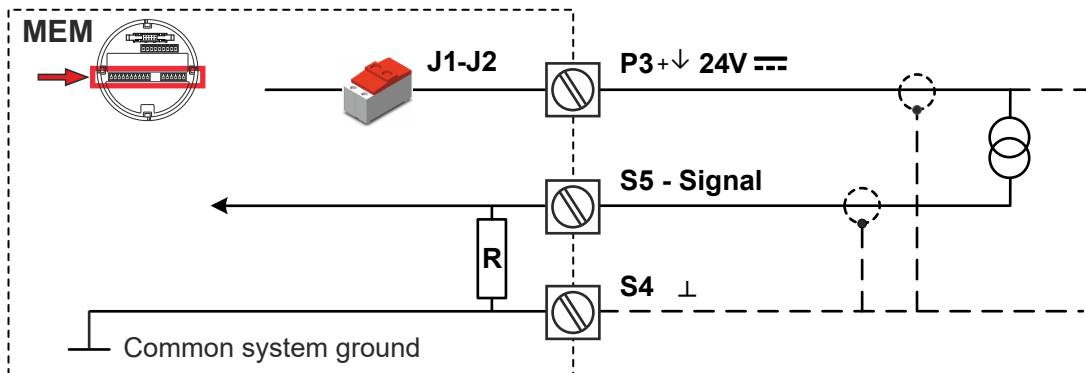


Fig. 37: Terminals S4-S5 and P3: (0) 4-20 mA temperature input (typical) - Type TA

### 6.4.13 TERMINALS E1-E2: PRESSURE INPUT (0)4-20 MA

The E126-P-EG requires a (0)4-20mA signal from the pressure sensor. The input is not isolated. See [6: PRESSURE](#) for configuring the pressure input.

When the sensor supply voltage P3 is set to 24 V, this voltage can also be used to power the pressure sensor.

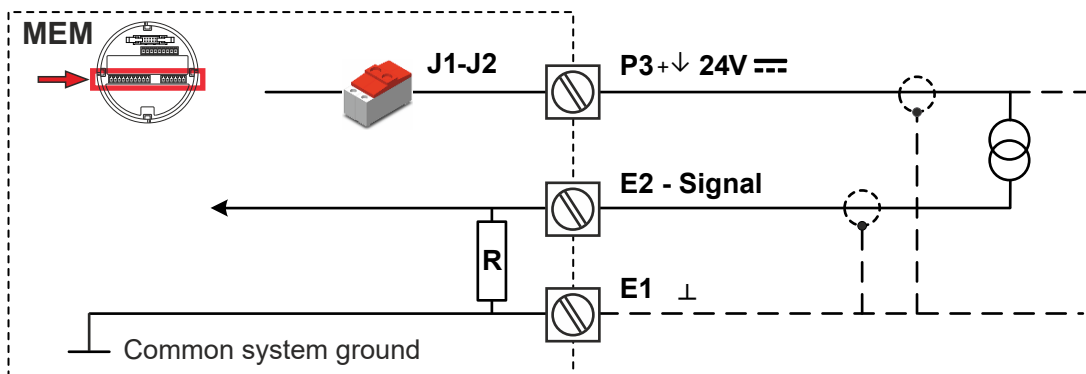


Fig. 38: Terminals E1-E2 and P3: Pressure input (0)4-20 mA

**6.4.14 TERMINALS E1-E3: EXTERNAL RESET WITH CLEAR-LOCK - TYPE IB**

Use this function to reset the total to zero with an external switch (pushbutton). The total resets the moment a falling edge is detected (the moment the switch closes).

To disable the "Clear Total"-function of the optical keys, keep this input closed.

Make sure the contact resistance of the switch is less than  $0.8 V @ 2\mu A = 400 k\Omega$ . A reset pulse should last for at least 100 ms. The input must be switched with a normally open contact to GND.




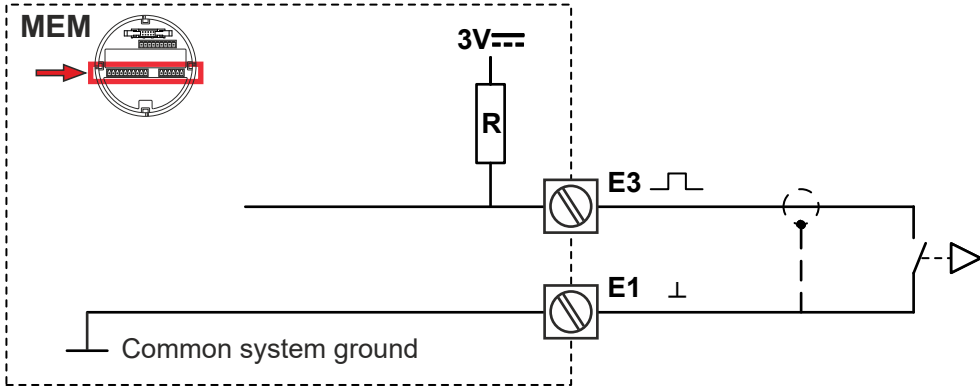


Fig. 39: Terminals E1-E3: External reset

**6.4.15 TERMINALS C1-C4: COMMUNICATION RS232/RS485/USB - TYPE CB/CH/CU**

- Serial communications are possible on hardware layers RS232 (length of cable max. 5 meters), RS485 (length of cable max. 1200 meters) and USB (length of cable max. 5 meters). To achieve reliable communication, make sure the hardware layer specific requirements are met.
- Read [Section C: Modbus communication](#) [»63].

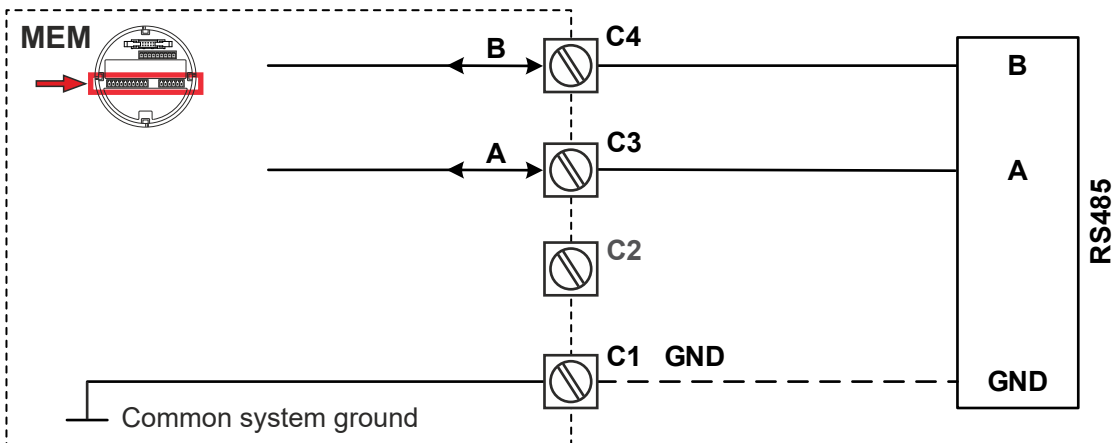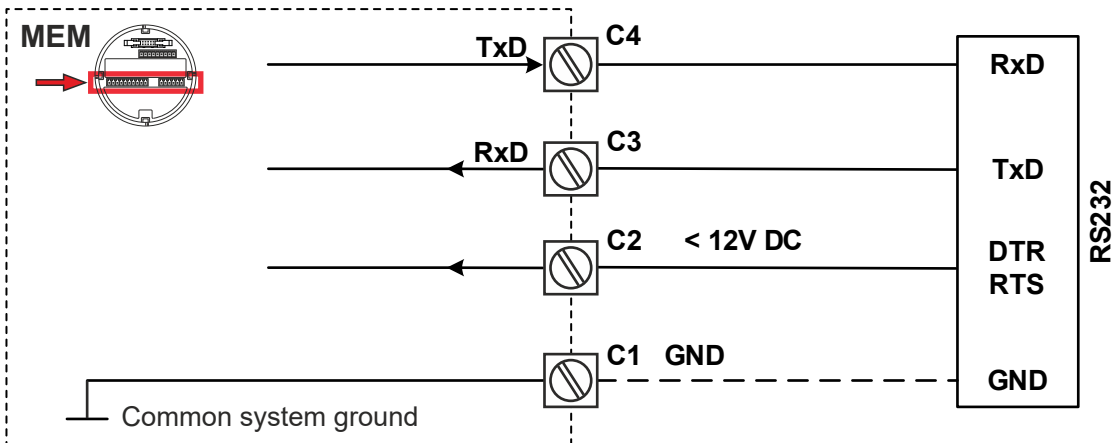

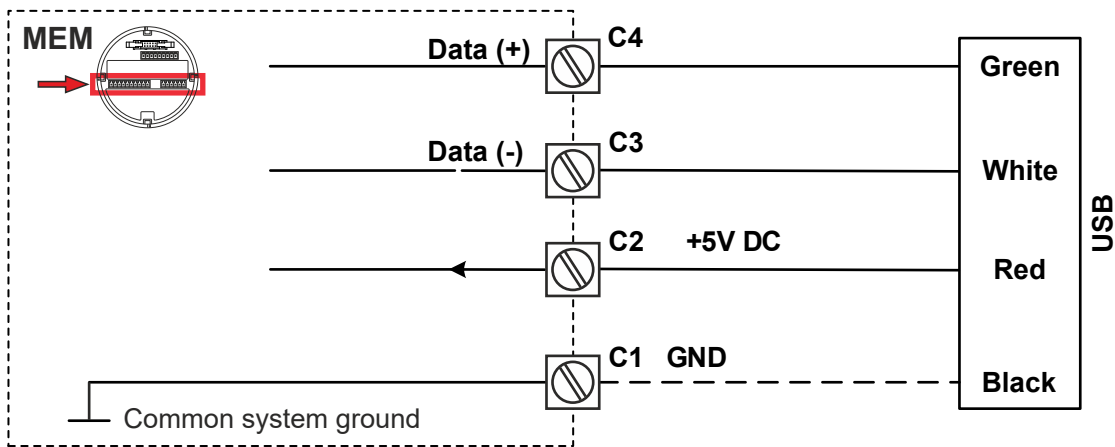

**Fig. 40: Terminals C1-C4: Communication**


When using the RS232 communication option, terminal C2 must be used for supplying the interface. Please connect the DTR (or the RTS) signal of the interface to this terminal and set it active (current limited +12V). If no active signal is available, it is possible to connect a separate supply between terminals C1 and C2 with a voltage between 6V and 15V, max. 0.1W.

#### 6.4.16 TERMINALS A1-A2: ISOLATED ANALOG OUTPUT – TYPE AH

The flowrate proportional output (AH) is standard available. This output is an isolated 4-20 mA output with the possibility to power the device via the 4-20 mA loop. It is non-polarity sensitive.

When the output is disabled, the current is by default limited to 2 mA. Max. driving capacity 1000 Ohm @ 27 VDC. If only powered by the loop, the backlight will not be activated.

The total loop resistance may not exceed 1000 Ohm and may not be less than 330 Ohm (at 30 mA). This means that the total resistance of other loop-devices may not exceed 670 Ohm.

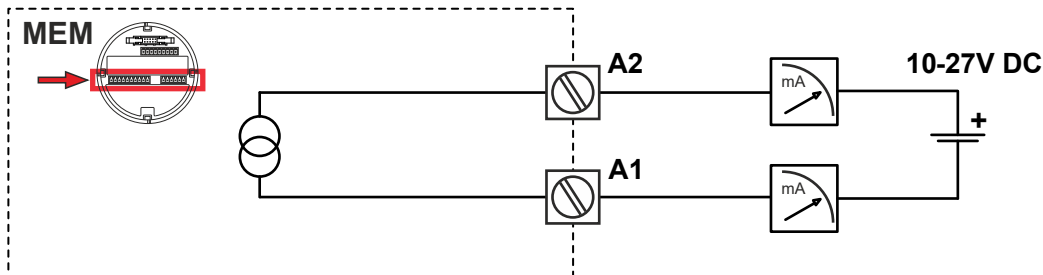

**Fig. 41: Terminals A1-A2: Analog output**

## 7 MAINTENANCE



Product damage: Only trained and authorized personnel may maintain the unit. Always read and understand this manual (especially [Section 2: Safety \[»5\]](#)) before proceeding.

If the E126-P-EG is damaged or faulty, it cannot be repaired by the user and must be replaced with an equivalent certified product. Repairs can only be carried out by the manufacturer or their authorized agent.

The unit only requires occasional periodic maintenance unless it is used in low-temperature applications or environments with high humidity (above 90% annual mean). It is the user's responsibility to take all precautions to dehumidify the internal atmosphere of the unit in such a way that no condensation will occur, for example by placing dry silica-gel sachet in the casing.

To prolong the battery lifetime as much as possible, it is also strongly advisable to use only necessary functions. Consult [Section 5.2.4: Saving battery lifetime \(type PB\) \[»18\]](#).

The following are suggested periodic maintenance tasks.

### 7.1 CHECK FOR WEAR OR DAMAGE

1. Check the unit (including cable glands and wiring) for damage or aging symptoms.
2. Check the process accuracy. If necessary, re-calibrate the flowmeter. Do not forget to re-enter any updated K-factor values.
3. Check the battery indicator for low level; replace battery as necessary – see [Section 7.3: Battery replacement instructions \[»55\]](#).

### 7.2 CLEAN UNIT

1. Soak a lint-free cloth with mild soap solution or fresh water.
2. Clean the complete unit (including control panel) by gently wiping with the cloth taking care that no moisture enters the housing.

### 7.3 BATTERY REPLACEMENT INSTRUCTIONS



**Explosion risk: never open the housing when explosive atmosphere is present.**

**Safety risk: do not open an installed enclosure when circuits are alive.**

**Pollution risk: prevent any contamination or dirt to enter the enclosure or mounting threads.**



#### **USE OF UNAPPROVED OR DAMAGED BATTERIES CAN INVALIDATE EXPLOSION SAFETY**

- Handle (lithium) batteries with the utmost care to prevent a short circuit or damage. A damaged battery is unsafe and can cause (serious) injury to persons. **Do not recharge, crush, disassemble, incinerate, heat above its rated temperature or expose contents to water.**
- Only use batteries that are approved for use in hazardous area by the manufacturer. **DO NOT EXCHANGE.** Using the wrong type of battery can pose a **SERIOUS RISK.** Approved batteries can be ordered from your supplier.

Follow the instructions shown in [Section 6.2.3: Opening, assembling and closing the unit \[»38\]](#), to gain access to the MEM and BSM/RSM.

### 7.3.1 SUPPLY BATTERY REPLACEMENT

#### Check new battery

Before exchanging the supply battery, make sure the new battery is undamaged, in good condition and suitable for use in the unit. Check the marking as shown below (Type: StdLiBAT021 – re-ordering nr. SPB02). Only use batteries that are approved by the manufacturer.


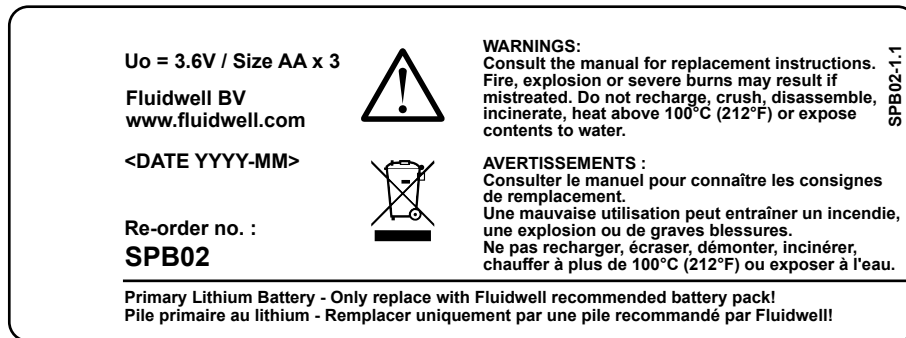


Fig. 42: Marking supply battery: StdLiBAT021 (SPB02)


#### Remove the old battery as follows:

1. Disconnect the battery connector cable from the supply module.
2. Carefully remove the battery from the holder.
3. Store the old battery in a small plastic bag (e.g. the bag the new battery came in) or install an insulation tape over the battery connector to prevent a short circuit.
4. Dispose of the battery according to the local environment regulations

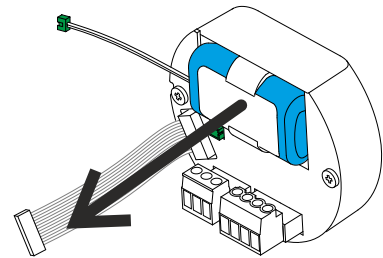

#### Install the new battery as follows:

1. Carefully press the battery fully into the battery holder.
2. Carefully click the battery connector cable into its connection in the supply module.

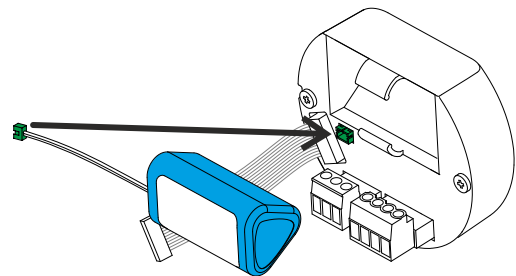

### 7.4 REPLACE SILICA GEL SACHET



NOTE

*A silica gel sachet is not supplied with the product but may have been placed during or after installation to prevent condensation.*



WARNING

#### Incompatibility risk

Do not use silica gel in environments where hydrogen fluoride, strong acids and/or strong bases are to be expected

1. Follow the instructions shown in [Section 6.2.3: Opening, assembling and closing the unit \[»38\]](#), to gain access to the inside of the housing.
2. Remove old silica-gel sachet from housing and replace with a new dry sachet.
3. Dispose of waste in accordance with (inter)national, manufacturer and plant owner standards and regulations.

## APPENDIX A - TECHNICAL SPECIFICATION

### A.1 GENERAL

DISPLAY	
Type	High intensity numeric and alphanumeric LCD, UV-resistant, with adjustable bright backlight
Digits	Seven 12 mm (0.47") and eleven 7 mm (0.28"). Various symbols and measuring units.
Dimensions	Ø 65 x 45 mm (2.56" x 1.77")
Refresh rate	User definable: 8 times/sec – 30 secs.
Speedometer	Indicates the actual flowrate (bargraph runs from 0 to 100% in steps of 5%)

OPERATING TEMPERATURE	
Ambient	Aluminum enclosure: -40°C to +70°C / -40°F to +158°F Stainless steel enclosure: -40°C to +67°C / -40°F to +153°F

ENCLOSURE	
Dimensions	112 x 133 x 148 mm (4.41" x 5.24" x 5.83") (WxHxD)
Protection method	ATEX / IECEx: Ex d, Ex t FM / CSA: XP, DIP
Control keys	Three optical keys with operation through the glass front window
Sealant	Silicone and EPDM
Anti-seize compound	EPDM compliant silicone oil based grease (Ambergrease FG2 or equivalent)
Material (metal parts)	Type HA_: Die-cast aluminum AISi8Cu3/AISi9Cu3(Fe) (weight 1300 gram) Type HS_: Stainless steel 316L (weight 3600 gram)
Rating	IP66 / 67 / TYPE 4X / TYPE 7 / TYPE 9
Thread type H_A	2 x ¾"NPT / 1 x 1"NPT
Thread type H_B	3 x ¾"NPT
Thread type H_C	2 x ½"NPT / 1 x 1"NPT
Thread type H_D	2 x ½"NPT / 1 x ¾"NPT
Thread type H_G	2 x M20 / 1 x M25
Thread type H_H	3 x M25

POWER REQUIREMENTS	
Type PB	Long life lithium battery - lifetime depends upon settings and configuration (up to 3 years). The battery can power the backlight briefly after a keypad touch but cannot power the relay output (OR) or the real sensor supply (Terminal P3).
Type PD	9 – 27 VDC, max. 3 W, 105 mA @ 24 V (without relays, including sensor supply output)
Type PD-OR	24 – 27 VDC, max. 4 W, 155 mA @ 24 V (including relays and sensor supply output)
Type PX	9 – 27 VDC, max. 1 W, 30 mA @ 24 V (without relays, without sensor supply output)
Type AH	Loop powered, analog output. 11 – 27 VDC, min. 2 mA; consumption max. 0.7 W (25 mA @ 27 VDC). The loop powered analog output cannot power the backlight, mechanical relay outputs (type OR) or real sensor supply output (Terminal P3).

SENSOR EXCITATION	
Type AH/PB/PX	Terminal S3: 3 VDC for pulse signals and 1.2 VDC for coil pick-up, I <sub>out</sub> max. 100 µA. This is not a real sensor supply. Only suitable for sensors with a very low power consumption like coils (sine wave) or reed switches.
Type PD	Terminal P3: <ul style="list-style-type: none"> <li>• 8.2 VDC, I<sub>out</sub> max. 20 mA</li> <li>• 12 VDC, I<sub>out</sub> max. 30 mA</li> <li>• 24 VDC, I<sub>out</sub> max. 75 mA (varies depending on input supply voltage)</li> </ul>

TERMINAL CONNECTIONS	
Type	Removable plug-in terminal strip (wire max. 1.5 mm <sup>2</sup> and 2.5 mm <sup>2</sup> ).

DATA PROTECTION	
Backup	EEPROM backup of all settings (running totals every minute; data retention at least 10 years)
Password	Configuration settings can be password protected

## A.2 INPUT

FLOWMETER	
Type P	Coil / sine wave (COIL-HI: 20 mVpp or COIL-LO: 90 mVpp sensitivity selectable), NPN, PNP, reed switch, NAMUR, active pulse signals 8 or 24 VDC
Frequency	Minimum 0 Hz - maximum 10 kHz for total and flowrate. Maximum frequency depends on signal type and internal low-pass filter. E.g. reed switch with low-pass filter (max. frequency 120 Hz)
K-Factor	0.000010 - 9,999,999 with variable decimal position
Low-pass filter	Available for all pulse signals
Type ZF	10 mVpp coil input sensitivity
Type ZG	5 mVpp coil input sensitivity

RESET TOTAL	
Function	Terminal input to reset total remotely or to lock the "Clear total" button
Type IB	Internally pulled-up switch contact - NPN
Pulse duration	100 msec (minimum)

TEMPERATURE (TYPE TP)	
Type TP	PT100 RTD - Range -100°C to +200°C (-148°F to 392°F)
Wires	2-, 3- or 4-wire PT100
Update time	Once per second
Accuracy	2-wire: +/- 0.1°C @ Ta 20°C + 0.008°/Ta °C 3- or 4-wire: +/- 0.1°C @ Ta 20°C + 0.005°/Ta °C

TEMPERATURE (TYPE TA)	
Type TA	(0)4-20 mA - with signal calibration at any current within the range (external power is required to sensor; e.g. type PD)
Accuracy	15 bit. Error 0.01% @ 20°C (typical 25 ppm/°C)
Span	0.00000 / 999,999 with variable decimal position
Offset	0.001 - 9,999.999
Update time	Once per second
Voltage drop	Max. 1 VDC @ 20 mA

PRESSURE (TYPE IA)	
Type IA	(0)4-20 mA - with signal calibration at any current within the range (external power is required to sensor; e.g. type PD)
Accuracy	15 bit. Error 0.01% @ 20°C (typical 25 ppm/°C)
Span	0.00000 / 999,999 with variable decimal position
Offset	0.001 - 9,999.999
Update time	Once per second
Voltage drop	Max. 1 VDC @ 20 mA

### A.3 OUTPUT

DIGITAL OUTPUT	
Function	Transmitting compensated accumulated total (scaled pulse) or input pulse retransmission
Scaled output	Output D1: max. frequency 500 Hz. Output D5: max. frequency 4 Hz, recommended use below 0.5 Hz Pulse length user definable between 1msec up to 10 seconds
Retransmission output	Square wave output based on frequency of (sine wave or coil) input signal. Maximum frequency 10 kHz with a 50% duty cycle, minimum on and off-time 50 µs
Type OR	One isolated electro-mechanical relay output (NO). Maximum voltage: 250 VAC / 30 VDC Maximum resistive load: 1 A Maximum inductive load: 0.5 A (pilot duty applications). Note 1: Requires 24 – 27 VDC and supplied via P5 - P6. Note 2: Type OT remains available. Note 3: Not used in pulse retransmission mode.
Type OT	One passive transistor output (NPN) - not isolated. 300 mA – 50 V @ 25°C

ANALOG OUTPUT	
Function	Transmitting compensated flowrate
Type AH	Galvanically isolated, loop powered 4 – 20 mA output
Accuracy	12 bit. Error 0.03% @ 20°C (Typical 45 ppm/°C). Can be scaled to any desired range
Supply voltage	10 V (lift-off voltage) - 27 VDC
Max load	700 ohm @ 24 VDC (24 V – 10 V / 20 mA)

COMMUNICATION	
Function	Reading display information, reading/writing all configuration settings, and data log extraction
Type CB	Modbus ASCII/RTU - RS232
Type CH	Modbus ASCII/RTU - RS485 2-wire, bus termination without resistor for low power solutions
Type CU	USB communication incl. Ex d plug (requires ¾" NPT or M25 side entry thread)
Type CX	No communication, remote configuration possible with accessory cable (ACE02)
Speed (baud)	1200 - 2400 - 4800 - 9600 - 9600HP - 19200 – 38400
Addressing	Maximum 247 addresses

### A.4 OPERATIONAL

FLOW EQUATIONS	
Type EG	Compensated gas volume
Formula	$Q_{normal} = Q \times \frac{P}{P_{normal}} \times \frac{T_{normal}}{T} \times \frac{C_{normal}}{C}$

OPERATOR FUNCTIONS	
Displayed information	<ul style="list-style-type: none"> <li>• Compensated flowrate, total and accumulated total</li> <li>• Current day total, previous day total and 15 historical day totals (compensated)</li> <li>• Actual line temperature / pressure</li> <li>• Indicating speedometer for compensated flowrate</li> <li>• Total can be reset to zero by pressing the CLEAR-key twice</li> </ul>

TOTAL	
Digits	7 digits
Unit	L, m3, US gal, igal, cf, Oil bbl, kg, ton, US ton, lb or none
Decimals	0 – 1 – 2 or 3
Note	Total can be reset to zero

DAILY TOTALS	
Digits	7 digits
Unit decimals	According to selection for total
Contract hour	00:00 – 23:00, settable per whole hour
Current day total	Running total, started at zero after the last contract hour
Previous day total	Fixed total, copied from current day total at the last contract hour
Historical day total	The last 15 previous day totals are stored and can be reviewed on the display
Note	Current day total cannot be reset to zero

ACCUMULATED TOTAL	
Digits	11 digits
Unit and decimals	According to selection for total
Note	Accumulated total cannot be reset to zero

FLOW RATE	
Digits	7 digits
Units	mL, L, m3, mg, g, kg, ton, US ton, US gal, igal, Oil bbl, lb, cf, rev, none, scf, nm3, nL or p
Bar graph	Speedometer consisting of 20 blocks, each block is 5% of total span
Decimals	0 – 1 - 2 or 3
Time units	/sec - /min - /hr - /day

PRESSURE / TEMPERATURE	
Digits	6 digits
Units	Temperature: °C, °F or K Pressure: mbar, bar, PSI
Decimals	1

## A.5 STANDARDS AND APPROVALS

APPLICABLE DIRECTIVES, LEGISLATION AND STANDARDS	
EU Directives	See <a href="#">Section E: Legal information »72]</a>
EMC	FCC 47 CFR part 15
CSA	CSA 22.2 No. 25; CSA 22.2 No. 30; CAN/CSA 22.2 No. 94.2; CSA C22.2 No. 61010-1 + A1
FM	FM3600; FM3615; FM3616; FM3810
IP & TYPE	EN 60529; NEMA 250

HAZARDOUS AREA CLASSIFICATION		
ATEX	<b>Certificate:</b> Gas: Dust:	<b>DEKRA 14ATEX0006</b> ⊕ II 2 G Ex db IIC T6 Gb ⊕ II 2 D Ex tb IIIC T85°C Db X
IECEx	<b>Certificate:</b> Gas: Dust:	<b>IECEx DEK 14.0001X</b> Ex d IIC T6 Gb Ex tb IIIC T85°C Db
CSA c-us	<b>Certificate:</b> Explosionproof: Dust-Ignitionproof: Flameproof: Dust ignition protection:	<b>CSA.15.70010647</b> Class I, Division 1, Groups A, B, C, D Class II/III, Division 1, Groups E, F, G Class I, Zone 1, AEx d IIC T6 Gb Zone 21, AEx tb IIIC T85°C Db
FM	<b>Certificate:</b> Project ID: Explosionproof: Dust-Ignitionproof: Flameproof: Dust ignition protection:	<b>FM20US0082X</b> 3054369 Class I, Division 1, Groups A, B, C, D Class II/III, Division 1, Groups E, F, G Zone 1, AEx d IIC T6 Gb Zone 21, AEx tb IIIC T85°C Db

## APPENDIX B - TROUBLESHOOTING

Table 1 lists and describes how to troubleshoot problems that can occur when installing or operating the unit.

Table 2 lists internal alarm codes and conditions signaled by a blinking ALARM icon on the display. The alarm code can be displayed by pushing the SELECT-key repeatedly until the internal alarm screen is shown.



If an error or alarm code persists, contact your supplier.

**Table 1: Install and configuration errors**

Observation	Possible cause	Check
Flowmeter does not generate pulses	Signal selection in SETUP menu	<b>SETUP 4.1: FLOWMETER &gt; SIGNAL</b> [»26]
	Pulse amplitude	<b>Section 6.4.10: Terminals S1-S3: Flowmeter input</b> [»48]
	Flowmeter, wiring and connection of terminal connectors	<b>Section 6.4: Electrical installation</b> [»43]
	Power supply of flowmeter	<b>Section 6.4.4: Voltage selection sensor supply</b> [»45]
Flowmeter generates too many pulses	Settings for Total and Flowrate	<b>SETUP 4: FLOWMETER</b> [»26]
	Type of signal selected with actual signal generated	<b>SETUP 4: FLOWMETER</b> [»26]
	Sensitivity of coil input	<b>SETUP 4: FLOWMETER</b> [»26]
	Grounding	Reconnect ground cables and avoid ground loops. Connect screen to the ground input terminal of the flowmeter input
Analog output does not function properly	Wiring type	Use screened wire for flowmeter signals
	Function mode	<b>SETUP 8: ANALOG OUTPUT</b> [»31]
	Settings for min and max flowrate	8.2: ANALOG OUTPUT > RATE MIN (4MA) 8.3: ANALOG OUTPUT > RATE MAX (20MA)
	Tuning of min and max output current	8.5: ANALOG OUTPUT > TUNE MIN (4MA) 8.6: ANALOG OUTPUT > TUNE MAX (20MA)
Pulse output does not function	Connection of external power supply	<b>Section 6.4: Electrical installation</b> [»43]
	Function mode	<b>SETUP 9: PULSE OUTPUT</b> [»32]
	Pulse per quantity	9.3: PULSE OUTPUT > AMOUNT
Flowrate displays "0 / zero" while there is flow (total is counting)	Pulse width compatibility with external device	9.2: PULSE OUTPUT > WIDTH
	K-factor and time unit	2.2: FLOWRATE > TIME 2.4: FLOWRATE > K-FACTOR
Flowrate displays "0 / zero" while there is flow (total is counting)	Flowrate calculation setting vs. flowrate cut-off.	Menu_Flowrate_Calculation_ms Menu_Flowrate_Cut-off_ms Example: If <b>cut-off</b> is set to 10.0 seconds the unit has at least 10 seconds to measure the number of pulses according to <b>calculation</b> .
	Password is unknown/wrong	Call your supplier

**Table 2: Internal alarms**

When multiple alarms occur, the error code shown is the sum of the error codes as given below. For example 0048 is a combination of error code 0016 and 0032.

To find out which error codes are present at the same time, register the number shown on the display and decode the errors as follows:

- Find the largest error code in the table that will fit the registered number. This error code is present.
- Subtract the error code from the registered number and perform the first step again until the registered number equals zero.

Alarm	Explanation
0001	Display error
0002	Data storage error
0004	Initialization error
0016	IO configuration error base
0032	IO configuration error interface
0064	Analog input error
0128	Automatic K-factor conversion error
0256	PT100 ADC error (type TP only)
0512	Total S-factor calculation error
1024	TPC factor calculation error
2048	Temperature sensor out of range error
4096	Pressure sensor out of range error



## C.2 RUNTIME VARIABLES OF THE UNIT

When reading runtime variables, the given value may differ slightly from the value that is displayed on the display – this is because the display is limited in the number of digits and may have a slower update rate.

When variables are read in integer format, the returned values are given including the decimals. For example, when two decimals are selected for total, and total has a value of 123456,78 the display will show 23456,78 while communication will read a “total” of 12345678 (note that the decimals should be adapted according to the setting in “total decimals”, in this case 2).

RUNTIME VARIABLES OF THE E126-P-EG - INTEGER BASED – INDIVIDUAL READ						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 255 [h] 0x00FF	40256	battery status	1	R	uint16	0 = unknown 1 = normal 2 = low battery
[d] 516 [h] 0x0204	40517	error status (bitfield)	1	R	uint16	[d] 0 = no error [d] 1 = display error [d] 2 = data-storage error [d] 4 = initialization error [d] 16 = IO configuration error base [d] 32 = IO configuration error interface [d] 64 = Analog input error [d] 128 = Automatic K-factor conversion error [d] 256 = PT100 ADC error (type TP only) [d] 512 = Total S-factor calculation error [d] 1024 = TPC factor calculation error [d] 2048 = Temperature sensor out of range error [d] 4096 = Pressure sensor out of range error (type EG only)
[d] 540 [h] 0x021C	40541	temperature	2	R	int32	-999.9...999.9 Representation: unit depending on variable 209
[d] 556 [h] 0x022C	40557	pressure	2	R	uint32	0.0...999999.9 Representation: unit depending on variable 544
[d] 560 [h] 0x0230	40561	accumulated total	3	R	uint48	0.000...999999999999999 Representation: unit, decimals depending on variables 32, 33
[d] 566 [h] 0x0236	40567	total	3	R *	uint48	0.000...999999999999 Representation: unit, decimals depending on variables 32, 33
[d] 572 [h] 0x023C	40573	flowrate	2	R	uint32	0.000...9999999 Representation: unit, time, decimals depending on variables 48, 49, 50
[d] 4864 [h] 0x1300	44865	TPC factor	2	R	uint32	0.0001...999.9999 Multiplication factor for temperature and pressure compensation
[d] 4640 [h] 0x1220	44641	Total command register	1	R/W	uint16	Commands: 0x0102 (258): Clear total
* Clearing total: Total can be cleared by writing the correct command to the total command register, as shown above. It is also still possible to use the old method: Write a value of 0 to all the 3 registers of total in a single write action. Writing any other value will result in the reply of an error message.						
Note: The runtime variables shown in above list must always be read or written individually, for the indicated number of registers, in 1 single action!						

RUNTIME VARIABLES OF THE E126-P-EG - INTEGER BASED – CONTIGUOUS READ						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 6146 [h] 0x1802	46147	total	4	R	uint64	0.000...999999999999 Representation: unit, decimals depending on variables 32, 33
[d] 6150 [h] 0x1806	46151	accumulated total	4	R	uint64	0.000...999999999999999 Representation: unit, decimals depending on variables 32, 33
[d] 6154 [h] 0x180A	46155	flow rate	2	R	uint32	0.000...9999999 Representation: unit, time, decimals depending on variables 48, 49, 50
[d] 6156 [h] 0x180C	46157	current day total	4	R	uint64	0.000...999999999999 Representation: unit, decimals depending on variables 32, 33

RUNTIME VARIABLES OF THE E126-P-EG - INTEGER BASED – CONTIGUOUS READ						
[d] 6160 [h] 0x1810	46161	previous day total	4	R	uint64	0.000...999999999 Representation: unit, decimals depending on variables 32, 33
[d] 6164 [h] 0x1814	46165	temperature	2	R	int32	-999.9...999.9 Representation: unit, depending on variable 209
[d] 6166 [h] 0x1816	46167	pressure	2	R	uint32	0.0...999999.9 Representation: unit, depending on variable 544

Note: The list of runtime variables shown above can be read as one contiguous list of registers. Unused registers return 0.

RUNTIME VARIABLES OF THE E126-P-EG - FLOATING POINT BASED 32 BIT – CONTIGUOUS READ						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 6402 [h] 0x1902	46403	total	2	R	float32	0... 9999999 Representation: unit depending on variable 32
[d] 6404 [h] 0x1904	46405	accumulated total	2	R	float32	0... 99999999999 Representation: unit depending on variable 32
[d] 6406 [h] 0x1906	46407	flow rate	2	R	float32	0... 9999999 Representation: unit and time depending on variables 48, 49
[d] 6408 [h] 0x1908	46409	current day total	2	R	float32	0... 9999999 Representation: unit depending on variable 32
[d] 6410 [h] 0x190A	46411	previous day total	2	R	float32	0... 9999999 Representation: unit depending on variable 32
[d] 6412 [h] 0x190C	46413	temperature	2	R	float32	-999... 999 Representation: unit depending on variable 209
[d] 6414 [h] 0x190E	46415	pressure	2	R	float32	0... 999999 Representation: unit depending on variable 544

Note: The list of runtime variables shown above can be read as one contiguous list of registers. Unused registers return 0.

RUNTIME VARIABLES OF THE E126-P-EG - FLOATING POINT BASED 64 BIT – CONTIGUOUS READ						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 6656 [h] 0x1A00	46657	total	4	R	float64	0... 9999999 Representation: unit depending on variable 32
[d] 6660 [h] 0x1A04	46661	accumulated total	4	R	float64	0... 99999999999 Representation: unit depending on variable 32
[d] 6664 [h] 0x1A08	46665	current day total	4	R	float64	0... 9999999 Representation: unit depending on variable 32
[d] 6668 [h] 0x1A0C	46669	previous day total	4	R	float64	0... 9999999 Representation: unit depending on variable 32

Note: The list of runtime variables shown above can be read as one contiguous list of registers. Unused registers return 0.

HISTORICAL PREVIOUS DAY TOTALS OF THE E126-P-EG - INTEGER BASED – CONTIGUOUS READ						
<p>The read-out of <b>historical previous day totals</b> is done via 2 INDEXED variables containing the number of decimals and the value. These 2 variables can be read as one contiguous list of 3 registers (in a single read action). Reading is done by first selecting the right entry (day) through the index. Valid values for the index are 0...14, which correspond with the previous day totals of 1 day old through 15 days old. Indexes outside this range will result in an error being sent back. (See the communication-section of this appendix for setting the index and its extended functionality through variable 150 and 149).</p>						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 5888 [h] 0x1700	45889	previous day total decimals	1 INDEXED variable	R	uint16	0 ... 3
[d] 5889 [h] 0x1701	45890	previous day total	2 INDEXED variable	R	uint64	0.000... 9999999999 Representation: unit depends on variable 32, decimals depends on variables 5888 (0x1700)

### C.3 CONFIGURATION VARIABLES OF THE UNIT

#### Reading and writing configuration variables:

When reading or writing configuration variables in integer format, the given values should take into account the number of decimals that are associated with that variable. For example, when a time-out setting has 1 decimal and is set to 15.5 seconds, the variable will contain a value of 155.

Please note that all configuration variables shown in the following tables must always be read or written individually, for the indicated number of registers, in 1 single action!

MODBUS-REGISTERS: TOTAL									
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS			
[d] 32 [h] 0x0020	40033	unit	1	R/W	uint16	0 = none 1 = L 2 = m3	3 = US GAL 4 = I GAL 5 = CF	6 = OILBBL 7 = kg 8 = ton	9 = lb 10 = US ton
[d] 33 [h] 0x0021	40034	decimals	1	R/W	uint16	0...3			
[d] 34 [h] 0x0022	40035	K-factor	2	R/W	uint32	1...9999999 Representation 0.000010...9999999: decimals depending on variable 37.			
[d] 37 [h] 0x0025	40038	K-factor decimals	1	R/W	uint16	0...6			
[d] 47 [h] 0x002F	40048	multiply factor	1	R/W	uint16	0=x1	1=x10	2=x100	3=x1000
[d] 1052 [h] 0x041C	41053	clear total password	1	R/W	uint16	000...999 Setting 000 disables the clear total password feature.			
[d] 2146 [h] 0x0862	42147	contract hour	1	R/W	uint16	0...23 Hour			
[d] 2208 [h] 0x08A0	42209	current day total	4	R	uint64	0.000 ... 99999999999 Representation: unit, decimals depending on variables 32, 33.			
[d] 2216 [h] 0x08A8	42217	previous day total	4	R	uint64	0.000 ... 99999999999 Representation: unit, decimals depending on variables 32, 33.			

MODBUS-REGISTERS: FLOWRATE									
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS			
[d] 48 [h] 0x0030	40049	unit	1	R/W	uint16	0=none 1=mL 2=L 3=m <sup>3</sup> 4=US GAL	5=I GAL 6=CF 7=OilBBL 8=nL 9=nm <sup>3</sup>	10=SCF 11=mg 12=g 13=kg 14=ton	15=lb 16=US 17=rev 18=P
[d] 49 [h] 0x0031	40050	time unit	1	R/W	uint16	0=/sec	1=/min	2=/hour	3=/day
[d] 50 [h] 0x0032	40051	decimals	1	R/W	uint16	0...3			
[d] 51 [h] 0x0033	40052	K-factor	2	R/W	uint32	1...9999999 Representation: 0.000010...9999999 depending on variable 54: decimals K-factor			
[d] 54 [h] 0x0036	40055	K-factor decimals	1	R/W	uint16	0...6			
[d] 62 [h] 0x003E	40063	filter	1	R/W	uint16	1...99			
[d] 71 [h] 0x0047	40072	period	1	R/W	uint16	0.1...99.9sec			

MODBUS-REGISTERS: DISPLAY									
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS			
[d] 64 [h] 0x040	40065	display function	1	R/W	uint16	0=total	1=flowrate	2=acc.total	
[d] 2147 [h] 0x863	42148	day totals	1	R/W	uint16	0=hidden	1=operate	2=off	
[d] 42 [h] 0x02A	40043	toggle	1	R/W	uint16	0=disable	1=enable		
[d] 80 [h] 0x050	40081	LCD update time	1	R/W	uint16	0=fast 1=1sec	2=3sec 3=15sec	4=30sec 5=off	
[d] 67 [h] 0x043	40068	backlight brightness	1	R/W	uint16	0=off 1=20%	2=40% 3=60%	4=80% 5=100%	
[d] 58 [h] 0x03A	40059	bar graph enable	1	R/W	uint16	0=disable	1=enable		
[d] 59 [h] 0x03B	40060	bar graph range	2	R/W	uint32	0...9999999 Representation: unit, time, decimals depending on variables 48, 49, 50			

MODBUS-REGISTERS: FLOWMETER									
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS			
[d] 96 [h] 0x060	40097	flowmeter signal	1	R/W	uint16	0=NPN 1=NPN LP 2=reed	3=reed LP 4=PNP 5=PNP LP	6=Namur 7=coil hi 8=coil lo	9=act 8.2V 10=act 24V
[d] 1051 [h] 0x41B	41052	K-factor unit type	1	R/W	uint16	0=hand	1=volumetric	2=mass	
[d] 1050 [h] 0x41A	41051	K-factor unit	1	R/W	uint16	0=none 1=L 2=m <sup>3</sup>	3=US GAL 4=l GAL 5=CF	6=OilBBL 7=kg 8=ton	9=LB 10=US ton
[d] 1046 [h] 0x416	41047	K-factor	2	R/W	uint32	1...9999999 Representation: 0.000010...9999999 depending on variable 54: decimals K-factor			
[d] 1049 [h] 0x419	41050	K-factor decimals	1	R/W	uint16	0...6			

MODBUS-REGISTERS: TEMPERATURE - WITH TYPE TA (4-20MA)									
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS			
[d] 528 [h] 0x210	40529	unit	1	R/W	uint16	0=K	1=°C	2=°F	
[d] 530 [h] 0x212	40531	span	2	R/W	uint32	0.00001...999999 K Representation: decimals depending on variable 533			
[d] 533 [h] 0x215	40534	decimals span	1	R/W	uint16	0...5			
[d] 530 [h] 0x212	40531	span	2	R/W	uint32	0.00001...999999 K Representation: decimals depending on variable 533			
[d] 183 [h] 0x0B7	40184	filter	1	R/W	uint16	1...99			
[d] 186 [h] 0x0BA	40187	calib-low	1	R/W	uint16	0=cal set	1=calibrate	2=default	
[d] 187 [h] 0x0BB	40188	calib-high	1	R/W	uint16	0=cal set	1=calibrate	2=default	

MODBUS-REGISTERS: TEMPERATURE - WITH TYPE TP (PT100)									
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS			
[d] 209 [h] 0x0D1	40210	display	1	R/W	uint16	0=K	1=°C	2=°F	
[d] 208 [h] 0x0D0	40209	number of wires	1	R/W	uint16	0=2	1=3	2=4	

MODBUS-REGISTERS: TEMPERATURE - WITH TYPE TP (PT100)						
[d] 199 [h] 0x0C7	40200	filter	1	R/W	uint16	1...99

MODBUS-REGISTERS: PRESSURE						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 544 [h] 0x220	40545	unit	1	R/W	uint16	0=mbar    1=bar    2=psi
[d] 546 [h] 0x222	40547	span	2	R/W	uint32	0.00001...999999 Representation: unit, decimals depending on variables 549, 544.
[d] 549 [h] 0x225	40550	decimals span	1	R/W	uint16	0...5
[d] 550 [h] 0x226	40551	offset	2	R/W	uint32	0.001...9999.999 Representation: unit depending on variable 544.
[d] 89 [h] 0x059	40090	filter	1	R/W	uint16	1...99
[d] 90 [h] 0x05A	40091	calib-low	1	R/W	uint16	0=cal set    1=calibrate    2=default
[d] 91 [h] 0x05B	40092	calib-high	1	R/W	uint16	0=cal set    1=calibrate    2=default

MODBUS-REGISTERS: FORMULA						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 537 [h] 0x219	40538	T-normal (temp)	2	R/W	uint32	0.00...9999.99K
[d] 553 [h] 0x229	40554	P-normal (pressure)	2	R/W	uint32	0.000...9999.999 Representation: unit depending on variable 544
[d] 585 [h] 0x249	40586	C-normal (compress)	2	R/W	uint32	0.000000...9.999999
[d] 582 [h] 0x246	40583	Compressibility	2	R/W	uint32	0.000000...9.999999

MODBUS-REGISTERS: ANALOG OUTPUT						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 112 [h] 0x070	40113	analog output	1	R/W	uint16	0=disable    1=enable
[d] 113 [h] 0x071	40114	minimum rate	2	R/W	uint32	0.001...9999999 Representation: unit, time, decimals depending on variables 48, 49, 50
[d] 116 [h] 0x074	40117	maximum rate	2	R/W	uint32	0.001...9999999 Representation: unit, time, decimals depending on variables 48, 49, 50
[d] 119 [h] 0x077	40120	cut-off percentage	1	R/W	uint16	0...99 Representation: 0.0...9.9%
[d] 120 [h] 0x078	40121	tune minimum output	1	R/W	uint16	0...9999
[d] 122 [h] 0x07A	40123	tune maximum output	1	R/W	uint16	0...9999
[d] 127 [h] 0x07F	40128	filter	1	R/W	uint16	0...99

MODBUS-REGISTERS: PULSE OUTPUT						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 141 [h] 0x08D	40142	pulse mode	1	R/W	uint16	0=disable    1=scaled    2=retrans

MODBUS-REGISTERS: PULSE OUTPUT						
[d] 128 [h] 0x080	40129	pulse time width	1	R/W	uint16	0...9999 Representation: 0.001...9.999sec
[d] 130 [h] 0x082	40131	pulse per X quantity	2	R/W	uint32	1...9999999 Representation: 0.000001...9999999 depending on variable 133
[d] 133 [h] 0x085	40134	pulse quantity decimals	1	R/W	uint16	0...3

MODBUS-REGISTERS: MODBUS COMMUNICATION						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 144 [h] 0x090	40145	speed (baudrate)	1	R/W	uint16	0=1200 1=2400 2=4800 3=9600 4=9600HP 5=19200 6=38400
[d] 145 [h] 0x091	40146	modbus address	1	R/W	uint16	1...247
[d] 146 [h] 0x092	40147	modbus mode	1	R/W	uint16	0=off 1=RTU 2=ASCII
[d] 1271 [h] 0x4F7	41272	data bits	1	R/W	uint16	0=7bit 1=8bit
[d] 1272 [h] 0x4F8	41273	parity	1	R/W	uint16	0=none 1=even 2=odd
[d] 147 [h] 0x093	40148	transmit delay	1	R/W	uint16	0...255ms delay between receiving a (valid) modbus command and sending the response
[d] 150 [h] 0x096	40151	index	1	R/W	uint16	0...255 used for indexed values
[d] 149 [h] 0x095	40150	index use	1	R/W	uint16	0=static 1=auto increment 2=auto decrement
[d] 25 [h] 0x019	40026	reboot	1	R/W	uint16	Returns 0 on read Write 0xA50F for unit restart Write 0xA5AF0 for factory settings

MODBUS-REGISTERS: OTHERS						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. OF REG'S	R/W	TYPE	VALUES / REPRESENTATION / REMARKS
[d] 160 [h] 0x0A0	40161	model number	1	R	uint16	0...9999
[d] 173 [h] 0x0AD	40174	model suffix	1	R	char	Representation: ASCII character
[d] 162 [h] 0x0A2	40163	firmware version	2	R	uint32	0...999999 Representation: xx.xx.xx
[d] 165 [h] 0x0A5	40166	serial number	2	R	uint32	0...9999999 Representation: xxxxxxx
[d] 176 [h] 0x0B0	40177	time (local)	2	R/W	uint32	00:00:00...23:59:59 Representation: hh:mm:ss Stored decimal: 23:59:59 = 235959d = 0x0003.99B7
[d] 168 [h] 0x0A8	40169	password	1	R	uint16	0000...9999 Representation: 4-digit number, 0000 means off.
[d] 139 [h] 0x08B	40140	keyboard lock	1	R/W	uint16	0=disable 1=enable
[d] 170 [h] 0x0AA	40171	tag number	2	R/W	uint32	0...9999999 Representation: xxxxxxx

## APPENDIX D - REMOTE CONFIGURATION TOOL

### D.1 INTRODUCTION

The free PC software can be downloaded and installed onto your computer system. The software package allows you to set the configurations as desired, up- or download the settings to the MEM and print a hardcopy for each product. With the software, programming of multiple products can be done very easy.

### D.2 CABLE CONNECTION



Before opening the enclosure, consult [Section 6.2.3: Opening, assembling and closing the unit \[»38\]](#).

To connect the MEM to a PC, a cable suitable for the supplied type of communication (CB, CH, CU, CX) should be used, as illustrated in the following image:

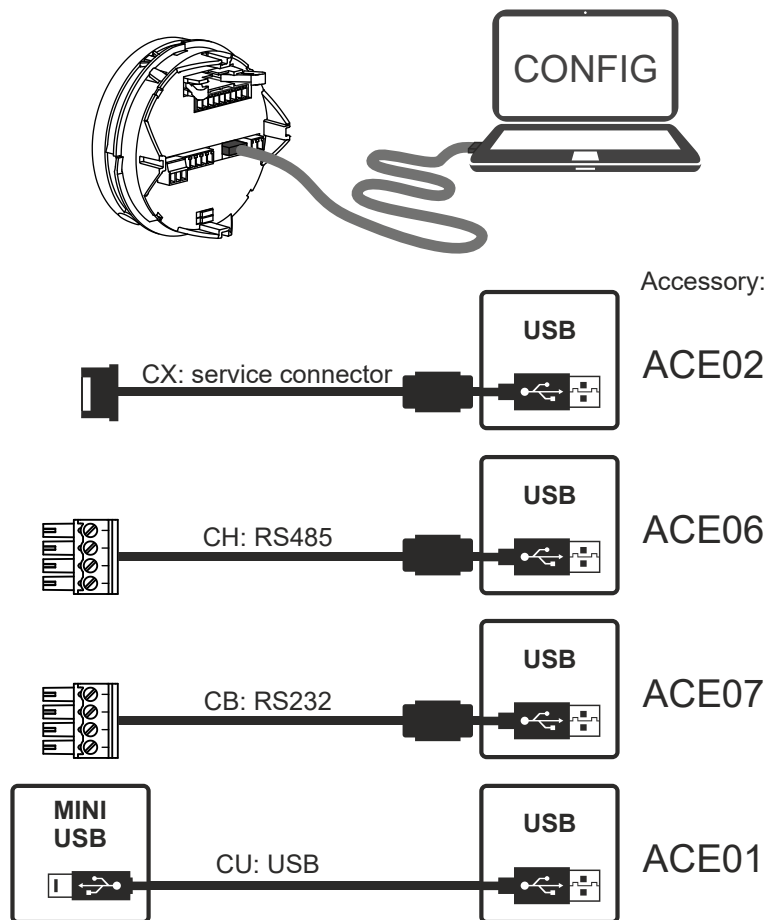


Fig. 44: Cable connection between MEM and PC.

### D.3 DOWNLOAD AND INSTALL

The Remote Configuration Tool software package can be downloaded from our website at [www.fluidwell.com/software](http://www.fluidwell.com/software) and installed using the installation program. The installation also contains a Quickstart manual which gives detailed instructions on how to achieve a successful connection between PC and MEM.

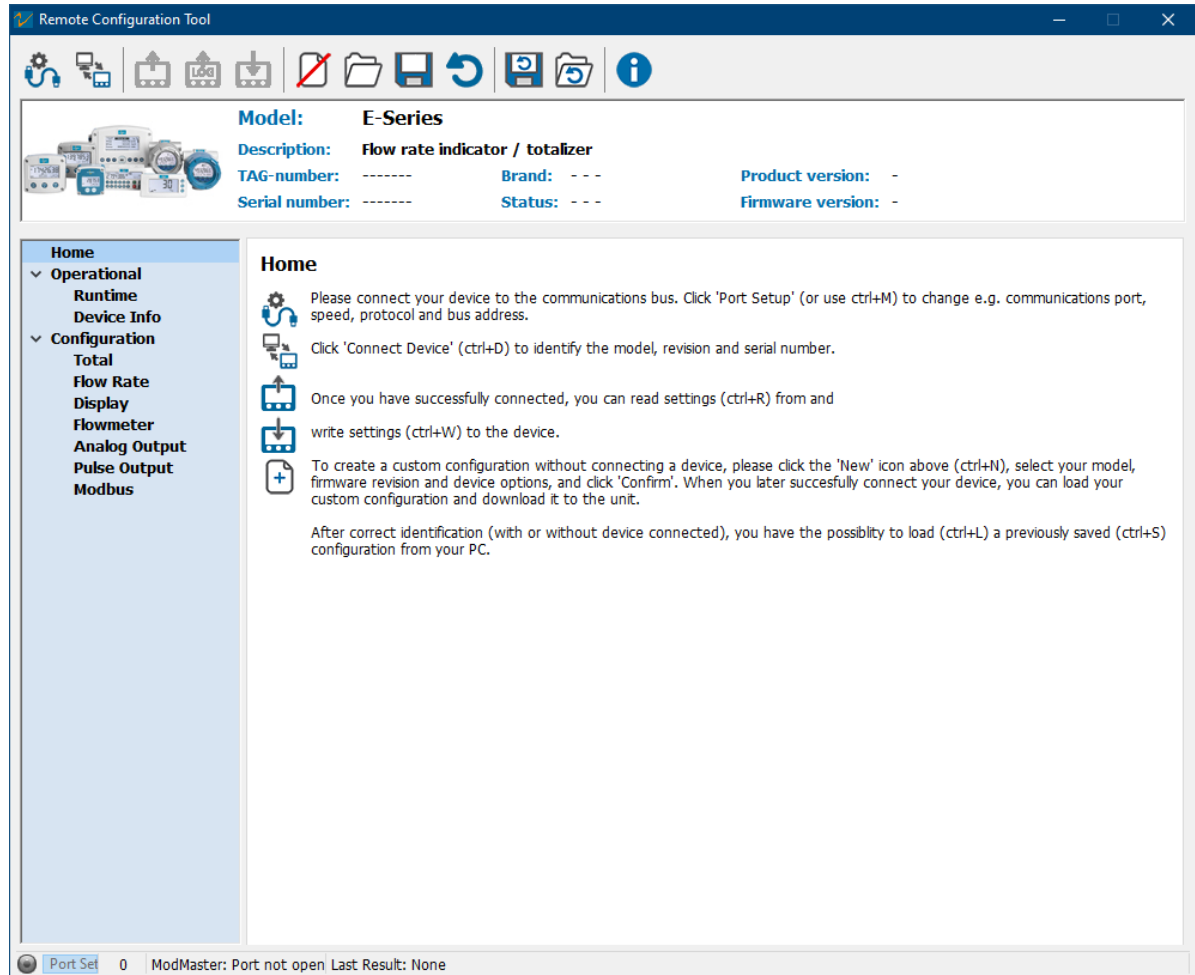


Fig. 45: Example of PC Configuration Tool window

## APPENDIX E - LEGAL INFORMATION


### E.1 DECLARATION OF CONFORMITY

#### EU Declaration of Conformity

##### Fluidwell E-Series indicators

Veghel, January 2023

We, Fluidwell BV, declare under our sole responsibility that the E-Series indicators are designed and will operate conform the following applicable European Directives and Harmonised Standards, when installed and operated according to the related manuals:

EMC Directive	2014/30/EU	EN 61000-6-2:2005 EN 61000-6-3:2007 + A1:2011 EN 61326-1:2013
RoHS Directive	2011/65/EU (incl. current amendments)	EN 50581:2012 EN IEC 63000:2018
Low Voltage Directive	2014/35/EU	EN 61010-1:2010 + A1:2019
ATEX Directive	2014/34/EU	EN IEC 60079-0:2018 EN 60079-1:2014 EN 60079-31:2014 (IEC:2022)
	Protective system	 II 2 G Ex db IIC T6 Gb II 2 D Ex tb IIIC T85 °C Db
	Certification Notified Body	KEMA 14ATEX0006 X 0344 – DEKRA Certification BV

Last two digits of the year in which the CE marking was affixed: 13.

I. Meij, Manager Technology 

**Fluidwell BV** – P.O.Box 6, 5460 AA, Veghel, The Netherlands – Voltaweg 23, 5466 AZ, Veghel, The Netherlands  
Fluidwell BV is ISO9001 certified by DEKRA Certification BV, Meander 1051, 6825 MJ, Arnhem, The Netherlands.







Your success counts



**Fluidwell bv**  
P.O. Box 6  
5460 AA Veghel  
the Netherlands

Voltaweg 23  
5466 AZ Veghel  
the Netherlands

Website: [www.fluidwell.com](http://www.fluidwell.com)  
Find your nearest representative: [www.fluidwell.com/representatives](http://www.fluidwell.com/representatives)  
© Copyright 2023 - FW\_E126-P-EG\_M\_v0302-02\_EN