


# Sun Visor for 9900/9950 Transmitter

## Quick Start Leaflet

+GF+

CE  
UK  
CA

159900233 3-9000.396.091  
MA\_00189 / EN DE / 00 (02.2025)  
© Georg Fischer Signet LLC  
5462 N. Irwindale Avenue,  
Irwindale, CA 91706 U.S.A.  
Tel. (626) 571-2770 / www.gfps.com  
info.psc@georgfischer.com

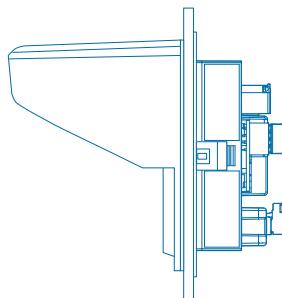

Installation Video



## Compatibility

Sun Visor



+

9900 Transmitter




or


9950 Transmitter



=

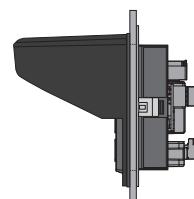


## 01 Mount Sun Visor

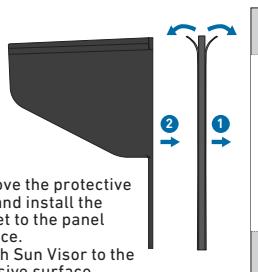


- 1 Remove the protective film and install the gasket to the panel surface.
- 2 Attach Sun Visor to the adhesive surface.

## 02 Mount Transmitter

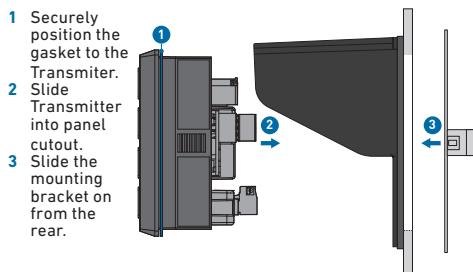


## 03 Fix mounting bracket

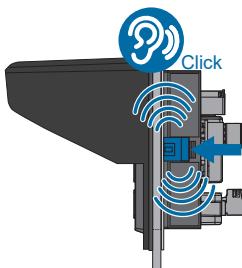

Press firmly, until you hear a click on both sides.  
For maximum sealing, press the mounting  
bracket ears down as deep as possible.

## 04 Optional sealing

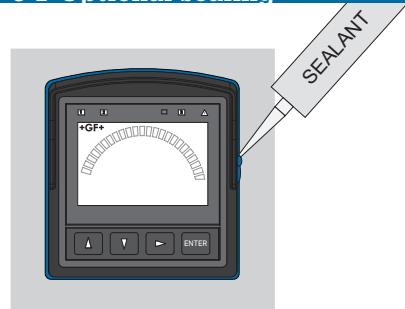


Optional: For a watertight seal (NEMA 4X, IP66 or higher), the Sun Visor must be sealed all around with sealant.

# Sonnenblende für 9900/9950 Transmitter Kurzanleitung

+GF+

CE  
UK  
CA

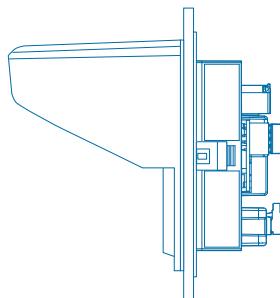

Installations-  
video



## Kompatibilität

Sonnenblende



+

9900 Transmitter




or


9950 Transmitter



=

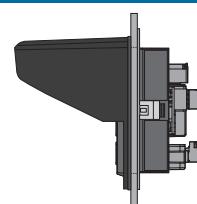


## 01 Sonnenblende montieren

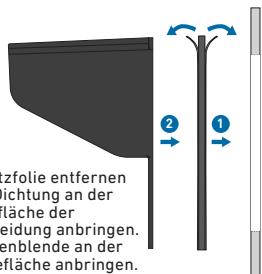


- 1 Schutzfolie entfernen und Dichtung an der Oberfläche der Verkleidung anbringen.
- 2 Sonnenblende an der Klebefläche anbringen.

## 02 Transmitter montieren

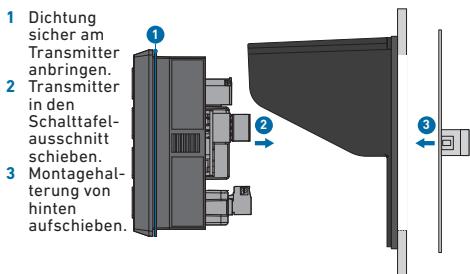


## 03 Montagehalterung fixieren

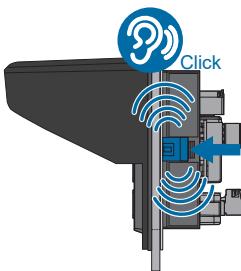

Fest andrücken, bis auf beiden Seiten ein Klicken zu hören ist. Für eine maximale Abdichtung, die Laschen der Montagehalterung so tief wie möglich nach unten drücken.

## 04 Optionale Abdichtung

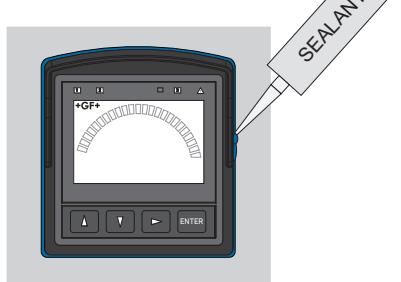

Optional: Für eine wassererdichte Versiegelung (NEMA 4X, IP66 oder höher) muss die Sonnenblende rundum mit Dichtmittel abgedichtet werden.