

1. Preparing the Tablet

Fully charge your *Tablet* and familiarize yourself with its features. Configure the tablet interface as desired.

2. Getting the PT900 Android APP

Obtain the PT900 APP from one of the following:

- **Google Play Store** (free download):
Set up a free account in **Google Play Store**. Search for the **TransPort PT900 APP** and install it on your tablet.
- **QR Code** or **GE Website** (free download):
Either Scan the QR Code below or go to <https://www.gemeasurement.com/flow-measurement-control/ultrasonic-liquid/transport-pt900-portable-ultrasonic-flow-meter-liquids>
or
www.gemeasurement.com/transport to download the PT900 APP from the GE website to your tablet.



- The SD card supplied with your PT900 system:
Plug the SD card directly into your tablet, and select the APK file from the SD folder.

Note: Check the GE website for the latest version.


3. Installing the PT900 APP

If the PT900 APP was obtained from the SD card or from the QR Code/GE website, install the APP as follows:

1. Open the “*My Files*” folder on the tablet screen and select the APP from the SD folder.



2. Enable the *security option* to allow the installation of software from “*Unknown sources*” for this installation only.

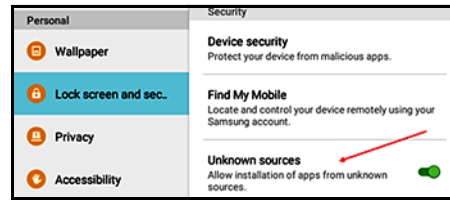

3. Click on the APK file, and you will see the screen below. Click “*Install*” to begin the installation.

