# Rosemount<sup>™</sup> 2088 Absolute and Gage Pressure Transmitter





- Performance of 0.065% with high accuracy option
- Lightweight, compact design for cost-effective installation
- Protocols available include 4–20 mA HART® and 1–5 Vdc HART Low Power
- Absolute and gage pressure ranges up to 4,000 psi (276 bar)
- Rangeability of 50:1



# Rosemount 2088 Pressure Transmitter product offering



### Proven reliability for gage and absolute applications

- Available protocols include 4–20 mA HART and 1–5 Vdc HART Low Power
- Fully configurable LCD display to display process variable, percent of range, and diagnostic messages
- Lightweight, compact design enables easy installation
- Choice of stainless steel or Alloy C-276 wetted materials



# Unlock the value of devices with the Emerson™ Wireless THUM™ Adapter

- Gain access to field intelligence and improve quality, safety, availability, operations, and maintenance costs
- Remotely manage devices and monitor health
- Enable new wireless measurement points
- Utilize existing loop power



### Proven, reliable, and innovative DP Level technologies

- Connect to virtually any process with a comprehensive offering of process connections, fill fluids, direct mount or capillary connections and materials
- Quantify and optimize total system performance with QZ option



### Instrument manifolds – quality, convenient, and easy

- Designed and engineered for optimal performance with Rosemount transmitters
- Save installation time and money with factory assembly
- Offers a variety of styles, materials, and configurations

Contents		
Ordering information	Dimensional drawings	16
Specifications	Options	18
Product Certifications		

# **Ordering information**

### **Rosemount 2088 In-line Pressure Transmitter**



Configuration	Transmitter output code
4–20 mA HART Rosemount 2088 with Selectable HART	S
1–5 Vdc Low Power Rosemount 2088 with Selectable HART	N

### **Additional information**

Specifications: page 7 Product Certifications: page 11 Dimensional drawings: page 16

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 9 for more information on material selection.

### Table 1. Rosemount 2088 Pressure Transmitter Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Model	Product description			
2088	Pressure Transmitter			*
Measur	ement type			
A	Absolute			*
G	Gage			*
Pressur	e ranges			
	Rosemount 2088G		Rosemount2088A	
1	-14.7 to 30 psi (-1,01 to 2,1	bar)	0 to 30 psi (0 to 2,1 bar)	*
2	-14.7 to 150 psi (-1,01 to 10,3 bar)		0 to 150 psi (0 to 10,3 bar)	*
3	-14.7 to 800 psi (-1,01 to 55,2 bar)		0 to 800 psi (0 to 55,2 bar)	*
4	-14.7 to 4,000 psi (-1,01 to 275,8 bar)		0 to 4,000 psi (0 to 275,8 bar)	*
Transmi	itter output <sup>(1)</sup>			
S	4–20 mA dc/Digital HART Protocol			*
N	1–5 Vdc Low Power/Digital HART Protocol		*	
Materia	rials of construction <sup>(2)</sup>			
	Process connection	Isolating diaphragm	Fill fluid	
22	316L SST	316L SST	Silicone	*
33	Alloy C-276	Alloy C-276	Silicone	*
2B	316L SST	316L SST	Inert	

### Table 1. Rosemount 2088 Pressure Transmitter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Proces	s connection	
Α	¹/2–14 NPT female	*
B <sup>(3)</sup>	DIN 16288 G 1/2 male	*
D <sup>(3)(4)</sup>	$M20 \times 1.5$ male	*
C <sup>(3)(4)</sup>	RC 1/2 female	
Condu	it entry	
1	¹/2-14 NPT	*
2 <sup>(3)</sup>	M20 × 1.5	*
4(3)(5)	G 1/2	
Option	S (Include with selected model number)	
Extend	ed product warranty	
WR3	3-year limited warranty	*
WR5	5-year limited warranty	*
Diaphr	agm seal assemblies <sup>(6)(7)</sup>	
S1	Assemble to one Rosemount 1199 Diaphragm Seal	*
Display	and interface	
M4	LCD display with local operator interface	*
M5	LCD display, configured for engineering units	*
Config	uration buttons	
D4	Analog zero and span	*
DZ	digital zero trim	*
Mount	ing brackets	
B4	SST mounting bracket with SST bolts	*
Produc	et certifications	
C6	Canada Explosionproof, Intrinsic Safety, Division 2, and Dust-Ignitionproof	*
E2	INMETRO Flameproof	*
E3	China Flameproof	*
E4 <sup>(3)(8)</sup>	Japan Flameproof	*
E5	USA Explosionproof (XP) and Dust-Ignitionproof (DIP)	*
E7	IECEx Flameproof	*
ED	ATEX Flameproof	*
EM	Technical Regulations Customs Union (EAC) Flameproof	*
I1 <sup>(3)</sup>	ATEX Intrinsic Safety	*
12	INMETRO Intrinsic Safety	*

Table 1. Rosemount 2088 Pressure Transmitter Ordering Information

The starred offerings ( $\star$ ) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

13	China Intrinsic Safety	*
15	USA Intrinsic Safety (IS) and Nonincendive (NI)	*
17	IECEx Intrinsic Safety	*
IM	Technical Regulation Customs Union (EAC) Intrinsic Safety	*
K1	ATEX Flameproof, Intrinsic Safety, Type n, Dust	*
K2	INMETRO Flameproof, Intrinsic Safety	*
K5	USA Explosionproof, Dust-Ignitionproof, Intrinsic Safety, and Nonincendive	*
K6 <sup>(3)</sup>	Canada Explosion-Proof, Intrinsic Safety, Division 2, Dust-ignitionproof, and ATEX Flameproof, Intrinsic Safety	*
K7	IECEx Flameproof, Intrinsic Safety, Type n, Dust	*
КВ	USA Explosionproof, Dust-Ignitionproof, Intrinsic Safety, Nonincendive, and Canada Explosionproof, Dust-Ignitionproof, Intrinsic Safety, Division 2	*
KM	Technical Regulation Customs Union (EAC) Flameproof and Intrinsic Safety	*
KH <sup>(3)</sup>	ATEX Flameproof, Intrinsic Safety, and USA Explosion-Proof, Dust Ignitionproof, Intrinsic Safety, and Nonincendive	*
N1 <sup>(3)</sup>	ATEX Type n	*
N3	China Type n	*
N7	IECEx Type n	*
ND <sup>(3)</sup>	ATEX Dust	*
NK	IECEx Dust	*
Shipbo	ard approvals	
SBS	American Bureau of Shipping (ABS) Type Approval	*
SBV	Bureau Veritas (BV) Type Approval	*
SDN	Det Norske Veritas (DNV) Type Approval	*
SLL	Lloyd's Register (LR) Type Approval	*
Pressur	e testing	
P1	Hydrostatic testing	
Termina	al blocks	
T1	Transient protection	*
Special	cleaning	
P2	Cleaning for special service	
Calibrat	tion certificate	
Q4	Calibration certificate	*
Quality	calibration certificate traceability certification	
Q8	Material traceability certification per EN 10204 3.1	*
Q15	Certificate of compliance to NACE® MR0175/ISO 15156 for wetted materials	*
Q25	Certificate of compliance to NACE MR0103 for wetted materials	*
	I ·	1

### Table 1. Rosemount 2088 Pressure Transmitter Ordering Information

The starred offerings (★) represent the most common options and should be selected for best delivery. The non-starred offerings are subject to additional delivery lead time.

Digital	signal	
C4 <sup>(3)</sup>	NAMUR alarm and saturation levels, high alarm	*
CN <sup>(3)</sup>	NAMUR alarm and saturation levels, low alarm	*
C5 (9)(10)	Custom alarm and saturation levels, high alarm (requires C9 and Configuration Data Sheet)	*
C7 <sup>(9)(10)</sup>	Custom alarm and saturation levels, low alarm (requires C9 and Configuration Data Sheet)	*
C8 <sup>(10)</sup>	Low alarm (Standard Rosemount alarm and saturation levels)	*
Conduit	plug <sup>(11)</sup>	
DO	316 SST conduit plug	*
Configu	ration	
C9	Software configuration	*
Manifol	d assemblies <sup>(6)(7)</sup>	
S5	Assemble to Rosemount 306 Integral Manifold	*
Calibration accuracy <sup>(12)</sup>		
P8	0.065% accuracy to 10:1 turndown	*
Water approval <sup>(13)</sup>		
DW	NSF drinking water approval	*
Surface	finish	
Q16	Surface finish certification for sanitary remote seals	*
Toolkit total system performance reports		
QZ	Remote seal system performance calculation report	*
HART R	evision configuration <sup>(10)</sup>	
HR 5 <sup>(14)</sup>	Configured for HART Revision 5	*
HR7 <sup>(15)</sup>	Configured for HART Revision 7	*
Typical	model number: 2088 G 2 S 22 A 1 B4 M5	

- 1. HART Revision 5 is the default HART output. The Rosemount 2088 with selectable HART can be factory or field configured to HART Revision 7. To order HART Revision 7 factory configured, add option code HR7.
- 2. Materials of construction comply with recommendations per NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments.
- 3. Not available with Low Power transmitter output code N.
- 4. Not available with Alloy C-276, materials of construction code 33.
- 5. Consists of a  $^{1}/_{2}$ -14 NPT housing with a  $G^{1}/_{2}$  adapter.
- 6. Use <sup>1</sup>/2–14 NPT female process connection code A.
- 7. "Assemble-to" items are specified separately and require a completed model number.
- 8. Only available with conduit thread code 4.
- 9. Only available with 4–20 mA HART output (output code A).
- 10. Select configuration buttons (option code D4 or DZ) or local operator interface (option code M4) if local configuration buttons are required.
- 11. Transmitter shipped with 316SST conduit plug (uninstalled) in place of standard carbon steel conduit plug.
- 12. Requires transmitter output code S with either materials of construction code 22 or 23.
- $13. \quad \mbox{ Requires materials of construction code 22 with process connection code A.}$
- 14. Configures the HART output to HART Revision 5. The device can be field configured to HART Revision 7 if needed.
- 15. Configures the HART output to HART Revision 7. The device can be field configured to HART Revision 5 if needed.

# **Specifications**

### **Performance specifications**

For zero-based spans, reference conditions, silicone oil fill, 316L SST isolating diaphragm

### Reference accuracy

 $\pm 0.075\%$  of calibrated span. Includes combined effects of linearity, hysteresis, and repeatability

±0.065% of calibrated span (high accuracy option – P8)

For spans less than 10:1, accuracy =  $\pm \left(0.009 \left[ \frac{URL}{Span} \right] \right) \%$  of span

### Ambient temperature effect

Expressed as a total effect per 50 °F (28 °C)

Total effect includes zero and span effects

± (0.15% URL + 0.15% of span)

### Stability

Ranges 2–4: ±0.10% of URL for 3 years Range 1: ±0.10% of URL for 1 year

### Warranty<sup>(1)</sup>

All Rosemount 2088 models:

- One-year limited warranty is standard<sup>(2)</sup>
- Extended three-year and five-year limited warranties available if ordered.<sup>(3)</sup> (Select option WR3 or WR5 in model string respectively.)
- Warranty details can be found in Emerson Terms & Conditions of Sale, document 63445, Rev G (10/6).
- Goods are warranted for 12 months from the date of initial installation or 18 months from the date of shipment by seller, whichever period expires first.
- 3. Three-year and five-year warranty period begins on date of shipment by seller.

### **Vibration effect**

Less than ±0.1% of URL when tested per the requirements of IEC60770-1 field or pipeline with high vibration level (10–60 Hz 0.21 mm displacement peak amplitude/60–2000 Hz 3g)

### Power supply effect

Less than  $\pm 0.005\%$  of calibrated span per volt change in voltage at the transmitter terminals

### Electromagnetic compatibility (EMC)

Meets all industrial environment requirements of EN61326 and NAMUR NE-21<sup>(1)</sup>. Maximum deviation < 1% span during EMC disturbance<sup>(2)</sup>.

- NAMUR NE-21 does not apply to Low Power (transmitter output option code N).
- During surge event device may exceed maximum EMC deviation limit or reset; however, device will self-recover and return to normal operation within specified start-up time.

### Mounting position effect

Zero shifts to  $\pm 2.5$  inH<sub>2</sub>O (6,22 mbar), which can be zeroed Span: no effect

### **Transient protection**

Tested in accordance with IEEE C62.41.2-2002, Location Category B

6 kV crest (0.5  $\mu$ s – 100 kHz)

3 kA crest (8  $\times$  20 microseconds)

6 kV crest (1.2  $\times$  50 microseconds)

### **General specifications**

Tested to IEC 801-3

### **Functional specifications**

Table 2. Rosemount 2088 Range Values

Range	Minimum	Upper	Lower	Lower <sup>(1)</sup>
	span	(URL)	(LRL)	(LRL)(gage)
1	0.60 psi	30.00 psi	0 psia	–14.70 psig
	(41,37 mbar)	(2,07 bar)	(0 bar)	(–1,01 bar)
2	3.00 psi	150.00 psi	0 psia	–14.70 psig
	(206,85 mbar)	(10,34 bar)	(0 bar)	(–1,01 bar)
3	16.00 psi	800.00 psi	0 psia	-14.70 psig
	(1,11 bar)	(55,16 bar)	(0 bar)	(-1,01 bar)
4	80.00 psi	4000.00 psi	0 psia	-14.70 psig
	(5,52 bar)	(275,79 bar)	(0 bar)	(-1,01 bar)

<sup>1.</sup> Assumes atmospheric pressure of 14.70 psia (1,01 bar-a).

### **Output**

Code S: 4-20 mA

Code N: 1-5 Vdc, Low Power

Outputs are directly proportional to the input pressure

### Selectable HART

Digital communications based on HART Revision 5 (default) or Revision 7 (option code HR7) protocol can be selected. The HART revision can be switched in the field using any HART based configuration tool or the optional local operator interface (LOI).

#### Service

Liquid, gas, and vapor applications

### **Power supply**


External power supply required. Transmitter operates on 10.5–42.4 Vdc with no load (5.8-28 V for Low Power). Reverse polarity protection is standard.

#### **Load limitations**

Reverse polarity protection is standard. Maximum loop resistance is determined by the power supply voltage as described by the following equations:

#### Figure 1. Maximum Loop Resistance

Maximum loop resistance = 43.5 (Power supply voltage – 10.5)

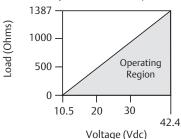

The Field Communicator requires a minimum loop resistance of 250  $\Omega$  for communication.

#### Indication

Optional two-line LOI/LCD display

### Zero and span adjustment requirements

Zero and span values can be set anywhere within the range limits stated in Table 2. Span must be greater than or equal to the minimum span stated in Table 2.

#### LOI

The LOI utilizes a two-button menu with internal and external configuration buttons. Internal buttons are always configured for LOI. External buttons can be configured for either LOI, (option code M4), analog zero and span (option code D4) or digital zero trim (option code DZ) for LOI configuration menu.

### **Current draw**

Output code N: ≤3 mA

### **Overpressure limits**

Range 1: 120 psig max

All other ranges: two times the URL

### **Burst pressure**

11,000 psi for all ranges

### Zero elevation and suppression

Zero can be suppressed between atmosphere for gage transmitters or 0 psia for absolute transmitters and upper range limit, provided the calibrated span is equal to or greater than the minimum span, and the upper range value does not exceed the upper range limit.

### Dynamic performance

Total response time: 145 milliseconds
Update rate: 22 times per second minimum

### **Temperature limits**

#### **Ambient**

-40 to 185 °F (-40 to 85 °C) With LCD display<sup>(1)</sup>: -40 to 176 °F (-40 to 80 °C)

### Storage<sup>(2)</sup>

-50 to 230 °F (-46 to 110 °C) With LCD display: -40 to 185 °F (-40 to 85 °C)

- For the output code N, LCD display may not be readable and LCD display updates will be slower at temperatures below –22 °F (–30 °C).
- If storage temperature is above 85 °C, perform a sensor trim prior to installation.

### Process<sup>(1)(2)</sup>

Silicone fill sensor: -40 to 250 °F (-40 to 121 °C) Inert fill sensor: -22 to 250 °F (-30 to 121 °C)

1. 220 °F (104 °C) limit in vacuum service; 130 °F (54 °C) for pressures below

Process temperatures above 185 °F (85 °C) require derating the ambient limits by a 1.5:1 ratio. For example, for process temperature of 195 °F (91 °C), new ambient temperature limit is equal to 170 °F (77 °C). This can be determined as follows: (195 °F – 185 °F) × 1.5 = 15 °F, 185 °F – 15 °F = 170 °F

### **Humidity limits**

0-100% relative humidity

### Volumetric displacement

Less than 0.0005 in<sup>3</sup> (0,008 cm<sup>3</sup>)

### **Damping**

Analog output response time to a step change is user-selectable from 0 to 60 seconds for one time constant. Software damping is in addition to sensor module response time.

### Turn-on time

2.0 seconds, no warm-up required

### **Transmitter security**

Activating the transmitter security function prevents changes to the transmitter configuration, including local zero and span adjustments. Security is activated by an internal switch.

#### Failure mode alarm

If self-diagnostics detect a sensor or microprocessor failure, the analog signal will be driven either high or low to alert the user. High or low failure mode is user-selectable with a jumper on the transmitter. The values to which the transmitter drives its output in failure mode depend on whether it is factory-configured to standard or NAMUR-compliant operation. The values for each are as follows:

**Table 3. Standard Operation** 

Output code	Linear output	Fail high	Fail low
S	3.9 ≤ 1 ≤ 20.8	I≥21.75 mA	I ≤ 3.75 mA
N	0.97 ≤ V ≤ 5.2	V≥5.4 V	V≤0.95 V

### **Table 4. NAMUR-Compliant Operation**

Output code	Linear output	Fail high	Fail low
S	3.8 ≤ I ≤ 20.5	I≥22.5 mA	I≤3.6 mA

### **Physical specifications**

#### Material selection

Emerson provides a variety of Rosemount product with various product options and configurations including materials of construction that can be expected to perform well in a wide range of applications. The Rosemount product information presented is intended as a guide for the purchaser to make an appropriate selection for the application. It is the purchaser's sole responsibility to make a careful analysis of all process parameters (such as all chemical components, temperature, pressure, flow rate, abrasives, contaminants, etc.), when specifying product, materials, options and components for the particular application. Emerson is not in a position to evaluate or guarantee the compatibility of the process fluid or other process parameters with the product, options, configuration or materials of construction selected.

### **Electrical connections**

 $^{1}/_{2}$  –14 NPT, M20  $\times$  1.5 (CM20), or G  $^{1}/_{2}$  female (PF  $^{1}/_{2}$  female) conduit entry  $^{(1)}$ 

### **Process connections**

 $^{1}/_{2}$ –14 NPT female, DIN 16288 G  $^{1}/_{2}$  male, RC  $^{1}/_{2}$  female (PT  $^{1}/_{2}$  female), M20  $\times$  1.5 (CM20) male

### **Process-wetted parts**

#### Isolating diaphragm

316L SST (UNS S31603), Alloy C-276 (UNS N10276)

### **Process connector**

316L stainless steel CF-3M (Cast version of 316L SST, material per ASTM\_A743) or Alloy C-276

Consists of a  $^{1}/2$ -14NPT housing with a G  $^{1}/2$  adapter.

### Non-wetted parts

### **Electronics housing**

Low-copper aluminum Enclosures meet NEMA® Type 4X, IP66, and IP68 when properly installed

### Paint for aluminum housing

Polyurethane

### **Cover O-rings**

Buna-N

### Fill fluid

Silicone or inert fill

### Weight

Output code S and N: approximately 2.44 lb (1, 11 kg)

## **Product Certifications**

Rev 1.11

### **European Directive Information**

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

### **Ordinary Location Certification**

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

### **North America**

E5 USA Explosionproof (XP) and Dust-Ignitionproof (DIP)

Certificate: 1V2A8.AE

Standards: FM Class 3600 – 2011, FM, Class 3615 – 2006,

FM Class 3616 - 2011, FM Class 3810 - 2005,

ANSI/NEMA 250 – 1991

Markings: XP CL I, DIV 1, GP B, C, D; DIP CL II, DIV 1, GP E, F,

G; CL III; T5( $-40 \,^{\circ}\text{C} \le T_a \le +85 \,^{\circ}\text{C}$ ); Factory Sealed;

Type 4X

**I5** USA Safety (IS) and Nonincendive (NI)

Certificate: 0V9A7.AX

Standards: FM Class 3600 – 1998, FM Class 3610 – 2010,

FM Class 3611 – 2004, FM Class 3810 – 1989

Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F, G;

Class III; DIV 1 when connected per Rosemount drawing 02088-1018; NI CL 1, DIV 2, GP A, B, C,

D;  $T4(-40 \,{}^{\circ}\text{C} \le T_a \le +70 \,{}^{\circ}\text{C})$ ; Type 4x

### Special Condition for Safe Use (X):

 The Rosemount 2088 Transmitter with the transient terminal block (Option code T1) will not pass the 500 Vrms dielectric strength test and this must be taken into account during installation.

**C6** Canada Explosionproof, Intrinsic Safety and Division 2,

Dust-Ignitionproof Certificate: 1015441

Standards: CAN/CSA C22.2 No. 0-M91 (R2001), CSA Std

C22.2 No. 25-1966, CSA Std C22.2 No.

30-M1986, CAN/CSA-C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CAN/CSA-C22.2 No.

157-92, CSA Std C22.2 No. 213-M1987, ANSI-ISA-12.27.01-2003

Markings: Explosionproof for Class I, Division 1, Groups B,C and D; Dust-Ignitionproof Class II, Division 1, Groups E, F, G; Class III Division 1; Intrinsically Safe Class I, Division 1 Groups A, B, C, D when connected in accordance with Rosemount drawing 02088-1024, Temperature Code T3C; Class I Division 2 Groups A, B, C and D; Type 4X;

### **Europe**

**ED** ATEX Flameproof

Certificate: KEMA97ATEX2378X

Standards: EN60079-0:2012 + A11:2013, EN60079-1:2014,

EN60079-26:2015

Markings: ⟨⟨x⟩ II 1/2 G Ex db IIC T6....T4, Ga/Gb,

 $T6(-60 \text{ °C} \le T_a \le +70 \text{ °C}),$  $T4/T5(-60 \text{ °C} \le T_a \le +80 \text{ °C})$ 

Factory Sealed; Single Seal

### Special Conditions for Safe Use (X):

- This device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.
- **I1** ATEX Intrinsic Safety

Certificate: BAS00ATEX1166X

Standards: EN60079-0:2012 + A11:2013, EN60079-11:2012 Markings: E II 1 G Ex ia IIC T4 Ga (−55 °C ≤  $T_a$  ≤ +70 °C)

**Table 5. Input Parameters** 

Parameter	HART
Voltage U <sub>i</sub>	30 V
Current I <sub>i</sub>	200 mA
Power P <sub>i</sub>	0.9 W
Capacitance C <sub>i</sub>	0.012 μF

### Special Condition for Safe Use (X):

 The apparatus is not capable of withstanding the 500 V insulation test required by EN60079-11. This must be taken into account when installing the apparatus.

**N1** ATEX Type n

Certificate: BAS00ATEX3167X

Standards: EN60079-0:2012 + A11:2013, EN60079-15:2010 Markings: x II 3 G Ex nA IIC T5 Gc (−40 °C ≤  $T_a$  ≤ +70 °C)

### Special Condition for Safe Use (X):

 The apparatus is not capable of withstanding the 500 V insulation test required by EN60079-15. This must be taken into account when installing the apparatus.

**ND** ATEX Dust

Certificate: BAS01ATEX1427X

Standards: EN60079-0:2012 + A11:2013, EN60079-31:2009

Markings: **ⓑ** II 1 D Ex t IIIC T50 °C T<sub>500</sub> 60 °C Da

### Special Conditions for Safe Use (X):

- The user must ensure the maximum rated voltage and current (36 volts, 24 milliamps, d.c.) are not exceeded. All connection to other apparatus or associated apparatus shall have control over this voltage and current to a category 'ib' circuit.
- 2. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
- 3. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
- 4. Cable entries and blanking plugs must be suitable for the ambient range of the apparatus and capable of withstanding a 7 | impact test.
- The Rosemount 2088/2090 sensor module must be securely screwed in place to maintain the ingress protection of the enclosure.

### International

**E7** IECEx Flameproof

Certificate: IECEx KEM 06.0021X

Standards: IEC 60079-0:2011, IEC60079-1:2014,

IEC60079-26:2014

Markings: Ex d IIC T6...T4 Ga/Gb, T6( $-60 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ ),

 $T4/T5 (-60 \text{ °C} \le T_a \le +80 \text{ °C})$ 

### Special Conditions for Safe Use (x):

- This device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

**17** IECEx Intrinsic Safety

Certificate: IECEx BAS 12.0071X

Standards: IEC60079-0:2011, IEC60079-11:2011 Markings: Ex ia IIC T4 Ga (-55 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

**Table 6. Entity Parameters** 

Parameter	HART
Voltage U <sub>i</sub>	30 V
Current I <sub>i</sub>	200 mA
Power P <sub>i</sub>	0.9 W
Capacitance C <sub>i</sub>	0.012 μF

### Special Conditions for Safe Use (X):

- 1. When fitted with a transient suppression terminal block, the Rosemount 2088 is incapable of passing the 500 V isolation test. This must be taken into account during installation.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 environment.

**N7** IECEx Type n

Certificate: IECEx BAS 12.0072X

Standards: IEC60079-0:2011, IEC60079-15:2010 Markings: Ex nA IIC T5 Gc ( $-40 \, ^{\circ}\text{C} \le T_a \le +70 \, ^{\circ}\text{C}$ )

### Special Condition for Safe Use (X):

1. When fitted with a transient suppression terminal block, the Rosemount 2088 is incapable of passing the 500 V isolation test. This must be taking into account during installation.

**NK** IECEx Dust

Certificate: IECEx BAS12.0073X

Standards: IEC60079-0:2011, IEC60079-31:2008

Markings: Ext IIIC T50 °C T<sub>500</sub> 60 °C Da

### **Table 7. Input Parameters**

· · · · · · · · · · · · · · · · · · ·	
Parameter	HART
Voltage U <sub>i</sub>	36 V
Current I <sub>i</sub>	24 mA

#### Special Conditions For Safe Use (x):

- 1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
- Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
- Cable entries and blanking plugs must be suitable for the ambient range of the apparatus and capable of withstanding a 7 | impact.

### **Brazil**

**E2** INMETRO Flameproof

Certificate: UL-BR 15.0728X

Standards: ABNT NBR IEC60079-0:2008 + Errata 1:2011,

ABNT NBR IEC 60079-1:2009 + Errata 1:2011

Markings: Ex d IIC T\* Gb, \*T4( $-20 \text{ °C} \le T_a \le +80 \text{ °C}$ ),

 $*T6(-20 \text{ °C} \le T_a \le +40 \text{ °C})$ 

### Special Conditions For Safe Use (x):

1. This device contains a thin wall diaphragm less than 1mm thickness that forms a boundary between zone 0 (process connection) and zone 1 (all other parts of the equipment). The model code and data sheet are to be consulted for details of the diaphragm material. Installations, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.

- 2. Flameproof joints are not intended for repair.
- Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint Is ordered through a special option code, contact the manufacturer for more information.
- I2 INMETRO Intrinsic Safety Certificate: UL-BR 13.0246X

Standards: ABNT NBR IEC60079-0:2008 + Errata 1:2011,

ABNT NBR IEC60079-11:2009

Markings: Ex ia IIC T4 Ga (-55 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

### **Table 8. Input Parameters**

Parameter	HART
Voltage U <sub>i</sub>	30 V
Current I <sub>i</sub>	200 mA
Power P <sub>i</sub>	0.9 W
Capacitance C <sub>i</sub>	0.012 μF

### Special Conditions for Safe Use (X):

- 1. When fitted with a transient suppression terminal block, the Rosemount 2088 is incapable of passing the 500 V isolation test. This must be taken into account when installing the equipment.
- 2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in Zone 0.

### China

E3 China Flameproof

Certificate: GYJ15.1505

Standards: GB3836.1-2010, GB3836.2-2010

Markings: Ex d IIC T4/T6 Gb, T6(-20 °C  $\leq$  T<sub>a</sub>  $\leq$  +40 °C),

 $T4(-20 \text{ °C} \le T_a \le +80 \text{ °C})$ 

### Special Conditions For Safe Use (X):

1. The ambient temperature is as follows:

T <sub>a</sub>	Temperature class
$-20 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le 80 ^{\circ}\text{C}$	T4
$-20 ^{\circ}\text{C} \le T_a \le 40 ^{\circ}\text{C}$	T6

- 2. The earth connection facility in the enclosure should be connected reliably.
- During installation in hazardous location, cable glands, conduits, and blanking plugs, certified by state-appointed inspection bodies with Ex d IIC type of protection, should be used.
- 4. During installation, use and maintenance in explosive gas atmospheres, observe the warning "Do not open when energized".
- 5. During installation, there should be no mixture harm to flameproof housing.
- 6. End user is not permitted to change any components insides, but to settle the problem in conjunction with manufacturer to avoid damage to the product.
- 7. Maintenance should be done in non-hazardous location.
- 8. During installation, use and maintenance of this product, observe the following standards: GB3836.13-2013, GB3836.15-2000, GB3836.16-2006, GB50257-2014.
- China Intrinsic Safety
  Certificate: GY|15.1507

Standards: GB3836.1-2010, GB3836.4-2010,

GB3836.20-2010

Markings: Ex ia IIC T4/T5 Ga

### Special Conditions for Safe Use (X):

- 1. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 environment.
- 2. This apparatus is not capable of withstanding the 500 V r.m.s. insulation test required by Clause 6.3.12 of GB3836.4-2010.
- 3. The ambient temperature is:

T <sub>a</sub>	Temperature class
–55 °C≤ T <sub>a</sub> ≤ 70 °C	T4

4. Intrinsically safe parameters:

Parameter	HART
Voltage U <sub>i</sub>	30 V
Current I <sub>i</sub>	200 mA
Power P <sub>i</sub>	0.9 W
Capacitance C <sub>i</sub>	0.012 μF
Inductance L <sub>i</sub>	0 mH

- 5. The product should be used with Ex-certified linear associated apparatus to establish explosion protection system that can be used in explosive gas atmospheres. Wiring and terminals should comply with the instruction manual of the product and associated apparatus.
- 6. The cables between this product and associated apparatus should be shielded cables (the cables must have insulated shields). The shield has to be grounded reliably in a non-hazardous area.
- 7. End users are not permitted to change any internal components, but to settle the problem in conjunction with the manufacturer to avoid damage to the product.
- 8. During installation, use and maintenance of this product, observe the following standards: GB3836.13-2013, GB3836.15-2000, GB3836.16-2006, GB3836.18-2010, GB50257-2014.

N3 China Type n

Certificate: GY|15.1108X

Standards: GB3836.1-2000, GB3836.8-2003 Markings: Ex nA nL IIC T5 Gc (-40 °C  $\leq T_a \leq +70$  °C)

### Special Conditions For Safe Use (X):

- 1. The apparatus is not capable of withstanding the 500 V r.m.s. insulation test required by GB3836.8-2003.
- 2. The ambient temperature range is  $-40 \,^{\circ}\text{C} \le T_a \le +70 \,^{\circ}\text{C}$ .
- 3. Maximum input voltage: 50 V.
- 4. Cable glands, conduit or blanking plugs, certified by NEPSI with Ex e or Ex n protection types should be used on external connections and redundant cable entries.
- 5. Maintenance should be done in non-hazardous location.
- 6. End users are not permitted to change any internal components, but to settle the problem in conjunction with manufacturer to avoid damage to the product.
- 7. During installation, use and maintenance of this product, observe the following standards: GB3836.13-2013, GB3836.15-2000, GB3836.16-2006, GB50257-1996.

### Japan

**E4** Japan Flameproof

Certificate: TC20869, TC20870

Markings: Ex d IIC T5

# **Technical Regulations Customs Union** (EAC)

**EM** EAC Flameproof

Certificate: RU C-US.GB05.B.01197

Markings: Ga/Gb Ex d IIC T4/T6 X, T4( $-40 \,^{\circ}\text{C} \le T_a \le +80 \,^{\circ}\text{C}$ ),

 $T6(-40 \,^{\circ}\text{C} \le T_a \le +40 \,^{\circ}\text{C})$ 

### Special Condition for Safe Use (X):

1. See certificate for special conditions.

**IM** EAC Intrinsically Safe

Certificate: RU C-US.GB05.B.01197

Markings: 0Ex ia IIC T4 Ga X (-55 °C  $\leq$  T<sub>a</sub>  $\leq$  +70 °C)

### Special Condition for Safe Use (X):

1. See certificate for special conditions.

### **Combinations**

- **K1** Combination of ED, I1, ND and N1
- **K2** Combination of E2 and I2
- **K5** Combination of E5 and I5
- **K6** Combination of C6, ED and I1
- **K7** Combination of E7, I7, NK and N7
- KB Combination of K5 and C6
- KM Combination of EM and IM
- **KH** Combination of ED, I1, K5

### **Conduit Plugs and Adapters**

IECEx Flameproof and Increased Safety Certificate: IECEx FMG 13.0032X

Standards: IEC60079-0:2011, IEC60079-1:2007-04,

IEC60079-7:2006-07

Markings: Ex de IIC Gb

ATEX Flameproof and Increased Safety

Certificate: FM13ATEX0076X

Standards: EN60079-0:2012, EN60079-1:2007,

IEC60079-7:2007

Markings: ⟨⟨⟨⟩ | II 2 G Ex de IIC Gb

### **Table 9. Conduit Plug Thread Sizes**

Thread	Identification mark
M20 × 1.5 – 6g	M20
1/2-14 NPT	1/2 NPT
G¹/2A	G <sup>1</sup> / <sub>2</sub>

### **Table 10. Thread Adapter Thread Sizes**

Male thread	Identification mark
M20 × 1.5 – 6H	M20
1/2-14 NPT	<sup>1</sup> /2–14 NPT
<sup>3</sup> /4-14 NPT	<sup>3</sup> /4-14 NPT
Female thread	Identification mark
	1401101110410111111111111
M20 × 1.5 – 6H	M20
M20 × 1.5 – 6H	

### Special Conditions For Safe Use (X):

- 1. When the thread adapter or blanking plug is used with an enclosure in type of protection increased safety "e" the entry thread shall be suitably sealed in order to maintain the ingress protection rating (IP) of the enclosure.
- 2. The blanking plug shall not be used with an adapter.
- 3. Blanking Plug and Threaded Adapter shall be either NPT or Metric thread forms. G<sup>1</sup>/<sub>2</sub> thread forms are only acceptable for existing (legacy) equipment installations.

### **Additional Certifications**

**SBS** American Bureau of Shipping (ABS) Type Approval

Certificate: 09-HS446883D-3-PDA

Intended Use: Measure gauge or absolute pressure of liquid,

gas or vapor applications on ABS classed vessels, marine, and offshore installations.

ABS Rules: 2014 Steel Vessels Rules 1-1-4/7.7,

1-1-Appendix 3, 4-8-3/1.7, 4-8-3/13.1, 4-8-3/13.3.1 & 13.3.2, 4-8-4/27.5.1

**SBV** Bureau Veritas (BV) Type Approval Certificate: 23156/B0 BV

Requirements: Bureau Veritas Rules for the Classification of

Charl China

Steel Ships

Application: Class notations: AUT-UMS, AUT-CCS,

AUT-PORT and AUT-IMS; Pressure transmitter type 2088 cannot be installed on diesel

engines

SDN Det Norske Veritas (DNV) Type Approval

Certificate: TAA000004F

Intended Use: DNV GL Rules for Classification - Ships and

offshore units

Application:

Location classes	
Temperature	D
Humidity	В
Vibration	А
EMC	В
Enclosure	D

**SLL** Lloyds Register (LR) Type Approval


Certificate: 11/60002

Application: Environmental categories ENV1, ENV2, ENV3

and ENV5


# **Dimensional drawings**

Figure 2. Rosemount 2088 with Optional Digital Display

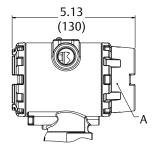

A. Digital display cover B. 2<sup>1</sup>/2–14 NPT conduit connection Dimensions are in inches (millimeters).

Figure 3. Rosemount 2088 Process Connection

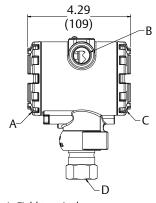

A. Field terminals

C. Transmitter electronics


B. Conduit connection

D. <sup>1</sup>/2–14 NPT female connection<sup>(1)</sup>

Dimensions are in inches (millimeters).

1. RC  $^{1}/^{2}$  female (PT  $^{1}/^{2}$  female), and M20 female also available as options.

Figure 4. Rosemount 2088 Nameplate and Labels

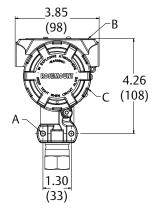


A. Bracket mounting holes (1/4–20 UNC)

B. Nameplate

C. Certification label (located on side)


Dimensions are in inches (millimeters).

Figure 5. Rosemount 2088 with Optional Pipe Mounting Bracket

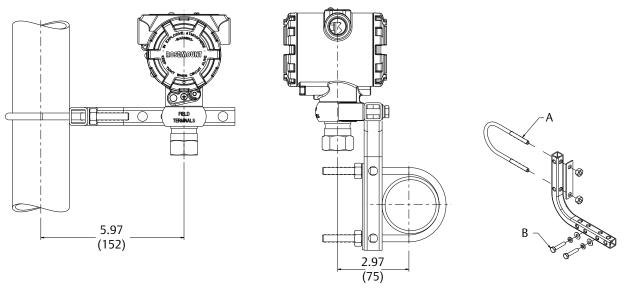

A. 2-in. U-bolt for pipe mounting (clamp shown) B.  $^1/4 \times 1^1/4$  bolts for transmitter mounting Dimensions are in inches (millimeters).

Figure 6. Rosemount 2088 with Optional Panel Mounting Bracket

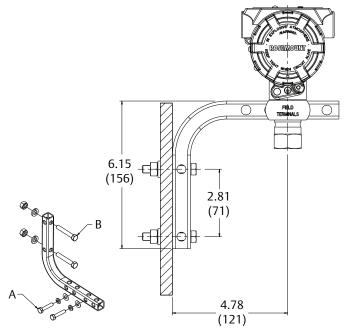

A.  $^1/4 \times 1^1/4$  bolts for transmitter mounting B.  $^5/16 \times 1^1/2$  bolts for panel mounting (not supplied) Dimensions are in inches (millimeters).

## **Options**

### **Standard configuration**

Unless otherwise specified, transmitter is shipped as follows:

Engineering units	psi (all ranges)	
4 mA (1 Vdc)	0 (engineering units)	
20 mA (5 Vdc)	Upper range limit	
Output	Linear	
Flange type	Specified model code option	
Flange material	Specified model code option	
O-ring material	Specified model code option	
Drain/vent	Specified model code option	
LCD display	Installed or none	
Alarm	High	
Software tag	Blank	

### **Custom configuration**

If option code C9 is ordered, the customer may specify the following data in addition to the standard configuration parameters.

- Output information
- Transmitter information
- LCD display configuration
- Hardware selectable information
- Signal selection

Refer to the Rosemount 2088 Configuration Data Sheet.

### Tagging (3 options available)

- Standard SST hardware tag is permanently affixed on transmitter.
- Tag character height is 0.125-in. (3,18 mm), 84 characters maximum.
- Tag may be wired to the transmitter nameplate upon request,
   85 characters maximum.
- For HART protocols, the tag may be stored in transmitter memory (eight characters maximum).
- Software tag is left blank unless specified.
- HART Revision 5: 8 characters
- HART Revision 7: 32 characters

# Optional Rosemount 306 Integral Manifold

Factory-assembled to Rosemount 2088 Transmitters. Refer to Rosemount Manifolds <u>Product Data Sheet</u> for additional information.

### Other seals

Refer to Rosemount DP Level Transmitters and 1199 Diaphragm Seal System <u>Product Data Sheet</u> for additional information.

### **Output information**

Output range points must be the same unit of measure. Available units of measure include:

Pressure units <sup>(1)</sup>		
torr	psf <sup>(1)</sup>	cmH <sub>2</sub> O @ 4 °C <sup>(1)</sup>
atm	inH <sub>2</sub> O	mH <sub>2</sub> O @ 4 °C <sup>(1)</sup>
Pa	inH <sub>2</sub> O @ 4 °C <sup>(1)</sup>	inHg
kPa	inH <sub>2</sub> O @ 60 °F <sup>(1)</sup>	mmHg
MPa <sup>(1)</sup>	ftH <sub>2</sub> O	cmHg @ 0 °C <sup>(1)</sup>
hPa <sup>(1)</sup>	ftH <sub>2</sub> O @ 4 °C <sup>(1)</sup>	mHg @ 0 °C <sup>(1)</sup>
mbar	ftH <sub>2</sub> O @ 60 °F <sup>(1)</sup>	g/cm²
bar	mmH <sub>2</sub> O	kg/m <sup>2(1)</sup>
psi	mmH <sub>2</sub> O @ 4 °C <sup>(1)</sup>	kg/cm <sup>2</sup>

Field configurable only, not available for factory calibration or custom configuration (option code C9 "Software configuration").

### **Display and interface options**

M4 Digital display with local operator interface (LOI)

Available for 4–20 mA HART, 4–20 mA HART Low Power

M5 Digital meter

- Two-line, five-digit LCD display for 4–20 mA HART
- Two-line, five-digit LCD display for 1–5 Vdc HART Low Power
- Direct reading of digital data for higher accuracy
- Displays user-defined flow, level, volume, or pressure units
- Displays diagnostic messages for local troubleshooting
- 90-degree rotation capability for easy viewing

### **Configuration buttons**

Rosemount 2088 now offers optional internal and external configuration buttons.

- Selecting option D4 will add external analog zero and span configuration buttons
- Selecting option DZ will add an external digital zero trim configuration button
- Selecting option M4 (LOI) adds both internal and external local configuration buttons

Certain button options can also be combined as shown below:

**Table 11. Button Configuration** 

Option codes	Internal	External
DZ	N/A	Digital zero trim
D4	N/A	Analog zero and trim
M4	LOI	LOI
M4 + DZ	LOI	Digital zero trim
M4 + D4	LOI	Analog zero and trim

### **Rosemount 2088 bracket option**

**B4** Bracket for 2-in. pipe or panel mounting

- Bracket for mounting of transmitter on 2-in. pipe or panel
- Stainless steel construction with stainless steel bolts

### **Global Headquarters**

### **Emerson Automation Solutions**

6021 Innovation Blvd. Shakopee, MN 55379, USA

+1 800 999 9307 or +1 952 906 8888

+1 952 949 7001

RFQ.RMD-RCC@Emerson.com

### **North America Regional Office**

### **Emerson Automation Solutions**

8200 Market Blvd.

Chanhassen, MN 55317, USA

+1 800 999 9307 or +1 952 906 8888

+1 952 949 7001

RMT-NA.RCCRFQ@Emerson.com

### **Latin America Regional Office**

### **Emerson Automation Solutions**

1300 Concord Terrace, Suite 400 Sunrise, FL 33323, USA

+1 954 846 5030

+1 954 846 5121

RFQ.RMD-RCC@Emerson.com

### **Europe Regional Office**

### **Emerson Automation Solutions Europe GmbH**

Neuhofstrasse 19a P.O. Box 1046 CH 6340 Baar Switzerland

+41 (0) 41 768 6111+41 (0) 41 768 6300

RFQ.RMD-RCC@Emerson.com

### **Asia Pacific Regional Office**

### **Emerson Automation Solutions Asia Pacific Pte Ltd**

1 Pandan Crescent Singapore 128461

+65 6777 8211

+65 6777 0947

Enquiries@AP.Emerson.com

### Middle East and Africa Regional Office

#### **Emerson Automation Solutions**

Emerson FZE P.O. Box 17033, Jebel Ali Free Zone - South 2 Dubai, United Arab Emirates

+971 4 8118100

+971 4 8865465

RFQ.RMTMEA@Emerson.com

Linkedin.com/company/Emerson-Automated-Solutions

Twitter.com/Rosemount\_News

Facebook.com/Rosemount

Youtube.com/user/RosemountMeasurement

S+ Google.com/+RosemountMeasurement

Standard Terms and Conditions of Sale can be found on the <u>Terms and Conditions of Sale page</u>.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount and Rosemount logotype are trademarks of Emerson. HART is a registered trademark of the FieldComm Group. NEMA is a registered trademark and service mark of the National Electrical Manufacturers Association. NACE is a registered trademark of NACE International. All other marks are the property of their respective owners. © 2017 Emerson. All rights reserved.

