



# QUICK START GUIDE

**EZ-LINK™ APP for EZ-ZONE™ PM**

For Part Numbers:  
PM6 \_\_\_\_\_-(B,E,F,G,H,J,K,)\_\_\_\_\_




Set up your new Watlow **EZ-ZONE™ PM** the easy way with our **EZ-LINK™** mobile app!






For assistance contact Watlow: [www.watlow.com](http://www.watlow.com)  
1-800-WATLOW2 (1-800-928-5692)  
[wintechsupport@watlow.com](mailto:wintechsupport@watlow.com)  
<http://www.watlow.com/EZLINK>

1952-8909 Rev B

March 2018

## 1. Identify a Bluetooth®-Enabled Unit (P/N or Display)

PM 6 \_\_\_\_\_-**B**\_\_\_\_\_

The EZ-ZONE® PM controller or limit controller includes Bluetooth® wireless technology when:


- Part number includes one of the following designations: B,E,F,G,H,J or K
- The display indicates **bluetooth** is **on** or **off** as shown at the left when you turn power on to the EZ-ZONE PM immediately after displaying the firmware version.



**Note:**

If Bluetooth® is off, see section 2 to turn it on.


## 2. Turn Bluetooth® On/Off in the Controller

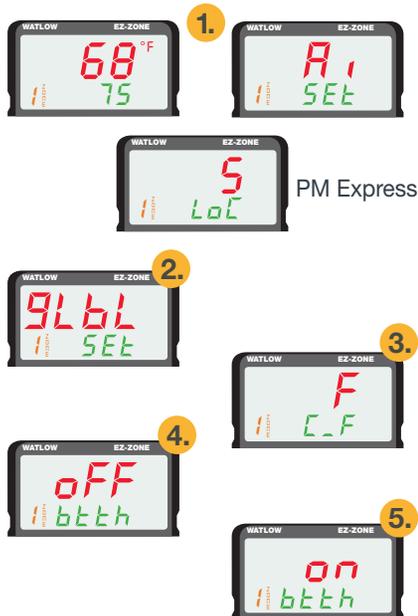

**Starting at the Home Page:**

1. To enter the setup page press and hold and until **SEt** appears in lower display. (**LoL** will appear for PM Express)
2. Press several times until **9LbL** appears in the upper display. (skip this step for PM Express)
3. To enter the global menu press . (skip this step for PM Express)
4. Press several times until **bluetooth** appears in the lower display.
5. Press to turn Bluetooth® **on** or **off**.
6. To exit the setup page press or twice.

## 3. Connect to a Controller with the App

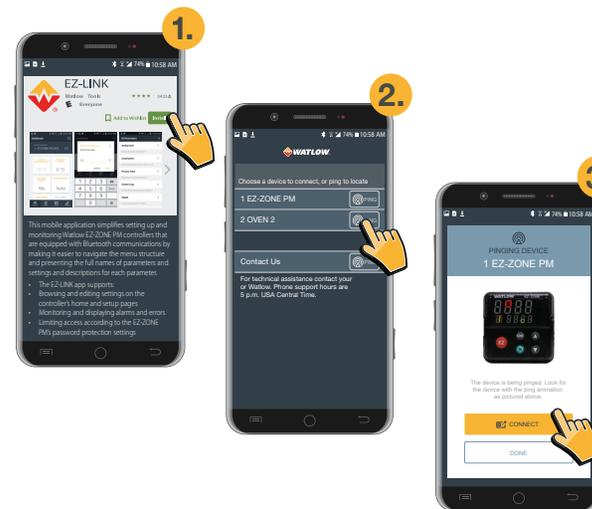

1. Download EZ-LINK™ from the app store for your mobile device and open it.
2. If more than one controller is in range, tap one of the **PING** buttons to identify the controllers. Otherwise tap the name of the controller to connect.
3. If the controller displaying the pinging animation is the one you want, tap **CONNECT**. Otherwise, tap **DONE** and try another.

**Note:**

When more than one controller is installed nearby, use the device view in the app to give each controller a unique name to make it easy to find the right one.

### Use the EZ-ZONE PM controller's security lock features to determine which parameters users can access.

#### To allow user's to read but not change parameters:

- On the controller's factory page, in the lock menu, set the write security parameter to zero (0).

#### To prevent user's from accessing the Setup Page via the All Parameters link in the app:


- On the controller's factory page, in the lock menu, change the password enable to on and set the locked access level to three (3) or less.

#### To change which parameters are listed on the controller's home page and on the dashboard in EZ-LINK:

- On the controller's factory page, in the custom setup menu, select the parameters you want to appear for as many of the custom setup menu options (1 to 20) as needed.
- Set unneeded menus to **None**.

#### Hints:

- The settings discussed above affect both the EZ-ZONE PM's built-in user interface and the EZ-LINK app.
- When password protection is enabled, the password must be entered via the EZ-ZONE PM's built-in user interface or using Watlow COMPOSER® software in order to access the protected items.
- Change and make note of the user and administrator passwords so that you can access these features via the controller's user interface or Watlow COMPOSER software in the future.
- COMPOSER software offers an easier-to-use and more flexible way to edit what is listed on the EZ-ZONE PM controller's home page.

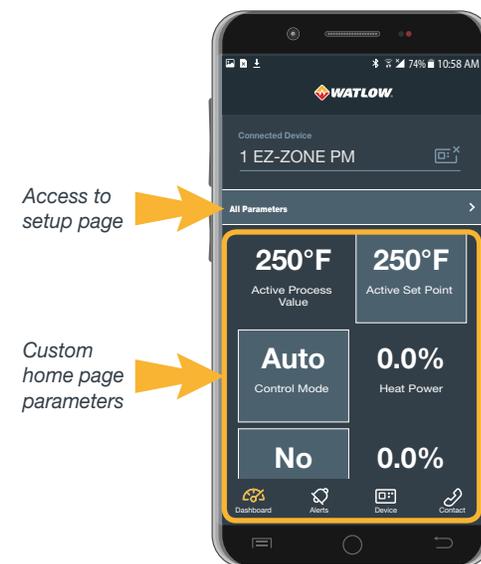

## FCC Compliance

The transmitter module is mounted on the top of the display PC board partially under the LED display module and is visible when display removed from bezel.

Module FCC ID: VPYLBZY Part 15C 2.

Unit is assembled from tested components, complete system not tested.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

## Compliance Information

### Bluetooth® Enabled Product

Models PM6\_\_\_\_\_(B,E,F,G,H,J or K)\_\_\_\_\_ contain an embedded Bluetooth® module.  
Output Power: Frequency Range 2402.0 MHz - 2480.0 MHz Output Power 0.001 Watts  
Antenna Gain: -0.6 dBi PCB antenna

### Industry Canada

Contains IC: **772C-LBZY**  
Specification: **RSS210**

### Japan

Japanese Radio Law 日本電波法  
Type Certification 工事設計認証  **R001-P00500**

### CE See current Declaration of Conformity for full details.

#### 2014/53/EU Radio Equipment Directive (RED)

EN 61010-1:2010	Article 3.1(a) Safety Requirements
EN 61326-1:2013	EMC requirements (Industrial Immunity, Class A Emissions).
EN 301 489-1 V2.1.1	Article 3.1(b)
EN 301 489-17 V3.1.1	Article 3.1(b)
EN 300 328 V1.9.1	Article 3.2 of the R&TTE Directive
EN 300 328 V2.1.1	Additional receiver blocking test to cover requirements for 2014/53/EU

Bluetooth® Declaration ID 38479

Controls are Class A industrial emissions. Not for use in commercial or residential application without further filtering.