



OPTIFLUX 4000 Handbook

Electromagnetic flow sensor

The documentation is only complete when used in combination with the relevant documentation for the signal converter.

All rights reserved. It is prohibited to reproduce this documentation, or any part thereof, without the prior written authorisation of KROHNE Messtechnik GmbH.

Subject to change without notice.

Copyright 2024 by
KROHNE Messtechnik GmbH - Ludwig-Krohne-Str. 5 - 47058 Duisburg (Germany)

1	Safety instructions	5
1.1	Intended use	5
1.2	Certification	5
1.3	Safety instructions from the manufacturer	6
1.3.1	Copyright and data protection	6
1.3.2	Disclaimer	6
1.3.3	Product liability and warranty	7
1.3.4	Information concerning the documentation	7
1.3.5	Warnings and symbols used	8
1.4	Safety instructions for the operator	8
2	Device description	9
2.1	Scope of delivery	9
2.2	Device description	10
2.3	Nameplate	11
3	Installation	12
3.1	General notes on installation	12
3.2	Storage	12
3.3	Transport	12
3.4	Pre-installation requirements	13
3.5	General requirements	13
3.5.1	Vibrations	13
3.5.2	Magnetic field	13
3.6	Installation conditions	14
3.6.1	Inlet and outlet	14
3.6.2	Bends in 2 or 3 dimensions	14
3.6.3	Bends	15
3.6.4	T-section	16
3.6.5	Open discharge	16
3.6.6	Control valve	17
3.6.7	Pump	17
3.6.8	Air venting and vacuum forces	18
3.6.9	Flange deviation	19
3.6.10	Mounting position	19
3.7	Mounting	20
3.7.1	Torques and pressures	20
3.8	Temperatures	23
4	Electrical connections	24
4.1	Safety instructions	24
4.2	Grounding	24
4.3	Virtual reference Option	26
4.4	Connection diagrams	26

5 Service	27
5.1 Spare parts availability	27
5.2 Availability of services	27
5.3 Returning the device to the manufacturer	27
5.3.1 General information	27
5.3.2 Form (for copying) to accompany a returned device	28
5.4 Disposal	28
5.4.1 Disassembling and recycling	28
6 Technical data	29
6.1 Measuring principle	29
6.2 Technical data	30
6.3 Legal metrology	39
6.3.1 OIML R49	39
6.3.2 MID Annex III (MI-001)	41
6.3.3 Verification to MI-001 & OIML 49	43
6.3.4 OIML R117	44
6.3.5 MI-005	44
6.4 Measurement accuracy	45
6.5 Dimensions and weights	47
6.6 Pressure derating	52
6.7 Vacuum load	54
7 Notes	55

1.1 Intended use

**CAUTION!**

Responsibility for the use of the measuring devices with regard to suitability, intended use and corrosion resistance of the used materials against the measured fluid lies solely with the operator.

**INFORMATION!**

The manufacturer is not liable for any damage resulting from improper use or use for other than the intended purpose.

The OPTIFLUX 4000 electromagnetic flowmeter is designed exclusively to measure the flow of electrically conductive, liquid media.

**INFORMATION!**

Make sure that the wetted materials are chemically compatible with the medium. A corrosion guide with default materials is available at the website of the manufacturer.

1.2 Certification

Product marking



Figure 1-1: Example of marking logo

The manufacturer certifies successful testing of the product by applying the conformity mark on the device.

This device fulfils the statutory requirements of the relevant directives.

For more information on the directives, standards and the approved certifications, please refer to the declaration of conformity supplied with the device or downloadable from the manufacturer's website.

Other approvals and standards

- Measuring Instruments Directive 2014/32/EU, Annex III (MI-001), Annex VII (MI-005).

For more information, please refer to the dedicated documentation.

**DANGER!**

For devices used in hazardous areas, additional safety notes apply. Please refer to the Ex documentation.

**CAUTION!**

For devices used in SIL applications, additional safety notes apply. For detailed information refer to the "OPTIFLUX x400 Safety manual".

1.3 Safety instructions from the manufacturer

1.3.1 Copyright and data protection

The contents of this document have been created with great care. Nevertheless, we provide no guarantee that the contents are correct, complete or up-to-date.

The contents and works in this document are subject to copyright. Contributions from third parties are identified as such. Reproduction, processing, dissemination and any type of use beyond what is permitted under copyright requires written authorisation from the respective author and/or the manufacturer.

The manufacturer tries always to observe the copyrights of others, and to draw on works created in-house or works in the public domain.

The collection of personal data (such as names, street addresses or e-mail addresses) in the manufacturer's documents is always on a voluntary basis whenever possible. Whenever feasible, it is always possible to make use of the offerings and services without providing any personal data.

We draw your attention to the fact that data transmission over the Internet (e.g. when communicating by e-mail) may involve gaps in security. It is not possible to protect such data completely against access by third parties.

We hereby expressly prohibit the use of the contact data published as part of our duty to publish an imprint for the purpose of sending us any advertising or informational materials that we have not expressly requested.

1.3.2 Disclaimer

The manufacturer will not be liable for any damage of any kind by using its product, including, but not limited to direct, indirect or incidental and consequential damages.

This disclaimer does not apply in case the manufacturer has acted on purpose or with gross negligence. In the event any applicable law does not allow such limitations on implied warranties or the exclusion of limitation of certain damages, you may, if such law applies to you, not be subject to some or all of the above disclaimer, exclusions or limitations.

Any product purchased from the manufacturer is warranted in accordance with the relevant product documentation and our Terms and Conditions of Sale.

The manufacturer reserves the right to alter the content of its documents, including this disclaimer in any way, at any time, for any reason, without prior notification, and will not be liable in any way for possible consequences of such changes.

1.3.3 Product liability and warranty

The operator shall bear responsibility for the suitability of the device for the specific purpose. The manufacturer accepts no liability for the consequences of misuse by the operator. Improper installation or operation of the devices (systems) will cause the warranty to be void. The respective "Standard Terms and Conditions" which form the basis for the sales contract shall also apply.

1.3.4 Information concerning the documentation

To prevent any injury to the user or damage to the device it is essential that you read the information in this document and observe applicable national standards, safety requirements and accident prevention regulations.

If this document is not in your native language and if you have any problems understanding the text, we advise you to contact your local office for assistance. The manufacturer cannot accept responsibility for any damage or injury caused by misunderstanding of the information in this document.

This document is provided to help you establish operating conditions, which will permit safe and efficient use of this device. Special considerations and precautions are also described in the document, which appear in the form of icons as shown below.

1.3.5 Warnings and symbols used

Safety warnings are indicated by the following symbols.



DANGER!

This warning refers to the immediate danger when working with electricity.



DANGER!

This warning refers to the immediate danger of burns caused by heat or hot surfaces.



DANGER!

This warning refers to the immediate danger when using this device in a hazardous atmosphere.



DANGER!

These warnings must be observed without fail. Even partial disregard of this warning can lead to serious health problems and even death. There is also the risk of seriously damaging the device or parts of the operator's plant.



WARNING!

Disregarding this safety warning, even if only in part, poses the risk of serious health problems. There is also the risk of damaging the device or parts of the operator's plant.



CAUTION!

Disregarding these instructions can result in damage to the device or to parts of the operator's plant.



INFORMATION!

These instructions contain important information for the handling of the device.



LEGAL NOTICE!

This note contains information on statutory directives and standards.



• **HANDLING**

This symbol designates all instructions for actions to be carried out by the operator in the specified sequence.

➔ **RESULT**

This symbol refers to all important consequences of the previous actions.

1.4 Safety instructions for the operator



WARNING!

In general, devices from the manufacturer may only be installed, commissioned, operated and maintained by properly trained and authorized personnel.

This document is provided to help you establish operating conditions, which will permit safe and efficient use of this device.

2.1 Scope of delivery



INFORMATION!

Do a check of the packing list to make sure that you have all the elements given in the order.



INFORMATION!

Inspect the packaging carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.



INFORMATION!

The remote version will arrive in two cartons. One carton contains the signal converter and one carton contains the flow sensor.

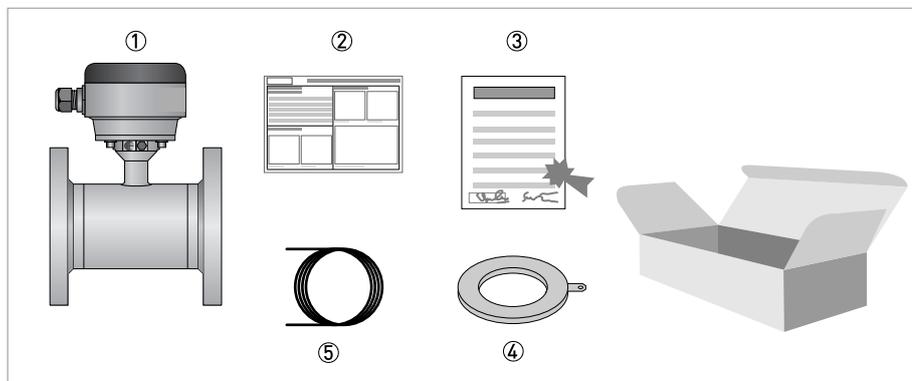


Figure 2-1: Scope of delivery

- ① Ordered flowmeter
- ② Product documentation
- ③ Factory calibration report
- ④ Grounding rings (optional)
- ⑤ Signal cable (remote versions only)



INFORMATION!

Assembly materials and tools are not part of the delivery. Use the assembly materials and tools in compliance with the applicable occupational health and safety directives.

2.2 Device description

Electromagnetic flowmeters are designed exclusively to measure the flow and conductivity of electrically conductive, liquid media.

Your measuring device is supplied ready for operation. The factory settings for the operating data have been made in accordance with your order specifications.

The following versions are available:

- Compact version (the signal converter is mounted directly on the flow sensor)
- Remote version (electrical connection to the flow sensor via field current and signal cable)

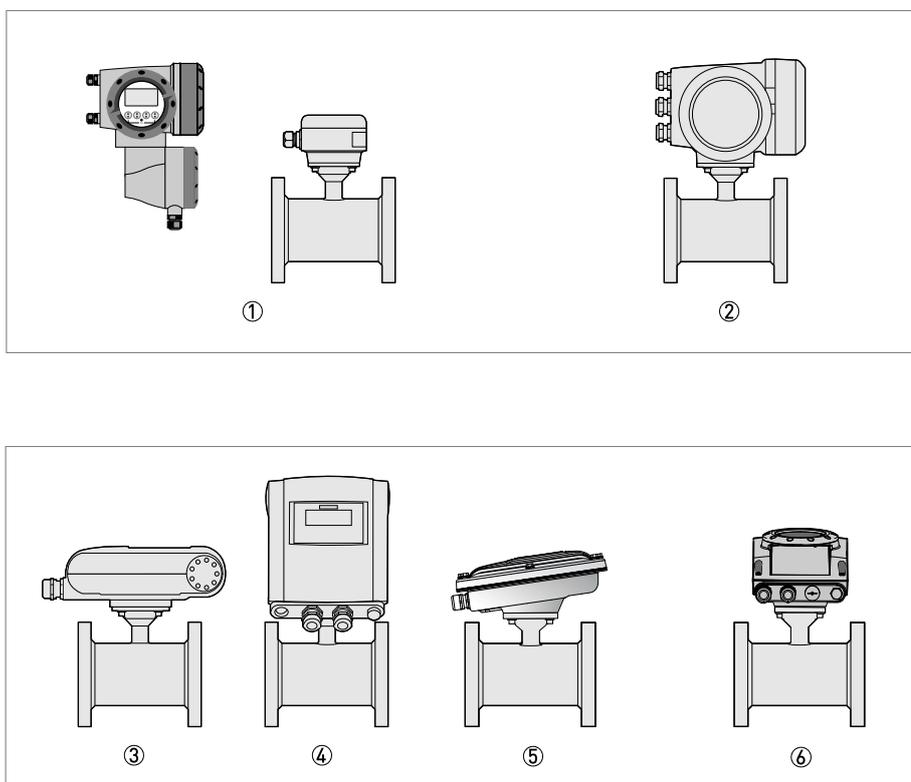


Figure 2-2: Device versions


- ① Remote version (example with IFC 300 / IFC 400 F remote converter)
- ② Compact version with signal converter IFC 300 / IFC 400
- ③ Compact version with signal converter IFC 100 (0°)
- ④ Compact version with signal converter IFC 100 (45°)
- ⑤ Compact version with stainless steel signal converter IFC 100 (10°)
- ⑥ Compact version with signal converter IFC 050 (10°)

2.3 Nameplate



INFORMATION!

Check the device nameplate to ensure that the device is delivered according to your order. Additional information (e.g. correct supply voltage), can be found in the documentation of the signal converter.

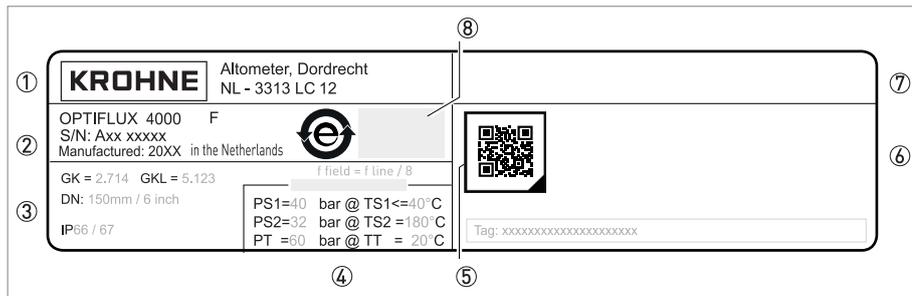

- ① Name and address of the manufacturer
- ② Type designation of the flowmeter, serial number, manufacturing date and country of origin
- ③ Calibration data, size and protection category
- ④ PED data conform applicable standard
- ⑤ Data matrix
- ⑥ Additional info and/or approvals related information
- ⑦ Product certification and/or other marking
- ⑧ Conformity mark (e.g. CE) with number(s) of notified body/bodies and disposal logo

Auto ID according to DIN specifications

The auto ID code (data matrix) guides you directly to the PICK server (Product Information Center KROHNE).

Scan the auto ID code on the device nameplate to download all product specific information.

- Handbooks, Quick Starts and Supplementary instructions
- Calibration certificates
- Factory settings as bin file
- Parameter data sheets
- Digital nameplates

3.1 General notes on installation

**INFORMATION!**

Inspect the packaging carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.

**INFORMATION!**

Do a check of the packing list to make sure that you have all the elements given in the order.

**INFORMATION!**

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

3.2 Storage

- Store the device in a dry and dust-free location.
- Avoid lasting direct exposure to the sun.
- Store the device in its original packaging.
- Storage temperature: -50...+70°C / -58...+158°F

3.3 Transport

Signal converter

- No special requirements.

Compact version

- Do not lift the device by the signal converter housing.
- Do not use lifting chains.
- To transport flange devices, use lifting straps. Wrap these around both process connections.

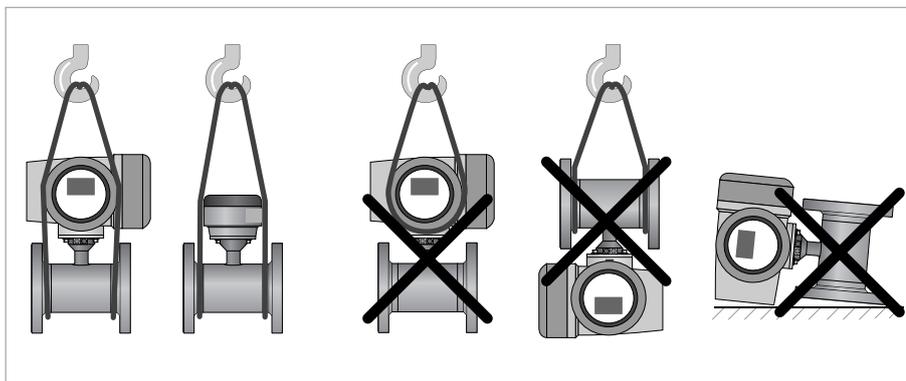


Figure 3-1: Transport

3.4 Pre-installation requirements

Make sure that you have all necessary tools available:

- Allen key (4 mm)
- Small screwdriver
- Wrench for cable glands
- Wrench for wall mounting bracket (remote version only)
- Torque wrench for installing flowmeter in pipeline

3.5 General requirements



INFORMATION!

The following precautions must be taken to ensure reliable installation.

- Make sure that there is adequate space to the sides.
- Protect the signal converter from direct sunlight and install a sun shade if necessary.
- Signal converters installed in control cabinets require adequate cooling, e.g. by fan or heat exchanger.
- Do not expose the signal converter to intense vibrations and mechanical shocks..
- Avoid magnetic field! Keep at least 5 DN distance between electromagnetic flow sensors.

3.5.1 Vibrations

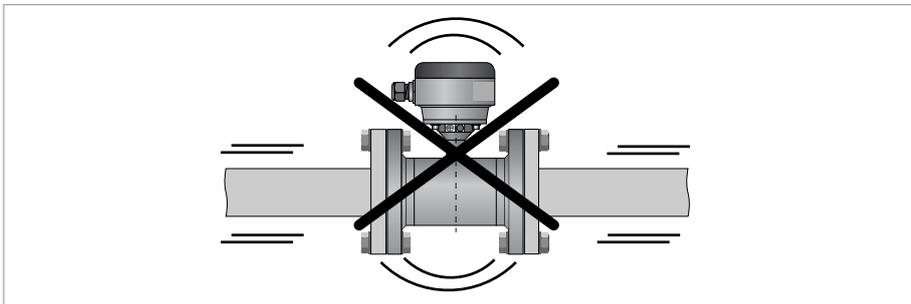


Figure 3-2: Avoid vibrations

3.5.2 Magnetic field

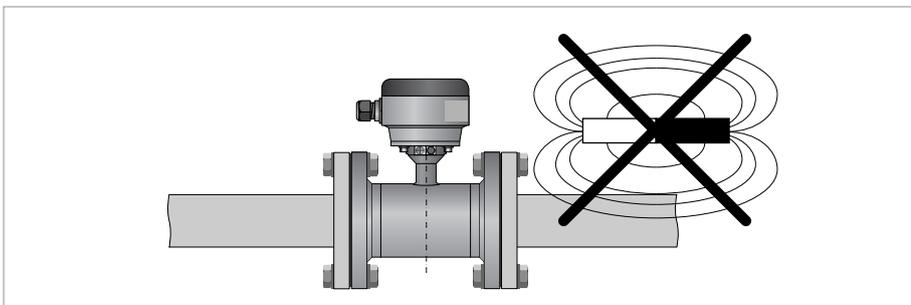


Figure 3-3: Avoid magnetic field

3.6 Installation conditions

3.6.1 Inlet and outlet

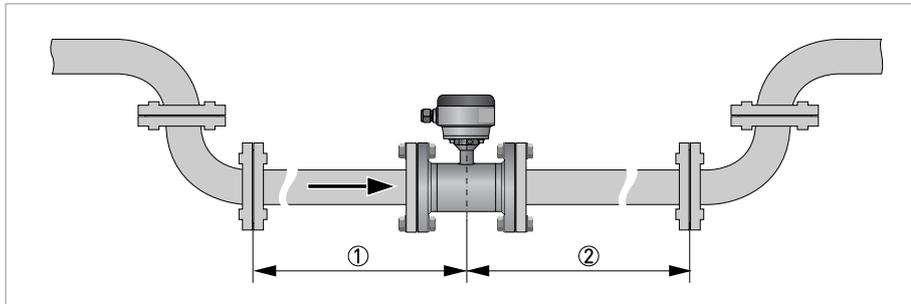


Figure 3-4: Recommended inlet and outlet

- ① Refer to chapter "Bends in 2 or 3 dimensions"
- ② ≥ 2 DN



INFORMATION!

Sensors of type VN02 up to DN10: the inlet and outlet sections are enclosed inside the sensor.

3.6.2 Bends in 2 or 3 dimensions

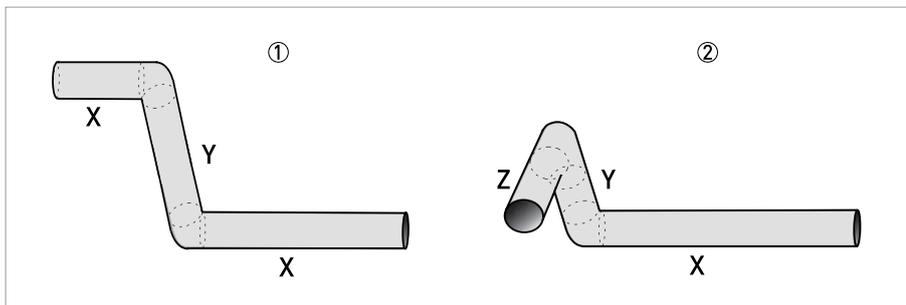


Figure 3-5: 2 and/or 3 dimensional bends upstream of the flowmeter

- ① 2 dimensions = X/Y
- ② 3 dimensions = X/Y/Z

Inlet length: using bends in 2 dimensions: ≥ 5 DN; when having bends in 3 dimensions: ≥ 10 DN



INFORMATION!

2 dimensional bends occur in a vertical **or** horizontal plane (X/Y) only, while 3 dimensional bends occur in both vertical **and** horizontal plane (X/Y/Z).

3.6.3 Bends

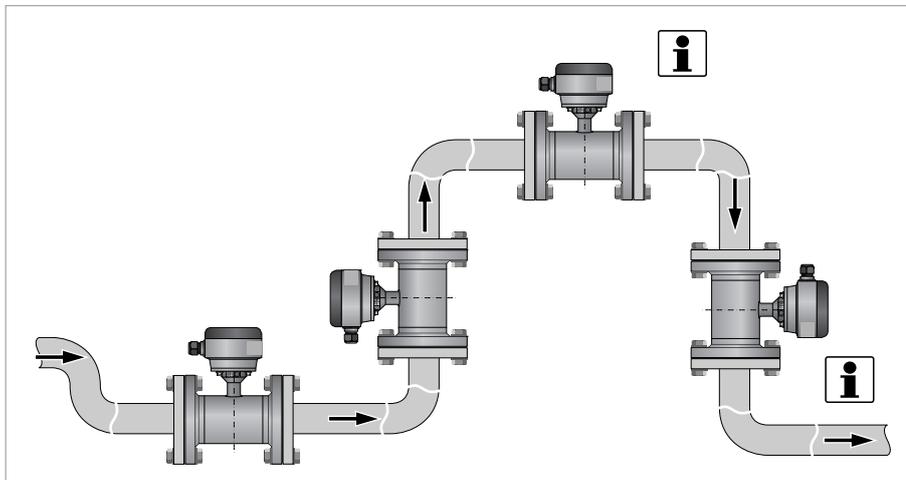


Figure 3-6: Installation in bending pipes (90°)



INFORMATION!

Recommended installation positions are at a lowered or ascending section of the pipeline installation. Installation at the highest point will enlarge the risk of flowmeter malfunction, because of air/gas bubbles.

Vertical installation in combination with an open discharge has to be avoided.

Vertical installation with a controlled back-pressure is possible.

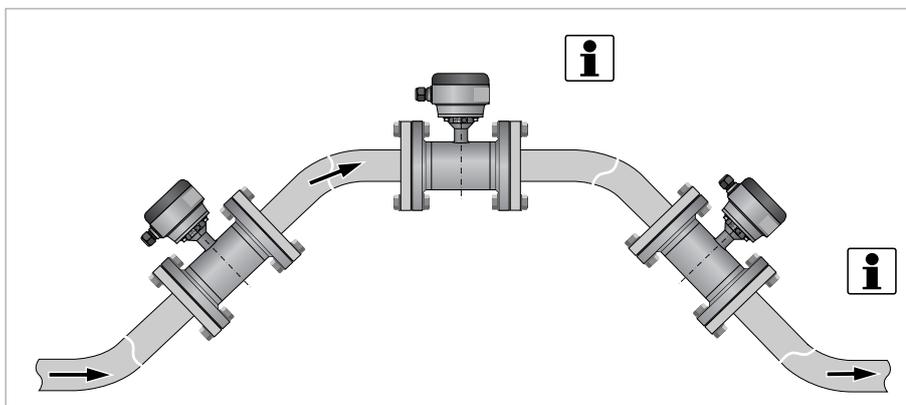


Figure 3-7: Installation in bending pipes (45°)



CAUTION!

Avoid draining or partial filling of the flow sensor.



INFORMATION!

Vertical installation on a descending slope in the pipeline is only recommended when the back-pressure is controlled.

3.6.4 T-section

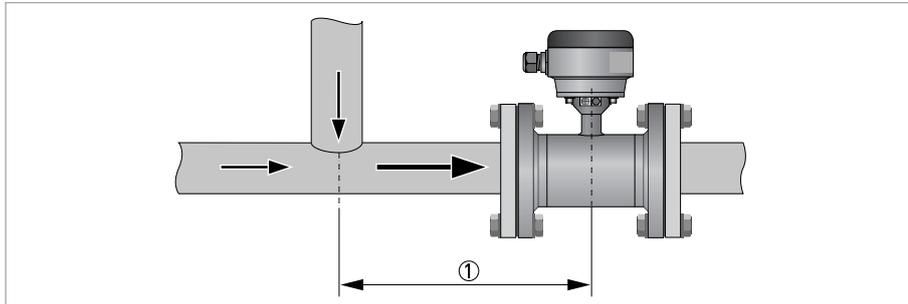


Figure 3-8: Distance behind a T-section

① $\geq 10 \text{ DN}$

3.6.5 Open discharge

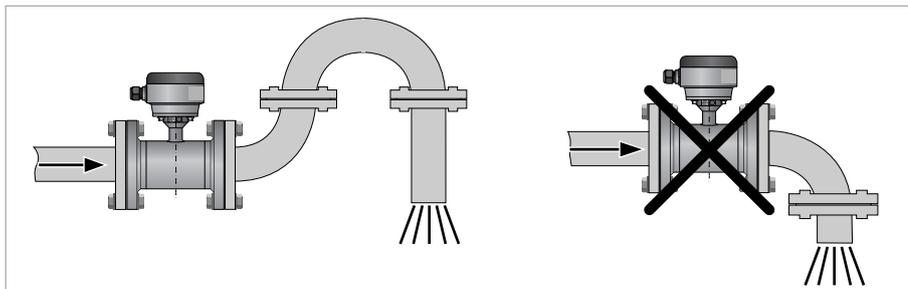


Figure 3-9: Installation in front of an open discharge

3.6.6 Control valve

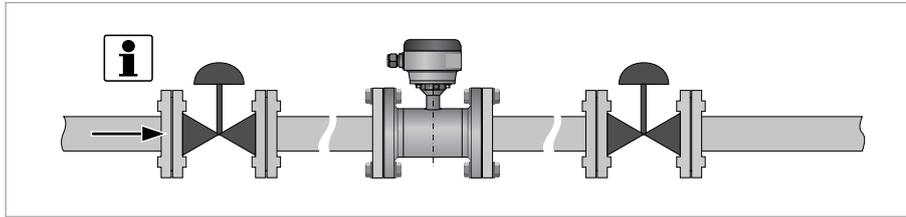


Figure 3-10: Installation in front of a control valve



INFORMATION!

*Recommended position to install a flowmeter is upstream a control valve.
An electromagnetic flowmeter can be installed downstream of the control valve if there is no cavitation in the pipeline system (e.g. flow profile disturbances are resolved).*

3.6.7 Pump

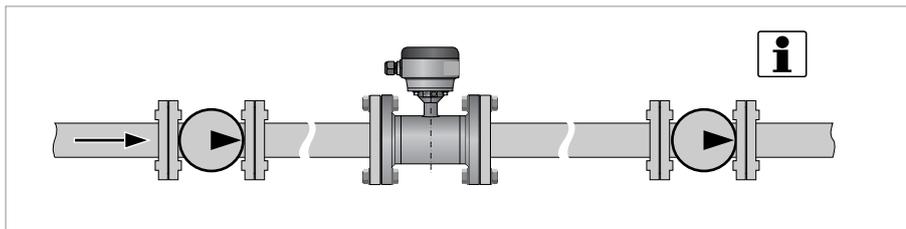


Figure 3-11: Installation behind a pump



INFORMATION!

*Recommended position to install a flowmeter is downstream a pump (on a position where the flow disturbances of the pump are resolved).
An electromagnetic flowmeter can be installed in the suction line of a pump if there is no cavitation in the pipeline system.*

3.6.8 Air venting and vacuum forces

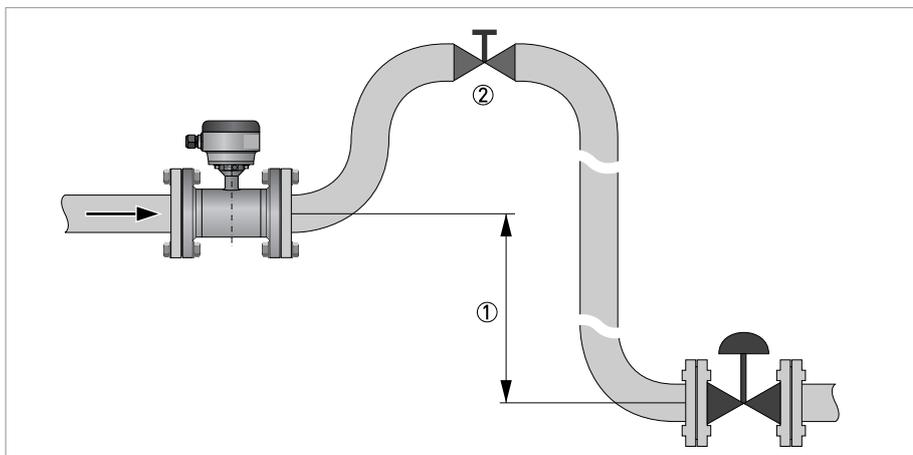


Figure 3-12: Air venting

- ① $\geq 5 \text{ m} / 17 \text{ ft}$
- ② Air ventilation point

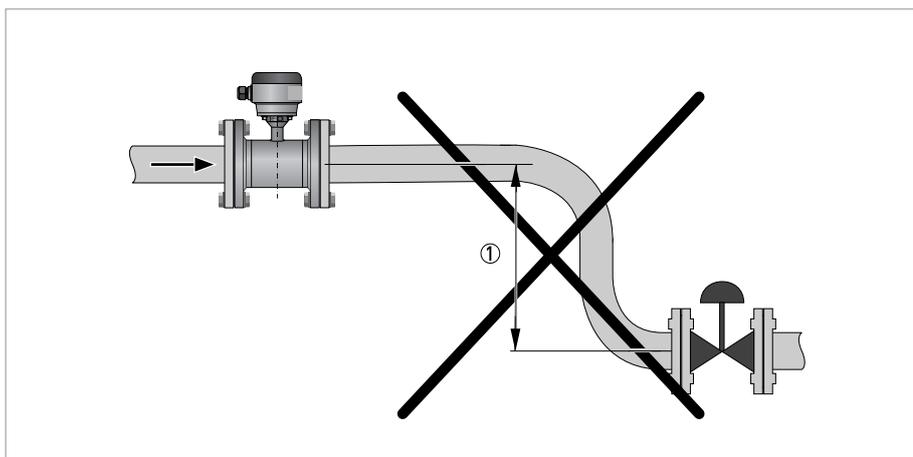


Figure 3-13: Vacuum

- ① $\geq 5 \text{ m} / 17 \text{ ft}$

3.6.9 Flange deviation



CAUTION!

Max. permissible deviation of pipe flange faces:

$$L_{max} - L_{min} \leq 0.5 \text{ mm} / 0.02''$$

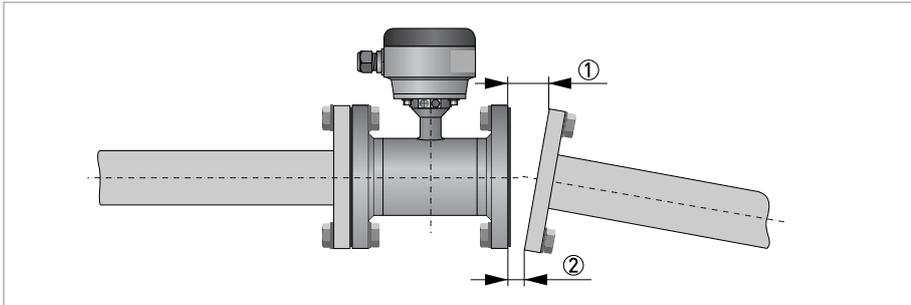


Figure 3-14: Flange deviation

- ① L_{max}
- ② L_{min}

3.6.10 Mounting position

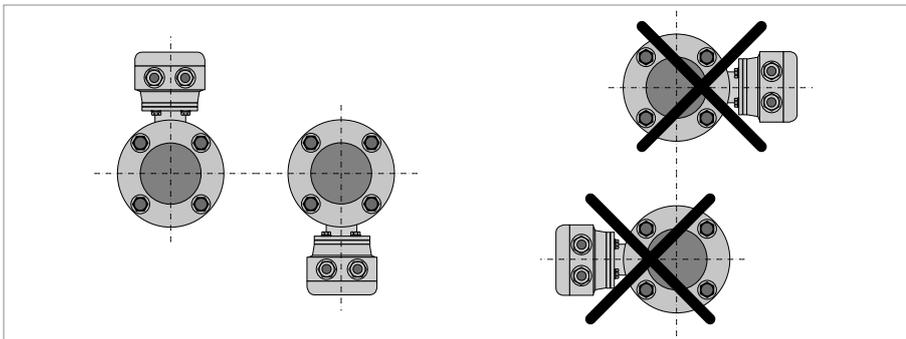


Figure 3-15: Mounting position

- Install the flow sensor with the signal converter aligned upwards or downwards.
- Install the flow sensor in line with the pipe axis.
- Pipe flange faces must be parallel to each other.

3.7 Mounting

**CAUTION!**

Please take care to use the proper gasket to prevent damaging the liner of the flowmeter. In general, the use of spiral wound gaskets is not advised, as it could severely damage the liner of the flowmeter.

3.7.1 Torques and pressures

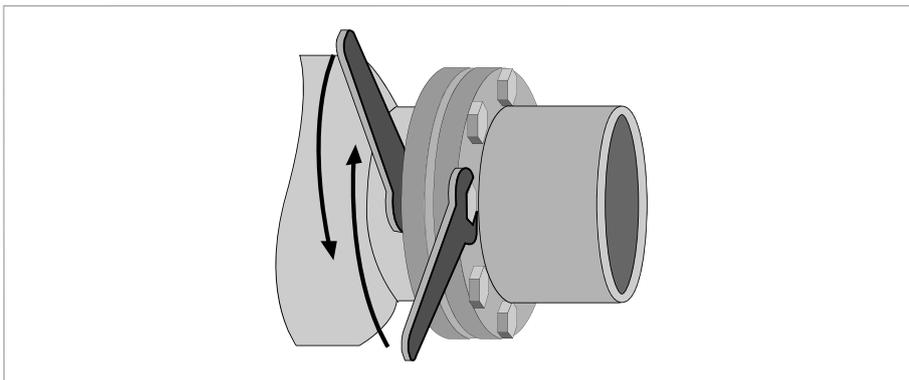


Figure 3-16: Tightening of bolts



Tightening of bolts

- Always tighten the bolts uniformly and in diagonally opposite sequence.
- Do not exceed the maximum torque value.
- Step 1: Apply approx. 50% of max. torque given in table.
- Step 2: Apply approx. 80% of max. torque given in table.
- Step 3: Apply 100% of max. torque given in table.

**INFORMATION!**

Other sizes / pressure ratings on request.

Nominal size DN [mm]	Pressure rating	Bolts ②	Max. torque [Nm] ①					
			PFA	PTFE	ETFE	PU	Hard rubber	Soft rubber
2.5	PN 40	4 x M 12	32	-	-	-	-	-
4	PN 40	4 x M 12	32	-	-	-	-	-
6	PN 40	4 x M 12	32	-	-	-	-	-
10	PN 40	4 x M 12	7.6	7.6	-	4.6	-	-
15	PN 40	4 x M 12	9.3	9.3	-	5.7	-	-
20	PN 40	4 x M 12	-	16	-	9.6	-	-
25	PN 40	4 x M 12	22	22	22	11	-	-
32	PN 40	4 x M 16	37	37	37	19	-	-
40	PN 40	4 x M 16	43	43	43	25	-	-
50	PN 40	4 x M 16	55	55	55	31	-	36
65	PN 16	4 x M 16	51	51	51	42	-	18
65	PN 40	8 x M 16	38	38	38	21	-	-
80	PN 40	8 x M 16	47	47	47	25	-	33
100	PN 16	8 x M 16	39	39	39	30	-	30
125	PN 16	8 x M 16	53	53	53	40	-	43
150	PN 16	8 x M 20	68	68	68	47	-	68
200	PN 10	8 x M 20	-	84	84	68	68	50
200	PN 16	12 x M 20	-	68	68	45	45	-
250	PN 10	12 x M 20	-	78	78	65	65	48
250	PN 16	12 x M 24	-	116	116	78	78	-
300	PN 10	12 x M 20	-	88	88	76	76	59
300	PN 16	12 x M 24	-	144	144	105	105	-
350	PN 10	16 x M 20	-	97	97	75	75	67
400	PN 10	16 x M 24	-	139	139	104	104	97
450	PN 10	20 x M 24	-	127	127	93	93	89
500	PN 10	20 x M 24	-	149	149	107	107	103
600	PN 10	20 x M 27	-	205	205	138	138	144
700	PN 10	20 x M 27	-	238	238	163	163	-
800	PN 10	24 x M 30	-	328	328	219	219	-
900	PN 10	28 x M 30	-	308	308	205	205	-
1000	PN 10	28 x M 35	-	392	392	261	261	-
③ *								

① The specified torque values are dependent on variables (temperature, bolt material, gasket material, lubricants, etc.) which are not within the control of the manufacturer. Therefore the values should be regarded as indicative only.

② F= ASTM gr B7 Studbolts - F=0.14 - Carbon steel flanges

③ * Information DN > 1000; please contact the support service department

Nominal size [inch]	Flange class [lb]	Bolts ②	Max. torque [in-lb] ①					
			PFA	PTFE	ETFE	PU	Hard rubber	Soft rubber
1/10	150	4 x 1/2"	39	-	-	-	-	-
1/6	150	4 x 1/2"	39	-	-	-	-	-
1/4	150	4 x 1/2"	39	-	-	-	-	-
3/8	150	4 x 1/2"	39	39	-	-	-	-
1/2	150	4 x 1/2"	34	34	-	-	-	-
3/4	150	4 x 1/2"	-	50	-	-	-	-
1	150	4 x 1/2"	67	67	67	-	-	-
1 1/4	150	4 x 1/2"	97	97	97	-	-	-
1 1/2	150	4 x 1/2"	138	138	138	-	-	-
2	150	4 x 5/8"	225	225	225	-	-	158
3	150	4 x 5/8"	380	380	380	-	-	283
4	150	8 x 5/8"	300	300	300	-	-	207
6	150	8 x 3/4"	540	540	540	-	-	328
8	150	8 x 3/4"	-	979	979	818	818	418
10	150	12 x 7/8"	-	1104	1104	923	923	601
12	150	12 x 7/8"	-	1478	1478	1237	1237	676
14	150	12 x 1"	-	1835	1835	1538	1538	909
16	150	16 x 1"	-	1767	1767	1481	1481	1141
18	150	16 x 1 1/8"	-	2605	2605	2183	2183	1100
20	150	20 x 1 1/8"	-	2365	2365	1984	1984	1618
24	150	20 x 1 1/4"	-	3419	3419	2873	2873	1479
28	150	28 x 1 1/4"	-	2904	2904	-	③ *	2155
32	150	28 x 1 1/2"	-	4560	4560	-	*	-
36	150	32 x 1 1/2"	-	-	③ *	-	*	-
40	150	36 x 1 1/2"	-	-	*	-	*	-

① The specified torque values are dependent on variables (temperature, bolt material, gasket material, lubricants, etc.) which are not within the control of the manufacturer. Therefore the values should be regarded as indicative only.

② F= ASTM gr B7 Studbolts - F=0.14 - Carbon steel flanges

③ Information * ; please contact the support service department



INFORMATION!

Other sizes / pressure ratings on request.



CAUTION!

- Pressures are applicable at 20°C / 68°F.
- For higher temperatures, the pressure ratings are as per ASME B16.5.

3.8 Temperatures



CAUTION!

Protect the device from direct sunlight.

Temperature range	Process [°C]		Ambient [°C]		Process [°F]		Ambient [°F]	
	min.	max.	min.	max.	min.	max.	min.	max.

PTFE & PFA

Remote flow sensor	-40	180	-40	65	-40	356	-40	149
Compact with IFC 300 / IFC 400 ①	-40	140	-40	65	-40	284	-40	149
Compact with IFC 100 / IFC 050 ②	-40	120	-40	65	-40	248	-40	149

ETFE

Remote flow sensor	-40	120	-40	65	-40	248	-40	149
Compact with IFC 300 / IFC 400 ①								
Compact with IFC 100 / IFC 050								

Hard rubber

Remote flow sensor	-5	80	-40	65	23	176	-40	149
Compact with IFC 300 / IFC 400 ①								
Compact with IFC 100 / IFC 050								

PU

Remote flow sensor	-5	65	-40	65	23	149	-40	149
Compact with IFC 300 / IFC 400 ①								
Compact with IFC 100 / IFC 050								

① Maximum ambient temperature for IFC 400 in combination with fan only. For specific conditions of the ambient temperature, please refer to the documentation of the IFC 400 converter.

② Max. ambient temperature is 60°C / 140°F, but process temperature is then limited to 60°C / 140°F.



INFORMATION!

Ambient temperatures below -25°C / -13°F may affect the readability of the display



INFORMATION!

The maximum ambient temperature for the IFC 100 stainless steel compact version is 5°C / 9°F lower than the standard compact versions.

4.1 Safety instructions



DANGER!

All work on the electrical connections may only be carried out with the power disconnected.
Take note of the voltage data on the nameplate!



DANGER!

Observe the national regulations for electrical installations!



DANGER!

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.



WARNING!

Observe without fail the local occupational health and safety regulations.
Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.



INFORMATION!

Look at the device nameplate to ensure that the device is delivered according to your order.
Check for the correct supply voltage printed on the nameplate.

4.2 Grounding



DANGER!

The device must be grounded in accordance with regulations in order to protect personnel against electric shocks.

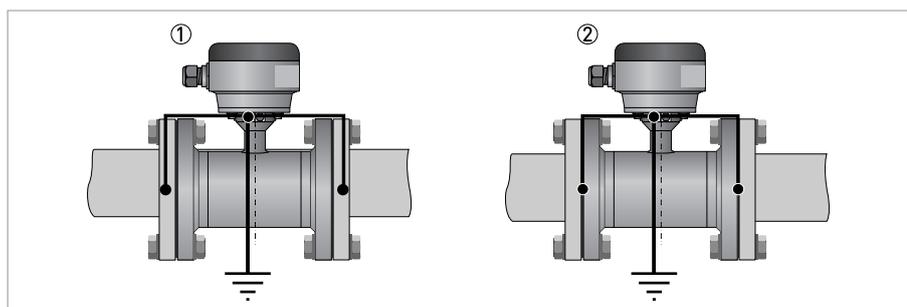


Figure 4-1: Grounding

- ① Metal pipelines, not internally coated. Grounding without grounding rings!
- ② Metal pipelines with internal coating and non-conductive pipelines. Grounding with grounding rings!

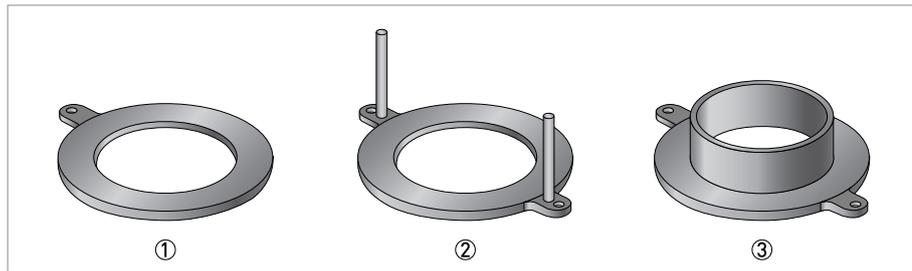


Figure 4-2: Different types of grounding rings

- ① Grounding ring number 1
- ② Grounding ring number 2
- ③ Grounding ring number 3

Grounding ring number 1:

- \leq DN300 / 12": 3 mm / 0.12"
- \geq DN350 / 14": 4 mm / 0.16"
(tantalum: 0.5 mm / 0.02")

Grounding ring number 2:

- \leq DN300 / 12": 3 mm / 0.12"
- \geq DN350 / 14": 4 mm / 0.16"
- Prevents damage to the flanges during transport and installation
- Especially for flow sensors with PTFE liner

Grounding ring number 3:

- \leq DN300 / 12": 3 mm / 0.12"
- \geq DN350 / 14": 4 mm / 0.16"
- With cylindrical neck (length 30 mm / 1.25" for DN10...150 / 3/8...6")
- Offers liner protection against abrasive fluids

4.3 Virtual reference Option

**CAUTION!**

Only in combination with the IFC 300 and IFC 400 signal converter (C, W and F version)

Benefits of virtual reference:

- Grounding rings or grounding electrodes can be omitted.
- Safety increases by reducing the number of potential leakage points.
- The installation of the flowmeters is much easier.
- Compliant with OIML-R49 and MID MI-001 certification (IFC 300).

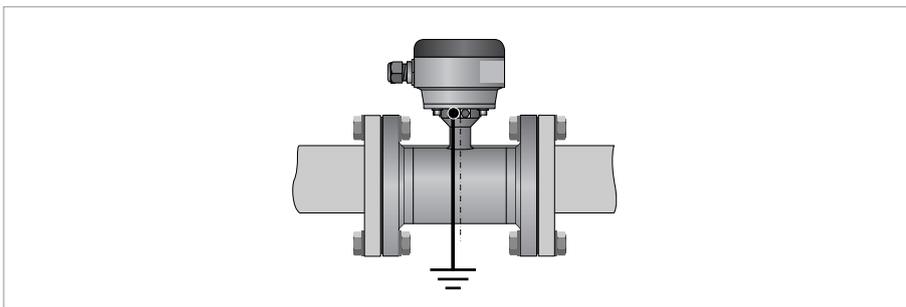


Figure 4-3: Virtual reference

Minimum requirements:

- Size: \geq DN10 / 3/8"
- Electrical conductivity: \geq 200 μ S/cm
- Signal cable: max. 50 m / 164 ft, type DS

**INFORMATION!**

Virtual reference cannot be activated when the IFC 400 is in the SIL mode.

4.4 Connection diagrams

**INFORMATION!**

For the connection diagrams, please refer to the documentation of the applicable signal converter.

5.1 Spare parts availability

The manufacturer adheres to the basic principle that functionally adequate spare parts for each device or each important accessory part will be kept available for a period of 3 years after delivery of the last production run for the device.

This regulation only applies to spare parts which are subject to wear and tear under normal operating conditions.

5.2 Availability of services

The manufacturer offers a range of services to support the customer after expiration of the warranty. These include repair, maintenance, technical support and training.



INFORMATION!

For more precise information, please contact your local sales office.

5.3 Returning the device to the manufacturer

5.3.1 General information

This device has been carefully manufactured and tested. If installed and operated in accordance with these operating instructions, it will rarely present any problems.



WARNING!

Should you nevertheless need to return a device for inspection or repair, please pay strict attention to the following points:

- *Due to statutory regulations on environmental protection and safeguarding the health and safety of the personnel, the manufacturer may only handle, test and repair returned devices that have been in contact with products without risk to personnel and environment.*
- *This means that the manufacturer can only service this device if it is accompanied by the following certificate (see next section) confirming that the device is safe to handle.*



WARNING!

If the device has been operated with toxic, caustic, radioactive, flammable or water-endangering products, you are kindly requested:

- *to check and ensure, if necessary by rinsing or neutralising, that all cavities are free from such dangerous substances,*
- *to enclose a certificate with the device confirming that it is safe to handle and stating the product used.*

5.3.2 Form (for copying) to accompany a returned device



CAUTION!

To avoid any risk for our service personnel, this form has to be accessible from outside of the packaging with the returned device.

Company:		Address:	
Department:		Name:	
Telephone number:		Email address:	
Fax number:			
Manufacturer order number or serial number:			
The device has been operated with the following medium:			
This medium is:	<input type="checkbox"/>	radioactive	
	<input type="checkbox"/>	water-hazardous	
	<input type="checkbox"/>	toxic	
	<input type="checkbox"/>	caustic	
	<input type="checkbox"/>	flammable	
	<input type="checkbox"/>	We checked that all cavities in the device are free from such substances.	
	<input type="checkbox"/>	We have flushed out and neutralized all cavities in the device.	
We hereby confirm that there is no risk to persons or the environment caused by any residual media contained in this device when it is returned.			
Date:		Signature:	
Stamp:			

5.4 Disposal



LEGAL NOTICE!

Disposal must be carried out in accordance with legislation applicable in your country.

Separate collection of WEEE (Waste Electrical and Electronic Equipment):



According to the directive 2012/19/EU, the monitoring and control instruments marked with the WEEE symbol and reaching their end-of-life **must not be disposed of with other waste.**

The user must dispose of the WEEE to a designated collection point for the recycling of WEEE or send them back to our local organisation or authorised representative.

5.4.1 Disassembling and recycling



INFORMATION!

For information about disassembling and recycling, refer to the applicable documentation of the signal converter or consult product support.

6.1 Measuring principle

An electrically conductive fluid flows inside an electrically insulated pipe through a magnetic field. This magnetic field is generated by a current, flowing through a pair of field coils.

Inside of the fluid, a voltage U is generated:

$$U = v * k * B * D$$

in which:

v = mean flow velocity

k = factor correcting for geometry

B = magnetic field strength

D = inner diameter of flowmeter

The signal voltage U is picked off by electrodes and is proportional to the mean flow velocity v and thus the flow rate Q . A signal converter is used to amplify the signal voltage, filter it and convert it into signals for totalizing, recording and output processing.

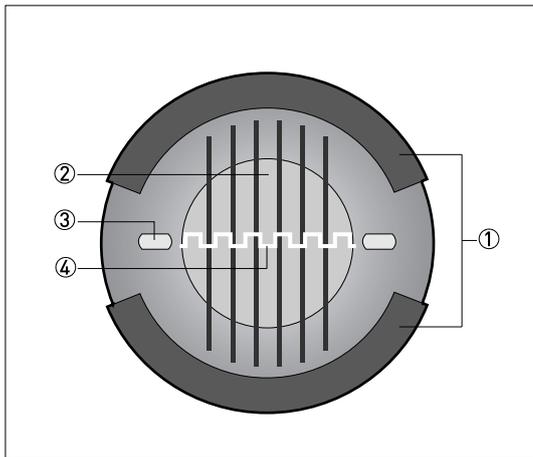


Figure 6-1: Measuring principle

- ① Field coils
- ② Magnetic field
- ③ Electrodes
- ④ Induced voltage (proportional to flow velocity)

6.2 Technical data



INFORMATION!

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Download Center).

Measuring system

Measuring principle	Faraday's law
Application range	This electromagnetic flowmeter is designed exclusively to measure the flow of electrically conductive, liquid media
Measured value	
Primary measured value	Flow velocity
Secondary measured value	Volume flow

Design

Features	Fully welded maintenance-free flow sensor
	Flange version with full bore flow sensor
	Standard as well as higher pressure ratings
	Broad range of nominal sizes
	Industry specific insertion lengths
Modular construction	The measurement system consists of a flow sensor and a signal converter. It is available as compact and as remote version.
Compact version	With signal converter IFC 050: OPTIFLUX 4050 C
	With signal converter IFC 100: OPTIFLUX 4100 C
	With signal converter IFC 300: OPTIFLUX 4300 C
	With signal converter IFC 400: OPTIFLUX 4400 C
Remote version	In wall (W) mount version with signal converter IFC 050: OPTIFLUX 4050 W
	In wall (W) mount version with signal converter IFC 100: OPTIFLUX 4100 W
	In field (F), wall (W) or rack (R) mount version with signal converter IFC 300: OPTIFLUX 4300 F, W or R
	In field (F), wall (W) or rack (R) mount version with signal converter IFC 400: OPTIFLUX 4400 F
Nominal diameter	With signal converter IFC 050: DN2.5...1200 / 1/10...48"
	With signal converter IFC 100: DN2.5...1200 / 1/10...48"
	With signal converter IFC 300 / IFC 400: DN2.5...3000 / 1/10...120"

Measuring accuracy

Maximum measuring error	Depending on signal converter and DN size.	
	IFC 050: down to 0.5% of the measured value ± 1 mm/s	
	IFC 100: down to 0.3% of the measured value ± 1 mm/s	
	IFC 300 and IFC 400: down to 0.2% of the measured value ± 1 mm/s	
	Optionally: optimised accuracy for IFC 050 and IFC 100. For more details on optimised accuracy, see the concerning signal converter documentation.	
	The additional typical measuring deviation for the current output is $\pm 10 \mu\text{A}$ (IFC 400: $\pm 5 \mu\text{A}$).	
	The maximum measuring error depends on the installation conditions. For detailed information refer to <i>Measurement accuracy</i> on page 45.	
Repeatability	$\pm 0.06\%$ of MV, depending on the flow converter	
Calibration / Verification	Standard:	
	2 point calibration by direct volume comparison.	
	Optional:	
	Verification to Measurement Instrument Directive (MID) Annex III (MI-001). Standard: Verification at Ratio (Q3/Q1) = 80, Q3 ≥ 2 m/s Optional: Verification at Ratio (Q3/Q1) > 80 on request (Only in combination with signal converter IFC 300)	
Special calibration	On request.	
MID Annex III (MI-001) (Directive 2014/32/EU)	EC-Type examination certificate to MID Annex III (MI-001)	
	(Only in combination with signal converter IFC 300)	
	Diameter range: DN25...1600	
	Forward and reverse (bi-directional) flow	
	Liquid temperature range: $+0.1^\circ\text{C}$ / $+50^\circ\text{C}$ For detailed information refer to <i>Legal metrology</i> on page 39.	
OIML R49	Certificate of conformity to OIML R49	
	(Only in combination with signal converter IFC 300)	
	Diameter range	Class 1: DN80...500 Class 2: DN25...50
	Forward and reverse (bi-directional) flow	
	Liquid temperature range: $+0.1^\circ\text{C}$ / 50°C	
	For detailed information refer to <i>Legal metrology</i> on page 39.	

Operating conditions

Temperature	
For Ex versions different temperatures are valid. Please check the relevant Ex documentation for details.	
Process temperature	PTFE / PFA: -40...+180°C / -40...+356°F for remote versions
	PTFE / PFA: -40...+140°C / -40...+284°F for IFC 300 and IFC 400 compact versions
	PTFE / PFA: -40...+120°C / -40...+248°F for IFC 050 and IFC 100 compact versions
	ETFE: -40...+120°C / -40...+248°F
	Hard rubber: -5...+80°C / 23...+176°F
	Soft rubber: -5...+60°C / 23...+140°F
	PU: -5...+65°C / 23...+149°F
	For more information about temperatures; refer to <i>Temperatures</i> on page 23 refer to chapter "Temperatures" in the manual.
Ambient temperature	Standard (with aluminum signal converter housing): -40...+65°C / -40...+149°F
	Protect the electronics against self-heating with ambient temperatures above +55°C / +131°F with for example a sun shade cover.
	Option (with stainless steel signal converter housing): low temperate carbon steel flanges or stainless steel flanges. -40...+55°C / -40...+130°F
Storage temperature	-50...+70°C / -58...+158°F
Measuring range	-12...+12 m/s / -40...+40 ft/s
Pressure	
EN 1092-1	DN2200...3000: PN 2.5
	DN1200...2000: PN 6
	DN200...1000: PN 10
	DN65 and DN100...150: PN 16
	DN2.5...50 and DN80: PN40
	Other pressures on request
ASME B16.5	1/10...40": 150 lb RF
	Other pressures on request
JIS	DN50...1000 / 2..40": 10 K
	DN2.5...40 / 1/10...1 1/2": 20 K
	Other pressures on request
AWWA	DN700...1800 / 28...72" class D
	Other pressures on request
Vacuum load	For detailed information refer to <i>Vacuum load</i> on page 54.
Pressure loss	Negligible

Chemical properties	
Physical condition	Electrically conductive liquids
Electrical conductivity	Standard measurement
	For detailed information refer to the relevant signal converter document.
Permissible gas content (volume)	IFC 050: $\leq 3\%$
	IFC 100: $\leq 5\%$
	IFC 300 / IFC 400: $\leq 5\%$
Permissible solid content (volume)	IFC 050: $\leq 10\%$
	IFC 100: $\leq 10\%$
	IFC 300 / IFC 400: $\leq 70\%$
Gas and solids contents can affect the measurement accuracy. The accuracy specifications in this document are based on reference conditions which do not include gas or solids contents.	

Installation conditions

Installation	Assure that the flow sensor is always fully filled.
	For detailed information refer to <i>Installation</i> on page 12.
Flow direction	Forward and reverse
	Arrow on flow sensor indicates forward flow direction.
Straight inlet run	≥ 5 DN
Straight outlet run	≥ 2 DN
Dimensions and weights	For detailed information refer to <i>Dimensions and weights</i> on page 47.

Materials

Flow sensor housing	DN2.5...15 / 1/10...1/2": with PFA liner, stainless steel 1.4408
	DN10...20 / 3/8...3/4": with PTFE liner; Duplex
	DN25...3000 / 1...120": sheet steel
	Other materials on request
Measuring tube	Austenitic stainless steel
Flanges	Standard: carbon steel
	Other materials on request
Liner	Standard
	DN2.5...15 / 1/10...1/2": PFA
	DN20 / 3/4": PTFE
	DN25...150 / 1...6": PFA
	DN200...1800 / 8...72": ETFE
	Option
	DN10 - DN15 / 3/8 - 1/2": PTFE
	DN200...600 / 8...24": PTFE
	DN200...1800 / 8...72": PU
	DN200...3000 / 8...120": Hard rubber (Ex only)
	DN50...600 / 2...24": Soft rubber
	Other materials on request
Protective coating	On exterior of the meter: flanges, housing, signal converter (compact version) and/or connection box (field version)
	Standard coating
	Option: off shore coating
Connection box	Only for remote versions
	Standard: die-cast aluminum
	Option: stainless steel
Measuring electrodes	Standard: Hastelloy [®] C
	Option: platinum, stainless steel, titanium, tantalum, low noise (with low noise coating)
	Option: conductive rubber (only in combination with soft rubber liner)
	Other materials on request
Grounding rings	Standard: stainless steel
	Option: Hastelloy [®] C, titanium, tantalum
	Grounding rings can be omitted with virtual reference option for the signal converter IFC 300 and IFC 400.
Reference electrode (optional)	Standard: Hastelloy [®] C
	Option: platinum, stainless steel, titanium, tantalum, low noise (with low noise coating)
	Other materials on request

Process connections

Flange	
EN 1092-1	DN2.5...3000 in PN 2.5...40
ASME	1/10...120" in 150...2500 lb RF
JIS	DN2.5...1000 in JIS 10...20 K
Design of gasket surface	EN 1092-1, ASME, JIS; RF
	AWWA: FF
	Other sizes or pressure ratings on request

Electrical connections

For full detail refer to the relevant documentation of the signal converter.	
Signal cable (remote versions only)	
Type A (DS)	In combination with the signal converter IFC 050, IFC 100, IFC 300 and IFC 400
	Standard cable, double shielded. Max. length: 600 m / 1968 ft (depends on electrical conductivity and flow sensor)
Type B (BTS)	Only in combination with the signal converter IFC 300 and IFC 400
	Optional cable, triple shielded. Max. length: 600 m / 1968 ft (depends on electrical conductivity and flow sensor)
I/O	For full details of I/O options, including data streams and protocols, see technical data sheet of the relevant signal converter.

Approvals and certificates

CE	
This device fulfils the statutory requirements of the relevant directives. The manufacturer certifies successful testing of the product by applying the conformity mark on the device.	
	For more information on the directives, standards and the approved certifications, please refer to the declaration of conformity supplied with the device or downloadable from the manufacturer's website.
Hazardous areas	
Please check the relevant Ex documentation and certificates for details.	
ATEX	OPTIFLUX 4000 F; FTZU 13 ATEX 0175 X
	II 2G Ex eb ia mb IIC T6...T3 Gb (DN2.5...15)
	II 2G Ex eb ia mb IIC T6...T3 Gb (DN10...20)
	II 2G Ex db eb ia IIC T6...T3 Gb (DN25...150); PFA
	II 2G Ex eb ia q IIC T5...T3 Gb (DN25...150); non-PFA
	II 2G Ex eb ia q IIC T6...T3 Gb (DN200...300)
	II 2G Ex eb ia IIC T6...T3 Gb (DN350...3000)
	II 2D Ex tb IIIC T85°C...T180°C Db (DN2.5...3000)
IECEX	OPTIFLUX 4000 F; IECEX FTZU 14.0001 X
	Ex eb ia mb IIC T6...T3 Gb (DN2.5...15)
	Ex eb ia mb IIC T6...T3 Gb (DN10...20)
	Ex db eb ia IIC T6...T3 Gb (DN25...150); PFA
	Ex eb ia q IIC T5...T3 Gb (DN25...150); non-PFA
	Ex eb ia q IIC T6...T3 Gb (DN200...300)
	Ex eb ia IIC T6...T3 Gb (DN350...3000)
	Ex tb IIIC T85°C...T180°C Db (DN2.5...3000)
NEPSI (China)	OPTIFLUX 4000 F; GYJ20.1342X
	Ex e ia mb IIC T3-T6 Gb (DN2.5...15)
	Ex e ia mb IIC T3-T6 Gb (DN10...20)
	Ex d e ia IIC T3-T6 Gb (DN25...150); PFA
	Ex e ia q IIC T3-T5 Gb (DN25...150); non-PFA
	Ex e ia q IIC T3-T6 Gb (DN200...300)
	Ex e ia IIC T3-T6 Gb (DN350...3000)
	Ex tD A21 IP6X T85°C-T150°C Db (DN2.5...3000)
DNV (Brazil)	OPTIFLUX 4000 F; DNV 20.0072 X
	Ex eb ia mb IIC T6...T3 Gb (DN2.5...15)
	Ex eb ia mb IIC T6...T3 Gb (DN10...20)
	Ex db eb ia IIC T6...T3 Gb (DN25...150); PFA
	Ex eb ia q IIC T5...T3 Gb (DN25...150); non-PFA
	Ex eb ia q IIC T6...T3 Gb (DN200...300)
	Ex eb ia IIC T6...T3 Gb (DN350...3000)
	Ex tb IIIC T180°C Db; IP66/IP67 (DN2.5...3000)

FM(USA)	OPTIFLUX 4000-DIV2; FM 17 US 0301X; (with IFC 100 W converter)
	OPTIFLUX 4000-DIV2; FM 16 US 0329X; (with IFC 300 F converter)
	Class I, Division 2; Groups ABCD; T6
	Class II, Division 2; Groups FG
FM, CSA (Canada)	Class III, Division 2; T6...T3
	OPTIFLUX 4000-DIV2; FM 17 CA 0153X; (with IFC 100 W converter)
	Class I, Division 2; Groups ABCD
	Class II, Division 2; Groups FG
	Class III, Division 2; T6...T3
	OPTIFLUX 4000-DIV2; CSA 1665151; (with IFC 300 F converter)
	Class I, Division 2; Groups ABCD
Class II, Division 2; Groups FG; T6	
KCS (Korea)	OPTIFLUX 4000
	14-AV4BO-0745X : Ex me ia IIC T3...T6 (DN10...20)
	14-AV4BO-0747X : Ex de ia IIC T3...T6 (DN25...150); PFA
	14-AV4BO-0744X : Ex qe ia IIC T3...T6 (DN25...150); non-PFA
	14-AV4BO-0744X : Ex qe ia IIC T3...T6 (DN200...300)
	14-AV4BO-0746X : Ex e ia IIC T3...T6 (DN350...3000)
PESO	OPTIFLUX 4000 F, Approval no. A/P/HQ/MH/104/6249 (P460979)
	Ex eb ia mb IIC T6...T3 Gb (DN2.5...15)
	Ex eb ia mb IIC T6...T3 Gb (DN10...20)
	Ex db eb ia IIC T6...T3 Gb (DN25...150); PFA
	Ex eb ia q IIC T5...T3 Gb (DN25...150); non-PFA
	Ex eb ia q IIC T6...T3 Gb (DN200...300)
	Ex eb ia IIC T6...T3 Gb (DN350...3000)

Other approvals and standards	
Custody transfer	Standard: without verification
	Only in combination with signal converter IFC 300.
	For diameters: DN25...1800 (other diameters on request)
	Cold water
	MID Directive 2014/32/EU; Annex III (MI-001) type examination certificate
	OIML R49 certificate of conformity
	Conformity with ISO 4064 and EN 14154
	Liquids other than water
	For diameters DN25...DN500
	MID Directive 2014/32/EU; Annex VII (MI-005) type examination certificate
OIML R117 certificate of conformity	
Hygiene	PFA liner is FDA compliant.
BSE/TSE	Bovine spongiform encephalopathy / Transmissible spongiform encephalopathy Declaration on request
Protection category acc. to IEC 60529	Standard:
	IP66/67, NEMA 4/4X/6
	Option:
	IP68, NEMA 6P IP68, NEMA 6P is only available for a remote design and with a stainless steel connection box.
Protective coating	Standard; ISO 12944-2: C3 medium / C4 high Off shore coating; ISO 12944-2: C5I high / C5M high
Vibration and shock resistance	
For compact versions, please refer to the documentation of the applicable converter	
Random vibration test	IEC 60068-2-64: 20...2000 Hz, ASD 1.0 (m/s ²) ² /Hz, RMS a = 4.5 g
	IEC 60068-2-64 / IEC 60721-3-4 Class 4M11: 5...200 Hz, ASD 0.01 (m/s ²) ² /Hz
Sinus vibration test	IEC 60068-2-6 / IEC 61298-3
	10...58 Hz: 0.15 mm / 58...1000 Hz, a = 2 g
Shock test	IEC 60068-2-27 / IEC 60721-3-4
	Half sine wave, Class 4M12, 2 g, pulse duration 6 ms

Functional safety	
Depends on converter and flow sensor options. For detailed information refer to the related Safety manual.	
Safety Integrity level in acc. with IEC 61508:	In combination with signal converter IFC 400
	SIL 2 (single channel architecture)
	SIL 3 (multi channel architecture)
Marine	EU RO MR Type Approval
	Certificate mutually recognized by: ABS, BV, CCS, CRS, DNG-GL, IRS, KR, ClassNK, PRS, RINA, RS

6.3 Legal metrology



INFORMATION!

OIML R49, R117 and MID Annex MI-001, MI-005 is **only** available in combination with the IFC 300 signal converter!

6.3.1 OIML R49

The OPTIFLUX 4300 has a certificate of conformity with the international recommendation OIML R49-1. The certificate has been issued by NMi (Dutch board of weight and measures).

The OIML R49 -1 concerns water meters intended for the metering of cold potable and hot water. The measuring range of the flowmeter is determined by Q3 (nominal flow rate) and R (ratio).

The OPTIFLUX 4300 meets the requirements for water meters of accuracy class 1 and 2.

The following accuracy can be met in all installation orientations (horizontal, vertical or diagonal) and with flow profile sensitivity class 0DN / 0DN (0 x DN upstream and 0 x DN downstream).

- For accuracy class 1, the maximum permissible error for water meters is $\pm 1\%$ for the upper flow rate zone and $\pm 3\%$ for the lower flow rate zones.
- For accuracy class 2, the maximum permissible error for water meters is $\pm 2\%$ for the upper flow rate zone and $\pm 5\%$ for the lower flow rate zones.

$$Q1 = Q3 / R$$

$$Q2 = Q1 * 1.6$$

$$Q3 = Q1 * R$$

$$Q4 = Q3 * 1.25$$

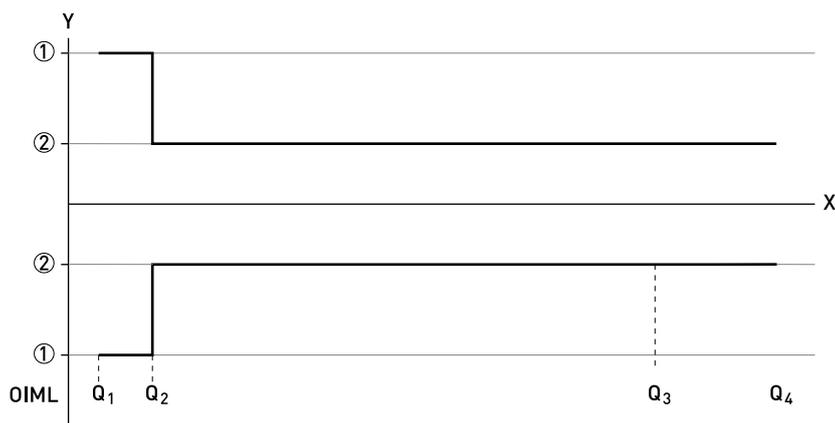


Figure 6-2: ISO flow rates added to figure as comparison towards OIML

X: Flow rate

Y [%]: Maximum measuring error

① $\pm 3\%$ for class 1, $\pm 5\%$ for class 2 devices

② $\pm 1\%$ for class 1, $\pm 2\%$ for class 2 devices

OIML R49 Class 1

DN	Span (R)	Flow rate [m ³ /h]			
		Minimum Q1	Transitional Q2	Permanent Q3	Overload Q4
50	400	0.10	0.16	40	50
65	630	0.1587	0.254	100	125
80	630	0.2540	0.4063	160	200
100	630	0.3968	0.6349	250	312.5
125	630	0.6349	1.0159	400	500
150	630	0.6349	1.0159	400	500
200	1000	1	1.6	1000	1250
250	1000	1.6	2.56	1600	2000
300	1000	2.5	4	2500	3125
350	500	5.0	8	2500	3125
400	500	8	12.8	4000	5000
450	500	8	12.8	4000	5000
500	500	12.6	20.16	6300	7875
600	160	39.375	63	6300	7875
700	80	125	200	10000	12500
800	80	125	200	10000	12500
900	80	200	320	16000	20000
1000	80	200	320	16000	20000
1100	80	200	320	16000	20000
1200	80	200	320	16000	20000
1300	80	312.5	500	25000	31250
1400	80	312.5	500	25000	31250
1500	80	312.5	500	25000	31250
1600	80	312.5	500	25000	31250
1800	50	500	800	25000	31250

OIML R49 Class 2

DN	Span (R)	Flow rate [m ³ /h]			
		Minimum Q1	Transitional Q2	Permanent Q3	Overload Q4
25	400	0.04	0.064	16	20
32	400	0.0625	0.1	25	31.25
40	400	0.0625	0.1	25	31.25

For DN65 to DN1600; same values (DN, R, Q1, Q2, Q3, Q4) as for OIML R49 class 1 are applicable.

6.3.2 MID Annex III (MI-001)

All new designs of flow meters that are to be used for legal purposes in Europe require certification under the Measurement Instrument Directive (MID) 2014/32/EU, Annex III (MI-001). Annex MI-001 of the MID applies to water meters intended for the measurement of volume of clean, cold or heated water in residential, commercial and light industrial use. An EC-type examination certificate is valid in all countries of the European Union.

The OPTIFLUX 4300 has a type examination certificate and can be verified to the MID Annex III (MI-001) for water meters with diameter DN25...DN1800.

The conformity assessment procedure followed for OPTIFLUX 4300 is Module B (Type Examination) and Module D (Quality Assurance of the Production Process).

- The maximum permissible error on volumes delivered between Q2 (transitional) flow rate and Q4 (overload) flow rate is $\pm 2\%$.
- The maximum permissible error on volumes delivered between Q1 (minimum) flow rate and Q2 (transitional) flow rate is $\pm 5\%$.

$$Q1 = Q3 / R$$

$$Q2 = Q1 * 1.6$$

$$Q3 = Q1 * R$$

$$Q4 = Q3 * 1.25$$

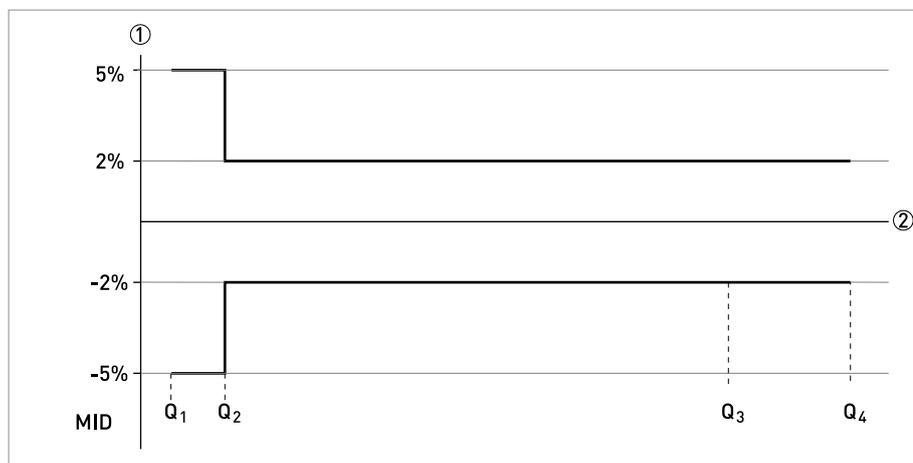


Figure 6-3: ISO flow rates added to figure as comparison towards MID

X: Flow rate

Y [%]: Maximum measuring error

MI-001 certified flow characteristics

DN	Span (R) Q3 / Q1	Flow rate [m ³ /h]			
		Minimum Q1	Transitional Q2	Permanent Q3	Overload Q4
25	400	0.04	0.064	16	20
32	400	0.0625	0.10	25	31.25
40	400	0.0625	0.10	25	31.25
50	400	0.10	0.16	40	50
65	625	0.1587	0.254	100	125
80	640	0.254	0.4063	160	200
100	625	0.3968	0.6349	250	312.5
125	667	0.6349	1.0159	400	500
150	667	0.6349	1.0159	400	500
200	1000	1.0	1.6	1000	1250
250	1000	1.6	2.56	1600	2000
300	1000	2.5	4.0	2500	3125
350	500	5.0	8.0	2500	3125
400	500	8.0	12.8	4000	5000
450	500	8.0	12.8	4000	5000
500	500	12.6	20.16	6300	7875
600	160	39.375	63	6300	7875
700	80	125	200	10000	12500
800	80	125	200	10000	12500
900	80	200	320	16000	20000
1000	80	200	320	16000	20000
1100	80	200	320	16000	20000
1200	80	200	320	16000	20000
1300	80	312.5	500	25000	31250
1400	80	312.5	500	25000	31250
1500	80	312.5	500	25000	31250
1600	80	312.5	500	25000	31250
1800	59	500	800	25000	31250

6.3.3 Verification to MI-001 & OIML 49

**INFORMATION!**

Verification to MI-001 and to OIML R49 class 2 is carried out at the following values for R, Q1, Q2 and Q3. Verification to OIML R49 class 1 and at other values for R and Q3 available on request.

Verification to MID Annex III (MI-001)

DN	Span (R) Q3 / Q1	Flow rate [m ³ /h]		
		Q1	Q2	Q3
25	80	0.05	0.08	4
32	80	0.125	0.20	10
40	80	0.125	0.20	10
50	80	0.2	0.32	16
65	80	0.3125	0.50	25
80	80	0.5	0.7875	40
100	80	0.7875	1.26	63
125	80	1.250	2.00	100
150	80	2.0	3.2	160
200	80	3.125	5.0	250
250	80	5.0	8.0	400
300	80	7.875	12.6	630
350	80	20	32	1600
400	80	31.25	50	2500
450	80	31.25	50	2500
500	80	50.0	80	4000
600	80	78.75	126	6300
700	50	125	200	10000
800	50	125	200	10000
900	50	200	512	16000
1000	50	200	512	16000
1100	50	320	512	16000
1200	50	320	512	16000
1400	50	500	800	25000
1600	50	500	500	25000
1800	50	500	800	25000

6.3.4 OIML R117

DN	Qmax [m ³ /h]	Qmin [m ³ /h]	MMQ[m ³]	MPA Class	Accuracy [%]
15	5.4	0.27	0.002	0.5	0.3
25	20	1	0.01	0.3	0.2
32	31.25	1.5625	0.5	0.3	0.2
40	31.25	1.5625	0.5	0.3	0.2
50	50	2.5	0.5	0.3	0.2
65	125	6.25	2	0.3	0.2
80	200	10	2	0.3	0.2
100	312.5	15.625	2	0.3	0.2
125	500	25	5	0.3	0.2
150	500	25	5	0.3	0.2
200	1250	62.5	10	0.3	0.2
250	2000	100	20	0.3	0.2
300	3125	156.25	50	0.3	0.2
350	3125	156.25	50	0.3	0.2
400	5000	250	50	0.3	0.2
450	5000	250	50	0.3	0.2
500	7875	787.5	100	0.3	0.2

6.3.5 MI-005

DN	Qmax [m ³ /h]	Qmin [m ³ /h]	MMQ[m ³]	Accuracy Class
15	5.4	0.27	0.002	0.5
25	20	1.0	0.01	0.3
32	31.3	1.6	0.5	0.3
40	31.3	1.6	0.5	0.3
50	50	2.5	0.5	0.3
65	125	6.3	2	0.3
80	200	10	2	0.3
100	312.5	15.6	2	0.3
125	500	25	5	0.3
150	500	25	5	0.3
200	1250	62.5	10	0.3
250	2000	100	20	0.3
300	3125	156	50	0.3
350	3125	156	50	0.3
400	5000	250	50	0.3
450	5000	250	50	0.3
500	7875	787.5	100	0.3

6.4 Measurement accuracy

Every electromagnetic flowmeter is calibrated by direct volume comparison. The wet calibration validates the performance of the flowmeter under reference conditions against accuracy limits.

The accuracy limits of electromagnetic flowmeters are typically the result of the combined effect of linearity, zero point stability and calibration uncertainty.

Reference conditions

- Medium: water
- Temperature: +5...+35°C / +41...+95°F
- Operating pressure: 0.1...5 barg / 1.5...72.5 psig
- Inlet section: ≥ 5 DN
- Outlet section: ≥ 2 DN

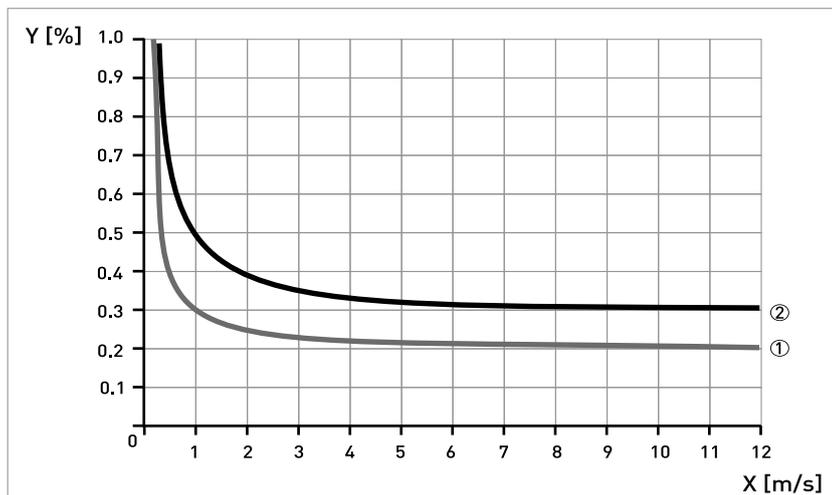


Figure 6-4: Flow velocity vs. accuracy

X [m/s] : flow velocity

Y [%]: deviation from the actual measured value (mv)

Accuracy

Flow sensor diameter	Signal converter type	Accuracy ①	Curve
DN2.5...10 / 1/10...3/8"	IFC 300/ IFC 400	$\pm 0.3\%$ of mv + 2 mm/s	②
DN15...1600 / 1/2...64"	IFC 300/ IFC 400	$\pm 0.2\%$ of mv + 1 mm/s	①
DN1800...3000 / > 64"	IFC 300/ IFC 400	$\pm 0.3\%$ of mv + 2 mm/s	②

① Accuracy DN2.5...10 valid for a flow speed up to 3 m/s, for a higher flow speed please consult your local sales office.

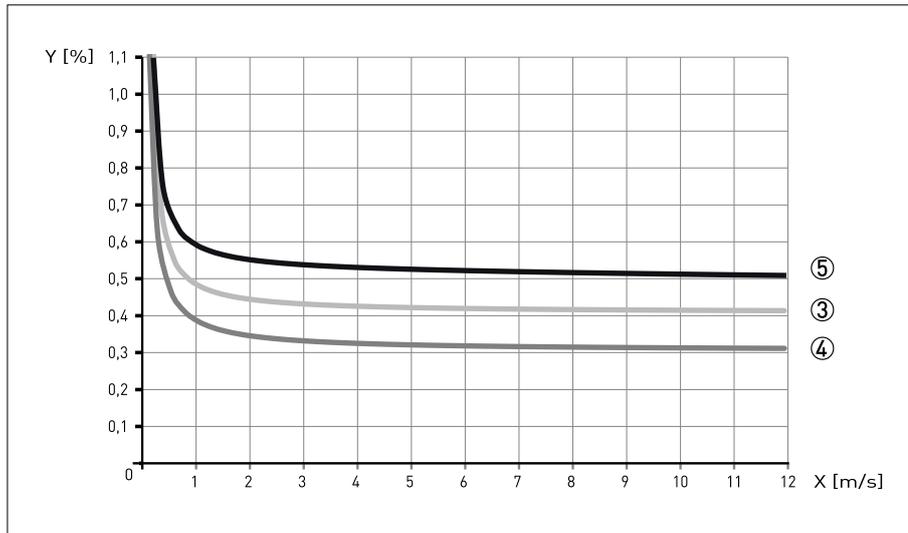


Figure 6-5: Flow velocity vs. accuracy
 X [m/s] : flow velocity
 Y [%]: deviation from the actual measured value (mv)

Accuracy

Flow sensor diameter	Signal converter type	Accuracy ①	Curve
DN2.5...10 / 1/10...3/8"	IFC 100	± 0.4% of mv + 1 mm/s	③
DN15...1600 / 1/2...48"	IFC 100	± 0.3% of mv + 1 mm/s	④
DN2.5...1200 / 1/10...48"	IFC 050	± 0.5% of mv + 1 mm/s	⑤





① Accuracy DN2.5...10 valid for a flow speed up to 3 m/s, for a higher flow speed please consult your local sales office.






INFORMATION!

Optionally for IFC 050 and IFC 100; extended calibration at 2 points for optimised accuracy. For more details on optimised accuracy, see the concerning signal converter documentation.

6.5 Dimensions and weights

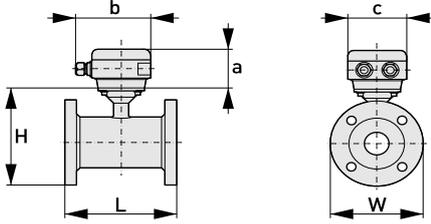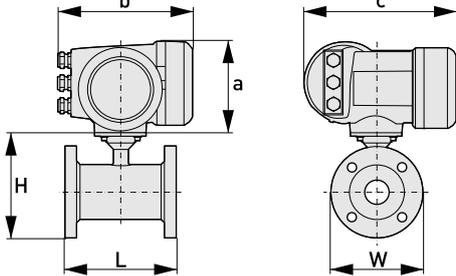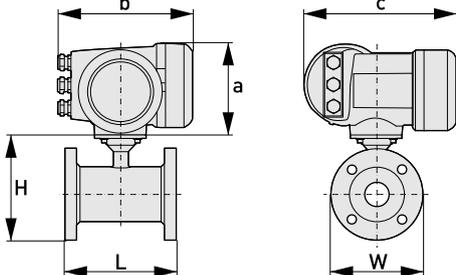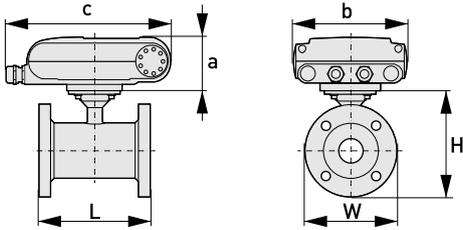Remote version		<p>a = 88 mm / 3.5"</p> <p>b = 139 mm / 5.5" ①</p> <p>c = 106 mm / 4.2"</p> <p>Total height = H + a</p>
Compact version with: IFC 300		<p>a = 155 mm / 6.1"</p> <p>b = 230 mm / 9.1" ①</p> <p>c = 260 mm / 10.2"</p> <p>Total height = H + a</p>
Compact version with: IFC 400		<p>a = 160 mm / 6.3"</p> <p>b = 240 mm / 9.5" ①</p> <p>c = 260 mm / 10.2"</p> <p>Total height = H + a</p>
Compact version with: IFC 100 (0°)		<p>a = 82 mm / 3.2"</p> <p>b = 161 mm / 6.3"</p> <p>c = 257 mm / 10.1" ①</p> <p>Total height = H + a</p>

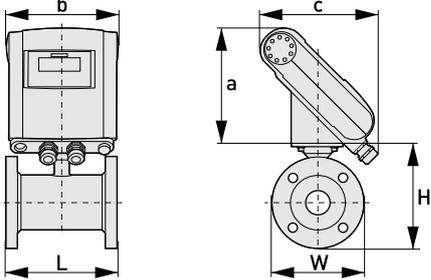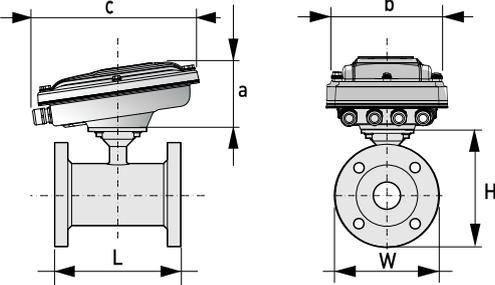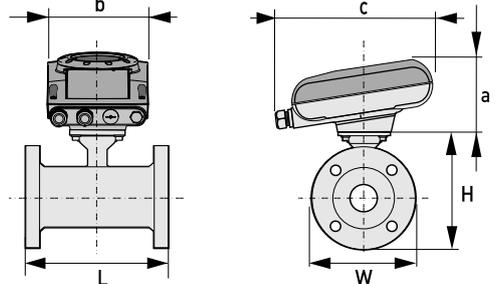Compact version with: IFC 100 (45°)		$a = 186 \text{ mm} / 7.3''$ $b = 161 \text{ mm} / 6.3''$ $c = 184 \text{ mm} / 2.7''$ ① Total height = $H + a$
Compact version with stainless steel IFC 100 (10°)		$a = 100 \text{ mm} / 4''$ $b = 187 \text{ mm} / 7.36''$ ① $c = 270 \text{ mm} / 10.63''$ Total height = $H + a$
Compact version with: IFC 050 (10°)		$a = 100 \text{ mm} / 4''$ $b = 157 \text{ mm} / 6.18''$ ① $c = 260 \text{ mm} / 10.24''$ Total height = $H + a$

① The value may vary depending on the used cable glands.



INFORMATION!

- All data given in the following tables are based on standard versions of the flow sensor only.
- Especially for smaller nominal sizes of the flow sensor, the signal converter can be bigger than the flow sensor.
- Note that for other pressure ratings than mentioned, the dimensions may be different.
- For full information on signal converter dimensions see relevant documentation.

EN 1092-1

Nominal size		Dimensions [mm]				Approximately weight [kg]
DN	PN [bar]	L		H	W	
		Standard length	ISO insertion length			
2.5...6	40	130	-	142	90	3
10	40	130 ①	-	106	90	6
15	40	130 ①	200	106	95	6
20	40	150	200	158	105	7
25	40	150	200	140	115	4
32	40	150	200	157	140	5
40	40	150	200	166	150	5
50	40	200	200	186	165	9
65	16	200	200	200	185	9
80	40	200	200	209	200	12
100	16	250	250	237	220	15
125	16	250	250	266	250	19
150	16	300	300	300	285	27
200	10	350	350	361	340	34
250	10	400	450	408	395	48
300	10	500	500	458	445	58
350	10	500	550	510	505	78
400	10	600	600	568	565	101
450	10	600	-	618	615	111
500	10	600	-	671	670	130
600	10	600	-	781	780	165
700	10	700	-	898	895	248
800	10	800	-	1012	1015	331
900	10	900	-	1114	1115	430
1000	10	1000	-	1225	1230	507
1200	6	1200	-	1417	1405	555
1400	6	1400	-	1619	1630	765
1600	6	1600	-	1819	1830	1035
1800	6	1800	-	2027	2045	1470
2000	6	2000	-	2259	2265	1860

① 150 mm for construction according to order code VN03 (contact sales)

150 lb flanges

Nominal size		Dimensions [inch]				Approximately weight [lb]
ASME	PN [psi]	L		H	W	
		Standard length	ISO insertion length			
1/10"	284	5.12	-	5.59	3.50	6
1/6"	284	5.12	-	5.59	3.50	6
1/4"	284	5.12	-	5.59	3.50	6
3/8"	284	5.12 ①	-	5.08	3.50	12
1/2"	284	5.12 ①	7.87	5.08	3.50	12
3/4"	284	5.91	7.87	5.28	3.88	18
1"	284	5.91	7.87	5.39	4.25	7
1 1/4"	284	5.91	7.87	5.98	4.62	7
1 1/2"	284	5.91	7.87	6.10	5.00	11
2"	284	7.87	7.87	7.05	5.98	18
2 1/2"	284	7.87	7.87	7.72	7.00	24
3"	284	7.87	7.87	8.03	7.50	26
4"	284	9.84	9.84	9.49	9.00	40
5"	284	9.84	9.84	10.55	10.0	49
6"	284	11.81	11.81	11.69	11.0	64
8"	284	13.78	13.78	14.25	13.5	95
10"	284	15.75	17.71	16.3	16.0	143
12"	284	19.69	19.69	18.78	19.0	207
14"	284	27.56	21.65	20.67	21.0	284
16"	284	31.50	23.62	22.95	23.5	364
18"	284	31.50	-	24.72	25.0	410
20"	284	31.50	-	26.97	27.5	492
24"	284	31.50	-	31.38	32.0	675

① 5.91" for construction according to order code VN03 (contact sales)

**CAUTION!**

- Pressures at 20°C / 68°F.
- For higher temperatures, the pressure and temperature ratings are as per ASME B16.5.

300 lb flanges

Nominal size		Dimensions [inch]				Approximately weight [lb]
ASME	PN [psi]	L		H	W	
		Standard length	ISO insertion length			
1/10"	741	5.12	--	5.59	3.75	6
1/6"	741	5.12		5.59	3.75	6
1/4"	741	5.12	-	5.59	3.75	6
3/8"	741	5.12 ①	-	5.24	3.75	15
1/2"	741	5.12 ①	7.87	5.24	3.75	15
3/4"	741	5.91	7.87	5.67	4.62	20
1"	741	5.91	7.87	5.71	4.87	11
1 1/2"	741	7.87	7.87	6.65	6.13	13
2"	741	9.84	7.87	7.32	6.50	22
3"	741	9.84	7.87	8.43	8.25	31
4"	741	11.81	9.84	10.00	10.0	44
6"	741	12.60	11.81	12.44	12.5	73
8"	741	15.75	13.78	15.04	15.0	157
10"	741	19.69	17.71	17.05	17.5	247
12"	741	23.62	-	20.00	20.5	375
14"	741	27.56	-	21.65	23.0	474
16"	741	31.50	-	23.98	25.5	639
20"	741	31.50	-	28.46	30.5	937
24"	741	31.50	-	33.39	36.0	1345

① 5.91" for construction according to order code VN03 (contact sales)

**CAUTION!**

- Pressures at 20°C / 68°F.
- For higher temperatures, the pressure and temperature ratings are as per ASME B16.5.

6.6 Pressure derating

The graphs below refer to the maximum pressure as a function of the temperature for the flanges of the flowmeter (per specified flange material).

Please note that the specified values only refer to the flanges. The maximum value for the flowmeter can further be limited by the maximum value for other materials (i.e. the liner)

For A = Carbon steel A 105 & B = Stainless steel 316L

X/Y axes in all graphs; X = Temperature in [°C] / Y = Pressure in [bar]
 x/y axes in all graphs; x = Temperature in [°F] / y = Pressure in [psi]

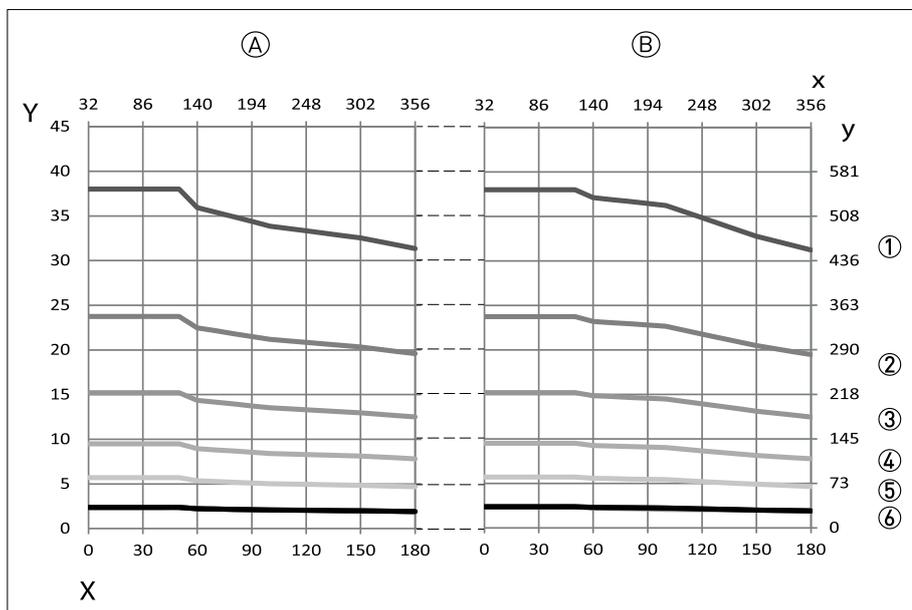


Figure 6-6: Pressure derating; EN 1092-1

- ① PN 40
- ② PN 25
- ③ PN 16
- ④ PN 10
- ⑤ PN 6
- ⑥ PN 2.5

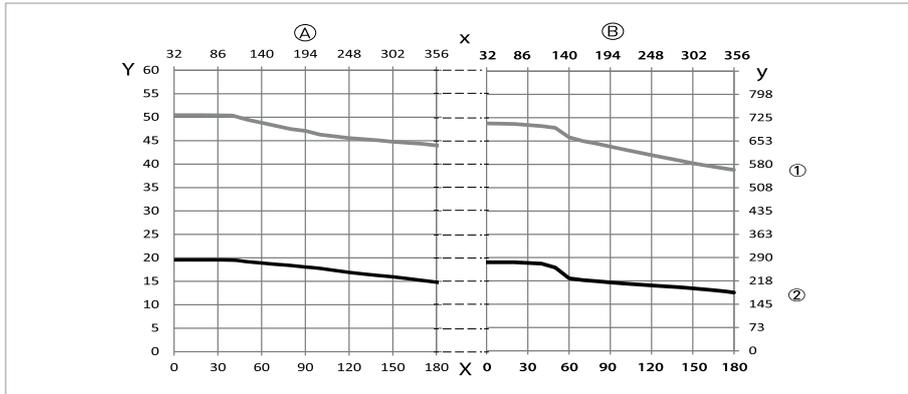


Figure 6-7: Pressure derating; ANSI B16.5

- ① 300 lbs
- ② 150 lbs

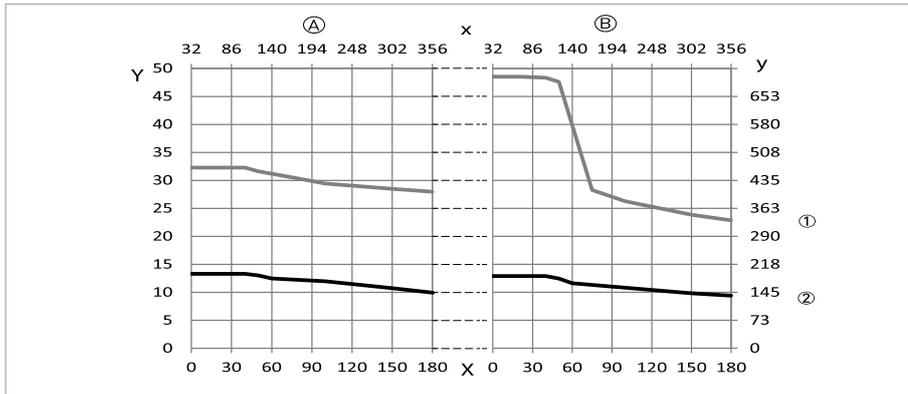


Figure 6-8: Pressure derating; JIS B2220

- ① 20K
- ② 10K

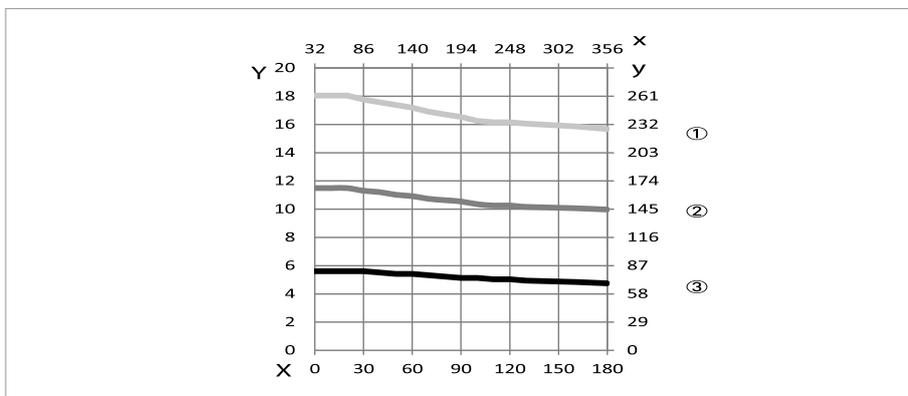



Figure 6-9: Pressure derating; AWWA C207

- ① Class D1 [4...12"]
- ② Class D2 [>12"]
- ③ Class B

6.7 Vacuum load

Diameter	Max. pressure	Vacuum load in mbar abs. at a process temperature of									
		[mm]	[bar]	40°C	60°C	70°C	80°C	90°C	100°C	120°C	140°C
Liner in PTFE											
DN10...20	50	0	0	0	0	0	0	0	500	750	1000
DN200...300	50	500	750	1000	1000	1000	1000	1000	1000	1000	1000
DN350...600	50	800	1000	1000	1000	1000	1000	1000	1000	1000	1000
Liner in PFA											
DN2.5...150	50	0	0	0	0	0	0	0	0	0	0
Liner in ETFE											
DN200...2000	150	100	100	100	100	100	100	100	100	-	-
Liner in Hard rubber											
DN200...300	150	250	400	400	400	-	-	-	-	-	-
DN350...3000	150	500	600	600	600	-	-	-	-	-	-
Liner in PU											
DN200...1800	1500	500	600	-	-	-	-	-	-	-	-
Liner in Soft rubber											
DN50...600	40	1000	1000	-	-	-	-	-	-	-	-

Diameter	Max. pressure	Vacuum load in psia at a process temperature of									
		[inch]	[psi]	104°F	140°F	158°F	176°F	194°F	212°F	248°F	284°F
Liner in PTFE											
3/8...3/4"	725	0	0	0	0	0	0	0	7.3	10.9	14.5
8...12"	725	7.3	10.9	14.5	14.5	14.5	14.5	14.5	14.5	14.5	14.5
14...24"	725	11.6	14.5	14.5	14.5	14.5	14.5	14.5	14.5	14.5	14.5
Liner in PFA											
1/10...6"	725	0	0	0	0	0	0	0	0	0	0
Liner in ETFE											
8...72"	2176	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	-	-
Liner in Hard rubber											
8...12"	2176	3.6	5.8	5.8	5.8	-	-	-	-	-	-
14...120"	2176	7.3	8.7	8.7	8.7	-	-	-	-	-	-
Liner in PU											
8...72"	21756	7.3	8.7	-	-	-	-	-	-	-	-
Liner in Soft rubber											
2...24"	580	14.5	14.5	-	-	-	-	-	-	-	-

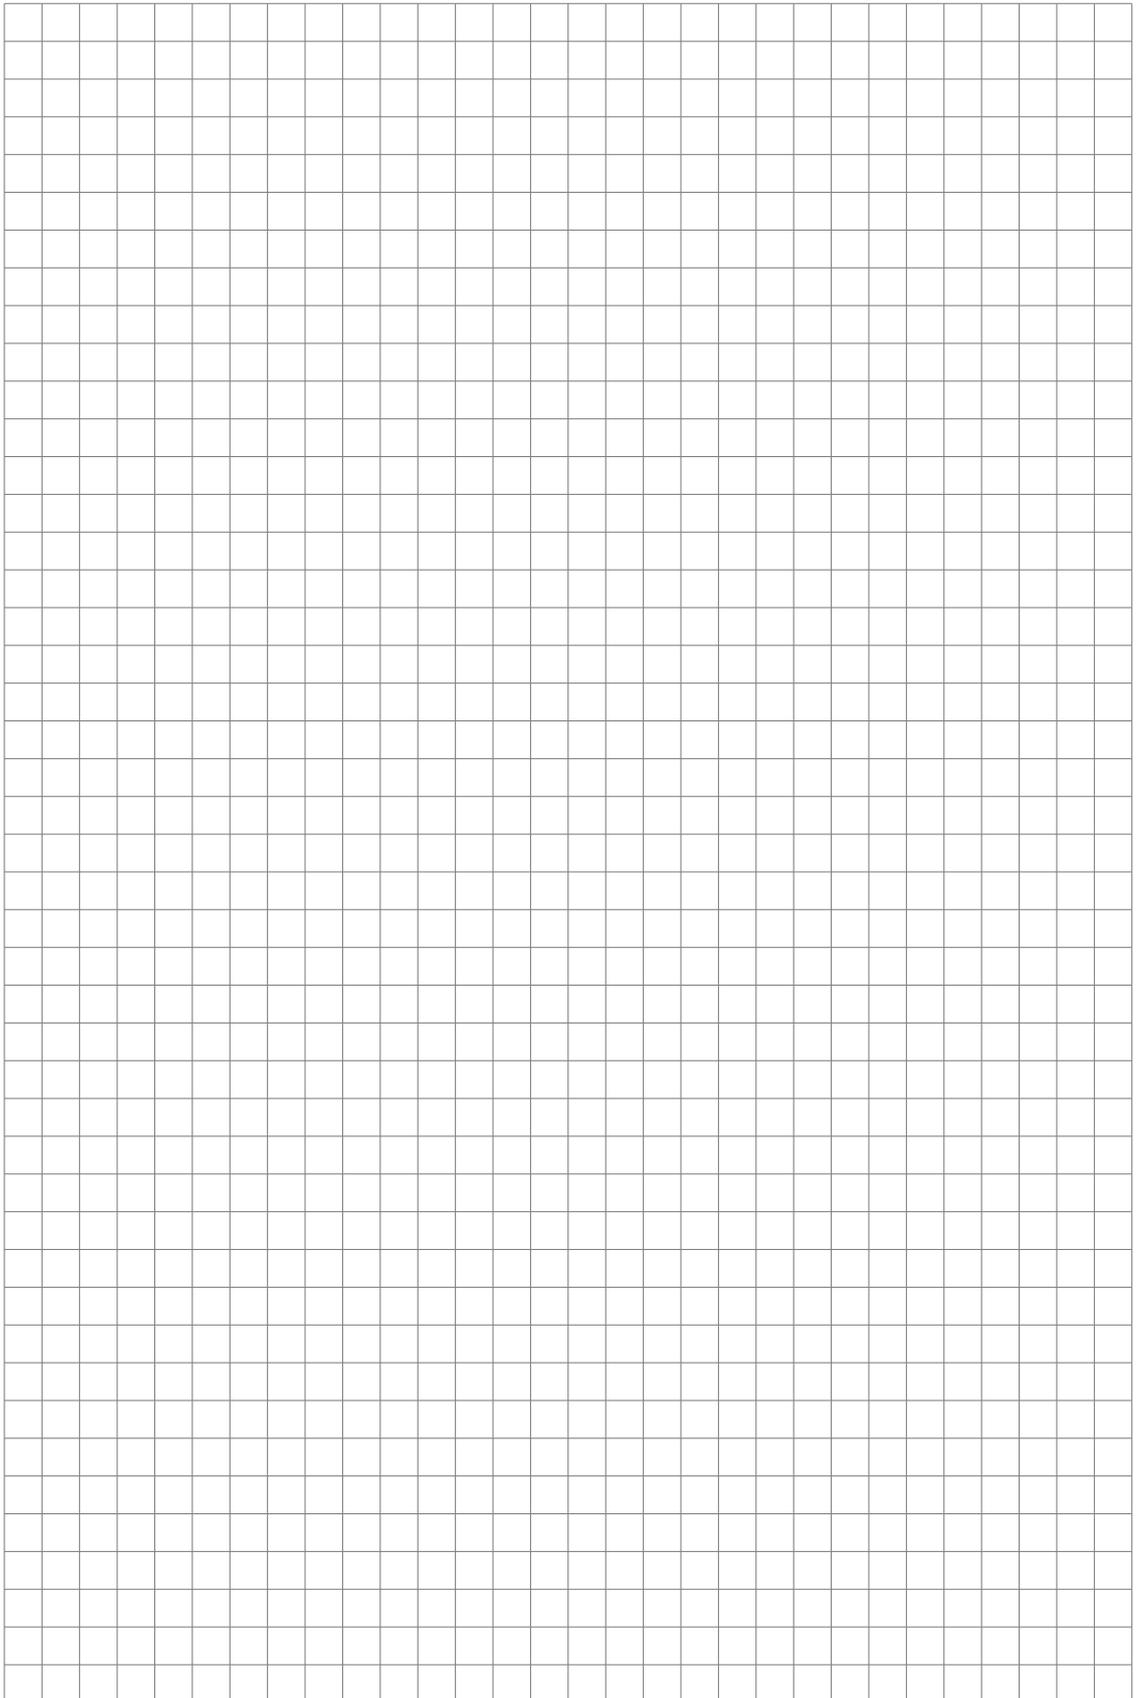

KROHNE – Products, Solutions and Services

- Process instrumentation for flow, level, temperature, pressure measurement and process analytics
- Flow metering, monitoring, wireless and remote metering solutions
- Engineering, commissioning, calibration, maintenance and training services

Head Office KROHNE Messtechnik GmbH
Ludwig-Krohne-Str. 5
47058 Duisburg (Germany)
Tel.: +49 203 301 0
Fax: +49 203 301 10389
info@krohne.de

The current list of all KROHNE contacts and addresses can be found at:
www.krohne.com

KROHNE