## **Midas Gas Detector**

## Honeywell



## **Operating Instructions**

- **TOC**
- General Description
- Product Overview
- Default Configuration
- Installation
- Detector Start-up
- General Operation

- Navigating Menus
- Routine Maintenance
- Pyrolyzer Module Options
- LonWorks<sup>®</sup> Interface
- Troubleshooting/Faults
- Reflex®
- Internal Web Server

- Installation Topologies
- Ordering Information
- Specifications
- Calibration/Bump Testing
- Modbus/TCP Interface
- Gas Tables
- Warranty



## Midas<sup>®</sup> Gas Detector

Table of Contents
Contents
1 General Description
<u>1 General Description</u> 1-2
2 Product Overview
2 Product Overview
2.1 Main Chassis
2.1.1 Display
2.1.2 Pump Module
2.1.3 Sensor Cartridge Chamber
2.2 Mounting Bracket Assembly2-3
2.2.1 Mounting Bracket2-4
2.2.2 Terminal Module
2.3 Sensor Cartridge2-4
2.3.1 Biased Sensor Cartridges2-4
2.4 Cover
3 Default Configuration
3 Default Configuration
4 Installation
4 Installation
4.1 Mounting and Location of Detector4-2
4-4 44 45 45 46 46 46 46 46 46 46 46 46 46 46 46 46
4.3 Sample and Exhaust Tubing Calculations4-7
4.4 In-line Filters
4-8 4-8 4-8
4-8 4.6 Electrical Installation
4-11 4-11
4-23 <u>4.8 Refitting the Main Chassis</u>
4-23 <u>4.9 Installing the Sensor Cartridge</u>
5 Detector Start-Up Procedures
5-2 5 Detector Start Up Procedures

г

<u>6 General Operation</u>
<u>6 General Operation6-2</u>
<u>6.1 Normal Operation Mode @6-2</u>
6.1.1 Resetting Alarms, and Faults
<u>6.2 Review Mode 🕮</u>
6.2.1 Review Mode Menu Overview m
6.3 Overview of Set-up, Calibration and Test Mode
<u>6.3.1 Set-up Menu Overview 🔂6-6</u>
6.3.2 Calibration Menu Overview '4 CAL'6-8
<u>6.3.3 Test Menu Overview ' 🛆 tESt'6-9</u>
7 Detailed Procedures for Navigating Mode Submenus
7 Detailed Procedures for
Navigating Mode Submenus7-2
<u>7.1 Review Mode m</u>
7.1.1 Review Software 'SW'
7.1.2 Review Alarms ' ALm'
7.1.3 Review Faults ' $\Lambda$ FLt'
7.1.4 Review Calibration (CAL
7.1.5 Review Date and Time 'timE'7-3
7.1.6 Review Detector Address ' nEt'
<u>7.1.7 Review Event Log ' (♦ A Hi St'</u>
7.1.8 Review LCD Backlight Mode 'LCD'
7.2 Set-up, Calibration and Test Modes7-4
<u>7.2.1 Set-up Menu '₩SEt'</u>
<u>7.2.2 Set Alarms '</u> <b>ALm</b> '
<u>7.2.3 Set Faults '</u> <u>∆</u> <u>FLt</u> '
7.2.4 Set Calibration Interval (CAL'
7.2.5 Set Date and Time 'timE'
7.2.6 Set Address '
7.2.7 Set pass code '
7.2.8 Set LCD Backlight mode

7.2.9 Set Pump control frequency7-9
<u>7.3 Calibration Menu 'ൺCAL'7-10</u>
7.3.1 Zero Calibration ()0CAL
7.3.2 Span Calibration (ISPAn'
7.3.3 Flow Calibration (FLoW'
7.3.4 mA Calibration 'mA 4-20'7-12
7.4 Test Menu ' ChiteSt'
7.4.1 Bump Test (j bUmP'
<u>7.4.2 Alarm/Fault Test '</u>
7.4.3 Inhibit State ( InH'
7.4.4 Stimulate 4-20mA '4-20 mA'
8 Routine Maintenance
8-2 8 Routine Maintenance
8.1 Sensor Cartridge Replacement
8.1.1 Sensor Cartridge Fitting/Replacement
8.2 Pump Replacement
8.3 Reassembling the Detector
8.4 Filter Replacement
8.5 System Leak Check Procedure
9 Pyrolyzer Module Options
<u>9 Pyrolyzer Module Options</u>
9.1 Fitting the Pyrolyzer Module
9.2 Reassembling the Detector
9.3 Configuring the Detector
9.4 Replacing the Pyrolyzer Heater Block
10 Optional LonWorks <sup>®</sup> Interface Installation
<u>10 Midas LonWorks<sup>®</sup> Interface Module</u>
10.1 LonWorks <sup>®</sup> Installation 10-2
10.1.1 Fitting the LonWorks <sup>®</sup> Module
10.1.2 Wiring the Midas <sup>®</sup> for LonWorks <sup>®</sup>
10.1.3 Configuring the Midas <sup>®</sup> for LonWorks <sup>®</sup>

<u>10.2 LonWorks<sup>®</sup> Software</u>
<u>10.2.1 LonWorks<sup>®</sup>Overview10-4</u>
10.2.2 Network Variable Behaviors 10-5
10.2.3 Other Characteristics
11 Troubleshooting and Fault Diagnosis
11 Troubleshooting and Fault Diagnosis 11-2
<u>12 Reflex®</u>
<u>12 REFLEX®</u>
13 Internal Web Server
13 Internal Web Server
13.1 Physical Network Components
13.2 Internet Settings
13.3 Running the Web Browser
14 Typical Installation Topologies
14 Typical Installation Topologies
14.1 Conventional Installation
14.2 Modbus/TCP Installation
14.3 Power over Ethernet (PoE) Installation
15 Ordering Information
15 Ordering information
15.1 Midas <sup>®</sup> Transmitter
15.2 Midas <sup>®</sup> Pyrolyzer for NF <sub>3</sub>
15.3 Midas <sup>®</sup> High-Temperature Pyrolyzer for Perfluoro Compounds
15.4 Midas <sup>®</sup> LonWorks <sup>®</sup> Module
15.5 Midas <sup>®</sup> Complete Gas Detector Kits
15.6 Accessories and Spares
16 Specifications
16-2
17 Calibration and Bump Testing
17 Calibration and Bump Testing
A Modbus <sup>®</sup> / TCP Interface

A Modbus/TCP Interface
A.1 Reading Status from the Midas <sup>®</sup> A-2
A.2 Sending Commands to the Midas <sup>®</sup> A-5
A.3 Determining the MAC Address
B Gas Tables
C Warranty Statement
C-2 C Warranty Statement
Sensor Cartridge WarrantyC-3
Pyrolyzer WarrantyC-3



**Midas® Gas Detector** 

## **1** General Description


### **Midas® Gas Detector**

### **1** General Description

The Midas<sup>®</sup> gas detector is an extractive gas sampling system that draws a sample locally or from a remote point to a sensor cartridge that is located inside the detector's chassis. A wide range of Asphyxiant, Toxic, Flammable, Pyrophoric, Corrosive, and Oxidizer (including Oxygen) gas sensor cartridges are available that enable detection of gases used or generated in the Semiconductor and other industries.

Midas<sup>®</sup> is wall mounted and displays gas concentration, alarm, fault and status information via its backlit LCD and LEDs. A simple to use 4-button keypad located under the display provides the facility to set-up, review, operate and make changes to the detector's configuration.

Midas<sup>®</sup> has flexible power and communications capabilities built in as standard. These include 3 on board relays, 0-21 mA analog output, Modbus/TCP outputs for signal and service connectivity as well as the innovative Power over Ethernet (PoE) connection that enables a single Ethernet connection to be made for all power, control and communication requirements. An optional LonWorks<sup>®</sup> interface is available.

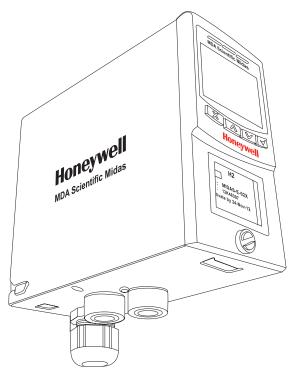





## **2 Product Overview**



### **2 Product Overview**

The Midas<sup>®</sup> gas detector comprises of 4 parts: the main chassis, the mounting bracket assembly, the sensor cartridge and the unit cover. Diagram 2-1 details the Midas<sup>®</sup> general arrangement. Additionally, optional Pyrolyzer modules for the detection of NF<sub>3</sub> or various PFCs and an optional LonWorks<sup>®</sup> module are available. Please refer to <u>Section 9</u> and <u>10</u> respectively for details of these options.




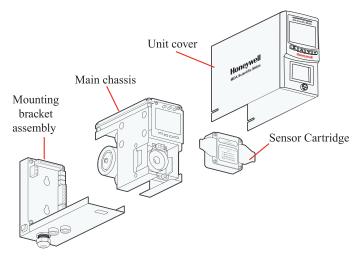

### 2.1 Main Chassis

The main chassis comprises of the display, pump assembly, and plug in sensor cartridge chamber.



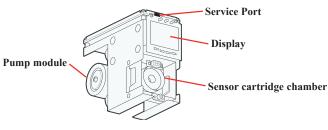


### **A**Caution

The Service Port is only for use with approved connectors by Honeywell Analytics service personnel operating a system diagnostic. Unauthorized connection to this port may lead to damage of the Midas<sup>®</sup> and external equipment and will not be covered by the normal product warranty conditions.

### 2.1.1 Display

The display is located at the front of the main chassis and consists of a large alphanumerical and graphical backlit LCD, 3 LED indicators and a 4-button keypad. Under normal operation the LCD and LEDs display gas concentration, alarm and system status. In set-up, review, calibration and test modes, the LCD shows the relevant menu options. These menus are simply navigated using the ' $\blacktriangle$ ' up, ' $\checkmark$ ' down, ' $\checkmark$ ' accept and 'X' cancel buttons.

Diagram 2-3. Midas<sup>®</sup> display module layout 1.

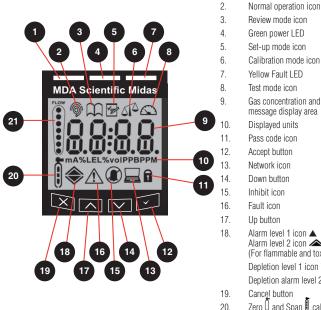

### 2.1.2 Pump Module

Set-up mode icon Calibration mode icon Yellow Fault LED Test mode icon Gas concentration and message display area Displayed units Pass code icon Accept button Network icon Down button Inhibit icon Fault icon Up button Alarm level 1 icon 🔺 Alarm level 2 icon 本 (For flammable and toxic) Depletion level 1 icon Depletion alarm level 2 💙 Cancel button Zero 🛛 and Span 🗓 calibration icons

Red alarm LED

21. Flow indicator

The pump module is located at the back of the main chassis. It draws the gas sample from the inlet port located at the bottom of the mounting bracket assembly via an inline filter to the sensor cartridge chamber located at the front of the main chassis. The inline filter is to protect the elements after the sensor. The sample goes from the inlet straight to the sensor face, and then through the rest of the flow system. The sample is then exhausted via the exhaust port located at the bottom of the mounting bracket assembly. The pump and filter assemblies are designed for easy replacement. For replacement details refer to Sections 8.2 and 8.4 respectively.


### 2.1.3 Sensor Cartridge Chamber

The sensor cartridge chamber is located at the front of the main chassis below the display module. The plug in sensor cartridge is fitted into this area which makes the electrical connection between the sensor cartridge and the rest of the electronics as well as providing the chamber where the sensor cartridge is exposed to the sampled gas. This connection is lightly lubricated for ease of sensor replacement. Avoid contact of sensor cartridge chamber with contaminants (such as dust and debris). For details of fitting sensor cartridge refer to Section 4.9.

### 2.2 Mounting Bracket Assembly

The mounting bracket assembly comprises of the detector mounting bracket, the terminal module, the gas sample inlet and outlet ports, the cable/conduit entry and Ethernet (Modbus/TCP) communications socket.

#### **Diagram 2-4. Mounting bracket assembly**

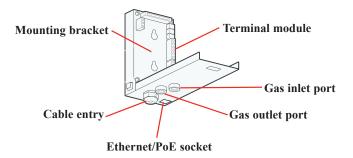

### 2.2.1 Mounting Bracket


The metal mounting bracket has two slots that allow the detector to be easily mounted to a wall using two suitable screws (DIN rail or horizontal mounting options are also available). For further details of mounting the detector refer to <u>Section 4</u>.

### 2.2.2 Terminal Module

The terminal module is located on the mounting bracket. All electrical connections to Midas<sup>®</sup> are made via this module. Wire entry to the terminal module area is via the PG16 cable entry/conduit entry located at the bottom of the mounting bracket assembly.

### 2.3 Sensor Cartridge

A wide range of Flammable, Pyrophoric, Corrosive, and Oxidizer (including Oxygen) sensor cartridges can be fitted to Midas<sup>®</sup>. The plug in sensor cartridges are fitted in the sensor cartridge chamber at the front of the main chassis. To access the chamber the unit cover is removed by unscrewing the thumbscrew located at the front of the detector. The pre-calibrated smart sensor cartridges can easily be fitted or replaced as they simply plug into the detector without the need for any tools. The sensor cartridge is firmly held in place by two locking tabs. Some cartridges are shipped with a protective cap to shield them from contaminants during shipping. This cap must be removed before inserting the cartridge into the Midas<sup>®</sup> unit, failure to do so may damage the Midas<sup>®</sup> transmitter.

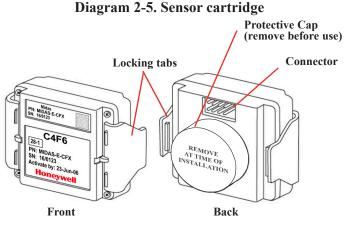

### 2.3.1 Biased Sensor Cartridges

Some sensor cartridges are shipped with a battery powered electrical supply in order to keep the cell effectively 'warmed up' and ready to monitor once installed in the Midas<sup>®</sup> unit. Battery powered bias circuits are supplied for TEOS, NO, and CO<sub>2</sub>. The bias circuit is removed just before insertion into the Midas<sup>®</sup> system and the sensor cartridge is thus ready sooner for effective gas detection.

Should a bias voltage not be applied (e.g. during a power failure), the cell will take a longer time to recover before effective gas detection can take place. The longer the loss of applied power, the longer the recovery time. During this recovery time, there is a chance for false/inaccurate readings. Refer to the relevant sensor cartridge data sheet for information on each sensor cartridge.

In order to avoid the risk of loss of gas detection due to unforeseen power loss, we recommend that a power management solution such as uninterruptible power supplies are used.



Sensor warranty is void if the sensor cartridge


is opened by unauthorized user.

### 2.4 Cover

Note

The standard cover provides environmental protection and fits over the top, front and sides of the main chassis. The front panel has viewing windows for the LCD, LEDs and sensor cartridge fitted in the sensor cartridge chamber. Underneath the LCD window are the 4 push buttons used for navigating the detector's software menus. The cover is easily removed to allow access to the chassis by unscrewing the thumbscrew on the front panel and pulling the cover forwards off the main chassis.

Midas units fitted with a pyrolyzer utilize a ventilated cover due to the high temperatures generated by the pyrolyzer unit (See Diagram 2-7)

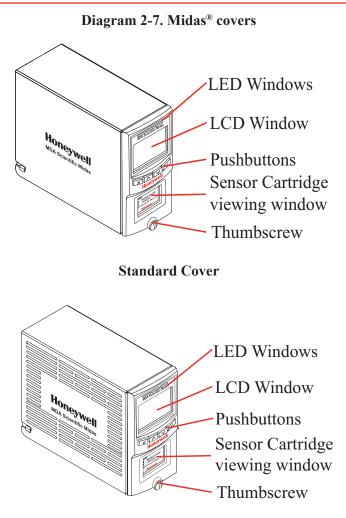

Ventilated Pyrolyzer Cover



## **3 Default Configuration**



### **3 Default Configuration**

As standard, the Midas<sup>®</sup> gas detector is factory configured as below:

Current source with:	1.0 mAFault2.0 mAInhibit3.0 mAMaintenance Fault4.0 to 20.0 mAGas reading (normal operation)21.0 mAOver range				
	Toxic Gas	Flammable Gas	Oxygen		
Full Scale (FS)	) Typically 4 x Threshold Limit 100% Lower Explosive Limit Value (TLV) (LEL) 1		25% Volume (v/v)		
Lowest Alarm Level (LAL) Typically 1/2 TLV		10% LEL	5% v/v		
Lower Detectable Limit	Typically 0.4 TLV	9% LEL	0% v/v		
(LDL)	The LDL is the minimum level that is reliably distinguishable from zero.				
Alarm 1	1/2 TLV	10% LEL	23.5% v/v (Rising)		
(Relay 1)	Normally de-energized, energizes on alarm. Contact Normally Open (NO), closes on alarm.				
Alarm 2	TLV	20% LEL	19.5% v/v (Falling)		
(Relay 2)	Normally de-energized, energizes on alarm. Contact Normally Open (NO), closes on alarm.				
Fault (Relay 3)	Normally energized, de-energizes on fault. Contact Normally Open (NO). Instrument Fault Only				
Latching	Latching. Alarm and fault relays DO NOT automatically reset when reading falls below alarm thresholds. Relays MUST be manually reset.				
Pass code	No pass code set.				
IP Address	169.254.60.47 subnet mask 255.255.255.0				

#### Table 3-1. Midas<sup>®</sup> default configuration

<sup>1</sup> Midas<sup>®</sup> detectors are not ETL approved for monitoring in or sampling from classified areas above 25% LEL

See Table 7-3 for more information on Relay Configuration



## **4** Installation




### **4** Installation

For ease of installation Midas® has been designed to allow the installation of the mounting bracket assembly and terminal module separately from the other parts of the detector. The detector location and hard wiring can therefore be completed before fitting the detector's main chassis and sensor cartridge.

### WARNING


Midas<sup>®</sup> is designed for installation and use in indoor safe area non-explosive atmospheres. Installation must be in accordance with the recognized standards of the appropriate authority in the country concerned. Prior to carrying out any installation ensure local regulations and site procedures are followed.

Diagram 4-1. Midas<sup>®</sup> outline dimensions

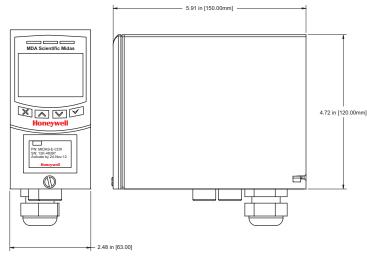

### 4.1 Mounting and Location of Detector

The Midas<sup>®</sup> gas detector has an integral mounting bracket assembly that is easily mounted to a suitable vertical surface such as a wall, tool housing, mounting plate on a pole etc.

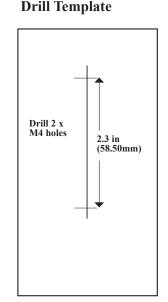


#### Note

This drill template is *not* to scale. The Midas Ouick Start Guide (MIDAS-A-020) contains a full scale drawing.

Ensure all measurements are correct before using as an actual drill template.

Use 2 x M4 Screws or equivalent for mounting (head size 6-12 mm(1/4" - 1/2"))

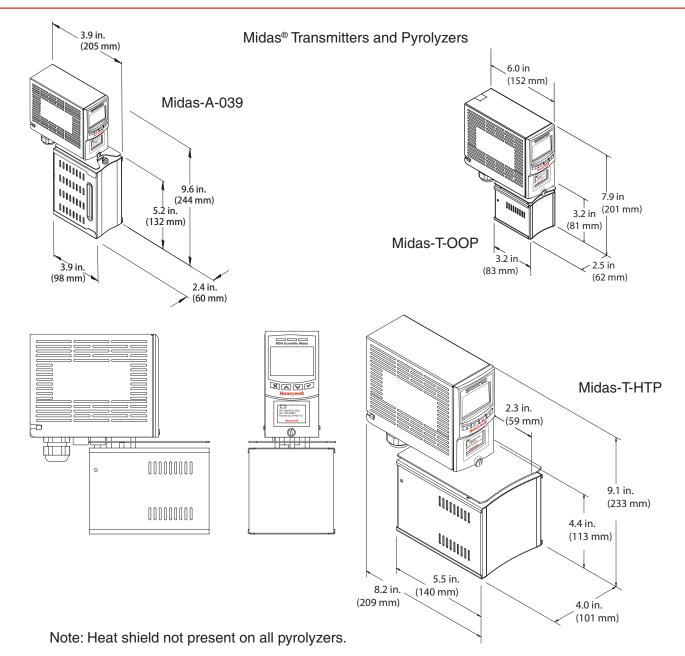

Below are some considerations when installing the Midas<sup>®</sup> Gas Detector:


- 1. Mount the detector on a surface that is flat, firm and suitable for its size and weight.
- 2. Use the drill template supplied to drill the holes for the fixings.
- 3. Use fasteners appropriate for the surface being mounted to.
- 4. Ensure the head size of fastener used will not snag the terminal PCB 6-12 mm (.25 in .5 in).
- 5. Consider the conduit/cable weight and its stress on the installation.
- 6. Position the detector so that it can be easily accessed.
- 7. Position the detector so that it is at a suitable height (normally eye level) for the display to be clearly seen.
- Take into consideration the space required to remove the detector's cover and locking/ unlocking the sensor cartridge locking clips. Minimum recommended spacing between multiple Midas<sup>®</sup> units is 82 mm (3.23 in).
- Take into consideration the space required for sample inlet and exhaust tubing (for remote monitoring), and for the inlet filter (for local monitoring).
- 10. Take into consideration the space required for cable or conduit access.


### 4.2 Mechanical Installation

The following steps and diagrams show how to separate the mounting bracket assembly from the main chassis and mount it on a vertical flat surface.

- 1. Unscrew the thumbscrew located on the front panel.
- 2. Remove the cover by pulling it forwards off the main chassis. Be sure to remove the internal packing card securing the pump. Failure to remove this packing will result in damage to the Midas<sup>®</sup> unit. (See Diagram 4-2)
- 3. Unscrew the two retaining screws located at the bottom front of the chassis.
- 4. Holding the mounting bracket assembly with one hand use the other to carefully pull the main chassis forward to disconnect it from the mounting bracket assembly.
- 5. Using the drill template provided drill two holes 58.50 mm vertically apart for 2 x round head M4 fixing screws.
- 6. Partially screw the fixings into the mounting surface.
- 7. Place the mounting bracket assembly over the screws so they pass through the mounting holes and then slide down to locate in the slots.
- 8. Tighten the screws to secure the mounting bracket assembly.

#### **Diagram 4-2. Mechanical installation**

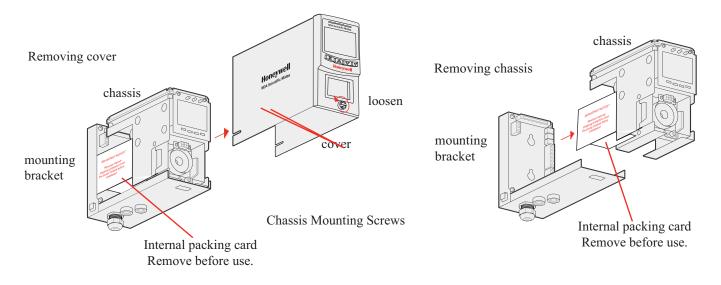

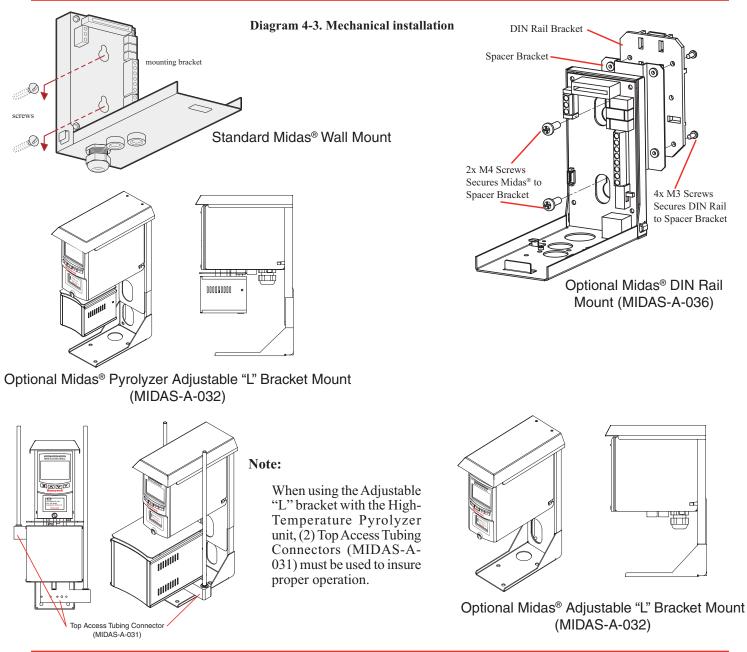

### 4.3 Sample and Exhaust Tubing Calculations Note

The following tables show the flow rate, tubing length, transport time, and maximum pressure and vacuum at the inlet and exhaust points. Tubing lengths vary among gases. See <u>Appendix B</u> for recommended lengths.

#### Table 4-1. Inlet sample specifications

Inlet Sample Specifications:				
	Maximum			
Tubing Length, m (ft)	30 (100)	20 (66)	10 (33)	0
Transport Time (sec), ID 1/8" 1	28	19	10	1
Transport Time (sec), ID 3/16"	63	43	23	1
Sample Point Vacuum (Negative pressure)	-25.4 cm $H_2O$ (-10 in $H_2O$ ) Maximum			
Flow rate, cc/min.	500 (Flow is constant) <sup>2</sup>			
Tubing OD, mm (in)	6.35 (0.25)			
Tubing ID, mm (in)	3.18 (0.125)			

<sup>1</sup> Honeywell Analytics recommends the thick-wall tubing (1/8" ID) for best speed of response.

<sup>2</sup> The flow rate is electronically maintained at approximately 500 cc/min and may vary within acceptable tolerances.

Table 4-2.	Outlet	sample	specifications
------------	--------	--------	----------------

Outlet Sample Specifications:		
	Maximum	
Tubing Length, m (ft)	30 (100)	
Back Pressure at Exhaust Point (Excluding tubing)	20.3 cm $H_2O$ (8 in $H_2O$ ) Maximum	
Tubing OD, mm (in)	6.35 (0.25)	
Tubing ID, mm (in)	4.76 (0.188)	

Honeywell Analytics recommends the use of Teflon FEP (Fluorinated Ethylene Polymer) tubing to assure proper sample transport. The properties of Teflon FEP make it the best choice for transporting sample toxic gases to instruments when compared with the properties of other similar tubing materials.

If the pressure/vacuum on the inlet/exhaust lines does not meet the recommended values in Tables 4-1 and 4-2, the following chart describes potential fault conditions that may be brought on by the external influences thus resulting in an F81 Flow Fault.

	External Flow	Fluctuation	Fault 81	Explanation
1	Low (0-150 cc/min)	None	No	Midas <sup>®</sup> will auto-adjust
2	Low (0-150 cc/min)	Yes (up to 100 cc/min flow swings)	Likely	Midas <sup>®</sup> changes the flow gradually. If external flow changes are large and rapid, the final reading will be different from what Midas <sup>®</sup> expected. Midas <sup>®</sup> will issue Fault 81.
3	Medium (~200-450 cc/min)	Yes and No	Yes	Minimum flow rate for the pump is ~300 cc/min. With this external flow, the auto-adjust cannot work because the pump cannot produce a flow at this low level. The problem is worse if there are flow fluctuations.
4	High (> 600 cc/min)	Yes and No	Yes	Midas <sup>®</sup> cannot reduce the external flow. Midas <sup>®</sup> will issue Fault 81 due to high flow

### 4.4 In-line Filters

External filters must be used to protect the tubing from contamination. Use particulate filter part number 780248 for normal gases and 1830-0055 or 1991-0147 for corrosive gases. Replace the filter every 3 months. Refer to Appendix B for specific gases.

### 4.5 Local Detector Option

The Midas<sup>®</sup> gas detector can also be used to monitor for gas at the location of the detector. To do this an inline filter is simply connected to the sensor cartridge gas inlet port. The external dust filter part number is 780248 for normal gases and 1830-0055 or 1991-0147 for corrosive gases. The area around the detector is then being monitored as opposed to a sample being drawn from a remote location.

#### Diagram 4-4. Local gas detector option


MIDAS-T-001 transmitter installed with in line particulate filter for local ambient monitoring mode



### 4.6 Electrical Installation

Access for the electrical wires to the terminal module is made via the PG16 cable gland located at the bottom of the mounting bracket assembly. The cable gland can be removed and replaced with a suitable conduit fitting if required. The wire routing of a typical installation is shown in the diagram below, wiring details are shown in <u>Diagram 4-6</u>.

#### Diagram 4-5. Typical wire routing

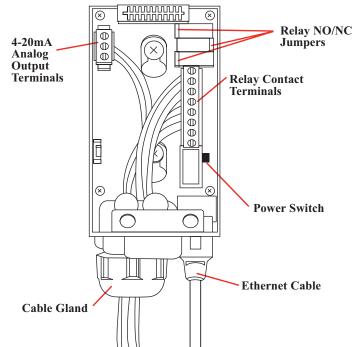

The terminals used are suitable for conductors of 24 to 14 AWG (0.5 to 1.8mm Dia.). The use of 16 AWG (1.5 mm Dia.) conductors is recommended.

If Power over Ethernet (PoE) is used to power the device, then 24 VDC power must <u>not</u> also be connected to the device, (or conversely if 24 VDC is used to power the Midas<sup>®</sup>, then electrical power via the Ethernet port must not be applied). Failure to observe this requirement may cause damage to the gas detection system and will not be covered by the standard warranty.

When connecting the wires ensure that the power switch is in the off position.


<u>Diagram 4-5</u> shows the terminal module layout and terminal identification as well as the jumper locations.

#### **Note: Earthing Requirements**

If the Midas<sup>®</sup> unit's metal chassis is not connected directly to a metal surface for earthing purposes, an additional earth wire will be required. Connect a wire via the PG16 gland to the dedicated earth tag (screw terminal) located on the bottom bracket and connect the other end of the wire to a dedicated external earthing point.

If Power over Ethernet (PoE) power supply is being used, shielded CAT5 Ethernet cable is recommended.

Please ensure that your wiring avoids earth ground loops that may affect the performance of your equipment

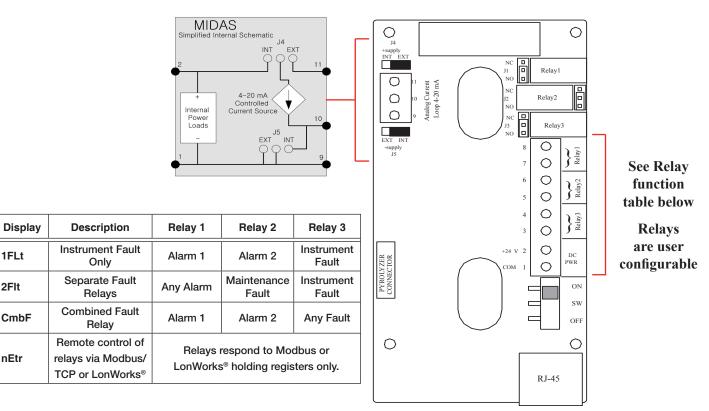

#### Diagram 4-6. Midas<sup>®</sup> terminal layout and identification

#### Note

The 3 relays onboard the Midas<sup>®</sup> unit can be controlled remotely from a separate controller system using Modbus/TCP commands (or via LonWorks<sup>®</sup> if the optional interface is used). In this remote mode, the relays cannot be controlled by the Midas<sup>®</sup> itself and only by the remote controller device (PLC, SCADA, etc.)

### **4.7 Electrical Connections**

Midas<sup>®</sup> can be powered by either 24 VDC via traditional discrete wiring or by approximately 48 VDC delivered through the Ethernet cable from a PoE source. In either case the 4-20 mA analog output can be used. This can be configured for fully isolated operation. With 24 VDC power the 4-20 mA output can be configured for sink, source or isolated output operations.. Below are some schematic diagrams of typical electrical connection

Diagram 4-7. Generic Example Midas<sup>®</sup> 4-Wire Isolated Output


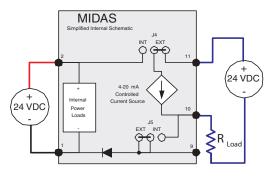


Diagram 4-8. Generic Example Midas<sup>®</sup> 3-Wire Sourcing

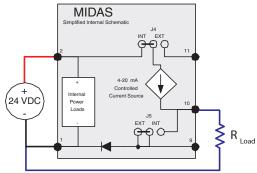

configurations. Specific wiring instructions for connecting a Midas to a Honeywell Analytics Sieger System-57<sup>™</sup> are provided on pages 4-12 to 4-16. Specific instructions for connection to a Honeywell Analytics TouchPoint<sup>™</sup> are provided on pages 4-17 to 4-20 and the HA71 on pages 4-21 and 4-22.

Note:

When wiring the Midas Transmitter to a controller, program the controller for a 1-2 second delay before reporting to prevent false alarms.

Diagram 4-9. Generic Example Midas<sup>®</sup> 3-Wire Sinking Output

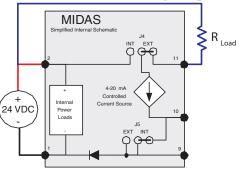
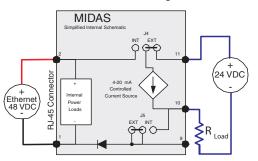


Diagram 4-10. Generic Example Midas<sup>®</sup> Isolated 4-20 mA Output w/PoE Power



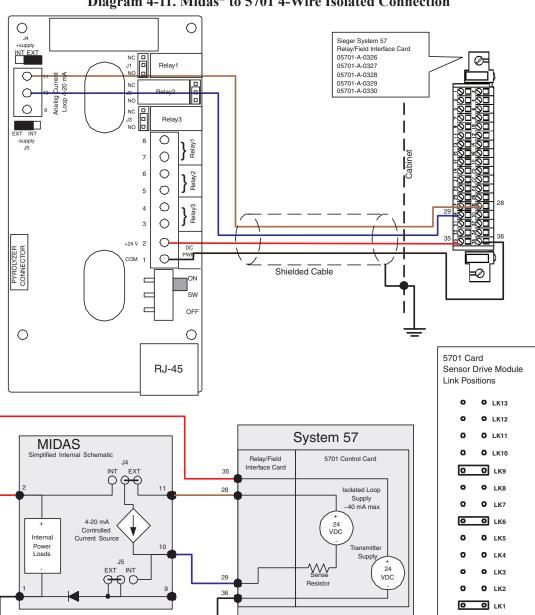
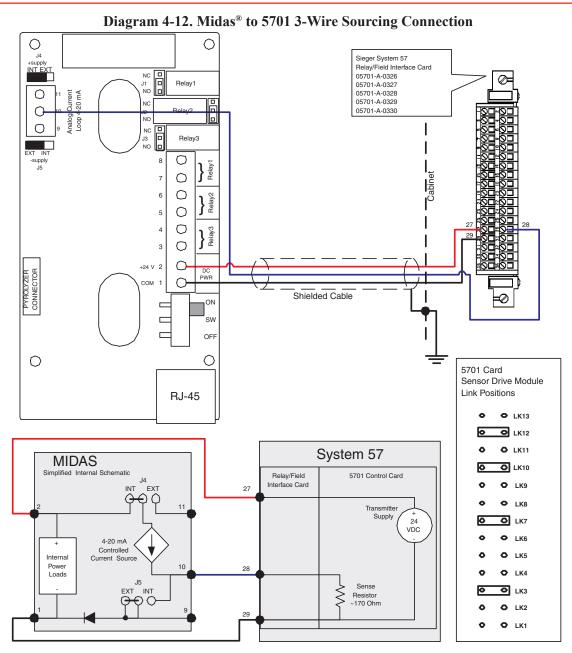


Diagram 4-11. Midas<sup>®</sup> to 5701 4-Wire Isolated Connection



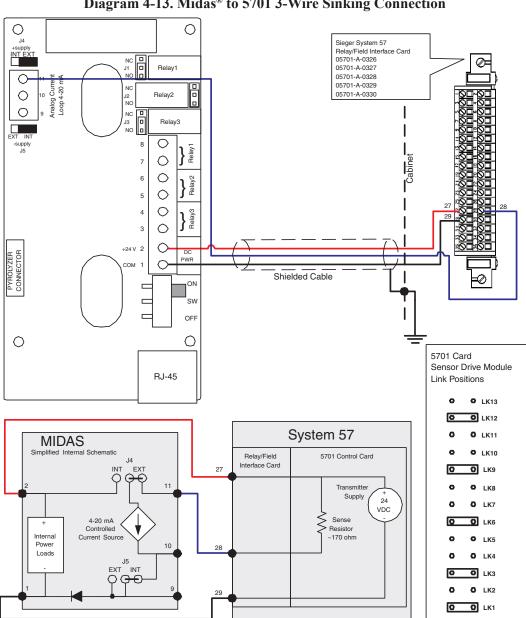


Diagram 4-13. Midas® to 5701 3-Wire Sinking Connection

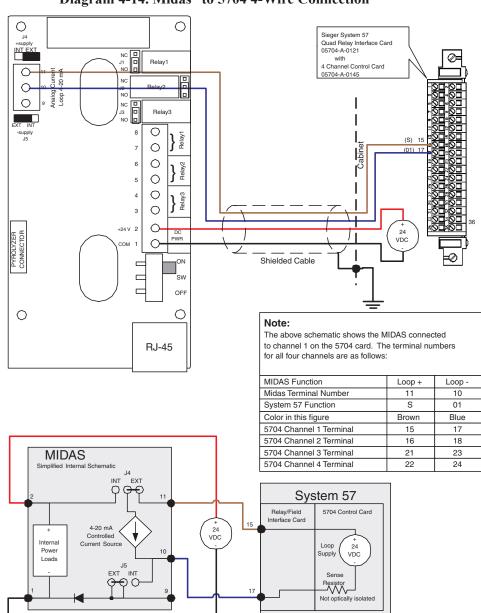


Diagram 4-14. Midas® to 5704 4-Wire Connection

#### Diagram 4-15. Midas<sup>®</sup> to 5704 3-Wire Sourcing Connection $\bigcirc$ 0 Sieger System 57 J4 Quad Relay Interface Card +supply INT EXT 05704-A-0121 with NC Ø= 4 Channel Control Card Relav1 J1 NO 05704-A-0145 urrent 20 m.A С B 20 1 NC NO Analog $\cap$ NC Cabinet JЗ Relay3 NO EXT INT $\bigcirc$ -supply J5 8 Relay1 0 7 (01) 17 $\bigcirc$ Relay2 6 (NS) 19 0 5 0 Relay3 4 24 $\bigcirc$ з VDC +24 V 2 C PYROLYZER CONNECTOR DC PWR сом O 1 Shielded Cable ON sw OFF $\bigcirc$ 0 Note: The above schematic shows the MIDAS connected RJ-45 to channel 1 on the 5704 card. The terminal numbers for all four channels are as follows: MIDAS Function Analog Out Common Midas Terminal Number 10 1 NS System 57 Function 01 MIDAS Color in this figure Blue Black Simplified Internal Schematic 5704 Channel 1 Terminal 17 19 .14 5704 Channel 2 Terminal 18 20 INT FXT 6 $\cap$ 24 5704 Channel 3 Terminal 23 25 11 VDC 5704 Channel 4 Terminal 24 26 4-20 mA System 57 Controlled Current Source Internal Power 10 Relay/Field 5704 Control Card Loads Interface Card J5 FXT INT 17 AD 0 Sense 9 $\leq$ Resistor



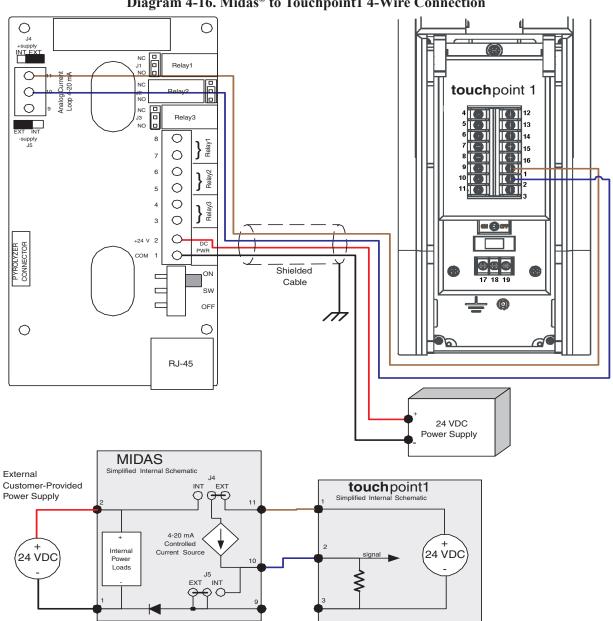


Diagram 4-16. Midas® to Touchpoint1 4-Wire Connection



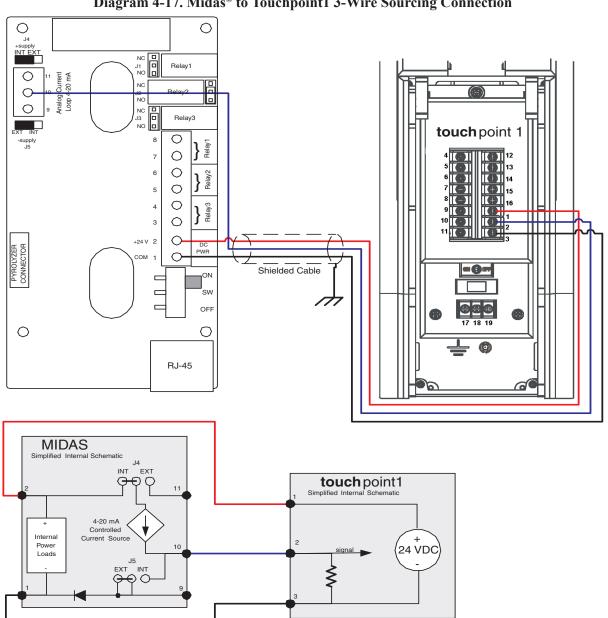


Diagram 4-17. Midas® to Touchpoint1 3-Wire Sourcing Connection



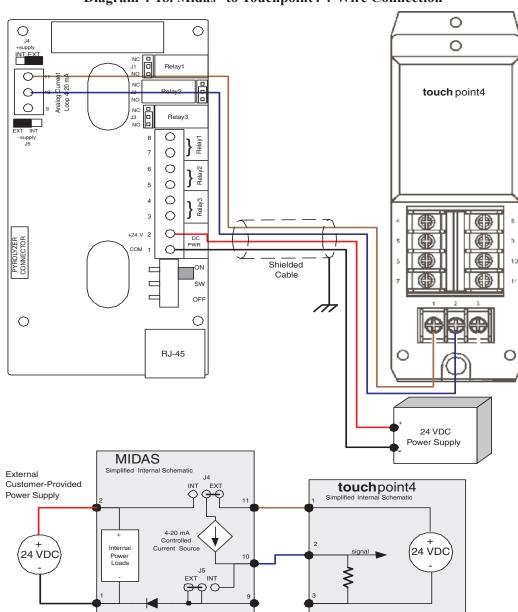


Diagram 4-18. Midas® to Touchpoint4 4-Wire Connection



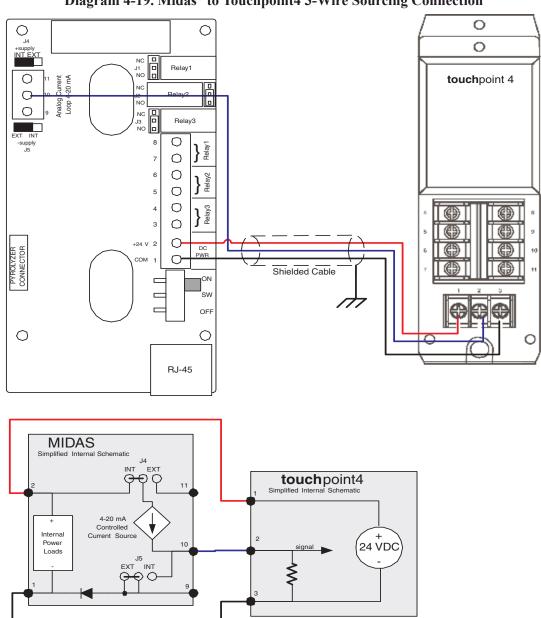


Diagram 4-19. Midas® to Touchpoint4 3-Wire Sourcing Connection

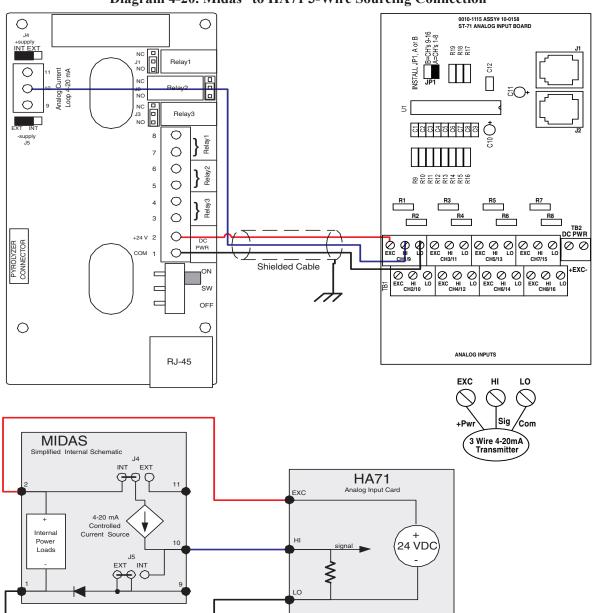


Diagram 4-20. Midas<sup>®</sup> to HA71 3-Wire Sourcing Connection


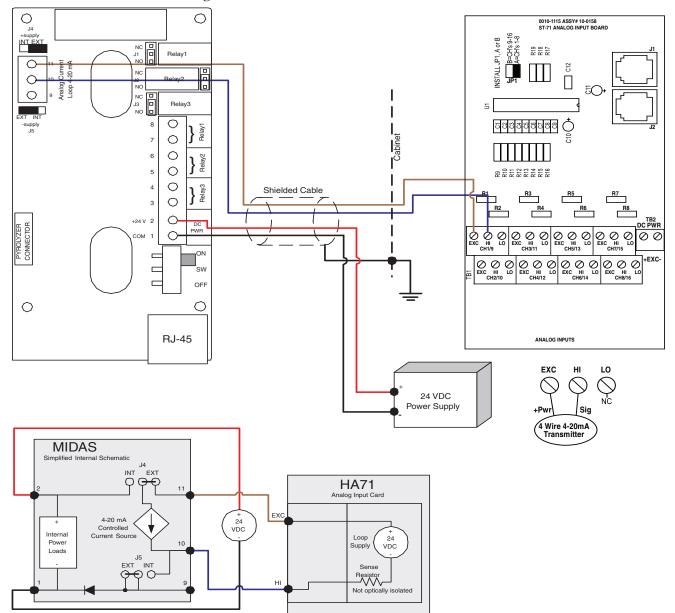


Diagram 4-21. Midas<sup>®</sup> to HA71 4-Wire Connection

### 4.8 Refitting the Main Chassis

The main chassis can be refitted to the mounting bracket assembly using the following steps.

- 1. Align the PCB at the top rear of the main chassis with the connector located at the top of the mounting bracket assembly
- 2. At the same time align the two tubes at the bottom rear of the main chassis with the two tubes located on the bottom of the mounting bracket assembly.
- 3. Slide the chassis backwards on the mounting bracket assembly so that the PCB and connector and tubes engage simultaneously. (See diagram below).
- 4. Ensure the PCB, connector and tubes are fully engaged by firmly pushing the main chassis horizontally backward on the mounting bracket assembly (WARNING: DO NOT PUSH ON THE LCD AS THIS MAY CAUSE DAMAGE).
- 5. Align the two attaching screws located at the bottom of the chassis with the screw threads on the mounting bracket assembly.
- 6. Tighten the screws to secure the chassis to the mounting bracket assembly.

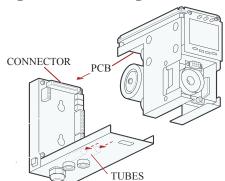


#### Diagram 4-22. Refitting the chassis.

### 4.9 Installing the Sensor Cartridge

The Midas<sup>®</sup> sensor cartridge is supplied separately and needs to be fitted to the detector's main chassis. The following steps and diagrams detail the procedure for installing the sensor cartridge for the first time. This procedure is carried out with the power off and the detector cover removed.

1. Verify the part number and type of sensor cartridge is correct for your application, then remove sensor cartridge from its packaging.

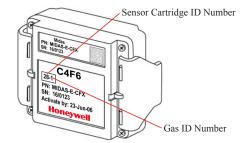

- 2. Remove cap from cartridge and bias battery (if applicable).
- 3. Add label for secondary gases (if necessary).
- 4. Align pins at the top of the sensor cartridge with the socket in the sensor cartridge chamber.
- 5. Carefully push the sensor cartridge into the sensor cartridge chamber until fully seated.
- 6. Lock the sensor cartridge in place using the tabs on either side of the sensor cartridge to secure the cartridge to the main chassis.
- 7. Switch the power switch on the terminal module to the 'on' position.
- 8. Reattach the detector cover by aligning the slots on either side with the locating tabs on the mounting bracket assembly.
- 9. Push the cover horizontally until fully seated.
- 10. Tighten the thumbscrew on the front panel.



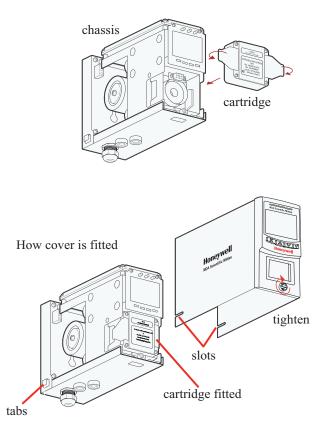


Diagram 4-23. Installing the sensor cartridge



When refitting the cover to the Midas<sup>®</sup> unit, use caution to prevent damage to the RFI shielding tabs attached to the chassis.



## 5 Detector Start-Up Procedures

## **5 Detector Start Up Procedures**

## **M** WARNING

Prior to carrying out any work ensure local and site procedures are followed. Ensure that the associated control panel is inhibited so as to prevent false alarms.

The following procedure should be followed carefully and only performed by suitably trained personnel.

- 1. Ensure the detector is wired correctly according to <u>Sections 4.6</u> and <u>4.7</u>.
- 2. Ensure that the correct sensor cartridge is fitted. (If the cartridge has not been stored at room temperature, allow one hour for equilibration.)
- 3. Ensure the on/off switch on the mounting bracket assembly is in the on position.
- 4. Apply power to the system.
- 5. After the start up routine the detector will display normal operating mode as shown in <u>Section 6</u>.
- 6. Perform a leak test as shown in <u>Section 8.5</u> to ensure all connections are secure.
- If using a multi gas sensor cartridge refer to <u>Section 7.2.2</u> to ensure the correct gas ID code is selected.
- Allow the detector to stabilize until the 'WArm' message is no longer displayed. The maximum warm up time is listed in Appendix B. Warm-up times are typically much faster.
- 8. If this is a first-time start up, an F49 or F88 fault code may be displayed; there is no actual fault and the fault message can be cleared by depressing the 'X' cancel button for 2 seconds.

To properly activate the Midas<sup>®</sup> with a cartridge for the first time:

- When 'Change Gas' scrolls on the display, hit the '√' on the Midas<sup>®</sup> front panel.
- When the 'reboot' completes then press and hold the 'X' to clear any latched fault(s).
- If "FIrSt CEII" is displayed, press '√'.

The cartridge has now been accepted by the Midas<sup>®</sup> as the correct type to be used.



## **6 General Operation**

## **6 General Operation**

After applying power to the detector, the display will go through a start up test routine illuminating in sequence all the LEDs, icons and digits of the display. The display will show the message 'WAlt' and 'LoAd' as it checks for cartridge data, typically less than 180 seconds. It will then display the message 'WArm' until the sensor cartridge reaches operating temperature. When complete, the detector will enter normal monitoring mode indicated by the '@' icon on the display cycling through three states (2 rings, 3 rings, 4 rings). The measured gas concentration will be shown on the display. The green LED will flash once every second indicating power and the sample flow rate indicator will be displayed. If monitoring is interrupted due to a fault, a test or calibration process or a user requested inhibit, the display will flash. For details of fault and maintenance fault codes refer to Section 11.

#### Note

The first time the Midas<sup>®</sup> is started with a new sensor cartridge, an F49 or F88 fault code may be displayed; there is no actual fault and the fault message can be cleared by depressing the '**X**' cancel button for two seconds.



Final Start Up Routine Screen



**Normal Operation** 

## 6.1 Normal Operation Mode <a>>>></a>

In this mode the detector displays gas concentration, alarm, fault and status information via its backlit LCD and front panel LEDs. Typical normal operation display and output states are shown below. See <u>Section 11</u> for a full list of fault codes.

#### Note:

The examples in Table 6-1 are for a linear 4-20 mA output over a full scale range of 2 ppm. The current output for a given gas concentration will be different for other full scale ranges (linear 4 mA = 0 % full scale to 20 mA = 100 % full scale). The alarm and fault relays are in default (latching) mode.

#### Table 6-1. Normal operation display and output states.

Operational	Delev status	4-20 mA output	LEDs	Backlight	Display	
State	Relay status	(for 2ppm range)		Classic Mode		
Alarm 2	Alarm relay 1 activated (common case) Alarm relay 2 activated Fault relay activated	8 mA (proportionate to concentration)	Green flash Red flash	Green	Red flash White flash	0°0.5 <u>0</u>
Greater than full scale	Alarm relay 1 activated Alarm relay 2 activated Fault relay activated	21 mA	Green flash Red flash	Green	White flash Yellow flash	
Inhibit	Alarm relay 1 de-activated Alarm relay 2 de-activated Fault relay activated	2 mA	Green flash	Green	Green	) 
Low flow rate	Alarm relay 1 de-activated Alarm relay 2 de-activated Fault relay activated	3 mA	Green flash Yellow on	Green	Yellow	
Low flow fault	Alarm relay 1 de-activated Alarm relay 2 de-activated Fault relay de-activated	1 mA	Green flash Yellow flash	Green	White flash Yellow flash	<b>₽</b> <b>₽</b>

### 6.1.1 Resetting Alarms, and Faults

The alarm function of Midas<sup>®</sup> can be set to latching (See <u>Set-up Mode</u>) so that when an alarm occurs the associated outputs remain activated even if the gas reading has dropped below the alarm level. To reset the latched alarm press the 'X' cancel button for 2 seconds. If the gas level is still above the alarm point you can reset the associated relay but it will activate again after the elapse of any alarm on delay that has been set.

If the alarm function is set to non-latching, the display will automatically clear when the alarm condition is cleared.

The fault function can also be set to latching. It can be reset by pressing the 'X' cancel button for 2 seconds. If the fault conditions persist, the fault will be reappear quickly.

If the fault operation is set to non-latching, the display will automatically clear when the fault condition is cleared.

### 6.2 Review Mode m

The detector settings can be reviewed safely without the possibility to make changes by using review mode. To select review mode press the ' $\blacktriangle$ ' up or ' $\nabla$ ' down button once. The review mode icon ' $\mathfrak{m}$ ' will show on the display and the first review mode menu icon is displayed.

### 6.2.1 Review Mode Menu Overview $\,$

The menu is simply navigated by using the ' $\blacktriangle$ ' up and ' $\triangledown$ ' down buttons to select the required menu, and then using the ' $\checkmark$ ' accept button to enter that submenu and

scroll through to view the settings. The 'X' cancel button can be used to exit the submenu and allow selection of a different submenu, or can be pressed again to exit to normal operating mode. When in review mode the unit will automatically return to the main normal operation status display if either an alarm level is exceeded or no button is pressed for 60 seconds.

<u>Table 6-2</u> shows an overview of the different review menus and how they are navigated. For a detailed step-by-step instruction of how to review the detector setting in review mode refer to <u>Section 7.1</u>.

Display	Screen 1	Screen 2	Screen 3	Screen 4	Screen 5	Screen 6	Screen 7	Screen 8	Screen 9	Screen 10
Software SW	Transmitter software revision	Checksum	Password key 1	Password key 2						
Alarms ALm 📚	Gas Selection	Alarm 1 direction: U: rising d: falling	Alarm 1 threshold	Alarm 2 direction: U: rising d: falling	Alarm 2 threshold	Alarm delay time	Alarm latching	Alarm relays normally energized/ de- energized		
Faults FLt ⚠	Fault relay configuration	Faults latching/ non- latching	Fault relays normally energized/ de- energized	Fault m12 occurrence frequency						
Calibration CAL	Days to calibration due	Days to cartridge expire	Year of last calibration	Month and day of last calibration						
Date/Time tImE	Year	Month - Day	Time							
Address nEt	Shows web access level	Use DHCP server for IP parameters	IP address byte 1	IP address byte 2	IP address byte 3	IP address byte 4	Subnet mask byte 1	Subnet mask byte 2	Subnet mask byte 3	Subnet mask byte 4
Event Log hiSt	Date of latest event	Time of latest event	Description of latest event	Date of second latest event	Time of second event	Description of second event	Repeat for events 3-7, 3 Displays per event			
LCD	Shows LCD Backlight Mode									

#### Table 6-2. Review menu overview.

# 6.3 Overview of Set-up, Calibration and Test Mode

## **M**WARNING

Set-up, calibration and test modes are intended for use by trained personnel or service engineers only. Access to these modes can be pass code protected by following the procedure in <u>Section 7.2.7</u>.

Set-up, calibration and test modes are used to make setting changes, calibrate and test the detector. To select set-up, calibration and test mode press and hold the ' $\blacktriangle$ ' up button or ' $\triangledown$ ' down button for one second. The unit will automatically go to the main normal operation status display from setup/calibration/test menus (but not from inside a setup/calibration/test function) if no button is pressed for 5 minutes or if an alarm level is exceeded.

PASS CODE: If a pass code has been set the display will show 0000 with the first 0 flashing. Use the ' $\blacktriangle$ ' up or ' $\checkmark$ ' down buttons to set the first digit of the pass code. Press ' $\checkmark$ ' to enter the first digit. The second digit will then flash. Repeat the process until all four pass code digits have been entered. Please record your pass code in a separate archive that can be securely retrieved. Failure to be able to retrieve your pass code may lead to delays in gaining access to all the protected functions in each Midas<sup>®</sup> unit. If an incorrect code is entered the display will show 'Err' and return to the normal operation mode. If a pass code is forgotten contact your local Honeywell Analytics service department.

After successfully entering the pass code (if set) the

first menu ' SET' set-up icon will show on the display.

The ' $\mathfrak{A}^{\circ}$  CAL' calibration or ' $\mathfrak{A}$  tESt' test menu can also be selected using the ' $\mathfrak{A}$ ' up or ' $\nabla$ ' down buttons. Press the ' $\checkmark$ ' accept button to enter the selected menu or the 'X' cancel button to return to normal operation mode.

### 6.3.1 Set-up Menu Overview 🖻

The set-up menu allows changes to be made to the detector alarm, fault, calibration interval, date/time and digital address settings. The menu is navigated using the ' $\blacktriangle$ ' up and ' $\blacktriangledown$ ' down buttons to select the required submenu and then using ' $\checkmark$ ' accept button to enter that submenu. The ' $\bigstar$ ' up and ' $\blacktriangledown$ ' down buttons are used to make changes to the selected setting and are confirmed using the ' $\checkmark$ ' accept button. The ' $\bigstar$ ' cancel button can be used to exit the submenu and allow selection of a different submenu, or can be pressed again to exit to the main set-up, calibration and test menu. Pressing the 'X' cancel button again returns the detector to normal operating mode.

#### Note

All settings in a submenu are accepted when the ' $\checkmark$ ' accept button is pressed after the last submenu setting. This saves the changes and is indicated by displaying 'UPdt' on the LCD. If however the 'X' cancel button is pressed at any time before the changes are accepted, this will cause any changes to be cancelled in that particular submenu.

<u>Table 6-3</u> shows an overview of the set-up submenus and how they are navigated. For a detailed step-by-step instruction of how to change the detector settings using the set-up menu refer to <u>Section 7.2</u>.

Display	Screen 1	Screen 2	Screen 3	Screen 4	Screen 5	Screen 6	Screen 7	Screen 8	Screen 9	Screen 10
Alarms ALm	Change gas ID for multi-gas sensors	Set alarm 1 direction: U: rising d: falling	Set alarm 1 threshold	Set alarm 2 direction: U: rising d: falling	Set alarm 2 threshold	Set alarm delay time	Set alarm latching	Set alarm relays normally energized/ de- energized		
Faults FLt	Set fault relay config: (1FLt, 2FLt, CmbF or nEtr)	Set fault latching/ non- latching	Set fault relays normally energized/ de- energized	Set fault m12 occurrence freq: 1m12:once Wm12: wkly 0m12: never						
Calibration CAL	Set calibration interval (MIDAS-S 0-365 days, MIDAS-E 0-730 days 0 = off)*									
Date/Time tImE	Set date format: dd:mm or mm:dd	Set year: yyyy (2003- 2030)	Set month: mm (01-12)	Set Day: dd (01-31)	Set hour: hh (00-23)	Set minute: mm (00-59)				
Address nEt	Set Web Access: WA Y: full access WA n: read only	Set Auto or Manual address: AU Y: DHCP AU n: man	Manual IP address byte 1	Manual IP address byte 2	Manual IP address byte 3	Manual IP address byte 4	Manual Subnet mask byte 1	Manual Subnet mask byte 2	Manual Subnet mask byte 3	Manual Subnet mask byte 4
Set Pass Code PWd	Press ▲ or ▼ to set pass code digit 1	Press ▲ or ▼ to set pass code digit 2	Press ▲ or ▼ to set pass code digit 3	Press ▲ or ▼ to set pass code digit 4	Press ▲ or ▼ to confirm pass code digit 1	Press ▲ or ▼ to confirm pass code digit 2	Press ▲ or ▼ to confirm pass code digit 3	Press ▲ or ▼ to confirm pass code digit 4		
LCD	Set backlight mode bm: C(classic mode) or bm: m (multi color mode)									
PUMP	Set pump control frequency									

#### \* MIDAS-E-LEL 0-1825 days

### 6.3.2 Calibration Menu Overview 'A CAL'

The calibration menu allows calibration of the detector zero, span, flow and 4-20 mA. The menu is simply navigated using the ' $\blacktriangle$ ' up and ' $\triangledown$ ' down buttons to select the required submenu and then using ' $\checkmark$ ' accept button to enter that submenu. The ' $\bigstar$ ' up and ' $\triangledown$ ' down buttons are used to make any changes to a selected setting and are confirmed using the ' $\checkmark$ ' accept button. The 'X' cancel button can be used to exit the submenu and allow selection of a different submenu, or can be pressed again to exit to the main set-up, calibration and test menu. Pressing the 'X' cancel button again returns the detector to normal operating mode.

The table below shows an overview of the calibration submenus and how they are navigated. For a detailed step-by-step instruction of how to change the detector calibration settings refer to <u>Section 7.2</u>.

#### Table 6-4. Calibration menu overview.

Display	Screen 1	Screen 2	Screen 3	Screen 4
Zero 0CAL Ĵ	Icon flashes alerting user to prepare to apply zero gas	Unit is zeroing	PASS is displayed if OK, fault code displayed if not.	
Span SPAn Î	Set gas ID code of calibration for multi-gas sensors only	Select if humidified: HUm or dry: drY calibration gas	Adjust value to display span gas concentration used	Display steadies and displays span gas reading, dots indicate progress. PASS is displayed if OK, fault code displays if not.
Flow FLoW	Icon flashes, display shows 0 indicating flow zero will be set.	Unit counts down from 10 to 0 and sets flow zero. Display shows 1st set point target flow rate. Use ▲ or ▼ to make reading on <u>external</u> flow meter +/- 50cc/min of set point 1	Use ▲ or ▼ to change the flashing display to the actual reading from the external flow meter	Unit counts down from 10 to 0 and sets 1st set point. Icon flashes and displays 2nd set point target. Repeat process to set.
4-20 mA 4-20 mA	4 mA is displayed indicating analog output should be 4 mA	Adjust until analog output is 4 mA Verify output with meter	20 mA is displayed indicating analog output should be 20 mA	Adjust until analog output is 20 mA Verify output with meter

### 6.3.3 Test Menu Overview ' C tESt'

The test menu is used to test the detector gas reading using bump test gas, and for simulation of alarm and fault display and output operation. The test menu also contains the detector Inhibit facility. Use the ' $\blacktriangle$ ' up and ' $\blacktriangledown$ ' down buttons to select either bump test or alarm/fault test. Press the ' $\checkmark$ ' accept button to enter that submenu.

The table below shows an overview of the test submenus and how they are navigated. For a detailed step-by-step instruction of how to test the detector operation refer to <u>Section 7.2</u>.

#### Note

In bump test mode, the Modbus/TCP outputs are not inhibited. Only the 4-20mA and alarm outputs are inhibited.

The bump gas test is a functional check only. Consult local guidelines for recommended best practices. Bump test concentrations recommended in <u>Appendix B</u> are calculated to generate a minimum first alarm level response.

#### Table 6-5. Test Submenu

Display	Screen 1	Screen 2	Screen 3	Screen 4
Bump bUmP (j)	Apply bump test gas and display shows measured gas concentration with all alarm outputs inhibited	Press 'X' to exit to test menu		
Alarm/fault SIm ��∕∆	Display shows 'Sim' and the A1 '▲' symbol. 4 states: ▲: alm 1 ▲: alm 2 ♠ flashing: inst flt ♠: maint flt	Display shows 'SuRE'.	Display flashes 'SIm' and simulates the selected A1, A2 or Fault display and output.	Press 'X' to exit and select another simulation or 'X' again to return to test submenu
Inhibit Inh ()	Press ▲ or ▼ to select ALm, ALm-Ft, ALL or nonE inhibit state	Set inhibit timeout period	UPdt is displayed and unit enters selected inhibit state. Display returns to submenu	
4-20 mA 4-20 mA	Display shows 'S XX' where XX is the mA value Press ▲ or ▼ for the desired mA output			



## 7 Detailed Procedures for Navigating Mode Submenus

## 7 Detailed Procedures for Navigating Mode Submenus

The following sections provide step-by-step procedures for navigating all the modes and submenus.

### 7.1 Review Mode m

Review mode allows the settings of the detector to be reviewed safely without any changes being made. Review mode consists of 7 submenus as shown in the table below:

Review submenu	lcon	Settings Displayed
Software	SW	Revision and checksum
Alarms	۶	Sensor cartridge and gas ID codes, alarm 1 and alarm 2 configuration and set points, time delay, latching/non latching, energized/de-energized
Faults	Â	Configuration, Latching/non latching, energized/de-energized
Calibration	Ĩ	Days left to next calibration due and date of last calibration
Time/Date	tlmE	Current year, date and time
IP address		Auto address selection on/off, IP address, sub net mask values.
Event log	\$\	View the date, time and details of the last seven alarm, fault and maintenance fault events

#### Table 7-1. Review mode submenus.

To select review mode from normal operation, press the ' $\blacktriangle$ ' up or ' $\triangledown$ ' down button once. The  $\bigcap$  icon will be displayed along with the first submenu icon. Press the ' $\blacktriangle$ ' up or ' $\triangledown$ ' down buttons to select a different submenu icon.

### 7.1.1 Review Software 'SW'

- 1. Select the software 'SW' submenu and press '√' to accept.
- 2. The software version number is displayed.
- 3. Press ' $\checkmark$ ' to display the software checksum
- 4. Press ' $\checkmark$ ' to display the password key 1.
- 5. Press ' $\checkmark$ ' to display the password key 2.
- 6. Press ' $\checkmark$ ' to return to step 1.
- 7. Repeat steps 1 through 4 to view the information again or press '▲' up or '▼' down to select another submenu.
- 8. Press 'X' to return to normal operation

### 7.1.2 Review Alarms ' ALm'

- The sensor cartridge ID (X) and the set gas ID code (Y) are displayed in the format (X Y). (See <u>Appendix B</u> for a list of sensor cartridge and gas ID codes).
- Press '√' to display if the level 1 alarm (L1) type is rising (U) or falling (d).
- Press '✓' to display the alarm 1 value along with the A1 icon'▲'.
- 5. Press '✓' to display if the level 2 alarm (L2) type is rising (U) or falling (d).
- Press '✓' to display the alarm 2 value along with the A2 icon '▲'.
- Press '✓' to display the alarm on delay (seconds).
- Press '✓' to display if the alarm output is set to latching (L) or non latching (nL).
- 9. Press '  $\checkmark$  ' to display if the alarm relays are set

to normally energized (nE) or normally deenergized (nd).

- 10. Press ' $\checkmark$ ' to return to step 1.
- 11. Repeat steps 1 through 7 to view the settings again or press '▲' up or '▼' down to select another submenu.
- 12. Press 'X' to return to normal operation.

## 7.1.3 Review Faults 'A FLt'

- Select the faults '<u></u>FLt' submenu and press '√' to accept.
- 2. The fault relay configuration (1FLt, 2 FLt, CmbF, or nEtr) is displayed. (See <u>Section 7.2.3</u> for details of fault relay configurations).
- 3. The fault output latching (L) or non latching (nL) setting is displayed.
- Press '√' to display the fault relay normally energized (nE) or normally de-energized (nd) setting.
- 5. Press ' $\checkmark$ ' to return to step 1.
- 6. Repeat steps 1 through 4 to view the settings again or press '▲' up or '▼' down to select another submenu.
- 7. Press 'X' to return to normal operation.

## 7.1.4 Review Calibration 'CAL'

- 1. Select the review calibration '**(**CAL' submenu and press '√' to accept.
- 2. The number of days remaining to the next calibration due date is displayed. If the number of days is set to zero then no further reminders will be displayed.
- 3. Press '✓' to display the number of days until cartridge expiration.
- 4. Press ' $\checkmark$ ' to display the year and press ' $\checkmark$ '

again to display the month and day of the last calibration.

- 5. Press ' $\checkmark$ ' to return to step 1.
- 6. Repeat steps 1 through 4 to view the settings again or press '▲' up or '▼' down to select another submenu.
- 7. Press 'X' to return to normal operation.

### 7.1.5 Review Date and Time 'timE'

- 1. Select the review date and time 'timE' submenu and press '√' to accept.
- 2. The current year setting is displayed.
- 3. Press ' $\checkmark$ ' to display the current month and day
- 4. Press ' $\checkmark$ ' again to display the current time.
- 5. Press ' $\checkmark$ ' to return to step 1.
- Repeat steps 1 through 5 to view the settings again or press '▲' up or '▼' down to select another submenu.
- 7. Press 'X' to return to normal operation.

### 7.1.6 Review Detector Address 'a nEt'

- 1. Select the review address '⊒ nEt' submenu and press '✓' to accept.
- 2. 'WA Y' or 'WA n' is displayed depending on whether full web access or read only has been selected.
- 'AU Y' or 'AU n' is displayed depending on if auto address detection is on (AU Y) or off (AU n).
- 4. Press '✓' to display the first part of the IP address preceded by the letter 'A'.
- 5. The dot on the upper left indicates that the first part of the IP address is being displayed.
- 6. Press ' $\checkmark$ ' to display the second part of the

address. The two dots on the upper left indicate the 2nd portion of the address.

- 7. Press '✓' again to display the third part and again to display the last part of the address.
- Press '✓' and the first part of the sub net mask values will be displayed preceded by the letter 'n'.
- 9. Press '✓' to scroll through the second, third and forth sub net values. The number of dots in the upper left indicate which part of the sub net address is being viewed.
- 10. Press ' $\checkmark$ ' to return to step 1.
- 11. Repeat steps 1 through 9 to view the settings again or press '▲' up or '▼' down to select another submenu.
- 12. Press 'X' to return to normal operation.

### 7.1.7 Review Event Log '

- 2. The number of logged data events available is indicated by the number of dots (0-7) shown on the left of the display.
- Press '✓' to view the date of the last recorded event.
- 4. Press ' $\checkmark$ ' to display the time of the event.
- 5. Press '✓' again to display the relevant alarm icon and event code.
- 6. Repeat to view next logged event details.
- 7. Press 'X' to return to normal operation.

#### Note

More detailed event log information can be viewed using the web browser feature. Refer to <u>Section 13</u> for further details

### 7.1.8 Review LCD Backlight Mode 'LCD'

- 1. Select the review 'LCD' submenu and press '✓' to accept.
- 2. The LCD Backlight mode setting is displayed.
- 3. Press 'X' to return to normal operation.

## 7.2 Set-up, Calibration and Test Modes

## WARNING

Set-up, calibration and test modes are intended for use by trained personnel or service engineers only. Access to these modes can be pass code protected by following the procedure in <u>Section 7.2.7</u>.

Set-up, calibration and test modes are used to make setting changes, calibrate and test the detector. To select set-up, calibration or test mode press and hold the ' $\blacktriangle$ ' up button or ' $\checkmark$ ' down button for a second to enter the menu. The unit will automatically go to the main normal operation status display from setup/ calibration/test menus (but not from inside a setup/ calibration/test function) if no button is pressed for 5 minutes or if an alarm level is exceeded.

PASS CODE: If a pass code has been set the display will show 0000 with the first 0 flashing. Use the ' $\blacktriangle$ ' up or ' $\bigtriangledown$ ' down buttons to set the first digit of the pass code. Press ' $\checkmark$ ' to enter the first digit. The second digit will then flash. Repeat the process until all four pass code digits have been entered. If an incorrect code is entered the display will show 'Err' and return to the normal operation mode. If a pass code is forgotten contact your local Honeywell Analytics service department.

#### Note

Should the passcode be activated, the unit will continue to detect gas and indicate maintenance and instrument faults.

After successfully entering the pass code (if set) the first menu 'BSET' set-up icon will show on the display. The 'A CAL' calibration or 'CtESt' test menu can also be selected using the 'A' up or 'V' down buttons. Press the ' $\checkmark$ ' accept button to enter the selected menu or the 'X' cancel button to return to normal operation mode.

### 7.2.1 Set-up Menu 'BSEt'

The set-up menu allows the settings of the detector to be changed. The set-up menu consists of 6 submenus as shown in the table below.

Set-up submenu	lcon	Changeable settings
Alarms	۲	Gas ID, alarm 1 and alarm 2 configuration, set points, time delay, latching/non latching, energized/ de-energized
Faults	Â	Configuration, latching/non latching, energized/ de-energized
Calibration	Ì	Calibration interval (days)
Time/Date	tlmE	Date format mm:dd or dd:mm, current year, month, day, hours, minutes
IP address		Auto address selection on/off, IP address, subnet mask values.
Pass code	A	Set pass code

#### Table 7-2. Set-up mode submenus.

#### Note

All settings in a submenu are accepted when the ' $\checkmark$ ' accept button is pressed after the last

submenu setting. This saves the changes and is indicated by displaying 'UPdt' on the LCD. If however the 'X' cancel button is pressed at any time before the changes are accepted, this will cause any changes to be cancelled in that particular submenu.

To select the set-up menu from normal operation, press the ' $\blacktriangle$ ' up button for a few seconds. Enter the pass code (if set). Use the ' $\bigstar$ ' up or ' $\triangledown$ ' down buttons to select the set-up menu ' $\boxdot$ ' icon and press the ' $\checkmark$ ' accept button.

### 7.2.2 Set Alarms '&ALm'

- Use the '▲' up or '▼' down buttons to select the set alarms '&ALm' submenu and press '√' to accept.
- 2. The flashing gas id code is displayed along with the gas cylinder and alarms icon 'ĵ ♣'.
- 3. Use the '▲' up or '▼' down buttons to change the gas ID number (only applicable on multi gas sensor cartridges- See <u>Appendix B</u>).
- 4. Press '√' to accept.
- 5. The flashing level 1 (L1) alarm type is displayed (U) rising or (d) falling.
- 6. Use the '▲' up or '▼' down buttons to change the alarm type.
- 7. The flashing alarm 1 value is displayed along with the icon '▲'.
- Use the '▲' up or '▼' down buttons to change the value.
- 9. Press '√' to accept.
- 10. The flashing level 2 (L2) alarm type is displayed (U) rising or (d) falling.
- 11. Use the '▲' up or '▼' down buttons to change the alarm type.

- 12. Press ' $\checkmark$ ' to display the flashing alarm 2 value **7.** along with the icon ' $_{a}$ '.
- 13. Use the '▲' up or '▼' down buttons to change the A2 value.
- 14. Press '✓' to display the flashing alarm on time delay (seconds).
- 15. Use the '▲' up or '▼' down buttons to change the alarm on time delay (seconds).
- 16. Press '✓' to display the flashing alarm output latching (L) or non latching (nL) setting.
- 17. Use the '▲' up or '▼' down buttons to change between the settings.
- Press '√' to display the flashing alarm relays normally energized (nE) or normally deenergized (nd) setting.
- 19. Use the '▲' up or '▼' down buttons to change between the settings.
- 20. Press '✓' to update all the changes (UPdt displayed) and return to step 1.
- 21. Press '▲' up or '▼' down to select another submenu.
- 22. Press 'X' to return to set-up, calibration and test menu selection.
- 23. Press 'X' again to return to normal operation.

#### Note

When replacing a single gas sensor cartridge with the same type single gas sensor cartridge, no change of gas confirmation is required. When changing a multi gas sensor cartridge with the same type multi gas sensor cartridge, the new sensor cartridge will assume the same previously set gas ID and will not request a change gas confirmation. See <u>Appendix B</u> for cartridge information.

#### 7.2.3 Set Faults 'AFLt'

- Use the '▲' up or '▼' down buttons to select the set faults '▲FLt' submenu and press '√' to accept.
- 2. The flashing fault relay configuration (1FLt, 2 FLt, CmbF or nEtr) is displayed.
- Use the '▲' up or '▼' down buttons to change the configuration. (See Table 7-3 for details of fault relay configurations)
- Press '√' to display the flashing fault output latching (L) or non latching (nL) setting is displayed.
- 5. Use the '▲' up or '▼' down buttons to change between the settings.
- Press '√' to display the flashing fault output normally energized (nE) or normally deenergized (nd) setting.
- 7. Use the '▲' up or '▼' down buttons to change between the settings.
- 8. Press ' $\checkmark$ ' to set the fault m12 frequency.
- 9. Use the '▲' up and '▼' down buttons to change between settings:

LCD Display	m12 Frequency
Wm 12	cartridge expiration weekly reminder
0m 12	no reminder
1m12	one-time reminder

- 10. Press '✓' to update all the changes (UPdt displayed) and return to step 1.
- 11. Press '▲' up or '▼' down to select another submenu.
- 12. Press 'X' to return to set-up, calibration and test menu selection.
- 13. Press 'X' again to return to normal operation.

Fault Relay Configuration	Relay 1	Relay 2	Relay 3
Instrument Fault Only (1FLt)	Alarm 1	Alarm 2	Instrument Fault
Separate Fault Relays (2FLt)	Any Alarm	Maintenance Fault	Instrument Fault
Combined Fault Relay (CmbF)	Alarm 1	Alarm 2	Any Fault
Network Remote Control (nEtr)		ontrol of relays	

Table	7-3.	Fault	relav	configuration	options
Lanc	1 0.	1 aur	I CIU y	connguiation	options

#### Note

Remote control of the relays can be facilitated using Modbus/TCP or LonWorks<sup>®</sup> control from a centralized control system. In this mode, the Midas<sup>®</sup> relays are only controlled via the remote system when set to nEtr.

### 7.2.4 Set Calibration Interval (CAL)

- 1. Select the set calibration interval 'I CAL' submenu and press '✓' to accept.
- 2. The flashing display shows the number of days interval after a calibration that a calibration due maintenance fault will be displayed.
- Use the '▲' up or '▼' down buttons to change the number of days. (If the calibration interval is set below '001' then 'OFF' will be displayed and no user calibration interval will be activated and no reminders displayed)
- 4. Press '✓' to update the change (UPdt displayed) and return to step 1.
- 5. Press '▲' up or '▼' down to select another

submenu.

- 6. Press 'X' to return to set-up, calibration and test menu selection.
- 7. Press 'X' again to return to normal operation.

### 7.2.5 Set Date and Time 'timE'

- 1. Select the set date and time 'timE' submenu and press '√' to accept.
- 2. The flashing display will show the current date format mm:dd or dd:mm.
- 3. Use the '▲' up or '▼' down buttons to change the date format.
- 4. Press '✓' to display the flashing current year setting.
- 5. Use the '▲' up or '▼' down buttons to change the year setting (between 2003 and 2030).
- 6. Press '✓' to display the flashing current month setting.
- Use the '▲' up or '▼' down buttons to change the month setting (between 1 and 12)
- Press '√' to display the flashing current day setting.
- 9. Use the '▲' up or '▼' down buttons to change the day setting (between 1 and 31)
- 10. Press '✓' to display the flashing hours of current time.
- Use the '▲' up or '▼' down buttons to change the hours setting (between 00 and 23).
- 12. Press '✓' to display the flashing minutes of current time.
- 13. Use the '▲' up or '▼' down buttons to change the minutes setting (between 00 and 59).
- 14. Press '✓' to update the changes (UPdt displayed) and return to step 1.
- 15. Press '▲' up or '▼' down to select another

submenu.

- 16. Press 'X' to return to set-up, calibration and test menu selection.
- 17. Press 'X' again to return to normal operation.

### 7.2.6 Set Address ' an Et'

#### Note

Default IP address is 169.254.60.47; subnet mask 255.255.255.0 (when using the LonWorks Interface Module, the default IP address must be used).

- 1. Select the set address '**⊒**nEt' submenu and press '√' to accept.
- Press '▲' up or '▼' down to select full web access (WA Y) or read only (WA n) and press '√' to accept.
- A flashing 'n' or 'Y' is displayed depending on if auto address detection is on (AU Y) or off (AU n).
- If automatic address detection (AU Y) is selected then the detector will automatically appoint a valid IP address when it reboots. The Midas<sup>®</sup> will display "UPdt" and request a reboot after this setting is accepted.
- If manual address setting (AU n) is selected press
   '√' to display the flashing first part of the IP address. The dot on the upper left indicates that the first part of the IP address is being displayed.
- Use the '▲' up or '▼' down buttons to change the address setting (between 0 and 255)
- 7. Press '✓' to display the second part of the address. The two dots on the upper left indicate the 2nd portion of the address.
- 8. Use the '▲' up or '▼' down buttons to change the address setting (between 0 and 255).

- 9. Repeat for the third and fourth parts of the IP address.
- 10. Press '✓' to display the flashing first part of the subnet mask value.
- 11. Use the '▲' up or '▼' down buttons to change the address setting (between 0 and 255).
- 12. Press '✓' accept and repeat for the second, third and fourth subnet values. The number of dots in the upper left indicates which part of the subnet address is being viewed.
- 13. Press '✓' to update the changes (UPdt displayed). The unit will request a reboot to implement the IP configuration.

#### Note

If the IP address is changed the new settings will not be implemented until the Midas<sup>®</sup> unit is rebooted.

### 7.2.7 Set pass code ' PWd'

- 1. Select the set pass code ' PWd' submenu and press '√' to accept.
- Press '▲' up or '▼' down to set the first pass code value. (Note: Holding down the button will increase the increment speed).
- 3. Press '✓' to enter the first value and move to setting the second value.
- 4. Press '▲' up or '▼' down to set the second value.
- 5. Press ' $\checkmark$ ' to enter and repeat for the third and forth values in the passcode.
- 6. To confirm the pass code re enter it again using the same procedure.
- 7. The new pass code will be saved after the last entry if the two entered passcodes are the same.

#### Note

Pass codes can be set between 0001 and 9999. Setting the pass code to 0000 will switch off the pass code. If a pass code is forgotten contact your local Honeywell Analytics service department. In the event that a pass code is forgotten by the user, Honeywell Analytics is not responsible for any costs associated with the recovery of the passcode nor for any inconvenience incurred while the user is unable to access protected settings. It is strongly advised that the user record all pass codes with the instrument serial number in a secure and separate location to the Midas® unit. Delays in recovering the lost passcodes may be experienced and are not the responsibility of Honeywell Analytics.

### 7.2.8 Set LCD Backlight mode

- 1. Select the set LCD mode 'LCD' submenu and press '√' to accept.
- 2. The flashing LCD Backlight mode configuration (bm:m or bm:c) is displayed.
- 3. Use the '▲' up or '▼' down buttons to change the configuration.
- Press '✓' to set LCD backlight mode. (UPdt displayed)
- 5. Press 'X' to return to set-up, calibration and test menu selection.
- 6. Press 'X' again to return to normal operation.

### 7.2.9 Set Pump control frequency

- 1. Select the set Pump Control Frequency 'PUmP' submenu and press '√' to accept.
- 2. The flashing Pump Control Frequency

configuration is displayed.

3. Use the '▲' up or '▼' down buttons to change the configuration.

(Note : Holding down the button will increase the increment speed.)

- Press '√' to set Pump Control Frequency. (UPdt displayed)
- 5. Press 'X' to return to set-up, calibration and test menu selection.
- 6. Press 'X' again to return to normal operation.

## 7.3 Calibration Menu 'a CAL'

The calibration menu allows the calibration settings of the detector to be changed. The calibration menu comprises of 4 submenus as shown in the table below.

Calibration submenu	Icon	Calibration setting
Zero	Ō	Set detector zero
Span	Î	Set detector span
Flow	Ō	Calibrate detector sample flow rate
mA	mA	Calibrate detector analog output

To select the calibration menu from normal operation, press the ' $\blacktriangle$ ' up button for a few seconds. Enter the pass code (if set). Use the ' $\blacktriangle$ ' up or ' $\triangledown$ ' down buttons to select the calibration menu ' $\backsim$ ' icon and press the ' $\checkmark$ ' accept button.

### 7.3.1 Zero Calibration '0CAL'

- Use the '▲' up or '▼' down buttons to select the zero calibration ' <sup>↑</sup>OCAL' submenu and press '√' to accept.
- 2. The zero calibration icon starts flashing in order to tell the user to prepare to apply zero gas.
- 3. The inhibit '(i)' icon is also displayed indicating that no alarm outputs will be generated during this process.
- Press '✓' to confirm when ready and the icon goes steady.
- 5. Apply the zero gas (or ambient air).
- 6. The dots on the left of the display indicate progress to a successful zero.

- 7. The display will show the zero gas reading and if measured to be stable for an appropriate period of time will display 'PASS'.
- 8. If the zero calibration is unsuccessful then the display will show an error code (see table below).
- 9. Press ' $\checkmark$ ' to exit.
- 10. Press '▲' up or '▼' down to select another submenu.
- 11. Press 'X' to return to set-up, calibration and test menu selection.
- 12. Press 'X' again to return to normal operation.

### 7.3.2 Span Calibration 'iSPAn'

- Use the '▲' up or '▼' down buttons to select the span calibration ' ÎSPAn' submenu and press '√' to accept.
- 2. The span calibration icon starts flashing in order to tell the user to prepare to apply span gas.
- 3. The inhibit '()' icon is also displayed indicating that no alarm outputs will be generated during this process.
- Use the '▲' up or '▼' down buttons to select the gas ID code of calibration gas (for multi gas ID sensor cartridges only) and press '√' to accept. (Refer to <u>Appendix B</u> for details of gas ID codes).
- 5. Use the '▲' up or '▼' down buttons to select if humidified 'HUm' or dry 'drY' calibration gas is being used.
- 6. Use the '▲' up or '▼' down buttons to change the value to the concentration of span calibration gas being used.


- 7. Press '✓' to confirm when ready and the icon goes steady.
- 8. Apply the span gas.
- 9. The dots on the left of the display indicate progress to a successful span.
- 10. The display will show the span gas reading and if measured to be stable for an appropriate period of time will display 'PASS'.
- 11. If the span calibration is unsuccessful then the display will show an error code (see below).
- 12. Press '√' to exit.
- 13. Press '▲' up or '▼' down to select another submenu.
- 14. Press 'X' to return to set-up, calibration and test menu selection.
- 15. Press 'X' again to return to normal operation

#### Note

The change in the gas bottle icon's contents gives an indication as to the relative stability of the gas reading. The arrows and bars inside the cylinder indicate whether it is rising or falling as appropriate (see table below).

#### Table 7-5. Calibration codes.

Code	Code meaning	
PASS	Successful Calibration	
FL:0H	Zero Calibration Timeout - Over Range	
FL:0L	Zero Calibration Timeout - Under Range	
FL:0U	Zero Calibration Timeout - Unstable	
FL:SH	Span Calibration Timeout - Over Range	
FL:SL	Span Calibration Timeout - Under Range	
FL:SU	Span Calibration Timeout - Unstable	

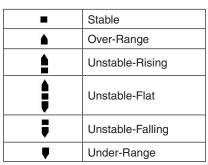

### 7.3.3 Flow Calibration 'FLoW'

- Use the '▲' up or '▼' down buttons to select the flow calibration 'ŪFLoW' submenu and press '√' to accept.
- 2. The flow icon with the dot at the bottom starts flashing in order to tell the user that the unit is ready to read the zero flow offset.
- 3. The inhibit '(i)' icon is also displayed indicating that no alarm outputs will be generated during this process.
- 4. Press'√' to confirm and the icon goes steady and a count down from 10 is shown as the zero flow offset is read.
- 5. The display will show the flashing flow icon with the dot approximately 1/2 way up the icon to tell the user to set the set point 1 flow (500 cc/min).
- Press '▲' up or '▼' down keys to adjust the reading on the external flow meter to the setpoint 1 target value. (NOTE: The reading must be +/- 50 cc/ min of target to be accepted).
- 7. Press '✓' to confirm and the target value flashes.
- 8. Press ' $\blacktriangle$ ' up or ' $\blacktriangledown$ ' down to enter the actual

#### Table 7-6. Calibration stability icons.

value read on the external flow meter. (NOTE: Holding down the button will increase the increment speed).

- 9. Press '✓' to confirm and the icon goes steady and a count down from 10 is shown as the setpoint 1 value is read.
- 10. The display will show the flashing flow icon with the dot 3/4 ways up to tell the user to set the set point 2 flow (650 cc/min).
- Press '▲' up or '▼' down keys to adjust the reading on the external flow meter to the set point 2 target value. (NOTE: The reading must be +/- 50 cc/min of target to be accepted).
- 12. Press '✓' to confirm and the target value flashes.
- Press '▲' up or '▼' down to enter the actual value read on the external flow meter. (NOTE: Holding down the button will increase the increment speed).
- 14. Press √' to confirm and the icon goes steady and countdown from 10 is shown as the setpoint 2 value is read.
- 15. If successful the display shows UPdt (update) and the flow calibration is complete.
- 16. Press '▲' up or '▼' down to select another submenu.
- 17. Press 'X' to return to set-up, calibration and test menu selection.

### 7.3.4 mA Calibration 'mA 4-20'

This function permits the calibration of the 4-20 mA output using an external source such as an ammeter. The purpose of this calibration is to assure the proper output voltage to activate external alarms/relays.

If the Midas chassis becomes disassociated from its

original mounting bracket, this calibration procedure must be followed to assure proper output voltages as the factory calibration is invalidated.

- Use the '▲' up or '▼' down buttons to select the mA calibration 'mA 4-20' submenu and press '√' to accept.
- 2. The display shows 4.00 mA indicating that the analog output should be reading 4 mA
- 3. The inhibit '(i)' icon is also displayed indicating that no alarm outputs will be generated during this process.
- 4. Use the '▲' up or '▼' down buttons to adjust the analog output to read 4.00 mA.
- 5. Press '√' to accept.
- The display will show 20.00 indicating that thePress '✓' to update the changes (UPdt displayed) and return to step 1.
- 7. Press '▲' up or '▼' down to select another submenu.
- 8. Press 'X' to return to set-up, calibration and test menu selection.
- 9. Press 'X' again to return to normal operation.

## 7.4 Test Menu ' tESt'

The test menu is used to test the detector gas reading using bump test gas, and for simulation of alarm and fault display and output operation (relay, analog and digital). The test submenu also includes the detector inhibit facility. The test menu comprises of 3 submenus as shown in the table below.

## 🕂 Caution

When using the Test Mode with the Midas<sup>®</sup>, be aware that simulations for alarm and fault will trigger any connected devices from the relay, mA, and/or digital outputs (Modbus /TCP, LonWorks<sup>®</sup>) as if a real alarm or fault is present. If you wish to avoid activating any connected alarms or devices use the Inhibit mode to prevent an unwanted alarm.

Table 7-7	. Test mode	submenus.
-----------	-------------	-----------

Test Submenu	Display	lcon	Test
Bump	bUmP	Ĩ	Bump test detector with inhibited alarm outputs
4-20	4-20	mA	Stimulate current output
Inhibit	Inh	۲	Put the unit into/out of an inhibit state and set inhibit time out
Alarm/Fault	SIm	\$∕∆	Simulate an alarm and fault condition

To select the test menu from normal operation, press the ' $\blacktriangle$ ' up button for a few seconds. Enter the pass code (if set). Use the ' $\bigstar$ ' up or ' $\blacktriangledown$ ' down buttons to select the test menu ' $\bigstar$ ' icon and press the ' $\checkmark$ ' accept button.

## 7.4.1 Bump Test 'ibUmP'

- Use the '▲' up or '▼' down buttons to select the bump test 'ibUmP' submenu and press '√' to accept.
- 2. The inhibit '(1) icon is also displayed indicating that no alarm outputs will be generated during this process.
- 3. Apply the bump test gas and the display will show the measured gas concentration.
- 4. Remove the bump test gas and allow the detector reading to return to zero.
- 5. Press 'X' to exit.
- 6. Press '▲' up or '▼' down to select another submenu.
- 7. Press 'X' to return to set-up, calibration and test menu selection.
- 8. Press 'X' again to return to normal operation.

#### Note

In bump test mode, the Modbus/TCP outputs are not inhibited. Only the 4-20mA and alarm outputs are inhibited.

The bump gas test is a functional check only. Consult local guidelines for recommended best practices. Bump test concentrations recommended in <u>Section 17</u> are calculated to generate a minimum first alarm level response.

### 7.4.2 Alarm/Fault Test '

- Use the '▲' up or '▼' down buttons to select the alarm/fault test '♣ SIm' submenu and press '√' to accept.
- 2. The display shows 'SIm' and the A1 ' $\blacktriangle$ ' icon.
- Use the '▲' up or '▼' down buttons to select A1 '▲', A2 '▲' or Fault 'A' for test simulation. A

steady  $\triangle$  indicates an m9 simulated fault and a flashing  $\triangle$  is an F39 simulated fault.

- Press'
   '
   ✓
   'to select and 'SurE' is displayed to indicate that the next step will activate the selected output (relay, analog and digital)
- 5. Press '✓' and the display flashes 'on' indicating that the selected output is activated
- 6. Press 'X' to return to step 2 and select a different output for test.
- 7. Press 'X' to exit.
- 8. Press '▲' up or '▼' down to select another submenu.
- 9. Press 'X' to return to set-up, calibration and test menu selection.
- 10. Press 'X' again to return to normal operation.

#### Note:

If latching faults or latching alarms are set up and either of those are simulated, then the user will have to reset them with the 'X' button in normal operation mode.

### 7.4.3 Inhibit State ' InH'

- 1. Use the '▲' up or '▼' down buttons to select the inhibit '④ InH' submenu and press '√' to accept.
- 2. The display flashes 'nonE' indicating there is no inhibit currently set.
- 3. Use the '▲' up or '▼' down buttons to select alarm, alarm and fault or all (Alm, AL-Ft or ALL) output inhibit states. See <u>Table 7-8</u> for details of inhibit states.
- 4. Press ' $\checkmark$ ' to accept the selected inhibit state.
- Press '▲' up or '▼' down to set the inhibit timeout (between 0 minutes and 4 hrs - default 30 minutes).

- 6. Press '✓' to accept (UPdt displayed).
- 7. The selected outputs will be inhibited until the inhibit timeout has elapsed.

#### Note

If the inhibit timeout elapses before the inhibit state is set back to 'nonE' the maintenance fault code M17 will be displayed.

- To take the unit out of inhibit, select the inhibit
   (**①**) InH submenu and press (✓) to accept.
- Use the '▲' up or '▼' down buttons to select 'nonE'
- 10. Press ' $\checkmark$ ' to return to the submenu selection.
- 11. Press '▲' up or '▼' down to select another submenu.
- 12. Press 'X' to return to set-up, calibration and test menu selection.
- 13. Press 'X' again to return to normal operation.

#### Table 7-8. Inhibit states.

Inhibit State	Display	Function	
None	nonE	No functions are inhibited.	
Alarms Inhibited	ALm	Alarm events will be detected, but alarm outputs (relays, 4-20 mA current loop and Ethernet) will be disabled.	
Alarms and Faults Inhibited	AL-Ft	Alarm and fault events will be detected, but alarm and fault outputs (relays, 4-20 mA current loop and Ethernet) will be disabled.	
Full Inhibit	ALL	All monitoring functions inhibited. No monitoring is performed and no alarms or faults (except for Inhibit Timeout) will be reported.	

### 7.4.4 Stimulate 4-20mA '4-20 mA'

1. Use the ' $\blacktriangle$ ' up or ' $\blacktriangledown$ ' down buttons to select the

'4-20' submenu and press ' /' to accept.

- 2. The display shows 'S 04' indicating a 4 mA output is being stimulated.
- Use the '▲' up or '♥' down buttons to increase or decrease current as desired in the range of 1 to 21 mA. Displayed as "S xx" = xx indicating mA current being output.
- 4. Press 'X' to return to the '4-20' submenu selection.
- 5. Press 'X' to return to set-up, calibration and test menu selection.
- 6. Press 'X' again to return to normal operation.



Proceeding with 20 mA stimulation may cause unexpected alarm activation.

Only authorized operators should perform this task!

This mode cancels itself in 5 minutes.



## **8 Routine Maintenance**

## 8 Routine Maintenance

Midas<sup>®</sup> is a fully serviceable product designed with modular components that can be readily replaced by trained service personnel so as to minimize the time that the gas detector is not available.

External in-line air filters should be replaced every three months or more frequently if the system is sampling in environments that have high levels of particulate matter or very acidic / wet atmospheres. Similarly, the internal particulate filter should be replaced once a year or more frequently if the sample lines are prone to heavy contamination.

Every sensor cartridge is shipped with a 12 month warranty and an extended 2 year warranty sensor cartridge is also available for purchase. All sensor cartridges are factory calibrated to traceable national standards before shipment to the end user.

Note that testing or calibrating with the wrong (incorrect, out of date, non-traceable) calibration gases, calibration equipment, methods or operating conditions can actually damage the sensor cartridge's lifetime and alter the calibration adversely. Only qualified calibration technicians should attempt to calibrate the Midas<sup>®</sup> gas detector.

Note

For details regarding sensor cartridge calibration and bump testing method refer to <u>Section 17</u>.

The internal pump module is designed to operate for a minimum of 18 - 24 months and it is recommended that this pump module (part number MIDAS-A-007) be replaced every 2 years.

Recommended Maintenance Schedule			
Component	Frequency		
Pump	2 years		
Pyrolyzer (all models)	1 year		
Internal Filter	2 years/as needed		
External Sample Line Filter	780248 3-6 months		
	1991-0147 3-6 months		
	1830-0055 3-6 months		
	1830-0027 1 month		
Leak Check	Leak Check every 6 months or after pump, pyrolyzer or internal filter replacement.		
Bump Test	6 months		
Flow Calibration	Flow Calibrate after pump, pyrolyzer or internal filter replacement.		

See <u>Appendix B</u> for the correct filter requirement for your application.

#### Note

The CO2 cartridge's bias battery will last only about 9 months. After replacement, allow at least a day for the cartridge to reach equilibrium.

## 8.1 Sensor Cartridge Replacement

Honeywell Analytics recommends that the sensor cartridge be replaced without power to the Midas<sup>®</sup> unit. If fitting a sensor cartridge to a unit that is powered, please refer to <u>Section 7.4.3</u> to inhibit the detector's outputs.

### 8.1.1 Sensor Cartridge Fitting/Replacement

- 1. Unscrew the thumbscrew located on the front panel and remove the cover by pulling it forwards off the main chassis (see Diagram 27).
- 2. Ensure the power switch on the terminal module is in the off position.
- 3. Remove the old sensor cartridge from the unit (if fitted) by unclipping the two sensor cartridge locking tabs located either side of the sensor cartridge and using them to firmly pull the sensor cartridge out (see diagram 23).
- 4. Fit the new sensor cartridge by aligning the pins at the top of the sensor cartridge with the socket in the sensor cartridge chamber.
- 5. Carefully push the sensor cartridge into the sensor cartridge chamber until fully home and lock in place using the tabs either side of the sensor cartridge (see diagram 24).
- 6. Switch the power switch on the terminal module to the 'on' position.
- 7. Refit the detector's cover by aligning the slots either side with the locating tabs on the mounting bracket assembly and pushing the cover horizontally until home. Tighten the thumbscrew located on the front panel (see diagram 25).
- 8. Confirm that the LCD messages "LOAd" and "WArm" are replaced by a zero concentration display. Confirm that the yellow fault LED is off.

If replacing a sensor cartridge with a different gas type sensor cartridge the display will scroll the message 'ChAngE gAS?' If you are changing the sensor cartridge gas type press ' $\checkmark$ ' to accept. If not, fit the correct sensor cartridge. The pass code (if set) must be entered to change sensor cartridge gas type. To set the correct gas for a multi gas type sensor cartridge refer to <u>Section 7.2.2</u>.

#### Diagram 8-1. Removing detector cover


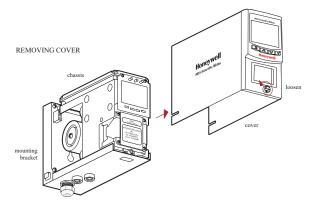



Diagram 8-2. Removing sensor cartridge




Note

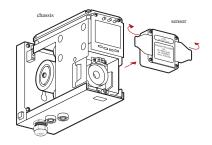

#### Diagram 8-3. Fitting/replacing sensor cartridge

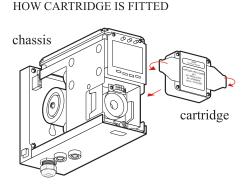

**Diagram 8-4. Refitting detector cover** 

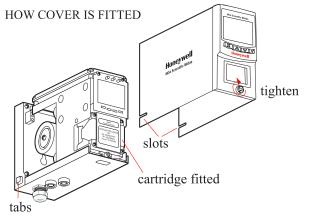




When refitting the cover to the Midas<sup>®</sup> unit, use caution to prevent damage to the RFI shielding tabs attached to the chassis.

### 8.2 Pump Replacement


The pump module has been designed to allow easy replacement. New pump modules, (MIDAS-A-007), are supplied with new springs, bracket and tubing preassembled for quick release / replacement.

#### Diagram 8-5. Location of pump module.

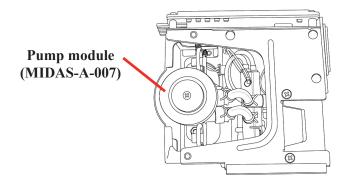


The following procedure should be followed carefully and only performed by suitably trained personnel.


- 1. Isolate the power to the detector.
- 2. Unscrew the thumbscrew located on the front panel.
- 3. Remove the cover by pulling it forward off the main chassis.
- 4. Unscrew the two retaining screws located at the bottom front of the chassis.
- 5. Pull the main chassis forward to disconnect it from the mounting bracket assembly.
- 6. Remove the 4 pump module screws.

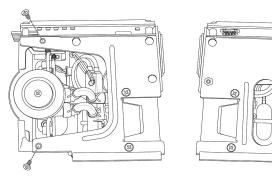


7. Remove the two fixing clips and disconnect the tubes at the manifold.

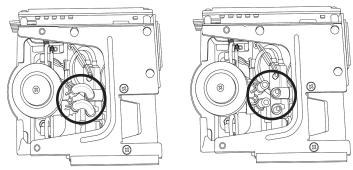

8. Slide the pump module out and disconnect the connector from the pcb.

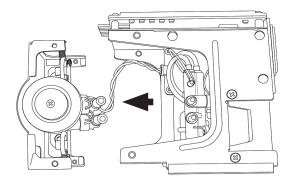

9. Fit the new pump module following the steps above in reverse order. Orient the metal retaining clamps away from the pump wiring to prevent damage. Route pump wiring away from the chassis and manifold to prevent damage.

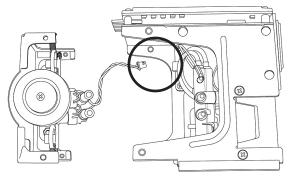

## 8.3 Reassembling the Detector

- 1. Align the PCB at the top rear of the main chassis with the connector located at the top of the mounting bracket assembly.
- 2. At the same time align the two tubes at the bottom rear of the main chassis with the two tubes located on the bottom of the mounting bracket assembly.
- 3. Slide the chassis backwards on the mounting bracket assembly so that the PCB, connector and tubes engage simultaneously.
- Ensure the PCB, connector and tubes are fully engaged by firmly pushing the main chassis horizontally backwards on the mounting bracket assembly. (WARNING: DO NOT PUSH ON THE LCD AS THIS MAY CAUSE DAMAGE).
- 5. Align the two attaching screws located at the

bottom of the chassis with the screw threads on the mounting bracket assembly.

- 6. Tighten the screws to secure the chassis to the mounting bracket assembly.
- 7. Switch the power switch on the terminal module to the 'on' position.
- 8. Refit the detector's cover by aligning the slots either side with the locating tabs on the mounting bracket assembly.
- 9. Push the cover horizontally until home.
- 10. Tighten the thumbscrew located on the front panel.

Note

Honeywell Analytics recommends conducting a "Flow Calibration" (See <u>Section 7.3</u> for instructions)

## 8.4 Filter Replacement


The internal filter (MIDAS-A-009) has been designed for easy replacement.

The following procedure should be followed carefully and only performed by suitably trained personnel.


- 1. Isolate the power to the detector.
- 2. Unscrew the thumbscrew located on the front panel.
- 3. Remove the cover by pulling it forwards off the main chassis.
- 4. Unscrew the two retaining screws located at the bottom front of the chassis.
- 5. Pull the main chassis forward to disconnect it from the mounting bracket assembly.

6. Locate the filter access slot in the side of the main chassis.



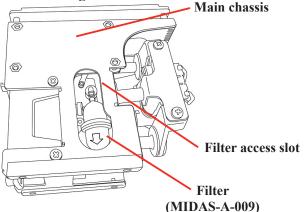

- 7. Carefully disconnect both sides of the filter from the pump manifold.
- 8. Remove the old filter and replace with a new filter ensuring that the filter connectors are fully engaged in the manifold ports and that the filter is the correct orientation (arrow pointing downwards). Orient the metal retaining clamps away from the pump wiring to prevent damage.
- 9. Route pump wiring away from the chassis and manifold to prevent damage.

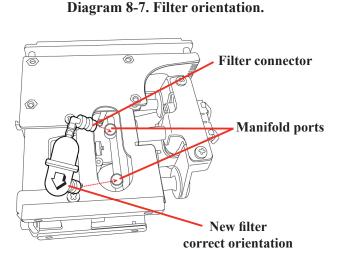

## 8.5 System Leak Check Procedure

## 🛕 Caution


When performing a leak check, the Midas<sup>®</sup> must be placed in inhibit mode to prevent false concentrations or faults to be activated when plugging the Sample and/or Exhaust Lines.

Example:  $O_2$  (oxygen) – plugging of the ports causes the  $O_2$  levels within the Midas<sup>®</sup> flow path to be depleted as the sample becomes stagnant. The result is the concentration levels begin to fall and trigger the alarms for the  $O_2$  depletion.

- 1. Place the Midas® into Inhibit (see Section 7.4.3)
- 2. Plug the Inlet Sample line (see Diagram 8-8)

- 3. The flow meter indicators will begin to drop and ultimately disappear (within seconds) (see <u>Diagram 2-3</u>)
- 4. Continue to keep the port plugged until the Midas<sup>®</sup> reports an "F81" (Flow Fail) – approximate time to fault is 1 minute
- 5. Remove the plug
- 6. Allow 15 seconds or so to allow the Midas<sup>®</sup> flow to stabilize then clear the fault by pressing and holding 'X'
- 7. Plug the Outlet Exhaust line
- 8. The flow meter indicators will begin to drop and ultimately disappear (within seconds)
- Continue to keep the port plugged until the Midas<sup>®</sup> reports an "F81" (Flow Fail) – approximate time to fault is 1 minute
- 10. Remove the plug
- 11. Allow 15 seconds or so to allow the Midas<sup>®</sup> flow and concentrations to stabilize then clear the fault by pressing and holding 'X'
- 12. Return the unit to normal operation

#### **Diagram 8-8. Port Location.**

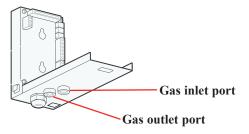



### 9 Pyrolyzer Module Options

### **9 Pyrolyzer Module Options**

Two Midas Pyrolyzer modules are available to detect specific gases (consult the Midas data sheets for an updated list of detectable species). The pyrolyzer module option is installed under the Midas gas detector. An air sample is drawn through the pyrolyzer and the target fluorinated compounds are converted into hydrogen fluoride (HF) gas by means of pyrolysis at a high temperature which is optimized for each gas family. The residual HF is then measured by the appropriate sensor cartridge and the concentration is calculated from this result. This concentration is then displayed in actual ppm on the Midas' LCD display.

The standard Midas pyrolyzer unit (P/N MIDAS-T-0P3) detects nitrogen triflouride (NF<sub>3</sub> 08-03). NF<sub>3</sub> pyrolyzer units require a Freon end-of-line filter (P/N 1830-0027). The filter is filled with charcoal to remove Freon and other similar compounds from the sample gas before it is "cracked" in the pyrolyzer. Diagram 9-1 illustrates the various pyrolyzer configurations. This table shows that gases which can be detected by the Midas Pyrolyzer module.

Detectable Gases							
Cartridge Part No.	Gas	Gas ID					
MIDAS-E-XHF,	NF <sub>3</sub>	02					
MIDAS-S-XHF	CH₃F	03					
	$C_4F_6$	02					
MIDAS-E-XCF, MIDAS-S-XCF	C <sub>5</sub> F <sub>8</sub>	03					
	$CH_2F_2$	04					
	SF <sub>6</sub>	05					

Note that the pyrolyzer module is ideally suited for leak detection rather than analytical detection of very low trace amounts of PFC compounds.

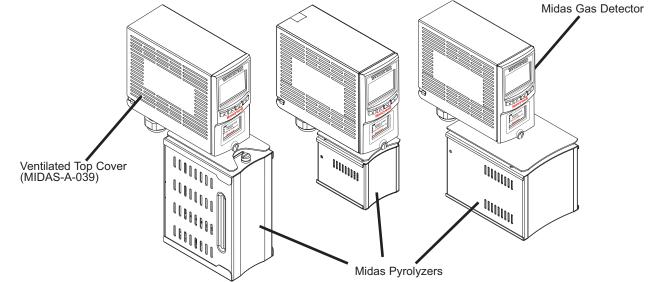



Diagram 9-1. Midas gas detector with Pyrolyzer modules MIDAS-T-OP3 (left), MIDAS-T-OOP (center), MIDAS-T-HTP (right).

To maintain sensor accuracy when using the pyrolyzer, do not allow the ambient temperature at the point of installation to exceed 30°C (86°F). Operation above this temperature may require more frequent bump testing or calibration to confirm working specification. Because of the higher operating temperatures when using the pyrolyzer module, Honeywell Analytics strongly recommends that the ventilated Midas Top Cover (part number MIDAS-A-039) be used in all pyrolyzer applications.

NOTE: The Pyrolyzer module is serviceable only by trained personnel or by Honeywell Analytics' Service Center. Inappropriate handling can cause injury and device damage.

Note: Le module pyrolyzer pouvant-être réparé. Par contre la réparation doit-être effectuée par un personnel qualifié ou à un centre de service autorisé d'Honeywell Analytics. Une manutention inadéquate pourrait causé des blessures ainsi que des dommages à l'appareil.


Diagram 9-2 shows the main components of the pyrolyzer.

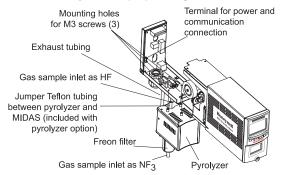

#### Diagram 9-2. Pyrolyzer components.

Diagram 9-2. Pyrolyzer components.

Diagram 9-3 shows in a simple form how a gas sample is drawn through the pyrolyzer module by the pump (located at the end of the gas path). It is first routed to the pyrolyzer via the Freon filter before being sent to the gas sensor cartridge, where the gas measurement is taken. The sample continues via the flow meter through the dust filter and is finally exhausted from the instrument. Adjustment of the gas flow through the instrument is done automatically. It is recommended to perform a leak check (see Section 8.5) before performing a flow calibration. To perform a flow calibration refer to Section 7.3.3.

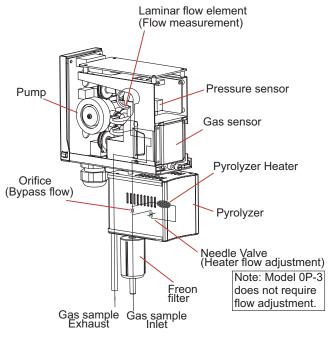


#### Diagram 9-3. Pyrolyzer configuration gas flow.

### 9.1 Fitting the Pyrolyzer Module

- 1. Disconnect power to the detector.
- 2. Unscrew the thumbscrew on the front panel.
- 3. Remove the cover by pulling it forward off the chassis, as illustrated in Diagram 9-4.


#### Diagram 9-4. Removing the Midas cover.

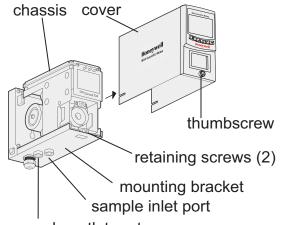

sample outlet port


- 4. Unscrew the two retaining screws located at the bottom front of the chassis.
- Pull the chassis forward to disconnect it from the mounting bracket assembly (see Diagram 9-5).

#### Diagram 9-5. Removing the chassis.

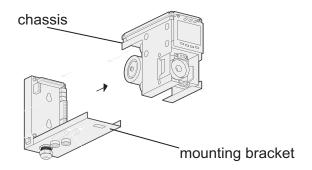

- 6. Thread the connector and wire harness from the pyrolyzer through the rectangular access in the bottom of the mounting bracket.
- 7. Secure the wires with a retention clip (if available).
- 8. Plug the connector into the socket (con5) at the bottom left of the terminal board.
- 9. Align the fitting at the top rear of the pyrolyzer with the sample and inlet ports at the bottom of the mounting bracket.

 Connect the pyrolyzer to the detector with the three provided mounting screws (see Diagram 9-6).

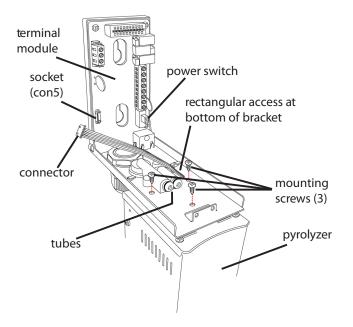

#### **Diagram 9-6. Attaching the pyrolyzer.**

WARNING To maintain sensor accuracy when using the pyrolyzer, do not allow the ambient temperature at the point of installation to exceed 30°C (86°F). Operation above this temperature may require more frequent bump testing or calibration to confirm working specification. Because of the higher operating temperatures when using the pyrolyzer module, Honeywell Analytics strongly recommends that the ventilated Midas Top Cover (part number MIDAS-A-039, shown in Diagram 9-1) be used in all pyrolyzer applications.

#### Note:

Consult the label on the side of the Pyrolyzer module, as shown in Diagram 9-7, for the firmware version level required in the Midas detector for proper operation.

#### Diagram 9-7. Pyrolyzer labels.

P/N: MIDAS-T-0P3


05/06 REV 3 S/N:00001


For Non-Flammable Gases Only www.honeywellanalytics.com

This pyrolyzer is to be used only with Midas Extractive units equipped with version 1.10 or later application software.

### 9.2 Reassembling the Detector


- 1. Align:
  - a. the PCB at the top rear of the chassis with the PCB connector at the top of the mounting bracket and
  - b. the two tubes at the bottom rear of the chassis with the two tubes on the bottom of the mounting bracket.
- Slide the chassis backward on the mounting bracket assembly so that the PCB, connector, and tubes engage fully. Push the chassis backward on the mounting bracket. CAUTION: The LCD is fragile. Do not apply pressure to its surface.
- 3. Tighten the retaining screws to secure the chassis to the mounting bracket.
- 4. Insert the MIDAS-S-HFX sensor cartridge into the sensor cartridge chamber (see Diagram 9-8) and refer to the Sensor Cartridge Installation Quick Start Guide (MIDAS-A-021).



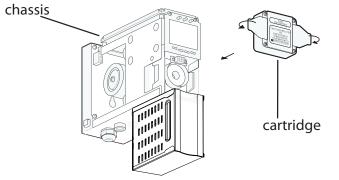

- 5. Set the power switch to the "on" position.
- 6. Refit the ventilated top by aligning the slots on either side with the locating tabs on the mounting bracket assembly, shown in Diagram 9-9. Push the cover horizontally until seated.

#### **Diagram 9-9. Refitting the top cover.**

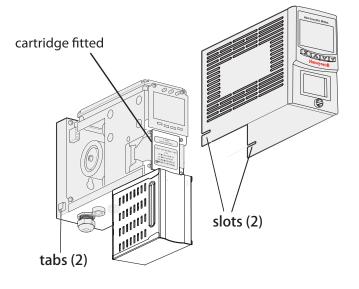

### **9.3 Configuring the Detector**

- After completion of the startup sequence, press the "▲" button for a few seconds to select the setup menu.
- 2. Enter the passcode (if necessary).
- Use the "▲" or "▼" buttons to select the setup menu "<sup>™</sup>" icon. Press the "√" to accept.
- Use the "▲"or "▼"buttons to select the set alarms "

  ALm" submenu. Press "√" to accept.
- 5. The flashing gas ID code and the gas cylinder and alarms icon "i e" will appear.
- Use the "▲" or "▼" buttons to change the gas ID number to that of the target gas. Press "√"to accept.
- 7. Continue to accept or change the rest of the alarm settings. For further details on these settings, refer to the Midas Operating Instructions (part number MIDAS-A-001).
- Press "√" to update all changes ("UPdt" will be displayed).
- 9. Press "X" twice to return to normal operation.

After applying power, verify that the sensor cartridge ID and gas ID are appropriate for the target gas. See <u>Appendix B</u> for gas ID codes. Refer to <u>Section</u> 7.2.2 for the procedure for setting the gas ID code.

The Midas gas detector automatically detects the pyrolyzer module and provides the necessary power and signaling for the device.

# 9.4 Replacing the Pyrolyzer Heater Block




WARNING: The Pyrolyzer module becomes extremely hot during operation. Allow it to cool before beginning this procedure.



AVERTISSEMENT: Le module pyrolyzer devient extrêmement chaud à l'usage. Veuillez alloué une période de refroidissement avant de débuter cette procédure.


1. Loosen the thumbscrew on the top of the unit as shown in Diagram 9-10.

**Diagram 9-10. Loosening the thumbscrew** 

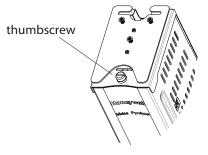


2. Slide the front cover out of the C-enclosure (see Diagram 9-11).

#### Diagram 9-11. Removing the front cover

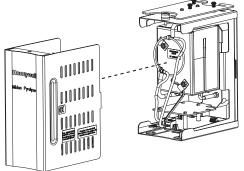


- Disconnect the Viton tube from the upper micro tube port. Discard the Viton tube (Diagram 9-12). Replacement Viton tubing is supplied with the new heater block.
- 4. Remove the P-clip and lock nut.
- 5. Disconnect the thermocouple and heater wires from their PCB connectors.
- 6. Remove the bolt from the manifold assembly.

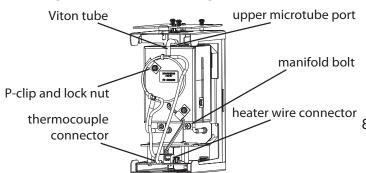



7. Disconnect the lower Viton tube from the quartz tube port. (If necessary, swing the heater unit as shown in Diagram 9-13.) Discard the old Viton tube.

Diagram 9-13. Disconnecting the lower Viton tube

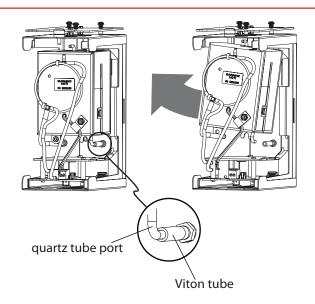

8. Remove the heater block assembly by first lifting it up and then sliding it out of the keyhole connector in the C-enclosure (Diagram 9-14).



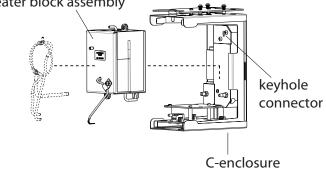

9. Reverse steps 1 through 8 to install the new heater block assembly.

### Diagram 9-12. Disconnecting the heater block



### 10 Optional LonWorks<sup>®</sup> Interface Installation


### 10 Midas LonWorks® Interface Module

### 10.1 LonWorks® Installation

Midas<sup>®</sup> can be directly integrated within a LonWorks<sup>®</sup> network using an optional interface module (MIDAS-T-LON). This gateway provides both power and communications to the Midas<sup>®</sup> transmitter and creates a LonWorks<sup>®</sup> node on the network. All gas readings, faults and other sensor data are transmitted via the LonWorks<sup>®</sup> protocol. Any Midas<sup>®</sup> transmitter can be easily configured to connect with the LonWorks<sup>®</sup> interface module.

The Midas<sup>®</sup> LonWorks<sup>®</sup> interface module is installed behind the standard Midas<sup>®</sup> gas detector as shown in Diagram 10-1. Power and data connections are supplied directly to the LonWorks<sup>®</sup> interface module. All power to the Midas<sup>®</sup> unit is provided via the LonWorks<sup>®</sup> interface.



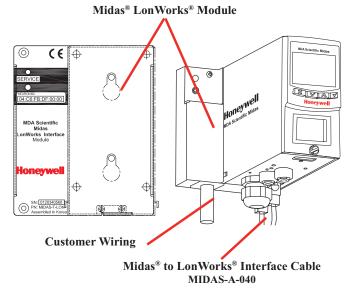

#### 10.1.1 Fitting the LonWorks<sup>®</sup> Module

- 1. Unscrew LonWorks<sup>®</sup> interface top plate.
- 2. Mount the interface and tighten screws. See mounting template on reverse side.
- Connect 24V DC power and LonWorks<sup>®</sup> wires to the pluggable connectors. Clamp the cables in the supplied gland as shown in Diagram 10-2. A spare gland is included.
- 4. Reinstall top plate on the interface.
- 5. Loosen thumbscrew on front of Midas®.
- 6. Remove unit cover.
- 7. Loosen two screws on bottom front of chassis.
- 8. Separate main chassis from mounting bracket assembly.
- 9. Mount the Midas<sup>®</sup> mounting bracket assembly onto the LonWorks<sup>®</sup> interface.
- 10. Tighten screws.
- 11. Align the PCB at the top rear of the main chassis with the connector located at the top of the mounting bracket assembly.
- 12. Slide the main chassis backwards on the mounting bracket assembly so that the PCB and connector and tubes engage simultaneously.

WARNING: DO NOT PUSH ON THE LCD AS THIS MAY CAUSE DAMAGE

- 13. Tighten the screws to secure the main chassis to the mounting bracket assembly.
- 14. Reinstall cover

Diagram 10-2. LonWorks Cable Gland.



#### 10.1.2 Wiring the Midas® for LonWorks®

Wiring Diagram					
Pwr Common Pwr +24 VDC Lon A Lon B	0	Plug 2			
Pwr Common Pwr +24 VDC Lon A Lon B	0	Plug 1			

Wiring Notes:

- 1. Maximum wire size is 16 AWG.
- 2. Input voltage range is 20.4 to 26.4 VDC.
- 3. It is mechanically possible to misalign Plug1 and Plug2. Care must be taken when inserting plug to assure correct alignment.
- 4. Plug1 and Plug2 are internally connected in parallel to facilitate wiring in bus topology.

5. LonWorks<sup>®</sup> FT-10 wiring is polarity sensitive. Lon A and Lon B may be swapped.


#### 10.1.3 Configuring the Midas<sup>®</sup> for LonWorks<sup>®</sup>

- 1. Turn on 24 VDC power.
- 2. Confirm that the Midas<sup>®</sup> initiates the power up sequence.
- 3. Reset Fault F49 if present.
- 4. Set alarm levels and other parameters as desired.
- Confirm that the Midas<sup>®</sup> IP parameters are at default values. If changed, the DHCP client must be set to 'n'. The IP address must be restored to 169.254.60.47 and the subnet mask must be restored to 255.255.255.0

### 10.2 LonWorks® Software

#### 10.2.1 LonWorks® Overview

LonWorks<sup>®</sup> is a communications protocol developed by Echelon Corporation which facilitates peer-to-peer communications in a control network. The Midas<sup>®</sup> gas detector is available with an optional LonWorks<sup>®</sup> interface.

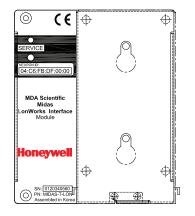


The Midas<sup>®</sup> uses the Free Topology (FT) physical layer which communicates at 78 Kbaud. Each FT segment can contain up to 64 nodes and up to 2.7 Km of cable. Routers permit expansion of the network to multiple segments.

The Midas<sup>®</sup> LonWorks<sup>®</sup> interface contains 2 functional blocks, 19 network variables and 2 network configuration inputs. It is designed for compliance with LonMark guidelines version 3.2. However, it is not LonMark certified. The LonMark representation of the interface is shown in Diagram 10-3.

Information on LonWorks<sup>®</sup> can be found at <u>www.echelon.</u> <u>com</u>. Information on LonMark can be found at <u>www.</u> <u>lonmark.org</u>. Many commercial LonWorks-compatible products can be found at <u>www.engenuity.com</u>.

#### Diagram 10-3. LonMark Diagram

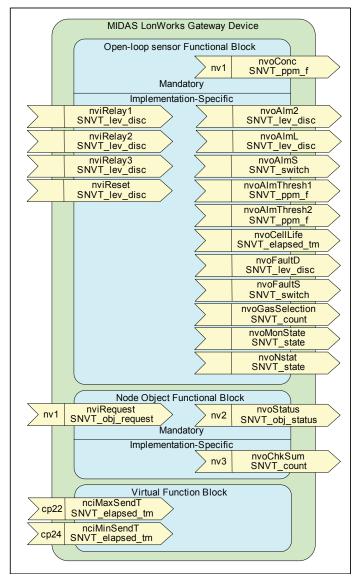

#### **10.2.2 Network Variable Behaviors**

The behaviors of the network variables are as detailed below:

#### nvoConc

This reports the concentration of the target toxic or flammable gas in the SNVT\_ppm\_f data type. The concentration will be scaled in ppm when a toxic gas cartridge is installed. For example a 100 ppb B2H6 concentration will be reported as 0.1. However, when an O2 cartridge is installed, this will be scaled in volume percent. For example, normal air will be reported as 20.9, not 209000.0. Furthermore, concentration will be reported as a percentage of the lower explosive limit (LEL) for flammable gas cartridges. This means that CH4 at a concentration of 50% LEL will be reported as 50.0, not as 25000.0 ppm.

#### **Alarm Outputs**

The alarm status of the Midas<sup>®</sup> is reported in three network variable outputs (NVOs) for maximum compatibility. The values of nvoAlmL, nvoAlm2, and nvoAlmS under various conditions are listed in Table 1. The variable nvoAlm2 is provided to facilitate discrimination between alarm1 and alarm2 by 3rd party actuators which treat SNVT\_lev\_disc as a Boolean data type. The variable nvoAlmS is provided to increase compatibility with Echelon LonPoint modules.

Note that the values stored in nvoAlmL are slightly different than that of other Honeywell Analytics / MDA Scientific gas detectors. For example, a Vertex will indicate a level 1 alarm by ST\_MED. This is because ST\_LOW is reserved for small non-zero concentrations below the alarm threshold. Additionally, the System

16, LIFELINE, LIFELINE II and CM4 indicate a level 2 alarm as ST\_MED.

Alarm Status	nvoAlmL	nvoAlm2	nvoAlmS		
Alami Olalas	(SNVT_lev_disc)	(SNVT_lev_disc)	(SNVT_switch)		
None	ST_OFF	ST_OFF	{0.0, 0}		
Level1	ST_LOW	ST_OFF	{0.5, 1}		
Level2 without Level 1 (only possible with depletion alarms)	ST_MED	ST_MED	{1.0, 1}		
Level 1 and 2 (usual case)	ST_HIGH	ST_MED	{1.5, 1}		

#### nvoFaultD

This has the value ST\_MED if an instrument fault exists and the value ST\_LOW if a maintenance fault exists. If both faults exist, this takes ST\_HIGH. It has the value ST\_OFF if no fault exists.

A maintenance fault indicates the Midas<sup>®</sup> requires attention but is continuing to monitor. An instrument fault indicates a loss of monitoring.

#### nvoFaultS

This network variable output facilitates identifying the cause of the fault over the network. The .value byte of SNVT\_switch will be the fault number. These are listed in Section 6 of the Midas<sup>®</sup> Quick Start Guide. Additionally, a communication failure will be reported as fault number 100. The .state byte of SNVT\_switch has the value 1 if any fault exists. Otherwise it takes the value 0.

Note that the LonMark standard calls for the .value field

to be divided by two for display. Thus the raw value is twice the fault number. For example when a flow failure (Fault F81) exists, the raw value of nvoFaultS will be {0xA2, 0x01}. This is displayed by LonMark-compatible tools as {81.0, 1}.

#### Alarm Thresholds

The variables nvoAlmThres1 and nvoAlmThres2 reports the configuration of the alarm setpoints. The scaling and format of the data is identical to that used with nvoConc. These are read-only data – it is not possible to change the alarm settings over LonWorks<sup>®</sup>.

#### nvoGasSelection

This NVO facilitates determining over the network what cartridge is installed and which calibration is selected. The most-significant byte of this is equal to the sensor cartridge ID number. The least-significant byte of this is equal to the gas ID number. Values for both are listed in <u>Appendix B</u>.

#### nvoCellLife

This reports the time remaining until the F43 ("Cartridge Expired") is issued. Fault m12 ("Cartridge Expires Soon") will generally be issued 30 days before F43. However, this variable provides no advance warning of fault m11 ("User Cal Expired").

#### nvoMonState

The bits in this variable are shown graphically in Table 10-2. The least-significant 4 bits form a monitoring mode integer (MMI). Bit 7-2 form a heartbeat counter which increments every 2 seconds. The heartbeat counter is provided to facilitate confirmation of communication. This variable propagates every nciMinSendT since it is always changing.

#### Table 10-2. nvoMonState Bit Assignment

bit 0 MSB	bit 1	bit 2	bit 3	bit 4	bit 5	bit 6	bit 7	bit 8	bit 9	bit 10	bit 11	bit 12	bit 13	bit 14	bit 15 LSB
Alway Zero		Heartbeat Counter			A	lway	s Zei	ro	Мс		ing N eger	Node			

The description of the Monitoring Mode Integers are listed in Table 10-3 below.

 Table 10-3. Monitor Mode Integer Description

Monitoring Mode Integer	Description
0	Warmup
1	Monitoring without inhibit
2	Alarms inhibited
3	Alarms, and faults inhibited
4	Alarms, faults and concentrations inhibited
5	Simulation
6	Bump test mode
7	4-20 mA calibration mode
8	Other calibration mode
9 to 14	for future expansion
15	Communications failure.

#### nvoNstat

This NVO conveys the general status of the gas detector. The meanings of the 16 bits in this NVO are defined in Table 10-4. Note that the presence of a maintenance fault is not conveyed by this variable.

Bit	Description			
15 (LSB)	In calibration mode			
14	In simulation mode			
13	Inhibited			
12	In warmup mode			
11	Alwaya zara far futu			
10	Always zero, for future expansion			
9	Alarm 2 active			
8	Alarm 1 active			
7	Instrument fault fixable by new cartridge (Faults 39 - 49)			
6	Instrument fault fixable by HA Service (Faults 80, 82 - 89 or comm fail)			
5	Flow instrument fault (F81)			
4	Always zero, for future expansion			
3	Measuring unit	Bit3=0, Bit2=0: % Volume		
2	code Bit3=0, Bit2=1: % LEL But3=1, Bit2=0: ppm			
1				
0 (MSB)	Always zero, for future expansion			

#### nciMaxSendT, nciMinSendT

These network configuration inputs control the update rate of the network variable outputs. Every NVO will repropagate after a period of nciMaxSendT or less. This has a default value of 60 seconds. The effective value is clamped to 180 seconds and 5 seconds, regardless of the programmed value.

Additionally, every NVO will repropagate when the status of its function block changes and nciMinSendT has expired since the last propagation. This has a default value of 5 seconds. The effective value is clamped to 10 seconds and 1 second.

#### nviRelay1, nviRelay2 and nviRelay3

These network variable inputs can be used to control the three internal relays from LonWorks<sup>®</sup>. However, these NVI's will have no effect unless the Midas<sup>®</sup> is configured to respond to network relay commands.

The following procedure lists how to configure the relays to be remotely controllable:

- a) Hold the "▲" key for 2 seconds until "SEt" is displayed.
- b) Press the "✓" key once to enter the setup menu. The display should show "ALm".
- c) Press the "▲" key once to scroll to fault setup. The display should show "FLt"
- d) Press the "✓" key once to enter the fault setup menu. The display will show one of the four relay configuration codes shown in Table 5.
- e) Press the "▲" key as needed to select mode "nEtr".
- f) Press the "X" key repeatedly to exit the setup menu.

The various relay configuration options are listed in <u>Table 10-5</u>.

LCD	Description	Source of Signal for Relays			
Symbol	Description	Relay 1	Relay 2	Relay 3	
1FLt	Instrument fault only	Alarm 1	Alarm 2	Inst Fault	
2FLt	Separate fault relays	Any Alarm	Maint Fault	Inst Fault	
CmbF	Combined fault relay	Alarm 2	Alarm 2	Any Fault	
nEtr	Network remote mode	nviRelay1	nviRelay2	nviRelay3	

Once the relays are configured for network remote mode, they will respond to updates to the three associated NVIs. The values ST\_LOW, ST\_MED, ST\_HIGH and ST\_ON will cause the relays to energize. The value ST\_OFF will cause the relays to de-energize. The configuration settings for "normally energized" and "normally de-energized" have no effect if the relays are in network remote mode. However, the relays can still be configured for normally open or normally closed contacts by moving the jumpers on the Midas<sup>®</sup> backplane PCB.

### **A** Caution

Several failure modes will cause the relays to de-energize. These modes include power failures and CPU lockups. Furthermore, power must be removed from the Midas<sup>®</sup> for certain maintenance procedures. External equipment should be designed to prevent creation of expensive or dangerous conditions when the relays de-energize. For applications requiring a highly-reliable digital output, Honeywell Analytics recommends purchasing a dedicated DO device.

#### nviReset

This network variable input causes alarms and faults to be reset when it is updated with ST\_LOW, ST\_MED, ST\_HIGH or ST\_ON.

#### nviRequest

Updates to this NVI have the effects listed in Table 10-6. These requests are usually sent by the network management tool.

#### Table 10-6. Request Implementation

Request	Node Object Implementation	Sensor Object Implementation	
0 RQ_NORMAL	Set to enabled	Send "no inhibit" command	
1 RQ_DISABLED	Set to enabled	Send "inhibit all" command	
2 RQ_UPDATE_STATUS	Retransmit status	Retransmit status	
3 RQ_SELF_TEST			
4 RQ_UPDATE_ALARM			
5 RQ_REPORT_MASK	Send capability report		
6 RQ_OVERRIDE			
7 RQ_ENABLE	Set to enabled	Equivalent to RQ_NORMAL	
8 RQ_RMV_OVERRIDE			
9 RQ_CLEAR_STATUS			
10 RQ_CLEAR_ALARM		Send "reset alarms and faults" command	
11 RQ_ALARM_NOTIFY_ENABLE		Equivalent to RQ_NORMAL	
12 RQ_ALARM_NOTIFY_ DISABLE		Send "inhibit alarms" command	
13 RQ_MANUAL_CTRL			
14 RQ_REMOTE_CTRL			
15 RQ_PROGRAM			
16 RQ_CLEAR_RESET			
17 RQ_RESET			
-1 RQ_NUL			

Note that disabling the node object has no practical effect. (This is implemented only for LonMark compatibility.)

#### nvoStatus

The meaning of the status bits in this NVO is as listed in Table 10-7.

LonMark Field Name	Node Object Intrpretation	Sensor Object interpretation		
object_id (16 bits)	0			
invalid_id		ID > 1		
invalid_request	unimplemented request made	unimplemented request made		
disabled	disabled	inhibited		
out_of_limits				
open_circuit				
out_of_service				
mechanical_fault		instrument fault		
feedback_failure				
over_range		alarm 2		
under_range				
electrical_fault		maintenance fault		
unable_to_measure				
comm_failure		communication failure to Midas®		
fail_self_test		communication failure to Midas®		
self_test_in_progress		warmup mode		
locked_out				
manual_control				
in_alarm		any alarm		
in_override				
report_mask	mere capability report	mere capability report		
programming_mode				
programming_fail				
alarm_notify_disabled		inhibit, warmup or calibration		
reset_complete				

#### nvoChkSum

This network variable indicates the checksum of the neuron chip and is included to confirm the correctness of the program. This will have the value 32533 for Revision 1.0 software. This is computed 45 seconds after power-up.

#### **10.2.3 Other Characteristics**

#### WINK Command

The LonWorks<sup>®</sup> "wink" command causes the service LED to energize for approximately six seconds.

#### **LED** Interpretation

All LED operation is inhibited for 35 seconds after power-up. This is because the neuron is held in reset until the internal ARM-7 microprocessor boots. If the neuron is "unconfigured", after 35 seconds the yellow service LED will flash slowly. If the neuron is "configured" the service LED will be dark.

The interface contains a second LED which can be useful for debugging. This is red in color and only visible when the lid is removed from the interface. It is labeled D15 and is located immediately below the black FT-X1 transformer on the PCB. D15 will blink every second when the neuron is executing code correctly. This will be "on" most of the time if communication to the Midas<sup>®</sup> is successful. It will be "off" most of the time if communications to the Midas<sup>®</sup> is unsuccessful. Communications is certain to be unsuccessful for 190 seconds after power-up due to the Midas<sup>®</sup> boot time.

### 🛕 Caution

After commissioning, Echelon's LonMaker tool will put this device into the "offline" state. In this mode, the Midas<sup>®</sup> interface will not transmit over LonWorks<sup>®</sup>. To correct this, it is necessary to click-right, on the device, select "Manage" and click on "Online"

#### Compatibility with old LonMaker

This device is observed to work incorrectly with Echelon LonMaker for Windows version 3.00.66. This is because it was created with NodeBuilder version 3.1 and contains an XIF file in format version 4. The problem is manifested as network variables having the wrong direction – outputs appear as inputs. The problem can be corrected by replacing a file in the network management tool with a new version. This file is "C:\LonWorks\bin\XIF32Bin.exe". Echelon has granted permission for this file to be copied freely. A copy of this file can be obtained from Honeywell Analytics on request.



### 11 Troubleshooting and Fault Diagnosis

### **11 Troubleshooting and Fault Diagnosis**

General trouble shooting guide and specific fault code table for Midas® with Version 1.08 or lower software.

Fault code	Description	Condition	Recovery			
m9	Simulated maintenance fault	User has generated a simulated fault.	Reset simulated fault.			
m10	Over range.	A large concentration has been detected. The Midas <sup>®</sup> requires an independent confirmation that the gas hazard is gone.	Supply known clean air to the Midas® and clear this fault.			
m11	User calibration expired.	The user specified calibration interval has elapsed.	Perform zero and span calibrations. Increase span calibration period.			
m12	Cartridge expires soon.	Cartridge is old and will expire soon.	Replace the cartridge with a new cartridge.			
m13	Flow error.	Midas <sup>®</sup> is no longer able to regulate flow (high or low flow condition).	Check filters and pump. Check pressure at inlet and outlet and assure they are within specification. (See <i>Section 4.3 Sample and exhaust tubing calculations</i> )			
m14	Interferent present.	An interferent is degrading the ability of the Midas® to detect gas.	Check application.			
m15	Temperature near limit.	Temperature within 2 Celsius of limit.	Check installation environment.			
m16	Baseline fault.	Sensor baseline has drifted.	Check for background gas concentration, temperature or humidity fluctuations. Perform zero calibration. Replace cartridge.			
m17	Inhibit timeout.	Transmitter has been in inhibit mode too long.	Resume monitoring or increase timeout value.			
F39	Simulated fault	User has generated a simulated fault.	Reset simulated fault.			
F40	Sensor overdosed.	Sensor has been exposed to high gas concentrations for long periods.	Replace cartridge.			
F41	Baseline fault.	Sensor baseline has drifted.	Check for background gas concentration, temperature or humidity fluctuations. Perform zero calibration. Replace cartridge.			
F42	Calibration expired.	Too long since last calibration.	Replace or calibrate the cartridge.			
F43	Cartridge expired.	Cartridge is too old.	Replace cartridge.			
F44	Cell failure.	Cartridge has failed Reflex <sup>™</sup> check.	Replace cartridge.			
F45	Stabilization timeout.	Cartridge has failed to stabilize.	If temperature or humidity shocks exist, precondition the cartridge. Check for background gas concentration. Replace cartridge.			
F46	Cartridge analog failure.	Electronic Failure or gas concentration greater than full scale.	Replace cartridge.			
F47	Cartridge memory invalid.	Checksum error.	Replace cartridge.			
F48	Cartridge absent.	No communications.	Reseat cartridge. Replace cartridge.			
F49	Cartridge wrong type.	Cartridge type found to be incorrect after boot-up.	Replace cartridge or press 🗸 accept if correct.			
F80	Temperature limits exceeded.	Temperature is outside limits	Check installation environment.			
F81	Flow fail.	Flow < 70% of nominal for 15 seconds.	Check filters. Check for kinked tubing, Replace pump.			

#### Table 11-1. Fault code descriptions.

Fault code	Description	Condition	Recovery			
F82	Excessive electrical noise.	Internal electronics repeatedly noisy.	Check grounding of Midas <sup>®</sup> chassis. Check termination of cable shields. Relocate the Midas <sup>®</sup> further from noise sources. Add ferrite inductors to cables.			
F83	Pyrolyzer fail.	Pyrolyzer fails to heat.	Check electrical connection to pyrolyzer. Replace pyrolyzer. (also see <u>Sectio</u> <u>4.3</u> )			
F84	Misc. transmitter fault.	Transmitter is defective.	Service or replace Midas®.			
F86	Coprocessor fail	Coprocessor is damaged.	Contact Honeywell Analytics Service.			
F87	Pyrolyzer temp limits exceeded	Pyrolyzer temperature exceeded.	Clean pyrolyzer cooling vents. Contact Honeywell Analytics Service.			
F88	Pyrolyzer heater fail	Pyrolyzer heater failed.	Contact Honeywell Analytics Service. Replace the pyrolyzer.			
F89	Pyrolyzer power unreg	Target power not achieved within specified time span.	If 24VDC power check, 21.6 < V in < 26.4 Contact Honeywell Analytics Service. Replace pyrolyzer.			
F90	Pyrolyzer heater mismatch	Different pyrolyzer type required	Contact Honeywell Analytics Service.			
F91	HTP module required	Check that MIDAS-S-CFX or MIDAS-E-CFX is installed for the high temperature pyrolyzer version	Change to HT Pyrolyzer			
		Data value: 0x0800 0P3 pyrolyzer failed to get up to temperature	Replace pyrolyzer heater			
F92	0P3 pyrolyzer module failure	Data value: 0x1000 0P3 pyrolyzer flow is out-of-range	Check flow connections between Midas and 0P3 pyrolyzer			
		Data value: others 0P3 pyrolyzer internal failure	Contact Honeywell Analytics Service.			

"Hot" and "Cool" messages are informational events that can be generated under two conditions:

- 1. Immediately after the detector powers up.
- 2. When the state changes from cool to hot or hot to cool.

"Hot" means the temperature inside the cartridge is at 40°C or above. "Cool" means the temperature inside the cartridge is below 40°C. In both cases the event data field will list the actual temperature at the time of the event.



### **12 Reflex**<sup>®</sup>

### **12 REFLEX®**

Midas<sup>®</sup> uses patented Honeywell Analytics technology to continuously monitor the health check status of specific electrochemical cells and alert the user if a cell enters a variety of fault conditions (such as open or short circuit etc.) which would leave the cell unable to detect gas and raise an appropriate alarm signal.

REFLEX<sup>®</sup> overcomes this unseen failure mode by applying periodically a special electronic pulse to the cell and reviewing the 'echo' from the cell as it responds to the applied signal. If the cell is deteriorating within certain pre-set limits based on the received signals then Midas<sup>®</sup> will decrease the REFLEX<sup>®</sup> sampling interval in order to establish the actual viability of the cell. Within a relatively short time, Midas<sup>®</sup> will be able to alert the user via fault codes that the electrochemical cell is likely to be requiring replacement and is possibly unable to correctly detect gas.

REFLEX<sup>®</sup> is not required for pellistors or oxygen electrochemical cells as these sensor cartridges provide alternative electronic means to indicate open circuits and other sensor cartridge damage issues.



### **13 Internal Web Server**

### **13 Internal Web Server**

The Midas<sup>®</sup> gas detector unit utilizes an Ethernet port with the TCP/IP protocol as standard. The Midas<sup>®</sup> can function as a HTML web page server and these web pages can be viewed on external computer equipment (PC, PocketPC etc.) by using a standard software program, i.e.; Microsoft Internet Explorer. These web pages replicate the user interface on the front panel of the Midas<sup>®</sup> in a more flexible and friendly format for diagnostic and data entry purposes. The web pages also contain additional features not available via the keypad.

This procedure explains how to view web pages for a single Midas<sup>®</sup> which is connected to a single PC only. Of course it is possible to connect hundreds of Midas<sup>®</sup> units to an Ethernet network. More information may be required from the local IT department and Honeywell Analytics as appropriate.

### **13.1 Physical Network Components**

The Ethernet 100BaseT physical network is intended to connect computers to other computers through hubs. For this reason, a Midas<sup>®</sup> cannot communicate directly with a PC using a standard cable. This problem can be overcome by using a special "cross-over" Ethernet cable or by using a 'hub' or 'switch' and two standard (straight through wire connections) Ethernet cables. An example of a cross-over cable is the Belkin A3X126 family. An example of an Ethernet switch is the Linksys SD205.

### **13.2 Internet Settings**

Communications requires knowledge of the IP address and netmask of both the Midas<sup>®</sup> and the PC. Unless the Midas<sup>®</sup> is connected to a network with a DHCP server, the addresses must be set manually. To view or set the IP address of the Midas<sup>®</sup>, see <u>Section 7.2.6</u>. The procedure for setting the IP address of a PC is detailed in the following example using a PC loaded with Microsoft<sup>™</sup> Windows XP and Internet Explorer version 5.0 or higher as illustrated by <u>Diagram 13-1</u>. In the usual case the netmask for both computers should be set to 255.255.255.0. The most-significant three bytes of the IP address must be identical and the least-significant byte must be unique. For example, if the IP address of the Midas<sup>®</sup> was set to 169.254.60.47 (the factory default) then an appropriate IP address for the PC would be 169.254.60.42.

#### Diagram 13-1. IP Address setting in Windows XP.

💫 Netwo	rk Connections			×	_L_Local	Area Connection 2 Status	?×	
File Edi	t View Favorites	Tools	Advanced Help 🥂		General	al Support		
G Back	- 🕥 - 🎓 🔎	) Searc	n 📂 Folders 🛛 🕼 🍞 🗙 🍤 💷 🗖		Con	nnection		
Address 🚺	Network Connections		▼ ⇒ 60		Sta	atus:	Connected	
Name	Ту	pe	5 De Ph Owner	=		aration:	06:38:40	
LAN or I	High-Speed Internet					peed: gnal Strength:	100.0 Mbps	
🕹 Local A	rea Connection 2	N o	E Int System	≻		ina Stength.		
Wizard					Activ	ivity		
_						Sent — 🛃 —	- Received	
New Co	onnection Wizard Wi	zard			Par	ackets: 92,690	103,005	
							[	
					Pro	operties Disable		
					+			
					V		Close	
		•	Local Area Connection 2 Properties		<u>?</u> ×	Internet Protocol (TCP/IP) Pro	perties	? ×
112	Microsoft Word	۱I I	General Authentication Advanced			General		
			Connect using:			You can get IP settings assigned	d automatically if your	network supports
$ \ge $	Internet Explorer		Intel(R) PR0/100 VM Network Connection		— I	this capability. Otherwise, you ne the appropriate IP settings.	eed to ask your netwo	rk administrator for
	Codewright V5.0			c				
	Microsoft Excel		This connection uses the following items:	ntigu	ure	O Obtain an IP address autor	-	
			Elient for Microsoft Networks		/	Use the following IP addre		
	Windows Explorer		🛛 🗹 🚚 File and Printer Sharing for Microsoft Networks			IP address:	169.254.	
C:\	Command Prompt		QoS Packet Scheduler      Thermet Protocol (TCP/IP)			Subnet mask:	255 . 255 .	255.0
	WinAce Archiver					Default gateway:		· .
1	C++Builder 4		Install Uninstall Pro	perti	ies 🚽	Obtain DNS server addres	s automatically	
N.			Description			Use the following DNS ser	ver addresses:	
1	Paint	1 1	Transmission Control Protocol/Internet Protocol. The wide area network protocol that provides communica			Preferred DNS server:		· .
P2	Programs 🕨		across diverse interconnected networks.			Alternate DNS server:		· ·
			Show icon in notification area when connected					
S S	Documents •							Advanced
issi 💽	Settings 🕨 🕨	🕑 0	ntrol Panel	-				
Professional 🚫	Search 🕨		twork Connections		Cancel	1	0	K Cancel
			nters and Faxes					
ž 🔇	Help and Support		skbar and Start Menu					
ð 🖅	Run							
Windows XP	chut Davie							
≤ 🖸	Shut Down							
🐮 Start	📚 Network Connectior	าร	🕹 Local Area Connection 2 🕹 Local Area Conn	ectic	on 2			

#### 13.3 Running the Web Browser

Start Microsoft<sup>™</sup> Internet Explorer or similar web browser. Set the URL to "http://xxx.xxx.xxx.xxx" where the "xxx" fields are replaced with the IP address of the Midas<sup>®</sup>. A screen similar to Diagram 13-2 should be displayed. The status and configuration of the Midas<sup>®</sup> can be viewed and set by clicking on the appropriate links.

Aidas Unit #M12340338, Hone 🖉	eywe	II Analytics - Wind	ows Internet	Explorer				_	_				x
🕞 🕞 🗢 🙋 http://169.254.	60.47	1/						- 🛛 4	🕈 🗙 🔽 Bing				۰ م
File Edit View Favorites	Tool	s Help											
🚖 Favorites 🏾 🏉 Midas Unit 🗧	#M12	2340338, Honeywe	I Analytics					6	• 🔊 • 🖃	🖶 🔻 Pag	ge 🔻 Safety 🕶	Tools -	<b>?</b> •"
			Nan	ne:	HA-M12340338				~				
Honeywell			Serial Numb	er:	M12340338		Cartridge Serial Number:		12K50491				
MDA Scientific			Locatio	on:	MIDAS Gas Detector								
Midas Gas Detector Midas Ver 2.12 build 5			IP Addres	s:	169.254. 60. 47								
General		Status:			Make Printable	Version							
Status	11	General:			Fault Configuration:								
Event History     Calibration Certificate	11	Ga	s: Hydrogen	R	Relay Configuration:	Instrument							
Contact Info / Help		Concentratio	n: 0.0 %LEL		Latching Faults:	YES							
		Aları	n: Normal	Reset	Fault Relay State:	Normally Energized							
Configuration		Fau	It: Normal	TICSCE	Date/Time:								
General		Flor	v: 517 cc/mi	1	Current Time:	8:50 PM							
Gas/Alarms		Pyrolyze	r:		Current Date:	9/26/2012							
Faults     Network		Cartridge S/	1: 12K50491			MM/DD/YYYYY							
Security		Cartridge Expires	9/17/2017		Calibration:								
Time/Date		Alarm Configuration:			Last Zero Calibration:								
·		Alarm Level			Last Span Calibration:								
Calibration				Normal (up)	Calibration Due:								
Zero Calibration		Latching Alarm			Cartridge Expires:	1817 days							
<ul> <li>Span Calibration</li> <li>Flow Calibration</li> </ul>	11	Alarm Relay Stat	e: Norrmally	De-Energized	Software Version:								
4-20 mA Calibration	1.1	Flow Rat	e. N/A.	_	1	2.12 build 5							
		Temperatur			Co-processor:								
Test	11	remperatar			Sensor:								
Bump Test     Alarm/Fault Simulation					Pyrolyzer:	0							
Alarm/Fault Simulation     Done								Internet I	Protected Mode	Off		• • • 90%	-
Done								memer	. rozeccu moue		10		

Diagram	13-2.	Midas®	Default	web	page.

On the Status web page, all faults and alarms are indicated as well as real-time concentration reading. A fault or alarm can be reset from within the web page by clicking the "Reset" button. If the fault condition is still present, the fault status will be indicated again on the web page. Information regarding alarm settings, calibration history and software version are all contained in the status web page.

#### Diagram 13-3. Event History.

ile Edit View Favorites Tools	s H	lelp										
🖌 Favorites 🦉 Midas Unit #M12	3403	38, Honeywell Analytics				<u>à</u>	• 🔊 • 🗆	🛛 🖶 🔻 Pa	ge 🔻 Safety 🔻	Tools 🔻 🔞		
Harrisonall		Nam	ie:	HA-M1234	-M12340338							
Honeywell		Serial Number:		M1234033	38	Cartridge Serial Number:	12K50491					
MDA Scientific		Locatio	on:	MIDAS G	as Detector							
Midas Gas Detector Midas Ver 2.12 build 5		IP Addres	IP Address: 169.254. 60. 47									
General	E	Event History:							Events 91 to	100 of 130		
<ul><li>Status</li><li>Event History</li></ul>		Timestamp	Ту	pe		Description		Gas	Conc/Data			
Calibration Certificate     Contact Info / Help	т	hu Sep 20 19:08:51 2012	Alarm		ALM2: Alarm Level 2			COS	260	Details		
Contact mo / Help	Т	Thu Sep 20 19:08:33 2012	Alarm		ALM1: Alarm Level 1			cos	158	Details		
Configuration		Thu Sep 20 18:53:45 2012	Alarm		RST2: Reset Alarm Level 2			cos	0	Details		
General	Т	hu Sep 20 18:53:45 2012	Alarm		RST1: Reset Alarm Level 1			cos	0	Details		
Gas/Alarms	Т	Thu Sep 20 18:53:29 2012	Reset		RST : Reset All Faults and Alarms via Web			cos	0	Details		
Faults     Network	T	hu Sep 20 18:51:46 2012	COOL		COOL : The cartridge temperature			COS	26.2			
<ul> <li>Security</li> <li>Time/Date</li> </ul>	I	hu Sep 20 18:51:14 2012	LOAD		SAME CELL : Load Data : 12K515	30		COS				
• milliobate	Т	Thu Sep 20 18:47:39 2012	Fault		F 48:Cartridge Absent			COS	S: 8			
Calibration	Т	Thu Sep 20 18:41:49 2012	Alarm		ALM2: Alarm Level 2			cos	341	Details		
	Т	Thu Sep 20 18:30:26 2012	Reset		RST :Not confirmed, returned to pre	evious values		cos				
Zero Calibration	I –											

All Midas<sup>®</sup> events including calibrations, faults, and alarms are data logged with a timestamp, description and category code. The events are color-coded to allow a quick overview of the type of event logged.

Color	Event Type
Green	Reset
Red	Alarms
Yellow	Fault
White	Informational

Event History will store approximately 400 events, overwriting the oldest with the newest data. 30 seconds of data is stored for each alarm event - 15 seconds before the event and 15 seconds after.

The "Send to Print", will generate a printed version of the event log by page or the complete listing (see Diagram 13-5).

The "Details" button allows access to a graphical display of gas concentration versus time elapsed (see Diagram 13-6).

#### Diagram 13-4. Event Log Printing Dialog.

Select Page To	Print:
After clicking the o be generated.	button, please wait up to 1 minute for the page
-	ocker can interfere with the event history generation
inote : Pop-up te	ocker can intertere with the event history generation
O Pages	1 ~ 1
)	Show Printable Version


#### Diagram 13-5. Event Log Output

			Explorer	and the dealer of					
👂 http	://169.254.60.47/Mid	dasEvents	Print.htm				_		8
									A
	Name:	HA-M	12340338						
5	Serial Number:	M1234	40338		Cartridge Serial	Number:	12K50491		
	Location:	MIDAS	S Gas Det	ector					
	IP Address:	169.2	54. 60. 47	1					
Ew	ent History:						Print	Close Windo	
EVe	ENT HISTORY.						Print	Close Windo	DW VC
No	Timestanp		Туре	Desc	ription		Gas	Conc/Data	
No	Timestamp		Туре	Desc	ription		Gas	Canc/Data	
		58 2012			ription artridge temperature		Gas H2	Conc/Data	
No Page	Timestamp 1		HOT	HOT : The c					
No Page 1	Timestamp 1 Wed Sep 26 20:40:	35 2012	HOT	HOT : The c	artridge temperature	12K50491	H2	40.0	
No Page 1 2	Timestamp 1 Wed Sep 26 20:40: Wed Sep 26 20:38:	35 2012 07 2012	HOT COOL LOAD	HOT : The c COOL : The SAME CELL :	artridge temperature cartridge temperature		H2 H2	40.0	
No Page 1 2 3	Timestamp 1 Wed Sep 26 20:40: Wed Sep 26 20:38: Wed Sep 26 20:38:	35 2012 07 2012 43 2012	HOT COOL LOAD HOT	HOT : The C COOL : The SAME CELL : HOT : The C	artridge temperature cartridge temperature Load Data :		H2 H2 H2	40.0 38.9	
No Page 1 2 3 4	Timestamp 1 Wed Sep 26 20:40: Wed Sep 26 20:38: Wed Sep 26 20:38: Wed Sep 26 20:26:	35 2012 07 2012 43 2012 13 2012	HOT COOL LOAD HOT LOAD	HOT : The c COOL : The SAME CELL : HOT : The c SAME CELL :	artridge temperature cartridge temperature Load Data : artridge temperature	12K50491	H2 H2 H2 H2	40.0 38.9	
No Page 1 2 3 4 5	Timestamp 1 Wed Sep 26 20:40: Wed Sep 26 20:38: Wed Sep 26 20:28: Wed Sep 26 20:26: Wed Sep 26 20:26:	35 2012 07 2012 43 2012 13 2012 44 2012	HOT COOL LOAD HOT LOAD HOT	HOT : The c COOL : The SAME CELL : HOT : The c SAME CELL : HOT : The c	artridge temperature cartridge temperature Load Data : artridge temperature Load Data :	12K50491	H2 H2 H2 H2 H2 H2	40.0 38.9 41.4	
No Page 1 2 3 4 5 6	Timestamp 1 Wed Sep 26 20:40: Wed Sep 26 20:38: Wed Sep 26 20:26: Wed Sep 26 20:26: Wed Sep 26 20:22:	35 2012 07 2012 43 2012 13 2012 44 2012 28 2012	HOT COOL LOAD HOT LOAD HOT SETUP	HOT : The C COOL : The SAME CELL : HOT : The C SAME CELL : HOT : The C SET : Settin	artridge temperature cartridge temperature Load Data : artridge temperature Load Data : artridge temperature	12K50491	H2 H2 H2 H2 H2 H2 H2	40.0 38.9 41.4	
No Page 1 2 3 4 5 6 7	Timestamp 1 Wed Sep 26 20:40: Wed Sep 26 20:38: Wed Sep 26 20:26: Wed Sep 26 20:26: Wed Sep 26 20:22: Wed Sep 26 20:12: Wed Sep 26 19:53:	35 2012 07 2012 43 2012 13 2012 44 2012 28 2012 06 2012	HOT COOL LOAD HOT LOAD HOT SETUP SETUP	HOT : The c COOL : The c SAME CELL : HOT : The c SAME CELL : HOT : The c SET : Settin SET : Settin	artridge temperature cartridge temperature Load Data : artridge temperature Load Data : artridge temperature ang up Inhibit	12K50491 12K50491	H2 H2 H2 H2 H2 H2 H2 H2 H2	40.0 38.9 41.4	
No Page 1 2 3 4 5 6 7 8	Timestamp 1 Wed Sep 26 20:40: Wed Sep 26 20:38: Wed Sep 26 20:28: Wed Sep 26 20:26: Wed Sep 26 20:26: Wed Sep 26 20:12: Wed Sep 26 19:53: Wed Sep 26 19:53:	35       2012         07       2012         43       2012         13       2012         44       2012         28       2012         06       2012         58       2012	HOT COOL LCAD HOT LCAD HOT SETUP SETUP COOL	HOT : The c COOL : The SAME CELL : HOT : The c SAME CELL : HOT : The c SET : Settij SET : Settij COOL : The	artridge temperature cartridge temperature Load Data : artridge temperature Load Data : artridge temperature ng up Inhibit ng up Inhibit	12K50491 12K50491	H2 H2 H2 H2 H2 H2 H2 H2 H2 H2	40.0 38.9 41.4 40.0	
No Page 1 2 3 4 5 6 7 8 9	Timestamp 1 Wed Sep 26 20:40: Wed Sep 26 20:38: Wed Sep 26 20:38: Wed Sep 26 20:26: Wed Sep 26 20:212: Wed Sep 26 20:12: Wed Sep 26 19:53: Wed Sep 26 19:53:	35       2012         07       2012         43       2012         13       2012         44       2012         28       2012         06       2012         58       2012	HOT COOL LCAD HOT LCAD HOT SETUP SETUP COOL	HOT : The c COOL : The SAME CELL : HOT : The c SAME CELL : HOT : The c SET : Settij SET : Settij COOL : The	artridge temperature cartridge temperature Load Data : artridge temperature Load Data : artridge temperature ng up Inhibit cartridge temperature cartridge temperature	12K50491 12K50491 12K50491	H2 H2 H2 H2 H2 H2 H2 H2 H2 H2 H2 H2 H2	40.0 38.9 41.4 40.0 26.2	20% •

#### Note

Pop-up blockers may interfere or prevent proper operation.

**Diagram 13-6. Gas Concentration Graph** 

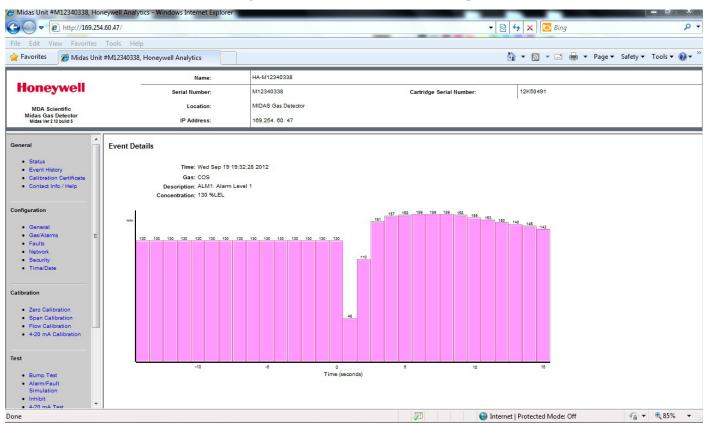

This web page is accessed from the "Details" button from the Event History page. The gas concentration levels for a given alarm are displayed for a period of 30 seconds - 15 seconds before and 15 seconds after the alarm occurred.

**Diagram 13-7. Calibration Certificate.** 

Midas Unit #M12340338, Honeyw	_	cs - Window	s Internet E	xplorer				•	<b>- € - ★</b>	🔁 Bing		l	- 0	× ,0 •
File Edit View Favorites To	ols Help													
🚖 Favorites 🥢 🎉 Midas Unit #M	12340338, 1	Honeywell A	nalytics						🕯 • 6	) • 🗆 🖶	▼ Page	<ul> <li>Safety ▼</li> </ul>	Tools ▼ (	<b>?</b> ▼ <sup>»</sup>
102 102			Name	e:	HA-M1234033	8								
Honeywell		Sei	rial Numbe	r:	M12340338		Cartridge Serial M	lumber:	12K50	491				
MDA Scientific			Location	n:	MIDAS Gas De	tector								
Midas Gas Detector Midas Ver 2.12 build 5			IP Address	s:	169.254. 60. 4	7								
General  Status  Event History  Configuration  General  General  Gas/Alarms  Faults  Network  Security  Time/Date  Calibration  Four Calibration  Four Calibration  Calibration  Test  Bump Test  Alarm/Fault Simulation	4 Stinsfor Poole, Do United Ki BH17 0R2 Tel:+44 1 Fax +44 Web: <u>http</u> Web: <u>http</u> This sens verificatic traceabili sources. The calibi company	rset ngdom Z 202 676161 1202 678011 1202 678011 1202 678011 es@zelana.cc X/Www.hone Part Ni Serial Calibra Gas Tj Sor cartridge v on and whose ty to national s ration was ca	ectronic umber Number Number tion Date ype was calibration standards is rried out in a :2000 appro	Certificat MDAS-E-L 12K50491 Mon Jul 9 0 H2, 0 - 100 ed using equi is traceable to not available accordance woval.	te of Calibra EL R3 09:04:36 2012 0.0 %LEL pment which is s o national standar have been obtain	ubject to regular ds. Gases for which hed from reputable equirements of the								E
							 <b>F</b>	😜 Intern	et   Protect	ed Mode: Off			• 90%	•

An electronic copy of the original sensor calibration certificate can be accessed from this section and printed for audit purposes.

#### **Diagram 13-8.** Contact Information / Help.

	4.60.47/				- 🗟 4	🕈 🗙 🖸 Bing
ile Edit View Favorites	Tools Help					
		oneywell Analytics			6	🔹 🗟 👻 🖃 🖶 🔹 Page 🔹 Safety 🕶 Tools 👻 🔞
		Name:	HA-M12340	1338		
Honeywell		Serial Number:	M12340338	Cart	ridge Serial Number:	12K50491
MDA Scientific		Location:	MIDAS Gas	Constant and a second sec	-	
MIDA Scientific Midas Gas Detector Midas Ver 2.12 build 5		IP Address:	169.254.60	). 47		
Status     Event History     Calibration Certificate     Gentaculints (Help)	Please visit u	act information can be found a is online at: <u>http://www.honey</u> connection to the internet.		ytics web site.		
Configuration	Number	Name	Data Field	Condition		Recovery
General	≡ m9	Simulated m Fault	n/a	User enters simulation mode		Reset simulated fault
Gas/Alarms     Faults	m10	Over Range	Peak concentration	Large concentration of gas has been detected. The confirmation that the gas hazard is gone.	e Midas requires an independent	Supply known clean air to the Midas and clear the fault.
Network     Security     Time/Date	m11	User Calibration Expired	Days until fault	The user specified calibration interval has elapsed.		Perform zero and span calibrations. Increase span calibration period. (zero days = disabled)
	m12	Cartridge Expires Soon	Days until fault	Cartridge is old and will expire soon.		Replace the cartridge with a new cartridge.
alibration	m13	Flow Low	Flow (cc/min)	Midas is no longer able to regulate the flow.		Check filters and pump.
Zero Calibration	m14	Interferent Present	A/D counts	An interferent is degrading the ability of the Midas t	o detect gas.	Check application.
<ul> <li>Span Calibration</li> <li>Flow Calibration</li> </ul>	m15	Temperature Near Limit	Temperature (C)	Temperature is within 2 C of limit.		Check installation environment.
4-20 mA Calibration	m16	Baseline Near Limit	A/D counts	Sensor baseline has drifted.		Check for background gas concentration, temperature or humidity fluctuations. Perform zero calibration. Replace cartridge.
est	m17	Inhibit Timeout	n/a	Transmitter has been in inhibit mode too long.		Resume monitoring or increase timeout value.
		Software Mismatch	Software	Coprocessor firmware or bootloader too old		Update firmware

This page provides a listing of the fault codes and recovery information as well as a link to Honeywell Analytics website.

#### **Diagram 13-9. General Configuration.**

Hidas Unit #M12340338, Honeywell Analy	rtics - Windows Internet Explorer			_	_ 0 × )
C V P http://169.254.60.47/			 	← × Bing	+ م
File Edit View Favorites Tools Hel					
Favorites 🏾 🏉 Midas Unit #M12340338	8, Honeywell Analytics		 6	🕯 🕶 🔂 👻 🖃 🖷 💌 Page	Safety ▼ Tools ▼ Ø ▼
	Name:	HA-M12340338			
Honeywell	Serial Number:	M12340338	Cartridge Serial Number:	12K50491	
MDA Scientific	Location:	MIDAS Gas Detector			
Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47			
Status     Event History     Calibration Certificate     Contact Info / Help Date Configuration	eral Configuration: p: Location: MIDAS Gas Detector e Format:  MIDAS Gas Detector e DD/MM/YYYY DD/MM/YYYY Gacklight:  Classic Multi-Color Accept Reset				
Test					
Done			💭 😔 Interne	t   Protected Mode: Off	🐴 👻 🔍 95% 👻

This panel allows the user to customize the location identifier for the individual Midas<sup>®</sup> units with more detailed text. Enter the text and click Accept to update the Midas<sup>®</sup> web page. The date format can be selected to suit the regional preference.

Diagram 13-10. Gas / Alarm Configuration.

<ul> <li>Midas Unit #M12340338, Honeywell Analy</li> <li></li></ul>	ytics - Windows In	nternet Explorer			🗟 😽 🗙 🔽 Bing	ـ ۵ × ۲
File Edit View Favorites Tools Hel	la .					~
Favorites Andrew Pavorites 1888 Her		lytics			🏠 🕶 🗟 👻 🖃 🖶 🕶 Pao	ge 🕶 Safety 🕶 Tools 🕶 🔞 💌 🎬
		•				
Honeywell		Name:	HA-M12340338			
noneywen	Seri	al Number:	M12340338	Cartridge Serial Number:	12K50491	
MDA Scientific		Location:	MIDAS Gas Detector			
Midas Gas Detector Midas Ver 2.12 build 5	-	P Address:	169.254. 60. 47			
Status	/ Alarm Confi p Gas: Gas: Range:	Hydrogen 🔻	%LEL			
Configuration =	Alarm Level 1:	10.0	%LEL      Normal (up)      Depletion (down)			
General	Alarm Level 2:	20.0	%LEL      Normal (up)      Depletion (down)			
CasiAlarma	Alarm Delay:	3	seconds			
Faults     Network     La	atching Alarms:	<b>V</b>				
Security     Time/Date	Relay State:	<ul> <li>Normally D</li> <li>Normally E</li> </ul>	-			
Calibration • Zero Calibration • Span Calibration • Flow Calibration • 4-20 mA Calibration • Test	_	180 d	ays Change to Default			
Done				🔎 🔛 🖓 In	nternet   Protected Mode: Off	📲 👻 🔍 95% 💌

The Gas/Alarm Configuration page enables users to select the desired gas calibration. It also permits setting alarm levels and other parameters. Additionally, alarms may be set to trigger on decreasing concentration -- this is useful with oxygen.

An alarm delay of 0 to 10 seconds can be set up in order to give a programmable delay time before the alarm signal is processed; this can be used to prevent nuisance alarms in certain conditions. Alarms can be set latching which requires direct operator intervention to reset the alarm once activated. The User Calibration Period is a reminder of when a calibration message will be broadcast by the Midas<sup>®</sup> via the LCD display, analog or digital outputs. This can set to a custom period or if set to zero, no reminder will be activated. The factory default is set for 6 months (180 days).

#### Diagram 13-11. Fault and Relay Configuration.

Midas Unit #M12340338, Honeywel       Image: Construction of the system       Image:		🔹 🗟 😽 🗙 🔽 Bing	- 0 × - 0				
File Edit View Favorites Tools	s Help						
🖌 Favorites 🏾 🎉 Midas Unit #M12	340338, Honeywell Analy	tics				🐴 🔹 🗟 🔹 🖷 🔹	Page ▼ Safety ▼ Tools ▼ 🕢 ▼
102 102		Name:	HA-M12340338				
Honeywell	Serial	Number:	M12340338		Cartridge Serial Numb	12K50491	
MDA Scientific	L	ocation:	MIDAS Gas Detector				
Midas Gas Detector Midas Ver 2.12 build 5	IP A	ddress:	169.254. 60. 47				
General F	ault and Relay Con	figuration:					
Event History	Sətup:						
Calibration Certificate     Contact Info / Help	Latching Faults:	V					
	Fault Relay State:	Normally De-Energy					
Configuration		Normally Energize	d				
General     Gas/Alarms	Relay Configuration:		Relay 1	Relay 2	Relay 3		
Gas/Aurins     Focue     Network     Security     Time/Date		Instrument Fault C	Inly Alarm 1	Alarm 2	Instrument Fault		
		Separate Fault Re	lays Any Alarm	Maintenance Fault	Instrument Fault		
		Combined Fault R	elay Alarm 1	Alarm 2	Any Fault		
Calibration		Modbus/TCP Rem	ote Relays respon	d to writes to Modbus hold	ing registers only		
Calibration							
<ul> <li>Zero Calibration</li> <li>Span Calibration</li> </ul>	Fault m12 Occurrence:	Recur Weekly					
Flow Calibration		Only Once					
<ul> <li>4-20 mA Calibration</li> </ul>		Never Occur					
Test			Accept Reset				
Bump Test     Alarm/Fault Simulation							
Done					<b>J</b>	😜 Internet   Protected Mode: Off	🖓 🔻 🔍 90% 🔻

This page enables the user to select latching fault mode; normally energized or de-energized mode for the relays. The relays can be configured in 4 states. Three states allow local response and one allows remote Modbus/TCP control. This page also allows the user to configure the reoccurrence frequency for the "m12" = "Cartridge Expires Soon" notifications.

Configuration   • Status   • Configuration   • Status   • Configuration   • Configuration <t< th=""><th>Amidas Unit #M12340338, Honeywell Am</th><th>abdice - Windows</th><th>Internet Ev</th><th>lorer</th><th></th><th></th><th></th><th></th><th></th><th></th><th>_</th><th></th><th></th><th></th><th>×</th></t<>	Amidas Unit #M12340338, Honeywell Am	abdice - Windows	Internet Ev	lorer							_				×
File Edit Yeev Favorite: Tools Help     Honceywell     MDA Scientific   Midas Gas Diectory   Mate:   MAddes Gas Diectory   Mate:   Mate:   Mate:   MAddes Gas Diectory   Mate:   Mate:   Mate:   MAddes Gas Diectory   Mate:									_	<b>→</b> 😡 •	🔶 🗙 🔽 Bina				<b>₽</b> -
Favorite: Madas Under #ML/2240338, Honeyweil Analytics     Hame: HA.M12240338 Serial Humber: M12240338 Serial Humber: M12240338 Serial Humber: M12240338 Cartridge Serial Humber: 12550491 Destination: MDA Seioneffic Metwork Configuration: Security Calibration Configuration Security Faults M Address: 169 254 0 47 Security Faults M Address: 169 254 1 1 Hoatmane: HAM12240338 Comparison Security Faults M Address: 169 254 1 1 Hoatmane: HAM1224038 Comparison Cooperting and the relation of a fault on the relays and analog outputs. Faults Aurem Fabota Notation of a fault on the relays and analog outputs. Faults Notation of a fault on the relays and analog outputs.		delp						-		101					
MDA Scientific Midas Gas Detector     IP Address:     19 254. 00. 47     Ceneral      Status       Configuration       Configuration       Calibration Certificate       Configuration       Calibration       Configuration       Calibration       Configuration       Calibration          Configuration                   Calibration                   Calibration  Configuration   Configuration Certificate      Configuration Certificate			alytics							Ġ	• • • •	▼ Page ▼	Safety 👻 T	ools 🔻 🌘	)• »
Interview     Descention     Interview       MAS Gas Detector     Interview     Interview       Interview     Interview     Interview			Name:			0338									
Mitch Gas Deterior     IP Address:     19:254.60.47       General     • Status     • Status       • Status     • Configuration:       • Configuration     • Configuration       • Configuration     • Configuration       • General     • Configuration       • Configuration     • Configuration       • Configuration     • Configuration       • Configuration     • Configuration       • Security     • Manuel       • Automatic     • Manuel       • Automatic     • Manuel       • Manuel	Honeywell	Seri	Serial Number:			M12340338 Cartri					12K50491				
Wess Wr XI Baules     IP Address:     109 254. 60. 47       General     • Status     • Status       • Status     • Status       • Cantration Catificate     • Configuration:       • Catificate Info / Hep     • Manual       • Catificate Info / Hep     • Manual       • Catification     • Manual       • General     • Manual       • Gas/Aarms     • Fig 254. 00. 47       • Span Catificate     • Manual       • Catification     • Manual       • Span Catification     • Manual       • Aurometaut Simputon     • Manual	MDA Scientific		Location:			Detector									
Status     Event Nistory     Configuration			IP Address:			0. 47									
Configuration       Valid 10 seconds. Click the System Reboot button to apply changes.         Ceneral • OasxAarms • Faults • Faults • Secondry • Secondry • Secondry • Secondry • Secondry • Secondry • Secondry • Secondry • TimeDate       Manual • Automatic • Automatic • Default Gateway: 169 254 0 47 • Default Gateway: 169 254 1 1 • Default Gateway: 169 254 1 1 • Default Gateway: 169 254 1 • Reset • Span Calibration • Follow Calibration • Follow Calibration • Automatic • Automatic • Automatic • Automatic • Span Calibration • Automatic • Automatic • Span Calibration • Automatic • Automa	Status     Event History     Calibration Certificate     Contact Info / Help	:: hange the TCP/IP se	tup, the Mida												
General       Gas/Aarms         Gas/Aarms       Automatic         Faults       Gas/Aarms         Faults       Faults         Security       TimeDate         Calibration       Fault Sateway: 169         - Zero Calibration       Automatic         - Koopy       Fault Sateway: 169         - Span Calibration       System Reboot         - Koopy Calibration       System Reboot         - Koopy Calibration       System Reboot         - Automatic Calibration       System Reboot         - KammFault Simulation       - Koopy Calibration of a fault on the relays and analog outputs.	Wait	t 10 seconds.													
Fauls     Methods     Security     Security     TimeDate     Catitoration     Catitoration     Span Calitration     Flow Calitrati	• General														
Security     TimeDate     Subnet: 255 255 0      Default Gateway: 159 254 1      Hostname: HAM12340338      Calibration     Span Calibration     Span Calibration     Span Calibration     System Reboot     Rebooting will cause indication of a fault on the relays and analog outputs.      Rebooting will cause indication of a fault on the relays and analog outputs.      Bump Test     AlarmFault Simulation     Test	Faults     VetWork     Security     Tracity	IP Address:	169	254	60	4	7								
Calibration Calibration Calibration Calibration Calibration Calibration Calibration Coept Reset Coept		Subnet:	255	255	255	0									
Calibration  Zetic Calibration Span Calibration Flow Cali		Default Gateway:	169	254	1	1									
<ul> <li>Zero Calibration</li> <li>Span Calibration</li> <li>Flow Calibration</li> <li>4:20 mA Calibration</li> <li>Few Calibration</li> <li>Few Calibration</li> <li>Asam/Fault Simulation</li> <li>Asam/Fault Simulation</li> </ul>	Calibration	Hostname:	HA-M12340	338											
	Zero Calibration     Span Calibration     Fopu Calibration     4-20 mA Calibration  Test     Bump Test	ooting will cause		stem Reboo	nt )	and analo	g outputs.								
	Done								<b>J</b>	Internet	Protected Mode: Off			R 90%	-

Diagram 13-12. Network Configuration.

The Network setup enables a manual or automated selection of the Midas<sup>®</sup> unit's IP and subnet address. Additional information regarding the gateway address and an identifier name for the network can be added on this page. The Midas<sup>®</sup> DHCP client reports the hostname over the network to a domain name server. The default hostname is based on the Midas<sup>®</sup> serial number and will be seen as "HA-<<<Midas unit serial number>>> (Example: HA-M0516146). Invalid hostnames are automatically reformated for validity.

One additional network setting, which controls the web access level, is available through the local user interface. The two web access levels are Full Control (which allows the user to check status, make configuration changes, perform calibrations, and perform tests through the web interface) and Read Only (which does not allow configuration, calibration, or tests to be performed through the web interface). In read-only mode, the web buttons at the bottom of the screen will be greyed-out and will not be selectable. See Table 6-3 *Set-up menu overview*.

#### Note

In order for the changes to take effect, the System Reboot button should be activated. When this takes place, the Midas<sup>®</sup> unit will be temporarily offline from detecting gas while it recovers and a fault condition will be transmitted via any connected energized relays or analog connection.

#### Diagram 13-13. Security.

Midas Unit #M12340338, Honeywell Ana	lytics - Windows Internet Explorer		- 0	😽 🗙 📴 Bing	× 🗉 🗕
File Edit View Favorites Tools H	ala				<i>r</i>
Favorites And Midas Unit #M123403				🏠 🕶 🔝 👻 📑 🖝 Page 🕶	Safety ▼ Tools ▼ 🕢 ▼
Honeywell MDA Scientific Midas Gas Detector Midas Ver 2.12 build s	Name: Serial Number: Location: IP Address:	HA-M12340338 M12340338 MDAS Gas Detector 169,254, 60, 47	Cartridge Serial Number:	12K50491	
<ul> <li>Status         <ul> <li>Event History</li> <li>Calibration Certificate</li> <li>Contact Info / Heip</li> </ul> </li> <li>Configuration         <ul> <li>General</li> <li>Gasi/Alarms</li> <li>Faults</li> <li>Network</li> <li>Security</li> <li>Time/Date</li> </ul> </li> <li>Calibration         <ul> <li>Zero Calibration</li> <li>Span Calibration</li> <li>4-20 mA Calibration</li> <li>4-20 mA Calibration</li> <li>Test</li> <li>Bump Test</li> <li>Alarm/Fault Simulation</li> <li>Calibration</li> </ul> </li> </ul>	rity Configuration:          Password:				
Done			🔎 😝 Intern	et   Protected Mode: Off	🖓 🕶 🍕 90% 👻

A 4 digit numerical code can be entered to prevent unauthorized changes to the Midas<sup>®</sup> transmitter; this code can also be entered or changed via the keypad directly on the transmitter. Once activated, each time the user attempts to access a restricted area of the Midas<sup>®</sup> menu (either directly via the LCD/keypad or via the webpage) they will be prompted to enter the supervisor code.

#### Note

The passcode should be recorded in a separate database along with the serial number for each Midas<sup>®</sup> unit. Should the passcode be lost or forgotten, Honeywell Analytics is not responsible for any lost time or inconvenience. To recover lost passcodes please contact your Honeywell Analytics Service Representative.

#### Diagram 13-14. Time and Date.

Hidas Unit #M12340338, Honeywell Analy	tics - Windows Internet Explorer				_ 0 ×
C V R http://169.254.60.47/				🗕 💀 😽 🗙 🖸 🖸 Bing	<del>،</del> ۵
File Edit View Favorites Tools Hel					
Favorites 🏾 🏉 Midas Unit #M12340338	, Honeywell Analytics			😭 🔻 🔝 👻 📖 🔻 Pa	age ▼ Safety ▼ Tools ▼ 🕢 ▼
100	Name:	HA-M12340338			
Honeywell	Serial Number:	M12340338	Cartridge Serial Number:	12K50491	
MDA Scientific	Location:	MIDAS Gas Detector			
Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47			
<ul> <li>Status</li> <li>Event History</li> <li>Calibration Certificate</li> <li>Contact Info / Help</li> </ul> Configuration <ul> <li>General</li> <li>Gas/Alarms</li> <li>Faults</li> <li>Network</li> <li>Security</li> <li>Third, Date</li> </ul> Calibration <ul> <li>Span Calibration</li> <li>Flow Calibration</li> <li>How Calibration</li> <li>4-20 mA Calibration</li> </ul> Test	e does not automatically update with e is entered in 24 hour format. Year 2012 Month / Day 9 / 26 Hour : Minute 21 : 18	h regional daylight savings changes.		Lauren al Durate de Marcine Off	- + 05°/ -
Done			<b>J</b>	Internet   Protected Mode: Off	🖓 🕶 🍕 95% 💌

The time and date can be configured via this web page. In addition the Midas<sup>®</sup> can have its time synchronized automatically with the web browsing computer's own clock by selecting the "Synchronize with Computer" button; this useful feature will ensure any time changes are automated on a site wide basis.

#### Diagram 13-15. Zero Calibration.

Midas Unit #M12340338, Honeywell Analy				▼	🕨 🗙 🔽 Bing			× ,0 •
File Edit View Favorites Tools He					• 🗟 • 🖃 🌞 •	Page ▼ Safety ▼	Tools 🔻 🔞	)• <sup>»</sup>
Honeywell MDA Scientific Midas Gas Detector Midas Ver 2.12 build S	Name: Serial Number: Location: IP Address:	HA-M12340338 M12340338 MIDAS Gas Detector 169.254. 60. 47	Cartridge Serial Num	ber:	12K50491			
General Terror • Status • Event History • Calibration Certificate • Contact Info / Help	o Gas Calibration: .p: Zero Calibration: Save New Values:		Status: Concentration Reading:	-0.5 %LEL				
Galilation     Calibration     Zerm Calibration	ructions: ss Start to enter zero gas calibration i	mode g mode to enter zero gas calibration mode.						
Span Calibration     Flow Calibration     4-20 mA Calibration  Test Done				Internet	Protected Mode: Off	<i>4</i> <u>∩</u> ▼	€ <u>95%</u>	•

A zero gas calibration can be initiated via the web page and is ideal for when access to the Midas<sup>®</sup> unit is restricted due to its location. Follow the on screen instructions to perform the calibration sequence correctly.

#### Diagram 13-16. Span Calibration.

00	ell Analytics - Windows Internet Explorer			_		_ 0 ×
				▼ 8 4	🕨 🗙 🔯 Bing	Q
File Edit View Favorites Too	uls Help 12340338, Honeywell Analytics			谷	▼ 🕅 ▼ 🖃 🚔 ▼ Pa	ge ▼ Safety ▼ Tools ▼ 🕢 ▼
	Name:	HA-M12340338		Late		
Honeywell	Serial Number:	M12340338	Cartridge Seri	ial Number	12K50491	
	Location:	MIDAS Gas Detector	Cartiluge Sen	al Number.	12K30491	
MDA Scientific Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47				
General	Span Gas Calibration:					
Status     Event History	Step:		Status:	_		
Calibration Certificate	Set Span Gas Information:		Concentration Rea	ding: -0.5 %LEL		
Contact Info / Help	Span Calibration: Save New Values:					
Configuration =	<					4
General     Gas/Alarms	Start			Span Gas:		
Faults     Network	Instructions: Press Start to enter span gas calibration	mode		Gas	Hydrogen 👻	Accept
Security				Gas Type	Humid Ory	Accept
Time/Date	Note: Unit must be in normal monitoring	g mode to enter span calibration mode.		Concentration	50.0 %	LEL Accept
Calibration						
Zero Calibration						
Span Calibration						
<ul> <li>Flow Calibration</li> <li>4-20 mA Calibration</li> </ul>						
Test						
Done			<u>, 71</u>	Internet	Protected Mode: Off	👍 🕶 🖲 95% 🔻

The span calibration sequence can be performed using the web page interface. Parameters such as the gas humidity and the gas type can be selected dependent on the gases available per sensor cartridge. Follow the on screen sequence of instructions to perform the span calibration correctly. See <u>Appendix B</u> for a list of recommended test gases.

#### **Diagram 13-17. Flow Calibration.**

Ø Midas Unit #M12340338, Honeyw Ø ♥ Ø http://169.254.60.4	ell Analytics - Windows Internet Explore 17/		<b>▼</b> ⊠	👍 🗙 🖸 Bing	× ۵ ـ
File Edit View Favorites Too	ols Help				
-	12340338, Honeywell Analytics		ĺ	🗊 🕶 🗟 👻 🖃 🖷 🕶 Pag	e ▼ Safety ▼ Tools ▼ 🕡 ▼ ≫
Henerauell	Name:	HA-M12340338			
Honeywell	Serial Number:	M12340338	Cartridge Serial Number:	12K50491	
MDA Scientific	Location:	MIDAS Gas Detector			
Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47			
General	Flow Calibration:				
Status	Step:		Status:		
Event History     Calibration Certificate	Characterize Baseline:		Set Point 1 Flow: 499 cc/min		E
Contact Info / Help	Characterize Setpoint 1:		Set Point 2 Flow: 600 cc/min		
	Characterize Setpoint 2:		Current Flow Rate: 491 cc/min		
Configuration ≡	Save New Values:				+
General     Gas/Alarms	•		m		•
Faults	Start			Flow Set Points:	
Network     Security	Instructions:			Set Point 1: 499	Accept
Time/Date	Press Start to enter flow calibration i	node.		Set Point 2: 600	Accept
Calibration				Flow Adjust:	
Zero Calibration     Span Calibration     Flow Calibration     4-20 mA Calibration					
Done			🗾 😔 Interne	et   Protected Mode: Off	🖓 🔻 🔍 95% 🔻 💡

The Midas<sup>®</sup> transmitter can have its flow settings calibrated and changed using the web page interface. Options to set two flow set points are available. Follow the on screen sequence of messages to perform the flow calibration correctly.

#### Diagram 13-18. 4-20mA Calibration.

Hidas Unit #M12340338, Honeywell An	alytics - Windows Internet Explorer				_ 0 X
C T A Http://169.254.60.47/			- № +	🛧 🗙 🔽 Bing	<del>،</del> م
File Edit View Favorites Tools I			- N		ge ▼ Safety ▼ Tools ▼ 🕢 ▼
Favorites O Midas Unit #M12340	338, Honeywell Analytics		1	🔸 🖸 🕈 🖃 🖷 🕈 Pag	e • Safety • Tools • 🕜 •
	Name:	HA-M12340338			
Honeywell	Serial Number:	M12340338 Cartridge	Serial Number:	12K50491	
MDA Scientific	Location:	MIDAS Gas Detector			
Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47			
	20 mA Calibration: step: Characterize 4 mA: Awaiting In Characterize 20 mA: Save New Values:	put	Status: 4-20 mA Readi	ing: 4-20	
Faults     Network     Security     Time/Date		mode.An external current meter will be needed to calibrate the 4-2 mode to enter 4-20 mA calibration mode.	20 mA output.		Adjust 4-20 mA: ncrease Decrease
Calibration • Zero Calibration • Span Calibration • Flow Calibration • 4-20 mA Calibration Test					
Done		<b>F</b>	😜 Internet	Protected Mode: Off	📲 🕶 🔍 95% 🔻

The analog output from the Midas<sup>®</sup> can be calibrated for integration with an external control device. Follow the on screen sequence of messages to perform the 4-20mA calibration correctly.

#### Diagram 13-19. Bump Test.

Midas Unit #M12340338, Honeywell Ar           Image: Comparison of the system           Image: C	nalytics - Windows Internet Explorer			🕶 🔯 😽 🗙 💽 Bing	× ۵ ـ
File Edit View Favorites Tools	Help				
	338, Honeywell Analytics			🏠 🕶 🗟 👻 🚍 🖶 🕶 Page	▼ Safety ▼ Tools ▼ 🕢 ▼
Heneraul	Name:	HA-M12340338			
Honeywell	Serial Number:	M12340338	Cartridge Serial Number:	12K50491	
MDA Scientific	Location:	MIDAS Gas Detector			
Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47			
<ul> <li>General</li> <li>Gas/Aams</li> <li>Faults</li> <li>Network</li> <li>Security</li> <li>Time/Date</li> </ul> Calibration <ul> <li>Zero Calibration</li> <li>Flow Calibration</li> <li>Flow Calibration</li> <li>How Calibration</li> <li>How Calibration</li> </ul> Test <ul> <li>Simulation</li> <li>Inhibit</li> <li>4-20 mA Test</li> </ul>	ump Test: Perform Test: The inhibit icon is also displayed indica to alarm outputs will be generated durin process. Apply the bump test gas and the display he measured gas concentration. Note: Unit must be in normal monitorin Gas Concentration: Flow: 488 cc/min Enter Bump Test Mode	ng this will show			
Authorized Users					
Done			JE 😜 1	Internet   Protected Mode: Off	🖓 🔻 🍕 95% 🔻

A simple gas checking test or "Bump Test" can be applied using the web page interface. The bump test confirms that the sensor can still respond to an applied concentration of gas but is not a formal calibration. See <u>Appendix</u> <u>B</u> for a list of recommended bump test gases.

Diagram 13-20. Alarm/Fault Simulation.

Midas Unit #M12340338, Honeywe		t Explorer			▼ □ 4	🕈 🗙 🔽 Bing	ـ ۵ ×
File Edit View Favorites Tool					101.		· · ·
	2340338, Honeywell Analytics				6	• 🔊 • 🖃 🚔 • Pa	ge ▼ Safety ▼ Tools ▼ 🔞 ▼
Henerall	N	ame:	HA-M12340338				
Honeywell	Serial Nur	nber:	M12340338	Cartridge Serial Number:	8	12K50491	
MDA Scientific	Loca	tion:	MIDAS Gas Detector				
Midas Gas Detector Midas Ver 2.12 build 5	IP Add	ess:	169.254. 60. 47				
Configuration General Gas/Marms Faults Faults Security Time/Date Calibration Zero Calibration Flow Calibration Flow Calibration 4-20 mA Calibration Test Bump Test AtarmPaul Simulation I hibit 4-20 mA Test	Alarm/Fault Simulation Perform Test: CAUTION: Proceeding with Only authorized operator MIDAS continues to monit Simulation:	Alarm or Fau should perfor or gas during si No Simul Simulate Simulate Simulate	simulation. Jlation 9 Alarm 1	arm activation.			
Authorized Users							
Done				JE 😜	Internet	Protected Mode: Off	🖓 🔻 🍕 95% 🔻

Via this web page an operator can test the alarm control philosophy by simulating a number of alarm or fault scenarios. Note that activating these simulations will drive any external alarm devices connected to the Midas<sup>®</sup> including the Modbus/TCP and the relay outputs. The simulation may be perceived as a false alarm/nuisance alarm if not fully communicated to other staff.

#### Diagram 13-21. Inhibit Mode.

Hidas Unit #M12340338, Honeywell Analyt	tics - Windows Internet Explorer			
C V R http://169.254.60.47/			- № 4	★ X Bing P ▼
File Edit View Favorites Tools Help				@ **
🖌 Favorites 🏉 Midas Unit #M12340338,	, Honeywell Analytics		9	▼ 🗟 ▼ 🖃 🖶 ▼ Page ▼ Safety ▼ Tools ▼ 🔞 ▼ <sup>≫</sup>
Harrand	Name:	HA-M12340338		
Honeywell	Serial Number:	M12340338	Cartridge Serial Number:	12K50491
MDA Scientific	Location:	MIDAS Gas Detector		
Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47		
General     Gas/Alarms     Faults     Network     Security     Time/Date		Accept		
• 4-20 mA Test •			🗾 😝 Internet	Protected Mode: Off 🛛 🖓 🔻 🔍 100% 💌

Inhibit mode temporarily disables the alarm or fault outputs from transmitting a signal during a test and configuration process so as to avoid nuisance or unexpected alarm scenarios. The Inhibit Timeout is the period of time (in minutes) that the Inhibit mode will stay active for until it will automatically default to No Inhibit mode.

Note

The Midas<sup>®</sup> can still monitor gas while in Inhibit Mode. Except in Inhibit Monitoring and Outputs.

#### Diagram 13-22. 4-20mA Test.

Analytic Midas Unit #M12340338, Honeywell Analytic	tics - Windows Internet Explorer				_ 0 ×
C 🔍 🗢 🖉 http://169.254.60.47/			- 🛛	🔄 🗙 🖸 Bing	- م
File Edit View Favorites Tools Hel	p				
🚖 Favorites 🏾 🏀 Midas Unit #M12340338,	, Honeywell Analytics		Č	🛉 🕶 🔜 💌 🖶 🕶 Page 🕶	Safety ▼ Tools ▼ 🕢 ▼
	Name:	HA-M12340338			
Honeywell	Serial Number:	M12340338	Cartridge Serial Number:	12K50491	
MDA Scientific	Location:	MIDAS Gas Detector			
Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47			
Ever Calibration     Span Calibration     Flow Calibration     4-20 mA Calibration      Test     Bump Test     Alarm/Fault     Simulation     Inhibit     4-20 mA flest      P	nly authorized operators should	y cause unexpected alarm activation.			
Diagnostics     Service Menu     Adv Pyrolyzer     Diagnostics     Adv Pyrolyzer Heater     Test     Adv Pyrolyzer Flow     Test     Done				Protected Mode: Off	≪ ₹ 100% ▼

This web page stimulates the analog 4-20 mA output to go to any desired current in 1 mA steps between 1 and 21 mA. This can be used to test the response of external equipment.

#### Diagram 13-23. Authorized Users.

Hidas Unit #M12340338, Honeywell Analy	rtics - Windows Internet Explorer			_	_ 0 X
C T T http://169.254.60.47/			- №	😽 🗙 🔽 Bing	<del>،</del> ۵
File Edit View Favorites Tools He			<u>ل</u>	🔻 🔊 🔹 🖃 🖶 🔻 Page 🕶 S	afety 🗙 Tools 🗙 🔊 👻
		1			
Honeywell	Name:	HA-M12340338		I	
noneywen	Serial Number:	M12340338	Cartridge Serial Number:	12K50491	
MDA Scientific	Location:	MIDAS Gas Detector			
Midas Gas Detector Midas Ver 2.12 build 5	IP Address:	169.254. 60. 47			
Span Calibration     Flow Calibration     4-20 mA Calibration	got your password?	r Service Menu	Internet	Protected Mode: Off	√a • @100% • .

The Diagnostics and Service menus are for specialist product support activities performed only by approved Honeywell Analytics service personnel and are not available to the end user.




### 14 Typical Installation Topologies

#### **14 Typical Installation Topologies**


Midas<sup>®</sup> has very flexible installation options to allow the user to select the one most suitable for their specific application.

#### 14.1 Conventional Installation

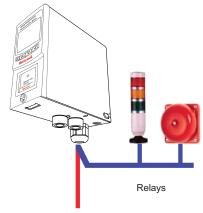


Analog

24V DC

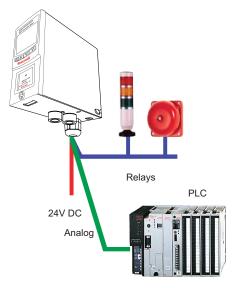


#### 14.2 Modbus/TCP Installation

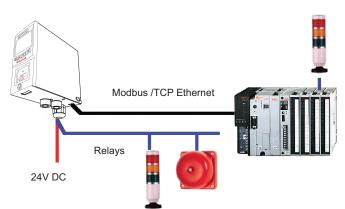

#### 14.3 Power over Ethernet (PoE) Installation

#### Table 14-1. PoE Hub Power Budget

Mfr	Model	ł	Ports	Total Power Budget	of Mid	number as Gas s powered
				(watts)	w/Pyro	w/o Pyro
3Com	3CNJPSE-US	1	(injector)	15.4	1	1
NetGear	FS108P	4	8	32	1	3
D-Link	DES-1316	8	16	123	8	8
Allied Telesyn	AT-8524POE	24	24	370	24	24

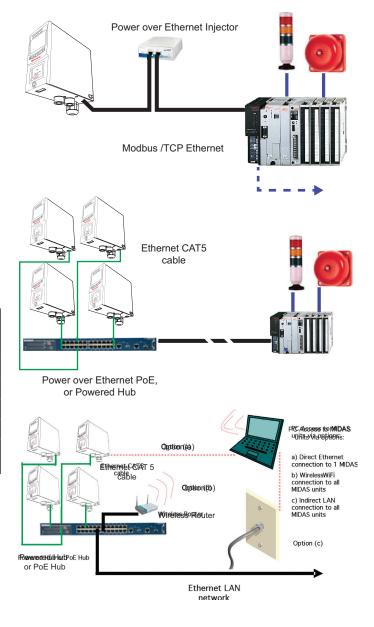



### **15 Ordering Information**

#### **15 Ordering information**

This section contains details of how to order complete Midas<sup>®</sup> detector and sensor cartridge kits, separate transmitters and sensor cartridges as well as spares and accessories.

#### 15.1 Midas<sup>®</sup> Transmitter

Description	Part no.
Midas <sup>®</sup> transmitter. Complete with manual and quick start guide. (1) PG16 gland fitting for power in and relays out, 1/4" O.D. x 1/8" I.D. sample inlet tubing (10') [3m], 3/16" I.D. exhaust tubing (10') [3m], and a sample line tubing duct adapter. Order a sensor cartridge separately for each transmitter.	MIDAS-T-004

#### 15.2 Midas<sup>®</sup> Pyrolyzer for NF<sub>3</sub>

Description	Part no.
Midas <sup>®</sup> NF <sub>3</sub> Pyrolyzer Module. Pyrolyzer in combination with Midas <sup>®</sup> transmitters provide detection of NF <sub>3</sub> specifically. Unit includes a bolt-on pyrolyzer module that operates with and universal Midas <sup>®</sup> Extractive Transmitter (order separately) and (1) Freon in line filter. Units are powered via direct connection to transmitter unit. Consult Honeywell Analytics for additional gases that may become available via pyrolysis. Pyrolyzer includes Pyrolyzer Quick Start Guide and installation screws. Order the NF <sub>3</sub> cartridge (MIDAS-S-HFX or MIDAS-E-HFX) separately. Order the ventilated top cover (MIDAS-A-039) separately.	MIDAS-T-00P

#### 15.3 Midas<sup>®</sup> High-Temperature Pyrolyzer for Perfluoro Compounds

Description	Part no.
Midas <sup>®</sup> PFC (Perfluoro Compound) Pyrolyzer Module. PFC Pyrolyzer in combination with Midas <sup>®</sup> transmitters provide detection of various PFC compounds including $C_4F_6$ , $C_5F_8$ , $SF_6$ , $CH_2F_2$ and $CH_3F$ . Unit includes a bolt-on pyrolyzer module that operates with any Universal Midas <sup>®</sup> Extractive Transmitter (order separately). Units are powered via direct connection to transmitter unit. Consult Honeywell Analytics for additional gases detectable with this option. Pyrolyzer includes Pyrolyzer Quick Start Guide and installation screws. Order the PFC cartridge (MIDAS-S-CFX or MIDAS-E-CFX) separately. Order the ventilated top cover (MIDAS-A-039) separately.	MIDAS-T-HTP

#### 15.4 Midas<sup>®</sup> LonWorks<sup>®</sup> Module

Description	Part no.
Midas <sup>®</sup> LonWorks <sup>®</sup> Interface Module. Option for use with connecting a Midas <sup>®</sup> transmitter or a transmitter with pyrolyzer, to a LonWorks <sup>®</sup> life safety communications network. Module provides all communication and power to the MIDAS <sup>®</sup> transmitter and transmits all gas readings, faults, alarms and other sensor diagnostics via the LonWorks <sup>®</sup> protocol. Access to LonMaker <sup>®</sup> version 3.1 configuration software is required (available separately).	MIDAS-T-LON

#### 15.5 Midas<sup>®</sup> Complete Gas Detector Kits

A complete kit including a universal Midas<sup>®</sup> transmitter (MIDAS-T-004) and a selected Midas<sup>®</sup> sensor cartridge can be ordered as a combined package. Each sensor cartridge is supplied with an extended 2 year warranty. Sensor cartridge and gas detector are packaged separately for ease of installation. Note that to detect NF<sub>3</sub> a separate pyrolyzer module (MIDAS-T-00P) must also be ordered.

Complete detector kit and sensor cartridge description	Kit part no.
Ammonia 0-100 ppm kit	MIDAS-K-NH3
Arsine 0-0.2 ppm and Germane 0-0.8 ppm kit	MIDAS-K-ASH
Boron Trichloride 0-8 ppm, Dichlorosilane 0-8 ppm, Hydrogen Bromide 0-8 ppm, Hydrogen Chloride 0-8 ppm	MIDAS-K-HCL
Boron Trifluoride 0-4 ppm, Hydrogen Fluoride 0-12 ppm, Nitrogen Trifluoride 4-40 ppm and Tungsten Hexafluoride 0-12 ppm kit	MIDAS-K-HFX
Bromine 0-0.4 ppm and Chlorine Dioxide 0-0.4 ppm kit	MIDAS-K-BR2
Chlorine 0-2 ppm and Fluorine 0-4 ppm kit	MIDAS-K-HAL
Carbon Dioxide 0-2.0% v/v kit	MIDAS-K-CO2
Carbon Monoxide 0-100 ppm kit	MIDAS-K-COX
Diborane 0-0.4 ppm kit	MIDAS-K-B2H
Hydrogen 0-1000 ppm kit	MIDAS-K-H2X
Hydrogen 0-100% LEL and Methane 0-100% LEL kit <sup>1</sup>	MIDAS-K-LEL
Hydrogen Cyanide 0-20 ppm kit	MIDAS-K-HCN
Hydrogen Sulfide 0-40 ppm kit	MIDAS-K-H2S
Nitric Oxide 0-100 ppm kit	MIDAS-K-NOX
Nitrogen Dioxide 0-12 ppm kit	MIDAS-K-NO2
Oxygen 0-25% v/v kit	MIDAS-K-O2X
Ozone 0-0.4 ppm kit	MIDAS-K-O3X
Phosphine 0-1.2 ppm kit	MIDAS-K-PH3
Phosphorous Oxychloride 0-0.4 ppm kit	MIDAS-K-POC
Silane 0-20 ppm and Disilane 0-20 ppm kit	MIDAS-K-SHX
Silane low level 0-2 ppm kit	MIDAS-K-SHL
Sulfur Tetrafluoride 0-0.4 ppm and Chlorine Trifluoride 0-0.4 ppm kit	MIDAS-K-SF4
Sulfur Dioxide 0-8 ppm kit	MIDAS-K-SO2
TEOS 0-40 ppm kit	MIDAS-K-TEO

<sup>1</sup> Midas<sup>®</sup> detectors are not ETL approved for monitoring in or sampling from classified areas above 25% LEL

#### **15.6 Accessories and Spares**

Description	Part no.		
Sample Line Tubing Duct Adapter	1283K1090		
Replacement Pump Assembly for Midas <sup>®</sup> Gas Detector	MIDAS-A-007		
Replacement Internal Air Filter for Midas® Gas Detector	MIDAS-A-009		
Replacement RJ45 restraining strap	MIDAS-A-010		
PoE Ethernet Injector	MIDAS-A-011		
Freon/IPA Filter Extended Life (for $NF_3$ pyrolyzing gas detector and IPA filter)	1830-0080		
Freon/IPA Filter (for $NF_3$ pyrolyzing gas detector and IPA filter)	1830-0027		
Flexible Conduit 21" - length	0235-0128		
Flexible Conduit 27" - length	0235-0163		
Operating Instructions and Quick Start Guide for Midas® Gas Detector - English	MIDAS-A-001		
End of line particulate filter	0780248		
"L" Bracket for vertical mounting of one Midas <sup>®</sup> unit	MIDAS-A-032		
DIN rail mounting kit for Midas <sup>®</sup> Transmitter or LonWorks <sup>®</sup> Interface Module			
Ventilated top cover for pyrolyzer units	MIDAS-A-039		



### **16 Specifications**

#### **16 General Specifications**

Physical	
Size (unit with Sensor cartridge)	150 mm(H) x 65 mm(W) x 153 mm (D) (5.91 x 2.56 x 6.02 in)
Weight (unit with Sensor cartridge)	0.8 kg (1.76 lb)
NF <sub>3</sub> Pyrolyzer Dimensions	
Size	70 mm (H) x 63 mm (W) x 85 mm (D) (2.75 x 2.48 x 3.35 in)
Weight	0.41 kg (0.9 lb)
High-Temperature PFC Pyrolyzer Dimens	ions
Size	100 mm (H) x 101 mm (W) x 140 mm (D) (3.9 x 4.0 x 5.5 in)
Weight	1.36 kg (3.0 lb)
Power Requirements:	
	24 V Nominal -15 to +10% (20.4 to 26.4 VDC)
Operating Voltage	Midas <sup>®</sup> pyrolyzers and Midas <sup>®</sup> Transmitters with LonWorks Modules have a restricted minimum voltage requirement of 21.6 VDC.
Operating Voltage with Power over Ethernet	48 VDC Power-over-Ethernet(IEEE 802.3af compliant)
Power Consumption:	
Transmitter unit	< 5 W
Transmitter with pyrolyzer (std or hi temp)	< 12.95 W
Transmitter with LonWorks Module	< 8 W
Transmitter with LonWorks and pyrolyzer	< 15.95 W
Outputs:	
Visual	Alarm, power and fault LEDs plus LCD with all gas readings and events.
Relays	Alarm1, Alarm2, Fault Relays (3) rated 1.0 A @ 30VDC or 0.5 A @ 125 VAC max 10 uA @ 10 mV minimum, configurable as normally open or closed, latched or unlatched.
Analog	3 wire sink, 3 wire source, or 4 wire fully isolated; 0 to 21 mA.
Digital Communications	Modbus / TCP Ethernet / Power over Ethernet (PoE) / LonWorks® Interface Module
Service Port	RS232C / PPP protocol
Certification & Specification:	
European	CE Marked for sale in European Community Meets EN 50270:2006 (Type 2) and EN 61000-6-4: 2007
Environmental	ETL approved UL61010-1 Ed:3
Electrical	IEEE 802.3af-2003

Response Times:	
Typically	Refer to Individual Cartridge Datasheets
Transport System:	
Flow Rate	500 cc / min (10 in/H <sub>2</sub> O maximum pressure/vacuum at inlet and exhaust points)
Transport Time	2 – 30 seconds maximum
Performance	LDL < LAL LAL = ½ TLV (typically 12% FSD) FSD = Typically 4 x TLV
Sampling Distance:	
Tubing Length	Up to 30 m (100 feet) with FEP tubing
Ambient Point	In line air filter required
Exhaust Length	Up to 30 m (100 feet)
Operating Temperature:	
Unit with sensor cartridge Unit with sensor cartridge and Pyrolyzer	0°C to 40°C (32°F to 104°F) 0°C to 30°C (32°F to 86°F)
Tubing Requirement:	
Sample	6.35 mm OD (1/4") x 3.18 mm (1/8"), FEP, 30 m (100 feet) maximum dependent on gas type
Exhaust	6.35 mm (1/4") OD x 4.76 mm (3/16"), Polypropylene 30 m (100 feet) maximum
Wiring Requirement:	
4- 20mA	2 wire, 14 AWG maximum
Digital	CAT5 cable or equivalent; RJ45 connector
Gas Concentration Display & Interface:	
Instrument	4-digit alphanumeric display with separate units, flow rate bar graph and other icon driven indicators. 4 button interface keypad
Remote	Option for PC / PDA Internet browser access via Ethernet
Warranty:	
Transmitter Unit	1 year
Sensor cartridge	1 year standard, 2 years extended warranty
Expected Pyrolyzer Life (Standard and High-Temp)	I year life, (12 month warranty)
Expected lifetime of pump	2 years, (12 month warranty)
Mounting:	Wall mounted using pre-drilled holes on chassis. Options for DIN rail or vertical bracket mounting.
Case Material:	Cover: Painted steel Chassis/Mounting Bracket: Zinc plated steel



### 17 Calibration and Bump Testing

#### 17 Calibration and Bump Testing

All Midas<sup>®</sup> sensor cartridges are pre-calibrated by Honeywell Analytics using traceable gas standards and approved calibration methods to a proven ISO 9000 quality controlled procedure. The Midas<sup>®</sup> sensor cartridge design is very robust and resistant to long term drift; in fact in a normal operating environment it is possible to extend the calibration interval with Midas<sup>®</sup> up to 24 months (subject to local requirements concerning calibrations). This design feature is another element that supports Midas<sup>®</sup> as a long term cost effective gas detection solution. Honeywell Analytics recommends frequent bump testing to confirm performance.

Note

It is the sole responsibility of each user to determine their own calibration and bump test schedule based on their own safety assessments and understanding of local requirements.

Just prior to commissioning, each Midas<sup>®</sup> unit should be zero calibrated to ensure accuracy. It is recommended that the unit be powered with the cartridge installed for at least 30 minutes prior to conducting a zero calibration. A second zero calibration may be required after a 24 hour period which is dependent on the site conditions.

If the ambient condition in the area the detector is monitoring experiences a long-term change, it is necessary to perform a zero calibration to allow the unit to adjust to the new conditions.

#### Note

When performing a zero calibration, be sure that the area is free of the target gas and/or interfering gases (refer to the cartridge data sheets for further details), as the presence of a background gas will affect the ability for the detector to properly calibrate to the correct levels. If the sample area cannot be verified to be free of the target gas or cross-sensitive gases, use a cylinder of zero air to perform the calibration

Calibration of an electrochemical sensor cartridge is a relatively complex discipline to master and it is possible that in less ideal field conditions the calibration can be far less accurate than under laboratory conditions and therefore substantial inaccuracies can be introduced. In the absence of any formal calibration policy by the end user, it is preferable to retain the original factory calibration.

Care must be taken to ensure that the correct materials for an extractive application are obtained from reputable suppliers and are of proven quality and composition. Inappropriate calibration equipment will lead to under or over-presenting the wrong concentration of gas to the sensor cartridge during the calibration period. Likewise contaminated or inadequately flushed tubing and other gas-wet surfaces can also introduce errors into the calibration process. Only qualified, trained personnel should attempt to perform gas calibrations; contact your local Honeywell Analytics Service Representative for further details on calibration services.

Testing should be performed at the end of the sample tube or at the detector with a short length of tubing. Applying gas with a short length (less than 5 feet/1.5 meters) of clean FEP tubing will give optimal results for confirming the accuracy and response time of the cartridge.

Applying gas at the end of the installed sample line will test the full system including the whole length of tubing. This will verify the integrity of the tubing. Sample line integrity can also be checked by performing a leak check (see section 8.5). Note that there will be additional transport time due to the tubing length and conditioning the gas-wet surfaces (see table 4-1).

Bump tests are also used as an approximate means to present a controlled gas release to the sensor cartridge in order to verify that the transmitter does respond accordingly. Bump testing is popular as typical experiences show that a smaller list of easier to handle gases can be used to provide functional tests on a wider range of gas types. In the absence of a formal calibration policy from the end user, Honeywell Analytics would recommend a minimum semi-annual schedule of at least one bump test per sensor with the appropriate test gas (see details below).

Bump testing may reduce sensor cartridge lifetime and the accuracy of the calibration if applied incorrectly or too frequently. Use only the target gas or the recommended bump test gas.

Zero calibration is a recommended procedure that should be performed periodically to improve the performance of the sensor. This is particularly important when the sensor is operating outside of normal environmental conditions (20°C, 50% rH).

The tables in <u>Appendix B</u> indicate the recommended calibration or bump test gas for the Midas<sup>®</sup> sensor cartridges:

Consult with your Honeywell Analytics Service Representative for approved methods and materials before commencing calibrations and bump tests. See Tech Note 1998-0219 *Protocol for Testing Toxic Gas Detectors* for additional information.

#### Bump the Testing Midas® Gas Detector

A bump test is not intended to be an accurate calibration, but is used as a confidence check to ensure that the gas detection system is functional. Since some of the target gases are difficult to handle, bump testing often makes use of cross sensitivities so that more convenient gases can be used. In bump test mode, the Modbus/TCP outputs are not inhibited. Only the 4-20 mA and alarm outputs are inhibited. The bump gas test is a functional check only. Consult local guidelines for recommended best practices. Bump test concentrations are calculated to generate a minimum first alarm level response.

#### Equipment

See Tech Note 1998-0219 *Protocol for Testing Toxic Gas Detectors* for additional information. The following items are required:

Test gas (see <u>Appendix B</u>)

Special regulator for extractive use (if using field calibration cylinder) or suitable sample bag (if not sampling directly from cylinder)

Tubing (suitable for gas being applied)

#### Preparation

Most of the test gases are highly toxic. It is essential that personnel using these toxic gases be trained in their use. Ensure that the test gas will be vented safely.

Applying test gas may cause alarm, fault or maintenance fault indications on the 4-20 mA loop, relays or digital outputs. Before starting a test, ensure that suitable steps have been taken to prevent these indications from triggering unwanted actions. The Midas<sup>®</sup> gas detector has a special mode for bump testing where the alarm outputs are inhibited (see <u>Section 7.4.1</u>).

See Tech Note 1998-0219 *Protocol for Testing Toxic Gas Detectors* for additional information. The NF<sub>3</sub> pyrolyzer should be tested in the same way as an extractive system, but using NF<sub>3</sub> as the test gas. If NF<sub>3</sub> is not available, chlorine can be used at a concentration of 5 ppm. If using chlorine, the Freon filter must be removed

from the unit before the test and replaced after the test.

For the PFC High-Temperature pyrolyzer, chlorine can also be used as a suitable bump test gas.

Note

A test with chlorine operates the electrochemical cell and the unit's electronics, but does not test the pyrolyzer module itself.

#### Note

The CO<sub>2</sub> cell is not designed for use in applications that are oxygen deficient (<15% O<sub>2</sub>). Calibrations should always be carried out in CO<sub>2</sub> balanced with air.

#### Finishing

Wait for the gas reading to return to normal levels. This may take some time, especially if concentrations above the recommended levels have been used or if the test gas has been applied for an extended period of time.

Ensure that any latched faults or alarms that have been generated by the testing have been cleared.

Make sure that the gas detection system is fully restored to its normal operating state and that any control system overrides used during the testing have been removed.

The alarms generated by the testing will have created entries in the transmitter's history log.

#### Troubleshooting

If the test does not produce a satisfactory result, check the following points:

- 1. Check the gas cylinder concentration and type are correct
- 2. Check the expiration date of the cylinder.
- 3. Check that there is sufficient gas left in the

cylinder.

- 4. Check that there are no leaks on the test system.
- 5. Make sure that the tubing length is as short as possible and that there are no blockages.
- 6. Make sure that the transmitter is not displaying a fault before the test is started.



### A Modbus<sup>®</sup> / TCP Interface

#### A Modbus/TCP Interface

The Midas<sup>®</sup> gas detector can report concentration information in a variety of formats including relay contact closure, an analog 4-20 mA loop, Ethernet/IP/HTML web pages and via the Modbus/TCP networking protocol. This section defines the format of data in Modbus/TCP registers. More information about Modbus/TCP can be obtained from www.modbus.org. More information on the Midas<sup>®</sup> web pages is contained in <u>Section 14</u>.

The Midas<sup>®</sup> is a Modbus/TCP "server" as defined in the MODBUS Application Protocol Specification V1.1a. It supports command 03 ("read holding registers") for registers 40001 to 40018 as listed in Table 1.

This section describes Midas<sup>®</sup> software V1.08; previous software release levels support a subset of these registers.

The Midas<sup>®</sup> reports floating-point concentration numbers in little-endian or Intel format. This is scaled in units of ppm for gasses which have display units of ppm or ppb. For other display units the concentration is scaled directly in display units. This applies to registers FCN, A1T and A2T.

#### A.1 Reading Status from the Midas<sup>®</sup>

The Midas<sup>®</sup> fills 18 Modbus/TCP holding registers as listed in Table 1. The STTS register is a concise summary of Midas<sup>®</sup> status. The other registers provide more complete information.

Ref. Addr. Reg. Name	Bits	Function	Value Enumeration	
40001 STTS	Status			
	0-3	Monitoring sta	te integer	
			0: Warmup	
			1: Monitor mode with inhibit state "nonE"	
			2: Monitor mode but alarms inhibited, inhibit state "ALm"	
			3: Monitor mode but alarms and faults inhibited, inhibit state "AL-Ft"	
nibble 0			4: Monitor mode but fully Inhibited, inhibit state "ALL"	
			5: Alarm / Fault Simulation	
			6: Bump test mode (largely same as state 2)	
			7: 4-20 mA loop Calibration mode	
			8: Calibration Mode other than state 7	
			9-15: for future expansion	
	4-5	Fault status in	teger	
			0: No fault	
nibble1			1: Maintenance fault active	
ribbiei			2: Instrument fault active	
	6		Alarm1 active	
	7		Alarm 2 active	
	8		Relay 1 energized	
nibble2	9		Relay 2 energized	
TIDDIEZ	10		Relay 3 energized	
	11		Heartbeat Bit – toggles every two seconds to confirm communications	
nibble3	12		Relays under remote Modbus/TCP control	
ribbles	13-15	for future expa	Insion	
40002 GASS	Gas Selecti	on		
	0-7	Gas ID		
	8-15	Sensor CartridgeID		
40003 FCN1	Gas Concer	ntration in floatin	g point format word 1 of 2	

Ref. Addr. Reg. Name	Bits	Function	Value Enumeration	
40004 FCN2	40004 FCN2 Gas Concentration in floating point format word 2 of 2			
40005 CONC	40005 CONC Gas Concentration in Integer Format			
	Conversion	equation: ppm	value = Registry Value * 1/10 DECP	
		ost important a	ctive fault	
40007 DPUN	Decimal poir	nt and units		
	0-2	Decimal point		
	3-7	for future expa		
	8-15	Concentration	units	
		1: ppm		
		2: ppb		
		4: % volume		
		8: %LEL		
		16: mA		
			15, 17-255: for future expansion	
40008 TEMP Temperature in Celsius				
	Signed 16-b			
40009 CLRH		Cell life remair	•	
40010 HRTB			inter, 16 LSB of time in seconds	
40011 FLOW Sample		Sample flowra		
40012		Reserved for future expansion, currently zero		
40013 A1T1		Alarm 1 threshold in floating point format,		
40014 A1T2		Scaling same as FCN1 and FCN2		
40015 A2T1		Alarm 2 threshold in floating point format,		
40016 A2T2		Scaling same as FCN1 and FCN2		
40017 ASI	Bits 0 – 1	Alarm status,	equivalent to STTS bits 6-7	
40017 ASI	Bits 2-15	Zero		
40018 FSI	Bits 0 – 1	Fault status in	teger, equivalent to STTS bits 4-5	
	Bits 2–15	Zero		
40019 to 400	20	Reserved for f	uture expansion, currently zero	

#### A.2 Sending Commands to the Midas®

The Midas<sup>®</sup> can accept eleven commands over Modbus as listed in Table 3. It is possible to reset alarms, flip relays and perform similar tasks over the network. All commands are conveyed by writing 4 bytes to special registers as listed in table 2. This may be accomplished with command 06 ("write special register") and command 16 ("write multiple registers"). For example, resetting alarms is accomplished by writing 350 to holding register 40021 and writing 13862 to holding register 40022.

The Midas<sup>®</sup> Modbus implementation avoids the standard "write coil" command in order to increase resistance to malicious communication over the Internet. Furthermore, Honeywell Analytics strongly recommends that any Midas<sup>®</sup> connected to the Internet be protected from unauthorized commands by a firewall.

The Modbus commands to manipulate the relays have no effect unless the relays are appropriately configured. This can be accomplished via the front "SEt/FLt" menu or by the Fault Configuration web page. By default, remote control is disabled.

#### Table A2. User-Writable Modbus Holding Registers

Ref. Addr. Reg. Name	Function
40021 CMD1	user command register 1
40022 CMD2	user command register 2

CMD1 40021	CMD2 40022	Action
0x015E	0x3626	reset alarms and faults
0x025E	0x3626	Inhibit Alarms
0x035E	0x3626	Inhibit Alarms and Faults
0x045E	0x3626	Inhibit All
0x055E	0x3626	No Inhibit
0x065E	0x3626	Energize relay1
0x075E	0x3626	De-energize relay1
0x085E	0x3626	Energize relay2
0x095E	0x3626	De-energize relay2
0x0A5E	0x3626	Energize relay3
0x0B5E	0x3626	De-energize relay3
any other	command	ignored

### the Midas<sup>®</sup> Table A3. Effect of Writing to Modbus Holding Registers

#### A.3 Determining the MAC Address

Most Ethernet network administration is accomplished by configuring 32-bit internet protocol (IP) addresses. However, every Ethernet device also contains a media access controller (MAC) address. This low-level address is 48-bits long, fixed and unique.

With most computer equipment, knowledge of the MAC address is not necessary. The mapping between IP addresses and MAC addresses is handled transparently by the address resolution protocol or ARP. The Midas<sup>®</sup> and personal computers support ARP.

However, certain PLCs do not support ARP. This section explains how to determine the MAC address of a Midas<sup>®</sup> gas detector which is needed by these PLCs. This requires a computer with an Ethernet connection to the Midas<sup>®</sup>. This procedure uses Microsoft Windows XP, although Linux and other Microsoft operating systems will also work.

- 1. Establish Ethernet communications between the PC and the Midas<sup>®</sup>. Both must be on the same subnet.
- 2. Open a command prompt.
- 3. Execute the ping command as shown in Diagram A1.

#### Diagram A-1. Ping Command

```
C:\>ping 10.1.162.75

Pinging 10.1.162.75 with 32 bytes of data:

Reply from 10.1.162.75: bytes=32 time=2ms TTL=60

Reply from 10.1.162.75: bytes=32 time<1ms TTL=60

Reply from 10.1.162.75: bytes=32 time<1ms TTL=60

Reply from 10.1.162.75: bytes=32 time<1ms TTL=60
```

4. Execute the ARP command as shown in Diagram A2.

C:\>arp -a		
Interface: 10.1.162.53	0x2	
Internet Address	Physical Address	Туре
10.1.162.1	00-04-27-47-8b-0a	dynamic
10.1.162.75	00-40-9d-ba-d3-c3	dynamic
10.1.162.226	00-08-c7-45-07-d0	dynamic

**Diagram A-2. ARP Command** 

- 5. Search for the IP address of the Midas<sup>®</sup> in the list. This has been highlighted in Diagram A2.
- 6. The MAC address is listed in the "Physical Address" column. So in this example the MAC address of the Midas<sup>®</sup> is 0x00409DBAD3C3.

ARP is defined by "request for comment" (RFC) 826. This document was written in 1982 and may be viewed at <u>http://rfc.sunsite.dk/rfc/rfc826.html</u>.



## B Gas Tables

						Maximum	Compon		Flow		Calib	ration		Bum	np Test		Recommended	
Gas Name	Formula	Range	Default Alarm 1	Default Alarm 2	Sensor Part Number	Sensor Warm-up Time (minutes)	Sensor Cartridge ID	Gas ID	Rate (cc/ min)	Calibration Gas	Conc (ppm)	Output Equiv. (ppm)	Exp Time (sec)	Recommended Bump Test Gas	Conc (ppm)	Max Time (sec)	Maximum Sample Line Length (m)	End of line filter
Ammonia	NH3	9-100 ppm	12.5 ppm	25 ppm	MIDAS-S/E-NH3	10	01	1	500	NH <sub>3</sub>	50	50	300	NH <sub>3</sub>	50	180	10	780248, 1991-0147 or 1830-0055
Arsine	AsH <sub>3</sub>	18-200 ppb	25 ppb	50 ppb	MIDAS-S/E-ASH	20	02	1	500	AsH <sub>3</sub>	100 ppb	100 ppb	300	$PH_{\mathfrak{z}}$	0.1	180	30	780248, 1991-0147 or 1830-0055
Boron Trichloride	BCI <sub>3</sub>	0.72-8 ppm	1 ppm	2 ppm	MIDAS-S/E-HCL	20	10	2	500	HCI	4	4	300	HCI	4-6	180	5 <sup>4</sup>	1991-0147 or 1830-0055
Boron Trifluoride	BF <sub>3</sub>	0.72-8 ppm	1 ppm	2 ppm	MIDAS-S/E-HFX	20	08	2	500	HF	4	4.5	300	Cl <sub>2</sub>	5	180	5 <sup>4</sup>	1991-0147 or 1830-0055
Boron Trifluoride Low Level	BF <sub>3</sub>	0.18-2 ppm	0.25 ppm	0.5 ppm	MIDAS-S/E-HFL	20	26	2	500	HF	1	1.12	300	Cl <sub>2</sub>	1	180	5 <sup>4</sup>	1991-0147 or 1830-0055
Bromine	Br <sub>2</sub>	0.036-0.4 ppm	0.05 ppm	0.1 ppm	MIDAS-S/E-BR2	20	13	1	500	Cl <sub>2</sub>	0.2	0.2	300	Cl <sub>2</sub>	0.2	180	10	1991-0147 or 1830-0055
Carbon Dioxide	CO <sub>2</sub>	0.15-2% vol	0.25 v/v	0.50 v/v	MIDAS-S/E-CO2	20	14	1	500	CO2	1% V/V	1% V/V	300	CO2	1% V/V	180	30	780248, 1991-0147 or 1830-0055
Carbon Monoxide	со	9-100 ppm	12.5 ppm	25 ppm	MIDAS-S/E-COX	10	15	1	500	со	50	50	300	со	50	180	30	780248, 1991-0147 or 1830-0055
Chlorine	Cl <sub>2</sub>	0.18-2 ppm	0.25 ppm	0.50 ppm	MIDAS-S/E-HAL	10	12	1	500	Cl <sub>2</sub>	1	1	300	Cl <sub>2</sub>	1	180	10	1991-0147 or 1830-0055
Chlorine Dioxide	CIO <sub>2</sub>	0.036-0.4 ppm	0.05 ppm	0.1 ppm	MIDAS-S/E-BR2	20	13	2	500	Cl <sub>2</sub>	0.2	0.27	300	Cl <sub>2</sub>	0.2	180	10	1991-0147 or 1830-0055

						Maximum	Concor		Flow		Calib	ration		Bun	np Test	Recommended		
Gas Name	Formula	Range	Default Alarm 1	Default Alarm 2	Sensor Part Number	Sensor Warm-up Time (minutes)	Sensor Cartridge ID	Gas ID	Rate (cc/ min)	Calibration Gas	Conc (ppm)	Output Equiv. (ppm)	Exp Time (sec)	Recommended Bump Test Gas	Conc (ppm)	Max Time (sec)	Maximum Sample Line Length (m)	End of line filter
Chlorine Trifluoride	CIF3	0.036-0.4 ppm	0.05 ppm	0.1 ppm	MIDAS-S/E-SF4	20	09	2	500	HF	0.6	0.2	300	Cl <sub>2</sub>	1	180	5 <sup>4</sup>	1991-0147 or 1830-0055
Diborane	B <sub>2</sub> H <sub>6</sub>	16-240 ppm	30 ppm	60 ppm	MIDAS-S/E-XCF	20 <sup>3</sup>	35	3	500	HF	5	25.5	300	$\operatorname{Cl}_2$	5	180	30	"780248 2, 1991-0147 or 1830-0055"
Dichlorosilane	SiH <sub>2</sub> Cl <sub>2</sub>	0.72-8 ppm	1 ppm	2 ppm	MIDAS-S/E-HCL	20	10	3	500	HCI	4	4	300	HCI	4-6	180	5 <sup>4</sup>	1991-0147 or 1830-0055
Difluoromethane	CH <sub>2</sub> F <sub>2</sub>	16-240 ppm	30 ppm	60 ppm	MIDAS-S/E-XCF	20 <sup>3</sup>	35	3	500	HF	5	25.5	300	$\operatorname{Cl}_2$	5	180	30	780248 <sup>2</sup> , 1991-0147 or 1830-0055
Disilane	Si <sub>2</sub> H <sub>6</sub>	1.8-20 ppm	2.5 ppm	5 ppm	MIDAS-S/E-SHX	20	05	2	500	SiH <sub>4</sub>	10	11.3	300	H <sub>2</sub> S	50	180	10	780248, 1991-0147 or 1830-0055
Fluorine	F <sub>2</sub>	0.36-4 ppm	0.50 ppm	1 ppm	MIDAS-S/E-HAL	10	12	2	500	Cl <sub>2</sub>	2	2	300	Cl <sub>2</sub>	2	180	10	1991-0147 or 1830-0055
Germane	GeH <sub>4</sub>	70-800 ppb	100 ppb	200 ppb	MIDAS-S/E-ASH	20	02	2	500	AsH <sub>3</sub>	0.1	0.54	300	$PH_3$	0.1	180	30	780248, 1991-0147 or 1830-0055
Hexafluorobutadiene	C <sub>4</sub> F <sub>6</sub>	3-40 ppm	5 ppm	10 ppm	MIDAS-S/E-XCF	20 <sup>3</sup>	35	1	500	HF <sup>2</sup>	5	7.8	300	Cl <sub>2</sub> <sup>2</sup>	5	180	30	780248 <sup>2</sup> , 1991-0147 or 1830-0055
Hydrogen (%LEL) <sup>7</sup>	H <sub>2</sub>	8-100% LEL <sup>1</sup>	10% LEL	20% LEL	MIDAS-S/E-LEL <sup>8</sup>	30	25	1	500	H <sub>2</sub>	2% V/V	50% LEL	300	H <sub>2</sub>	500	180	30	780248, 1991-0147 or 1830-0055
Hydrogen (ppm)	H <sub>2</sub>	90-1000 ppm	125 ppm	250 ppm	MIDAS-S/E-H2X	10	16	1	500	H <sub>2</sub>	500	500	300	H <sub>2</sub>	2% V/V	180	30	780248, 1991-0147 or 1830-0055

						Maximum	Company		Flow		Calib	ration		Bum	np Test		Recommended	
Gas Name	Formula	Range	Default Alarm 1	Default Alarm 2	Sensor Part Number	Sensor Warm-up Time (minutes)	Sensor Cartridge ID	Gas ID	Rate (cc/ min)	Calibration Gas	Conc (ppm)	Output Equiv. (ppm)	Exp Time (sec)	Recommended Bump Test Gas	Conc (ppm)	Max Time (sec)	Maximum Sample Line Length (m)	End of line filter
Hydrogen Bromide	HBr	0.72-8 ppm	1 ppm	2 ppm	MIDAS-S/E-HCL	20	10	4	500	HCI	4	4.7	300	HCI	4-6	180	5 <sup>4</sup>	1991-0147 or 1830-0055
Hydrogen Chloride	HCI	0.72-8 ppm	1 ppm	2 ppm	MIDAS-S/E-HCL	20	10	1	500	HCI	4	4	300	HCI	4-6	180	5 <sup>4</sup>	1991-0147 or 1830-0055
Hydrogen Cyanide	HCN	1.8-20 ppm	2.5 ppm	4.7 ppm	MIDAS-S/E-HCN	20	17	1	500	HCN	10	10	300	SO <sub>2</sub>	4	180	10	780248, 1991-0147 or 1830-0055
Hydrogen Fluoride	HF	1.05-12 ppm	1.5 ppm	3 ppm	MIDAS-S/E-HFX	10	08	1	500	HF	5	5	300	Cl	10	180	5 <sup>4</sup>	1991-0147
Hydrogen Fluoride Low Level	HF	0.18-2 ppm	0.25 ppm	0.5 ppm	MIDAS-S/E-HFL	20	26	1	500	HF	1	1	300	Cl <sub>2</sub>	1	180	5	1991-0147 or 1830-0055
(Note: Due to U.S. Governme	nent regulat	ions, this range m	nay be subjec	t to restrictio	ons requiring specie	al licensing for c	ertain count	ries outs	ide North	- America. Con	tact HA fo	r eligibility inf	ormation)				-	
Hydrogen Sulfide	H <sub>2</sub> S	3.6-40 ppm	5 ppm	10 ppm	MIDAS-S/E-H2S	10	18	1	500	H₂S	20	20	300	H <sub>2</sub> S	20	180	30	780248, 1991-0147 or 1830-0055
Hydrogen Sulfide High Level	H <sub>2</sub> S	2-100 ppm	10 ppm	20 ppm	MIDAS-S/E-HSH	10	27	1	500	H <sub>2</sub> S	50	50	300	H <sub>2</sub> S	50	180	30	780248, 1991-0147 or 1830-0055
Methane (%LEL) <sup>7</sup>	CH4	8-100% LEL <sup>1</sup>	10% LEL	20% LEL	MIDAS-S/E-LEL <sup>8</sup>	30	25	2	500	H <sub>2</sub>	2% V/V	45.5% LEL	300	H <sub>2</sub>	2% V/V	180	30	780248, 1991-0147 or 1830-0055
Methyl Fluoride	CH3E	8-120 ppm	15 ppm	30 ppm	MIDAS-S/E-XHF	20 <sup>3</sup>	34	2	500	HF	5	68	300	Cl <sub>2</sub>	5	180	30	780248 <sup>2</sup> , 1991-0147 or 1830-0055
Nitrogen Dioxide	NO <sub>2</sub>	1.05-12 ppm	1.5 ppm	3 ppm	MIDAS-S/E-NO2	10	20	1	500	NO <sub>2</sub>	6	6	300	NO2	50	180	30	1991-0147 or 1830-0055

						Maximum	Compon		Flow		Calib	ration		Bum	np Test	Recommended		
Gas Name	Formula	Range	Default Alarm 1	Default Alarm 2	Sensor Part Number	Sensor Warm-up Time (minutes)	Sensor Cartridge ID	Gas ID	Rate (cc/ min)	Calibration Gas	Conc (ppm)	Output Equiv. (ppm)	Exp Time (sec)	Recommended Bump Test Gas	Conc (ppm)	Max Time (sec)	Maximum Sample Line Length (m)	End of line filter
Nitrogen Oxide	NO	9-100 ppm	12.5 ppm	25 ppm	MIDAS-S/E-NOX	10	19	1	500	NO	50	50	300	NO	6	180	30	780248, 1991-0147 or 1830-0055
Nitrogen Trifluoride	NF <sub>3</sub>	3.6-40 ppm	5 ppm	10 ppm	MIDAS-S/E-XHF	20 <sup>3</sup>	34	1	500	HF	5	20.8	300	$\operatorname{Cl}_2$	5	180	30	780248 <sup>2</sup> , 1991-0147 or 1830-0055 1830-0027 <sup>6</sup>
Octofluorocyclopentene	C₅F <sub>8</sub>	3-40 ppm	5 ppm	10 ppm	MIDAS-S/E-XCF	20 <sup>3</sup>	35	2	500	HF	5	9.9	300	Cl <sub>2</sub>	5	180	30	780248 <sup>2</sup> , 1991-0147 or 1830-0055
Oxygen Proficiency & Deficiency	0 <sub>2</sub>	0.2-25% vol	23.5 v/v	19.5 v/v	MIDAS-S/E-O2X	30	21	1	500	0 <sub>2</sub>	Air	21% V/V	300	0 <sub>2</sub>	Air	180	30	780248, 1991-0147 or 1830-0055
Ozone	0 <sub>3</sub>	0.036-0.4 ppm	0.05 ppm	0.1 ppm	MIDAS-S/E-O3X	10	22	1	500	0 <sub>3</sub>	0.2	0.2	300	NO <sub>2</sub> <sup>9</sup>	1	180	5	1991-0147 or 1830-0055
Ozone High Level	O <sub>3</sub>	0.036-0.7 ppm	0.300 ppm	0.600 ppm	MIDAS-E-O3H	10	29	1	500	O <sub>3</sub>	0.35	0.35	300	NO <sub>2</sub>	1	180	5	1991-0147 or 1830-0055
Phosphine	PH <sub>3</sub>	110-1200 ppb	150 ppb	300 ppb	MIDAS-S/E-PH3	20	04	1	500	$PH_3$	0.6	0.6	300	$PH_{\mathfrak{g}}$	0.6	180	30	780248, 1991-0147 or 1830-0055
Silane	SiH4	1.8-20 ppm	2.5 ppm	5 ppm	MIDAS-S/E-SHX	20	05	1	500	SiH₄	10	10	300	H <sub>2</sub> S	50	180	30	780248, 1991-0147 or 1830-0055
Silane Low Level	SiH4	0.18-2 ppm	25 ppb	50 ppb	MIDAS-S/E-SHL	20	06	1	500	SiH₄	1	1	300	H <sub>2</sub> S	3	180	30	780248, 1991-0147 or 1830-0055

						Maximum					Calib	ration		Bun	np Test		Recommended	
Gas Name	Formula	Range	Default Alarm 1	Default Alarm 2	Sensor Part Number	Sensor Warm-up Time (minutes)	Contridan	artridge Gas	Rate (cc/ min)	Calibration Gas	Conc (ppm)	Output Equiv. (ppm)	Exp Time (sec)	Recommended Bump Test Gas	Conc (ppm)	Max Time (sec)	Maximum Sample Line Length (m)	End of line filter
Sulfur Dioxide	SO <sub>2</sub>	0.7-8 ppm	1 ppm	2 ppm	MIDAS-S/E-SO2	10	23	1	500	SO <sub>2</sub>	4	4	300	SO <sub>2</sub>	4	180	30	1991-0147 or 1830-0055
Sulfur Hexafluoride	SF <sub>6</sub>	700-8000 ppm	1000 ppm	2000 ppm	MIDAS-S/E-XCF	20 <sup>3</sup>	35	4	500	HF	5	1980	300	Cl <sub>2</sub>	5	180	30	780248 <sup>2</sup> , 1991-0147 or 1830-0055
Sulfur Tetrafluoride	SF <sub>4</sub>	0.036-0.4 ppm	0.05 ppm	0.1 ppm	MIDAS-S/E-SF4	20	09	1	500	HF	1	0.25	300	Cl <sub>2</sub>	1	180	5 <sup>4</sup>	1991-0147 or 1830-0055
TEOS	TEOS	3.6-40 ppm	5 ppm	10 ppm	MIDAS-S/E-TEO	10	24	1	500	ETO	20	20	300	ETO	25	180	30	780248, 1991-0147 or 1830-0055
Tungsten Hexafluoride	WF <sub>6</sub>	1.05-12 ppm	1.5 ppm	3 ppm	MIDAS-S/E-HFX	20	08	4	500	HF	5	5	300	Cl <sub>2</sub>	10	180	5 <sup>4</sup>	1991-0147 or 1830-0055
Tungsten Hexafluoride Low Level	WF <sub>6</sub>	0.18-2 ppm	0.25 ppm	0.5 ppm	MIDAS-S/E-HFL	20	26	4	500	HF	1	1	300	Cl <sub>2</sub>	1	180	5 <sup>4</sup>	1991-0147 or 1830-0055



#### General Notes:

<sup>1</sup> Midas<sup>®</sup> detectors are not ETL approved for monitoring in or sampling from classified areas above 25% LEL.

<sup>2</sup> End-of-line particulate filter (780248) MUST be removed when pyrolyzer unit is calibrated/ bump tested with recommended gases other than target gases.

<sup>3</sup> Pyrolyzer unit requires longer warmup time:

$NF_{3}$	30 min
$C_4F_6$	
CH₃F	
$CH_2F_2$	60 min
$C_{5}F_{8}$	
SF <sub>6</sub>	

<sup>4</sup> Recommended to keep the sample lines as short as possible where the RH condition at the sample point is high (above 50% RH); there will be some sample loss due to absorption onto the sample line.

<sup>5</sup> When calibrating or bump testing  $NF_3$  sensor cartridges with  $Cl_2$  or HF, the charcoal Freon filter (1830-0027) MUST be removed for calibration/bump testing then reinstalled for monitoring.

<sup>6</sup> Freon filter 1830-0027 is required for this application.

<sup>7</sup> The most common failure in catalytic sensors is performance degradation caused by exposure to certain poisons' (referred to as Catalytic Poisons). It is therefore essential that any catalytic based gas monitoring system should checked regularly via bump tested (or re-calibrated), more importantly after any gas release notification when there is a potential poisoning based gases may be present. For further details contact Honeywell Analytics (please ensure all gases that are potentially present in the area of detection are available prior to contacting)

<sup>8</sup> MIDAS-E-LEL cartridge carries the standard 2 year warranty but can be calibrated to extend its life to 5 years. For the 2 year cartridges, Honeywell Analytics allows for a period of up to 6 months after the manufactured date for cartridge installation and then 2 years of use. If, for example, the cartridge is installed within the first 6 months, the expiration date will be 2 years

after the installation date. If, however, the cartridge is installed more than 6 months after the manufactured date, it will expire 2.5 years after the manufactured date. Contact your local Honeywell Analytics Service Representative for more information.

<sup>9</sup> An ozone generator can be used instead of 1 ppm NO<sub>2</sub>.

#### **Bump Testing Notes:**

1. If Phosphine is not available, Hydrogen Sulfide can be used to test these sensors. Use a concentration of 2 ppm.

**IMPORTANT:** this should only be done once to avoid the danger of poisoning the sensor.

2. The ambient Oxygen level is typically 20.9% by volume. If there is a serious problem with an Oxygen sensor, the reading will not be 20.9%. The flow rate is regulated by the Midas<sup>®</sup> unit.

CO<sub>2</sub> test gases must be in a balance of air, not Nitrogen.

As an alternative, the actual target gas can always be used instead of a cross-sensitive gas.

Higher concentrations than the recommended ones can be used if necessary, but extra time may be needed for the reading to recover to zero.

**IMPORTANT:** Do not exceed the recommended concentrations or application times where Hydrogen Sulfide is used to test Silane. Doing this can damage the cell.



### **C** Warranty Statement

#### C Warranty Statement

All products are designed and manufactured to the latest internationally recognized standards by Honeywell Analytics under a Quality Management System that is certified to ISO 9001.

As such, the Midas<sup>®</sup> Transmitter (including the pump) is warranted under proper use, to the original enduser purchaser, against any defects in materials or workmanship related failures for a period of 24 months from the date of first turn-on or 30 months from delivery from Honeywell Analytics to the customer, whichever is less. Separate warranty conditions apply to the sensor cartridges limited as indicated below. During this period, Honeywell Analytics will repair or replace defective parts on an exchange basis, F.O.B. to approved service centers on a global basis.

This warranty does not cover damage caused by accident, abuse, abnormal operating conditions or extreme poisoning of the sensor cartridge.

Defective equipment must be returned to Honeywell Analytics for repair. Before returning materials for repair or replacement, the Customer must obtain a Service Event Number (SE#) by contacting Honeywell Analytics Service in advance; include a detailed report stating the nature of the defect and ship the equipment prepaid to Honeywell Analytics' factory. If no detail report is included, Honeywell Analytics reserves the right to charge an investigative fee (prices available upon request) before any repair or replacement is performed. Returned goods must detail the Service Event Number (SE#) clearly on the package.

Service in the field or at the customer's premises is not covered under these warranty terms. Time and travel expenses for on-site warranty services will be charged at Honeywell Analytics' normal billing rates.

Contact your Honeywell Analytics representative for information on available Service Contracts.

Honeywell Analytics shall not be liable for any loss or damage whatsoever or howsoever occasioned which may be a direct or indirect result of the use or operation of the Contract Goods by the Buyer or any Party.

This warranty covers the gas detector and parts sold to the Buyer only by authorized distributors, dealers and representatives as appointed by Honeywell Analytics. This warranty does not cover defects attributable to improper installation, repair by an unauthorized person or the use of unauthorized accessories/parts on the product. A warranty claim will only be accepted if a proof of purchase is submitted and all conditions obtained within this Warranty are met.

Honeywell Analytics reserves the right to validate any warranty claim prior to processing. Upon acceptance of a warranty claim, Honeywell Analytics will repair or replace the defective product free of charge. The initial warranty period is not extended by virtue of any works carried out there after.

Instruments which have been repaired or replaced during the warranty period are warranted for the remainder of the unexpired portion of the original warranty period. Honeywell Analytics is released from all obligations under its warranty in the event repairs or modifications are made by persons other than its own authorized personnel, unless such work is authorized in writing by Honeywell Analytics. The initial warranty period is not extended by virtue of any works carried out there under.

Honeywell Analytics reserves the right to change this policy at any time. Contact Honeywell Analytics for the most current warranty information.

#### Sensor Cartridge Warranty

Midas<sup>®</sup> sensor cartridges with part numbers beginning in MIDAS-S carry a 12 month (1 year) warranty from switch-on/installation or up to 18 months from the date of shipment from Honeywell Analytics, whichever is less, provided this takes place before the "Activate Before" date on the cartridge. Pro-rata after "Activate Before"/ install by date.

Midas<sup>®</sup> sensor cartridges with part numbers beginning in MIDAS-E carry a 24 month (2 year) warranty from switch-on/installation or up to 30 months from the date of shipment from Honeywell Analytics, whichever is less, provided this takes place before the "Activate Before" date on the cartridge. Pro-rata after "Activate Before"/install by date.

- The oxygen sensor cartridge is guaranteed to operate satisfactorily for the period described above and will be replaced at no charge within that period only if it will not provide a correct reading after calibration by Authorized Service personnel. Physical or chemical damage, resulting from exposure to improper elements, is not covered.
- 2. The combustible (LEL) sensor cartridge is guaranteed to operate satisfactorily for the period described above. If it will not provide a correct reading after calibration by Authorized Service personnel, it will be replaced at no charge within that period. This guarantee is void if it has been contaminated by some unusual substance, including but not limited to, water and/or other liquids, oily compounds, corrosives, silicones, lead vapors, extremely high concentrations of combustible gases, and various particulates which may inhibit gas flow to the sensor cartridge element.

3. The toxic sensor cartridges are guaranteed to operate satisfactorily for the period described above. They will be replaced at no charge within that period only if they will not provide a correct reading after calibration by Authorized Service personnel, and only if the sensor cartridge membranes exhibit no physical or chemical damage resulting from exposure to improper substances.

Note that the Midas<sup>®</sup> sensor cartridge stores an electronic history of each individual sensor cartridge's manufacture, warranty and calibration activity that is accessible by Authorized Service personnel.

#### Pyrolyzer Warranty

Pyrolyzer units, both Standard and High-Temperature, are warranted for a period of 12 months from initial turnon or 18 months from delivery from Honeywell Analytics; whichever is less and are subject to the same terms and conditions outlined above.

#### Find out more www.honeywellanalytics.com

#### Americas

Honeywell Analytics 405 Barclay Boulevard Lincolnshire, IL 60069 Tel: +1 847 955 8200 Toll free: +1 800 538 0363 Fax: +1 847 955 8208 detectgas@honeywell.com

#### Europe, Middle East, and Africa

Life Safety Distribution AG Wilstrasse 11-U11 CH-8610 Uster Switzerland Tel: +41 (0)1 943 4300 Fax: +41 (0)1 943 4398 gasdetection@honeywell.com

#### **Technical Services**

ha.global.service@honeywell.com

www.honeywell.com

#### **Asia Pacific**

Honeywell Analytics Asia Pacific #508, Kolon Science Valley (1) 187-10 Guro-Dong, Guro-Gu Seoul, 152-729 Korea Tel: +82 (0)2 6909 0307 Fax: +82 (0)2 2025 0328 analytics.ap@honeywell.com

#### Please Note:

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions.

Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards and guidelines. This publication is not intended to form the basis of a contract.

### Honeywell

MIDAS-A-001 Revision 14 January 2013 ©2013 Honeywell Analytics