



# Operating Instructions

## Levelflex FMP55

### HART

Guided wave radar

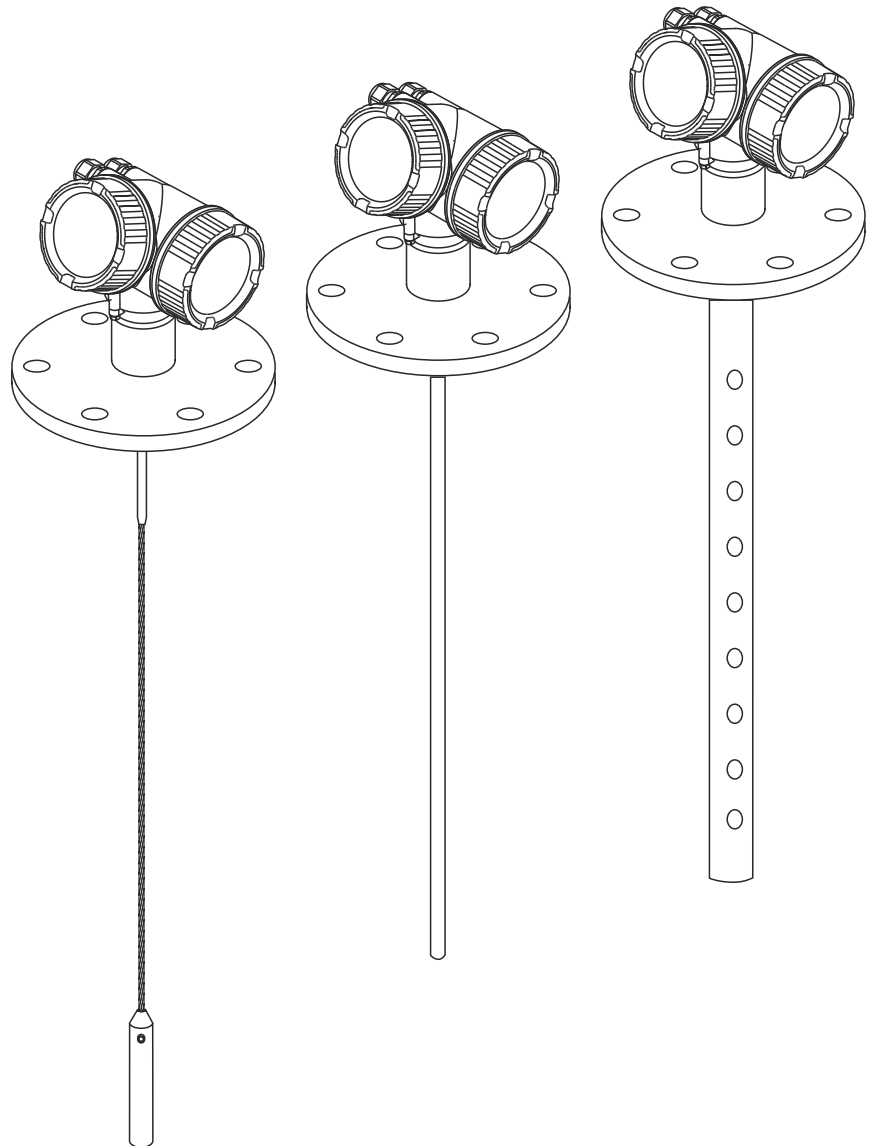

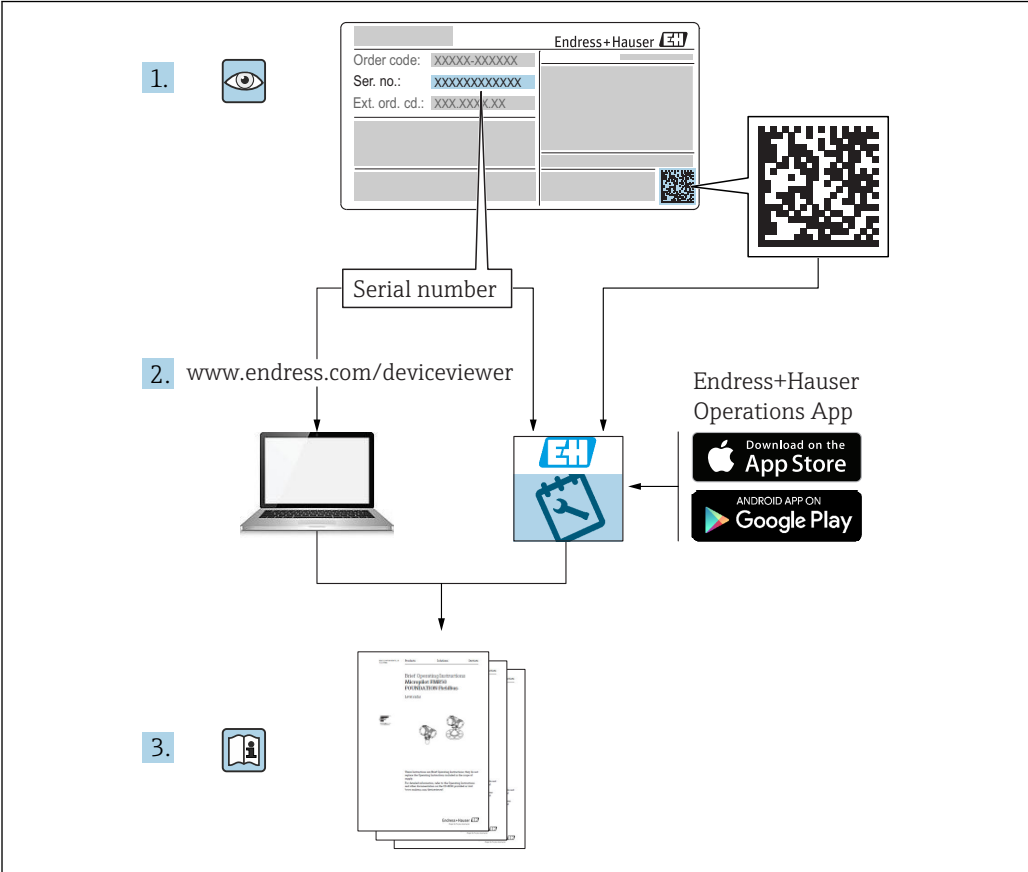

A0023555

# Table of contents

<b>1</b>	<b>Important document information</b>	<b>5</b>		
1.1	Document function	5		
1.2	Document conventions	5		
1.2.1	Safety symbols	5		
1.2.2	Electrical symbols	5		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information and graphics	6		
1.3	Documentation	7		
1.3.1	Technical Information (TI)	7		
1.3.2	Brief Operating Instructions (KA)	7		
1.3.3	Safety Instructions (XA)	7		
1.4	Terms and abbreviations	7		
1.5	Registered trademarks	8		
<b>2</b>	<b>Basic safety instructions</b>	<b>9</b>		
2.1	Requirements for the personnel	9		
2.2	Designated use	9		
2.3	Occupational safety	10		
2.4	Operational safety	10		
2.5	Product safety	10		
2.5.1	CE mark	10		
2.5.2	EAC conformity	10		
<b>3</b>	<b>Product description</b>	<b>11</b>		
3.1	Product design	11		
3.1.1	Levelflex FMP51/FMP52/FMP54/FMP55	11		
3.1.2	Electronics housing	12		
<b>4</b>	<b>Incoming acceptance and product identification</b>	<b>13</b>		
4.1	Incoming acceptance	13		
4.2	Product identification	13		
4.2.1	Nameplate	14		
<b>5</b>	<b>Storage, transport</b>	<b>15</b>		
5.1	Storage temperature	15		
5.2	Transporting the product to the measuring point	15		
<b>6</b>	<b>Installation</b>	<b>18</b>		
6.1	Installation conditions	18		
6.1.1	Suitable mounting position	18		
6.1.2	Mounting under confined conditions	19		
6.1.3	Notes on the mechanical load of the probe	20		
6.1.4	Lateral loading capacity (flexural strength) of coax probes	20		
6.1.5	Mounting cladded flanges	21		
6.1.6	Securing the probe	22		
6.1.7	Special installation situations	23		
6.2	Mounting the measuring device	26		
6.2.1	Tools list	26		
6.2.2	Mounting the device	26		
6.2.3	Mounting the "Sensor, remote" version	26		
6.2.4	Turning the transmitter housing	28		
6.2.5	Turning the display	29		
6.3	Post-installation check	30		
<b>7</b>	<b>Electrical connection</b>	<b>31</b>		
7.1	Connection conditions	31		
7.1.1	Terminal assignment	31		
7.1.2	Cable specification	38		
7.1.3	Device plugs	39		
7.1.4	Power supply	40		
7.1.5	Overvoltage protection	42		
7.2	Connecting the measuring device	42		
7.2.1	Opening connection compartment cover	43		
7.2.2	Connecting	43		
7.2.3	Plug-in spring-force terminals	44		
7.2.4	Closing connection compartment cover	44		
7.3	Post-connection check	45		
<b>8</b>	<b>Operation options</b>	<b>46</b>		
8.1	Overview	46		
8.1.1	Local operation	46		
8.1.2	Operation with remote display and operating module FHX50	47		
8.1.3	Operation via Bluetooth® wireless technology	48		
8.1.4	Remote operation	49		
8.2	Structure and function of the operating menu	50		
8.2.1	Structure of the operating menu	50		
8.2.2	User roles and related access authorization	52		
8.2.3	Data access - Security	52		
8.3	Display and operating module	57		
8.3.1	Display appearance	57		
8.3.2	Operating elements	60		
8.3.3	Enter numbers and text	61		
8.3.4	Opening the context menu	63		
8.3.5	Envelope curve display on the display and operating module	64		
<b>9</b>	<b>Device integration via the HART protocol</b>	<b>65</b>		
9.1	Overview of the Device Description files (DD)	65		

9.2	HART device variables and measuring values .....	65			
<b>10</b>	<b>Commissioning via SmartBlue (App) .....</b>	<b>66</b>			
10.1	Requirements .....	66			
10.2	SmartBlue App .....	66			
10.3	Envelope curve display in SmartBlue .....	66			
<b>11</b>	<b>Commissioning using the Commissioning Wizard .....</b>	<b>68</b>			
<b>12</b>	<b>Commissioning via operating menu .....</b>	<b>69</b>			
12.1	Function check .....	69			
12.2	Setting the operating language .....	69			
12.3	Configuring an interface measurement .....	70			
12.4	Recording the reference envelope curve .....	72			
12.5	Configuring the local display .....	73			
	12.5.1 Factory setting of local display for interface measurements .....	73			
	12.5.2 Adjusting the local display .....	73			
12.6	Configuring the current outputs .....	74			
	12.6.1 Factory setting of current outputs for interface measurements .....	74			
	12.6.2 Adjusting the current outputs .....	74			
12.7	Configuration management .....	75			
12.8	Protecting settings from unauthorized access .....	76			
<b>13</b>	<b>Diagnostics and troubleshooting ...</b>	<b>77</b>			
13.1	General troubleshooting .....	77			
	13.1.1 General errors .....	77			
	13.1.2 Error - SmartBlue operation .....	79			
	13.1.3 Parameter configuration errors .....	80			
13.2	Diagnostic information on local display .....	81			
	13.2.1 Diagnostic message .....	81			
	13.2.2 Calling up remedial measures .....	83			
13.3	Diagnostic event in the operating tool .....	84			
13.4	Diagnostic list .....	85			
13.5	List of diagnostic events .....	86			
13.6	Event logbook .....	88			
	13.6.1 Event history .....	88			
	13.6.2 Filtering the event logbook .....	88			
	13.6.3 Overview of information events .....	88			
13.7	Firmware history .....	90			
<b>14</b>	<b>Maintenance .....</b>	<b>91</b>			
14.1	Exterior cleaning .....	91			
14.2	Cleaning coax probes .....	91			
<b>15</b>	<b>Repair .....</b>	<b>92</b>			
15.1	General notes .....	92			
	15.1.1 Repair concept .....	92			
	15.1.2 Repair of Ex-certified devices .....	92			
	15.1.3 Replacing electronics modules .....	92			
	15.1.4 Replacing a device .....	92			
15.2	Spare parts .....	93			
15.3	Return .....	93			
15.4	Disposal .....	93			
<b>16</b>	<b>Accessories .....</b>	<b>94</b>			
16.1	Device-specific accessories .....	94			
	16.1.1 Weather protection cover .....	94			
	16.1.2 Mounting bracket for electronics housing .....	95			
	16.1.3 Centering star .....	96			
	16.1.4 Remote display FHX50 .....	98			
	16.1.5 Overvoltage protection .....	99			
	16.1.6 Bluetooth module for HART devices .....	100			
16.2	Communication-specific accessories .....	101			
16.3	Service-specific accessories .....	102			
16.4	System components .....	102			
<b>17</b>	<b>Operating menu .....</b>	<b>103</b>			
17.1	Overview of the operating menu (SmartBlue) .....	103			
17.2	Overview of the operating menu (display module) .....	108			
17.3	Overview of the operating menu (operating tool) .....	115			
17.4	"Setup" menu .....	122			
	17.4.1 "Mapping" wizard .....	132			
	17.4.2 "Advanced setup" submenu .....	133			
17.5	"Diagnostics" menu .....	183			
	17.5.1 "Diagnostic list" submenu .....	185			
	17.5.2 "Event logbook" submenu .....	186			
	17.5.3 "Device information" submenu .....	187			
	17.5.4 "Measured values" submenu .....	190			
	17.5.5 "Data logging" submenu .....	193			
	17.5.6 "Simulation" submenu .....	196			
	17.5.7 "Device check" submenu .....	201			
	17.5.8 "Heartbeat" submenu .....	203			
	<b>Index .....</b>	<b>204</b>			

# 1 Important document information

## 1.1 Document function

These Operating Instructions provide all of the information that is required in various phases of the life cycle of the device including:

- Product identification
- Incoming acceptance
- Storage
- Installation
- Connection
- Operation
- Commissioning
- Troubleshooting
- Maintenance
- Disposal

## 1.2 Document conventions

### 1.2.1 Safety symbols

#### DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

### 1.2.2 Electrical symbols



Alternating current



Direct current and alternating current



Direct current



Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

#### Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

The ground terminals are located on the interior and exterior of the device:

- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

### 1.2.3 Tool symbols



Phillips head screwdriver



Flat blade screwdriver



Torx screwdriver



Allen key



Open-ended wrench

### 1.2.4 Symbols for certain types of information and graphics



#### Permitted

Procedures, processes or actions that are permitted



#### Preferred

Procedures, processes or actions that are preferred



#### Forbidden

Procedures, processes or actions that are forbidden



#### Tip

Indicates additional information




Reference to documentation



Reference to graphic



Notice or individual step to be observed



Series of steps



Result of a step



Visual inspection



Operation via operating tool



Write-protected parameter

1, 2, 3, ...

Item numbers

A, B, C, ...

Views



#### Safety instructions

Observe the safety instructions contained in the associated Operating Instructions




#### Temperature resistance of the connection cables

Specifies the minimum value of the temperature resistance of the connection cables

## 1.3 Documentation

The following documentation types are available in the Downloads area of the Endress+Hauser website ([www.endress.com/downloads](http://www.endress.com/downloads)):

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
  - *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter the serial number from nameplate
  - *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

### 1.3.1 Technical Information (TI)

#### Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.


### 1.3.2 Brief Operating Instructions (KA)

#### Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

### 1.3.3 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

-  The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

## 1.4 Terms and abbreviations

#### BA

Document type "Operating Instructions"

#### KA

Document type "Brief Operating Instructions"

#### TI

Document type "Technical Information"

#### SD

Document type "Special Documentation"

#### XA

Document type "Safety Instructions"

#### PN

Nominal pressure

#### MWP

MWP (Maximum working pressure/max. process pressure)  
The MWP can also be found on the nameplate.

#### ToF

Time of Flight

#### FieldCare

Scalable software tool for device configuration and integrated plant asset management solutions

**DeviceCare**

Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices

**DTM**

Device Type Manager

**DD**

Device Description for HART communication protocol

 **$\epsilon_r$  (Dk value)**

Relative dielectric constant

**PLC**

Programmable logic controller (PLC)

**CDI**

Common Data Interface

**Operating tool**

The term "operating tool" is used in place of the following operating software:

- FieldCare / DeviceCare, for operation via HART communication and PC
- SmartBlue (app), for operation using an Android or iOS smartphone or tablet

**BD**

Blocking Distance; no signals are analyzed within the BD.

**PLC**

Programmable logic controller (PLC)

**CDI**

Common Data Interface

**PFS**

Pulse Frequency Status (Switch output)

## 1.5 Registered trademarks

**HART®**

Registered trademark of the FieldComm Group, Austin, Texas, USA

**Bluetooth®**

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

**Apple®**

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

**Android®**

Android, Google Play and the Google Play logo are trademarks of Google Inc.

**KALREZ®, VITON®**

Registered trademarks of DuPont Performance Elastomers L.L.C., Wilmington, DE USA

**TEFLON®**

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

**TRI-CLAMP®**

Registered trademark of Ladish & Co., Inc., Kenosha, USA



## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Designated use

#### Application and media

The measuring device described in this manual is intended only for the level and interface measurement of liquids. Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

If the limit values specified in the "Technical data" and the conditions listed in the manual and additional documentation are observed, the measuring device may be used for the following measurements only:

- ▶ Measured process variables: level and/or interface height
- ▶ Calculable process variables: volume or mass in any shape of vessel (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for media to which the process-wetted materials have an adequate level of resistance.
- ▶ Observe the limit values in "Technical data".

#### Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Clarification of borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability.

#### Residual risks

Due to heat transfer from the process as well as power loss in the electronics, the temperature of the electronics housing and the assemblies contained therein (e.g. display module, main electronics module and I/O electronics module) may rise up to 80 °C (176 °F). When in operation, the sensor may reach a temperature close to the medium temperature.

Danger of burns from contact with surfaces!

- ▶ In the event of elevated medium temperatures, ensure protection against contact to prevent burns.

## 2.3 Occupational safety

When working on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

## 2.4 Operational safety

Risk of injury!

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ▶ The operator is responsible for interference-free operation of the device.

### Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

- ▶ If modifications are nevertheless required, consult with the manufacturer.

### Repair

To ensure continued operational safety and reliability:

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories from the manufacturer.

### Hazardous area

To eliminate the risk of danger to persons or the facility when the device is used in the approval-related area (e.g. explosion protection, pressure equipment safety):

- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of this manual.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

### NOTICE

#### Loss of degree of protection by opening of the device in humid environments

- ▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

### 2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

### 2.5.2 EAC conformity


The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

## 3 Product description

### 3.1 Product design

#### 3.1.1 Levelflex FMP51/FMP52/FMP54/FMP55

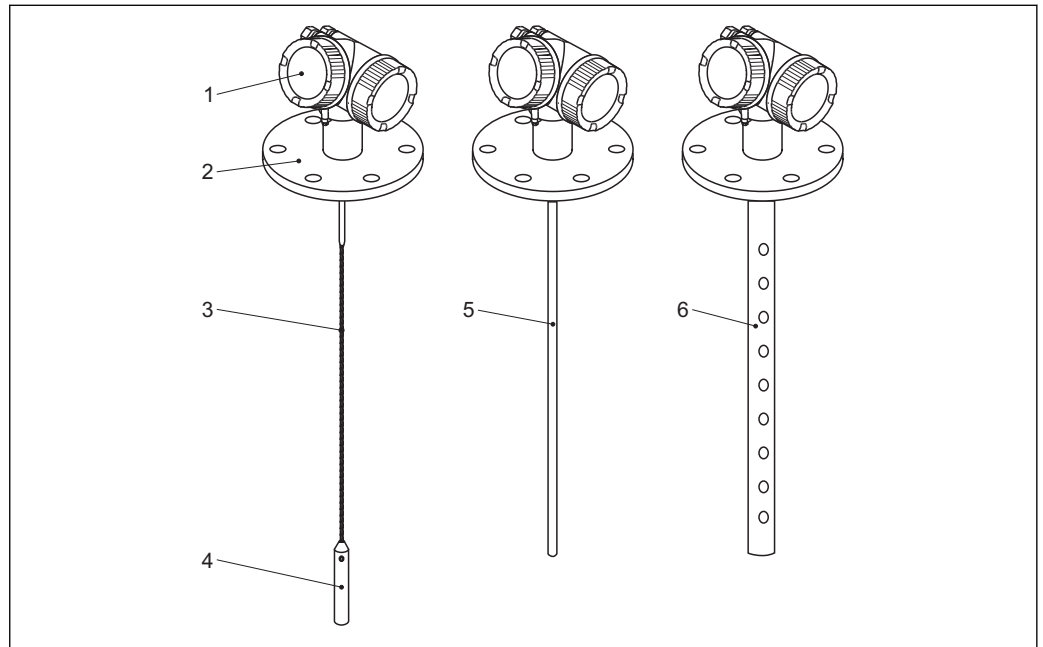


A0012399

#### 1 Design of the Levelflex

- 1 Electronics housing
- 2 Process connection (here as an example: flange)
- 3 Rope probe
- 4 End-of-probe weight
- 5 Rod probe
- 6 Coax probe

### 3.1.2 Electronics housing

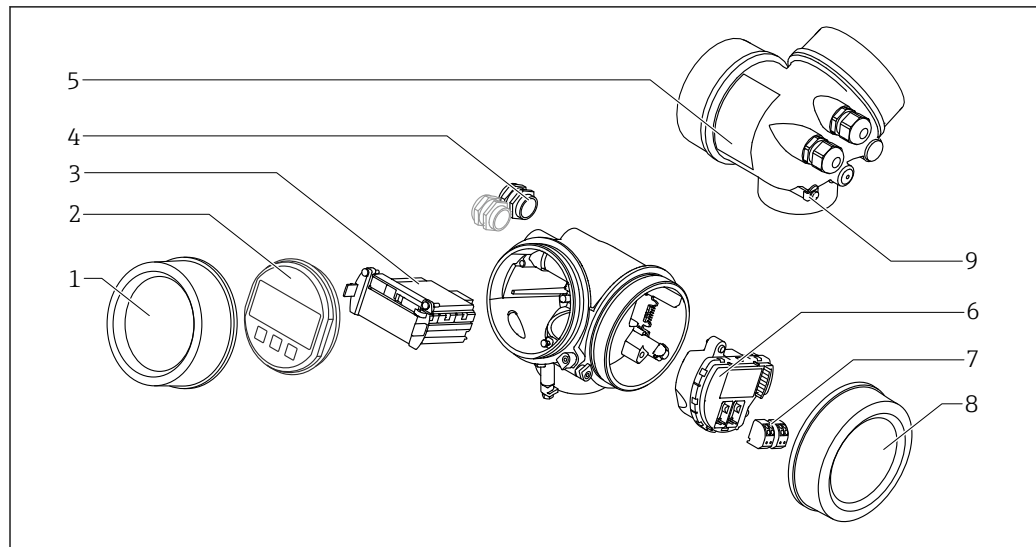

A0012422

#### 2 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

## 4 Incoming acceptance and product identification

### 4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) present?




If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

### 4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.


## 4.2.1 Nameplate

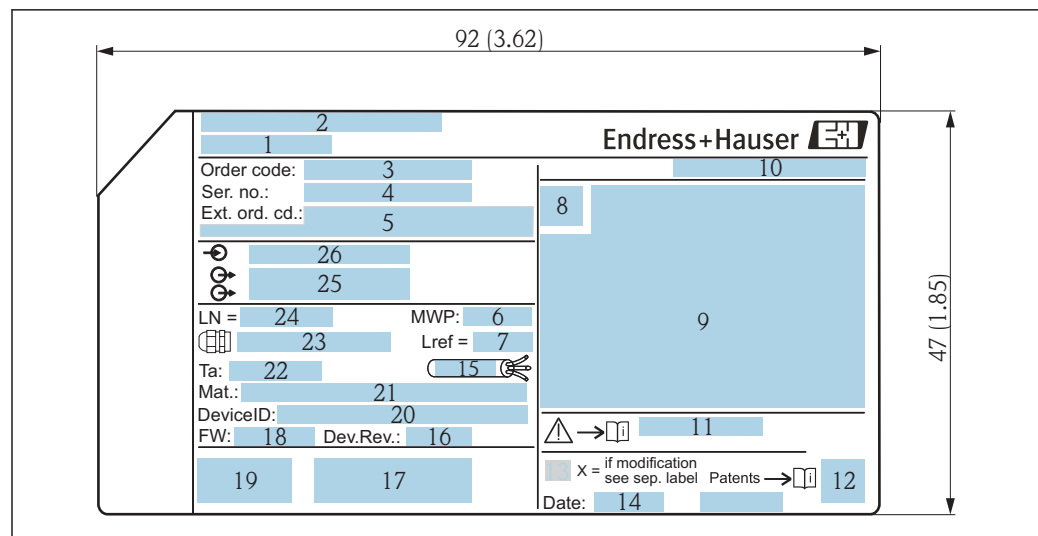

A0010725

 3 Nameplate of the Levelflex; Dimensions: mm (in)

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Gas phase compensation: reference distance
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 2-D matrix code (QR code)
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Permitted temperature range for cable
- 16 Device revision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 DeviceID
- 21 Material in contact with process
- 22 Permitted ambient temperature ( $T_a$ )
- 23 Size of the thread of the cable glands
- 24 Length of probe
- 25 Signal outputs
- 26 Operating voltage

 Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device in the **Extended order code 1 to 3** parameter.

## 5 Storage, transport

### 5.1 Storage temperature

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use original packaging.


### 5.2 Transporting the product to the measuring point

**⚠ WARNING**

**Housing or rod may become damaged or pull off.**

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or by the process connection.
- ▶ Always secure lifting equipment (slings, eyes, etc.) at the process connection and never lift the device by the electronic housing or probe. Pay attention to the center of gravity of the device so that it does not tilt or slip unintentionally.
- ▶ Follow the safety instructions and transport conditions for devices weighing more than 18 kg (39.6 lbs) (IEC 61010).

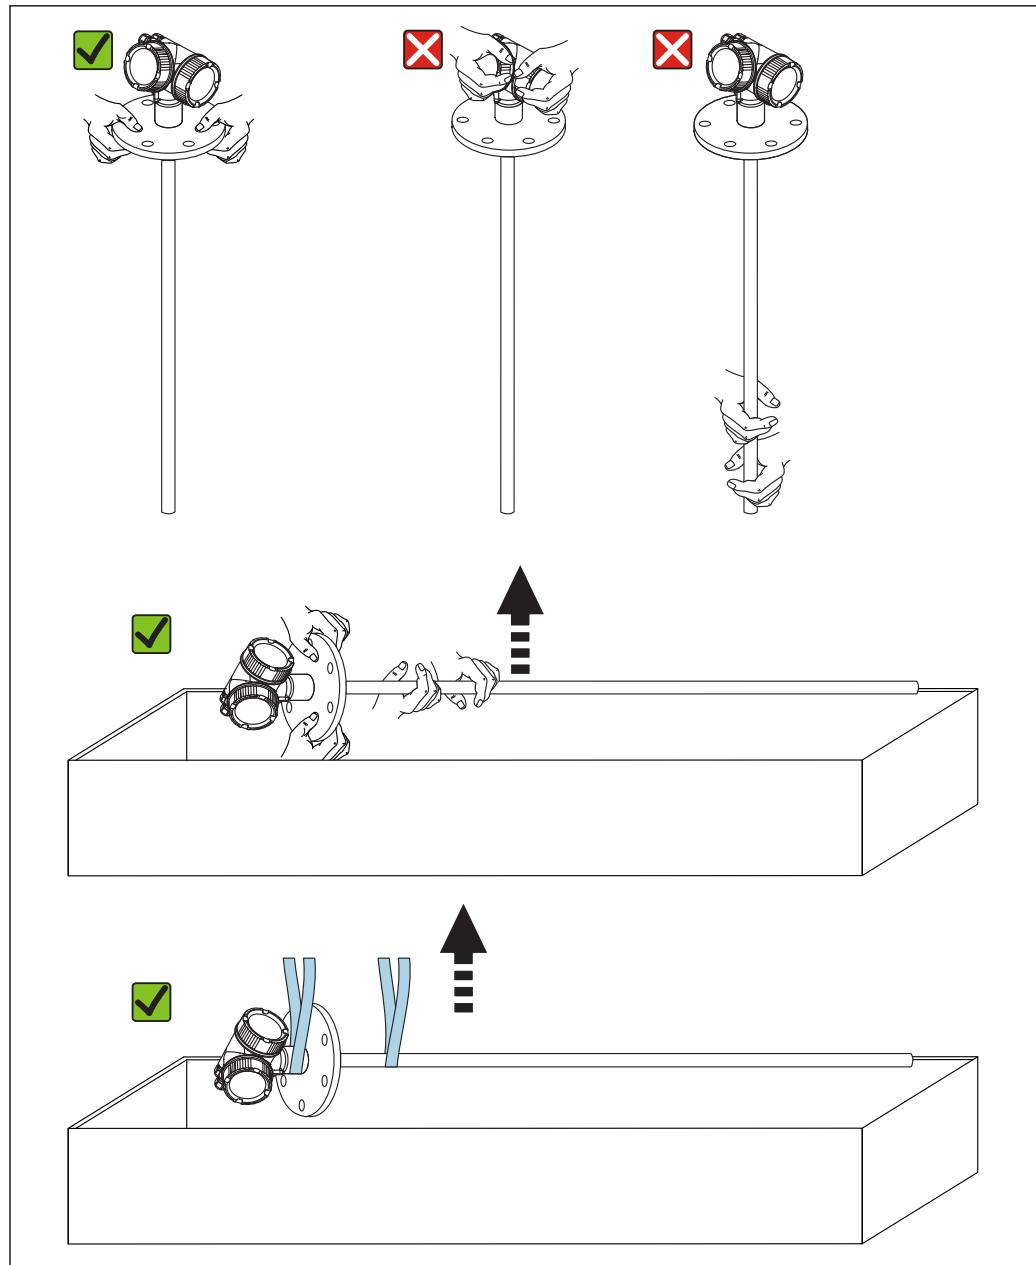


A0013920

**NOTICE****Transport lock in the FMP55 with coax probe**

- The coax tube is not firmly connected to the electronics housing in the FMP55 with coax probe. It is fixed onto the mounting flange with two cable ties during transportation. These cable ties must not be released during transportation or installation of the device to prevent the spacer from sliding at the probe rod. They may only be removed immediately before screwing the process connection flange into place.




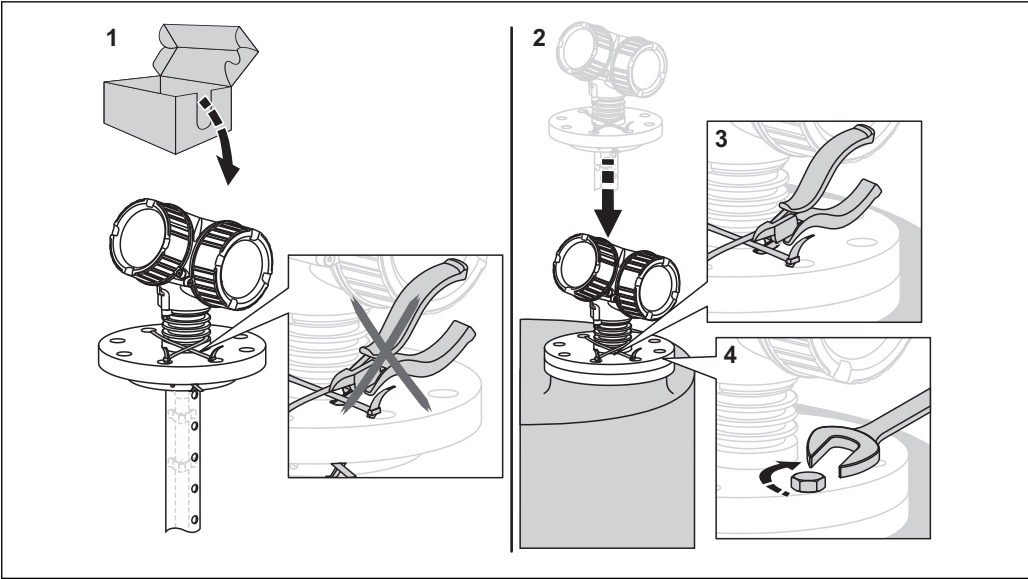

## 6 Installation

### 6.1 Installation conditions

#### 6.1.1 Suitable mounting position

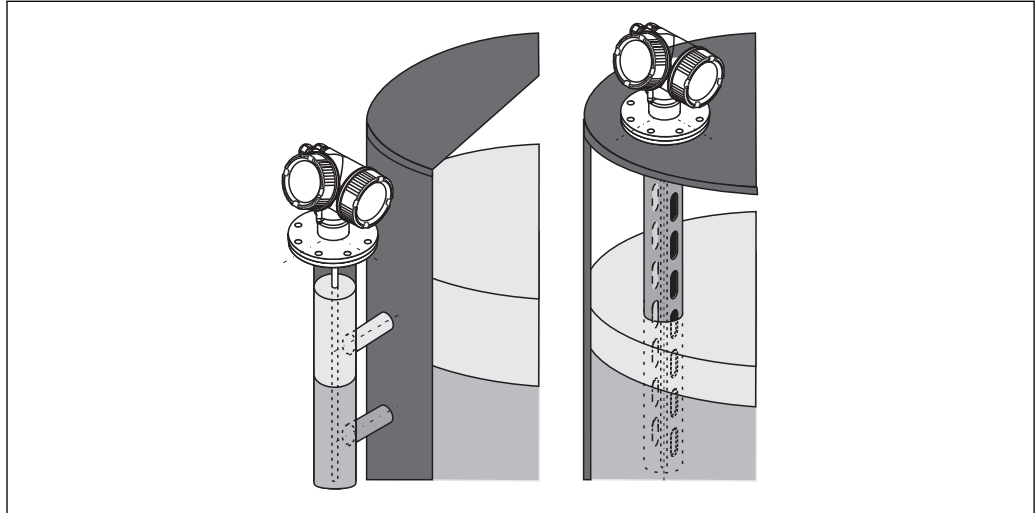


4 Mounting position of Levelflex FMP55

- Rod probes/rope probes: mount in the bypass/stilling well.
- Coax probes can be mounted at any distance from the wall.
- When mounting outdoors, a weather protection cover can be used to protect the device against extreme weather conditions.
- Minimum distance from the end of the probe to the bottom of the vessel: 10 mm (0.4 in)

## 6.1.2 Mounting under confined conditions

### Mounting with remote probe

The device version with a remote probe is suitable for applications with restricted mounting space. In this case, the electronics housing is mounted at a separate position from the probe.

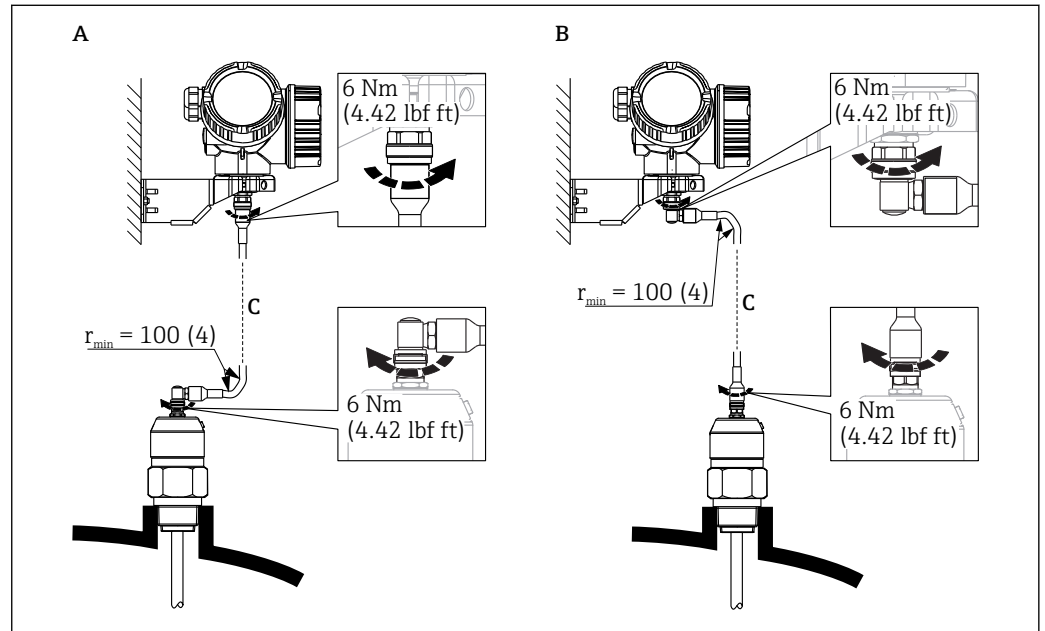

- A Angled plug at the probe  
 B Angled plug at the electronics housing  
 C Length of the remote cable as ordered

- Product structure, feature 600 "Probe design":  
Version MB "Sensor remote, 3m cable"
  - The connecting cable is included in the delivery with these versions.  
Minimum bending radius: 100 mm (4 inch)
  - The mounting bracket for the electronics housing is included in the delivery with these versions. Mounting options:
    - Wall mounting
    - Mounting on DN32 to DN50 (1-1/4 to 2 inch) post or pipe
  - The connection cable has one straight plug and one plug angled at 90°. Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.
- i** The probe, electronics and connection cable are mutually compatible and bear a common serial number. Only components with the same serial number may be connected to one another.

### 6.1.3 Notes on the mechanical load of the probe

#### Tensile loading capacity of rope probes

*FMP55*

**Rope 4mm (1/6") PFA>316**

2 kN

#### Lateral loading capacity (flexural strength) of rod probes

*FMP55*

**Rod 16mm (0.63") PFA>316L**

30 Nm

### 6.1.4 Lateral loading capacity (flexural strength) of coax probes

**FMP55**

**Probe Ø 42.4 mm 316L**

300 Nm

### 6.1.5 Mounting cladded flanges



Note the following for cladded flanges:

- Use the same number of flange screws as the number of flange bores provided.
- Tighten the screws with the necessary torque (see Table).
- Retighten after 24 hours or after the first temperature cycle.
- Depending on the process pressure and temperature, check and retighten the screws, where necessary, at regular intervals.


The PTFE flange cladding normally acts simultaneously as a seal between the nozzle and the device flange.

Flange size	Number of screws	Tightening torque
<b>EN</b>		
DN40/PN40	4	35 to 55 Nm
DN50/PN16	4	45 to 65 Nm
DN50/PN40	4	45 to 65 Nm
DN80/PN16	8	40 to 55 Nm
DN80/PN40	8	40 to 55 Nm
DN100/PN16	8	40 to 60 Nm
DN100/PN40	8	55 to 80 Nm
DN150/PN16	8	75 to 115 Nm
DN150/PN40	8	95 to 145 Nm
<b>ASME</b>		
1½"/150lbs	4	20 to 30 Nm
1½"/300lbs	4	30 to 40 Nm
2"/150lbs	4	40 to 55 Nm
2"/300lbs	8	20 to 30 Nm
3"/150lbs	4	65 to 95 Nm
3"/300lbs	8	40 to 55 Nm
4"/150lbs	8	45 to 70 Nm
4"/300lbs	8	55 to 80 Nm
6"/150lbs	8	85 to 125 Nm
6"/300lbs	12	60 to 90 Nm
<b>JIS</b>		
10K 40A	4	30 to 45 Nm
10K 50A	4	40 to 60 Nm
10K 80A	8	25 to 35 Nm
10K 100A	8	35 to 55 Nm
10K 100A	8	75 to 115 Nm

## 6.1.6 Securing the probe

### Securing coax probes

For WHG approval: A support is required for probe lengths  $\geq 3$  m (10 ft).

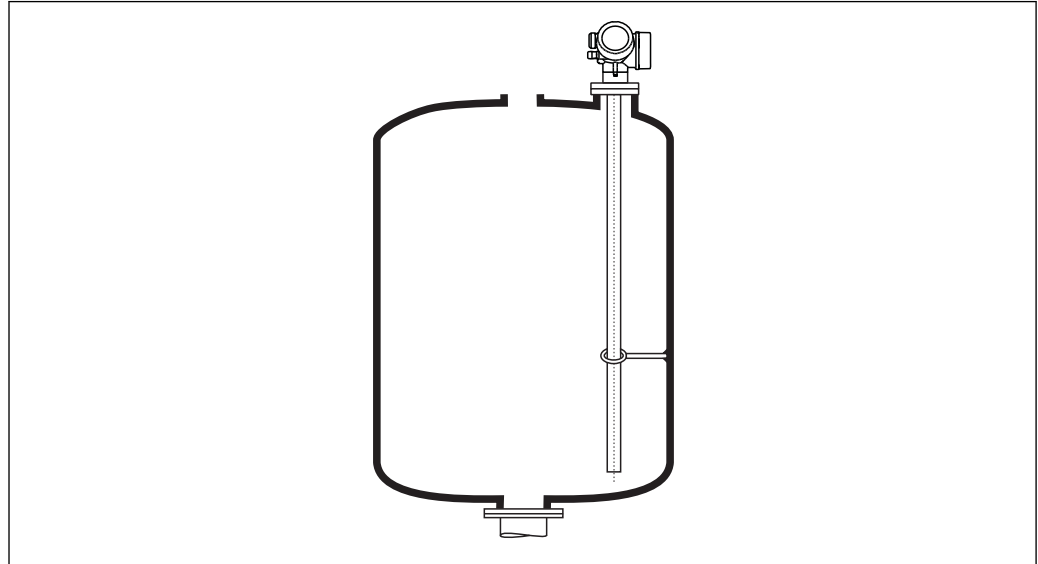


A0012608

Coax probes can be secured (fixed) at any point in the ground tube.

## 6.1.7 Special installation situations

### Bypasses and stilling wells

**i** The use of centering disks/stars/weights (available as accessories) is recommended in bypass and stilling well applications.

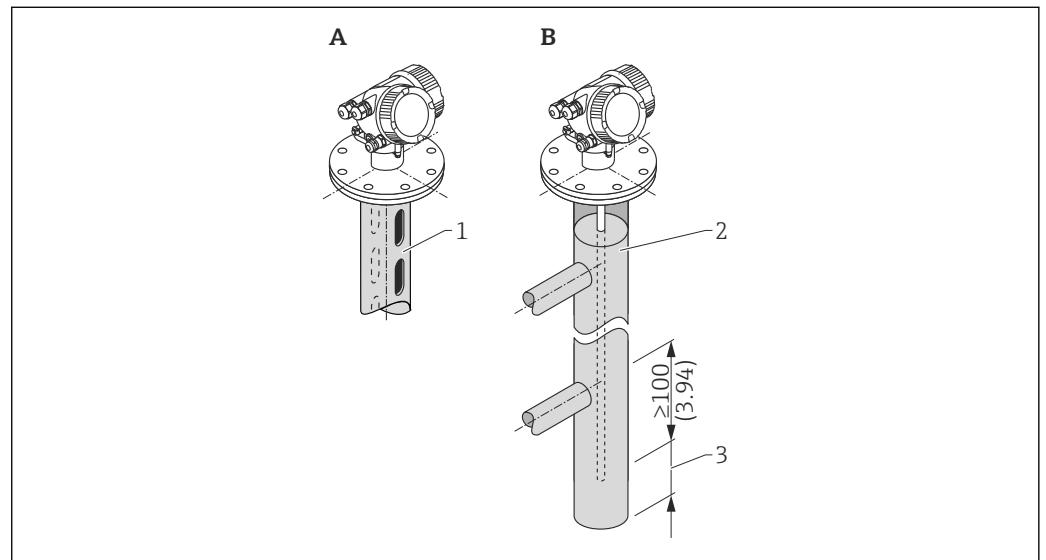

- 1 Mounting in stilling well  
 2 Mounting in bypass  
 3 Minimum distance between probe end and lower edge of bypass 10 mm (0.4 in)

- Pipe diameter: > 40 mm (1.6 in) (for rod probes).
- A rod probe can be installed in pipes with a diameter of up to 150 mm (6 in). The use of a coax probe is recommended for larger pipe diameters.
- Side outlets, holes, slots and welds - with a maximum inward projection of 5 mm (0.2 in) - do not affect the measurement.
- There should not be any changes in the diameter of the pipe.
- The probe must be 100 mm (4 in) longer than the lower outlet.
- The probes must not touch the pipe wall within the measuring range. Support or brace the probe if necessary. All rope probes are prepared for bracing in vessels (tensioning weight with anchor hole).
- The probes must not touch the pipe wall within the measuring range. If necessary, use a PFA centering star.
- Coax probes can be used within any restrictions provided that the pipe diameter permits their installation.

**i** For bypasses with condensate formation (water) and a medium with a low dielectric constant (e.g. hydrocarbons):

Over time, the bypass fills with condensate up to the lower outlet. When levels are low, the level echo is masked by the echo of the condensate as a result. In this range, the level of the condensate is output and the correct value is only output when levels are higher. For this reason, ensure that the lower outlet is 100 mm (4 in) below the lowest level to be measured and fit a metal centering disk at the level of the lower edge of the lower outlet.

**i** In thermally insulated vessels, the bypass should also be insulated in order to prevent condensate formation.


*Assignment of centering disk/centering star/centering weight to the pipe diameter*





**Vessel with thermal insulation**

**i** If process temperatures are high, the device must be included in normal vessel insulation (1) in order to prevent the electronics heating up as a result of thermal radiation or convection. The insulation may not go beyond the points labeled "MAX" in the drawings.

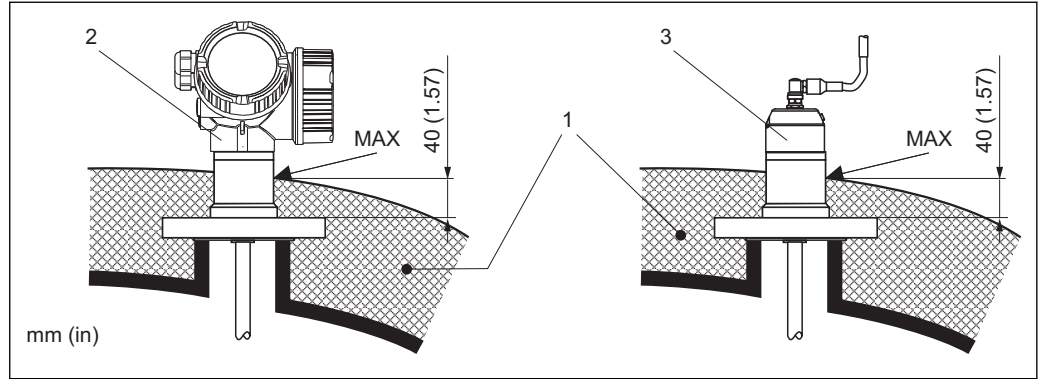


**5** Process connection with flange

- 1 Vessel insulation
- 2 Compact device
- 3 Sensor, remote

## 6.2 Mounting the measuring device

### 6.2.1 Tools list

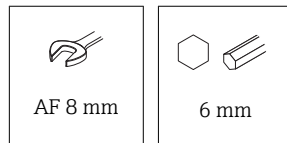

For flanges and other process connections, use an appropriate mounting tool

### 6.2.2 Mounting the device

#### Mounting devices with a flange


If a seal is used to mount the device, use uncoated metal screws to ensure good electrical contact between the process flange and the probe flange.

#### Mounting rope probes

##### NOTICE

**Electrostatic discharge can damage the electronics.**

- ▶ Ground the housing before lowering the rope probe into the vessel.

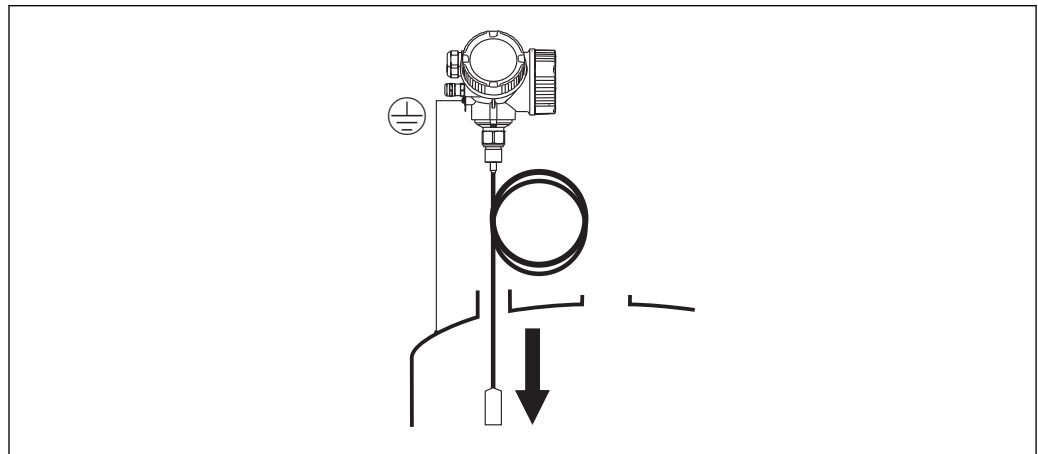

A0012852

Pay attention to the following when introducing the rope probe into the vessel:

- Uncoil the rope slowly and lower it carefully into the vessel.
- Make sure the rope does not bend or buckle.
- Avoid uncontrolled swinging of the weight, as this could damage internal fittings in the vessel.

### 6.2.3 Mounting the "Sensor, remote" version

**i** This section only applies for devices with the version "Probe design" = "Sensor, remote" (feature 600, version MB/MC/MD).

The following is included in the delivery with the version "Probe design" = "Remote":

- The probe with process connection
- The electronics housing
- The mounting bracket for mounting the electronics housing on a wall or post
- The connection cable (length as ordered). The cable has one straight plug and one plug angled at 90°. Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.

**CAUTION**


**Mechanical stress can damage the plugs of the connection cable or cause them to become loose.**

- ▶ Mount the probe and the electronics housing securely before connecting the connecting cable.
- ▶ Lay the connecting cable in such a way that it is not exposed to mechanical stress. Minimum bending radius: 100 mm (4 in).
- ▶ When connecting the cable, connect the straight plug before you connect the angled plug. Torque for the union nuts of both plugs: 6 Nm.

**i** The probe, electronics and connection cable are mutually compatible and bear a common serial number. Only components with the same serial number may be connected to one another.

In the event of strong vibrations, a locking compound, e.g. Loctite 243, can also be used on the plug-in connectors.

**Mounting the electronics housing**

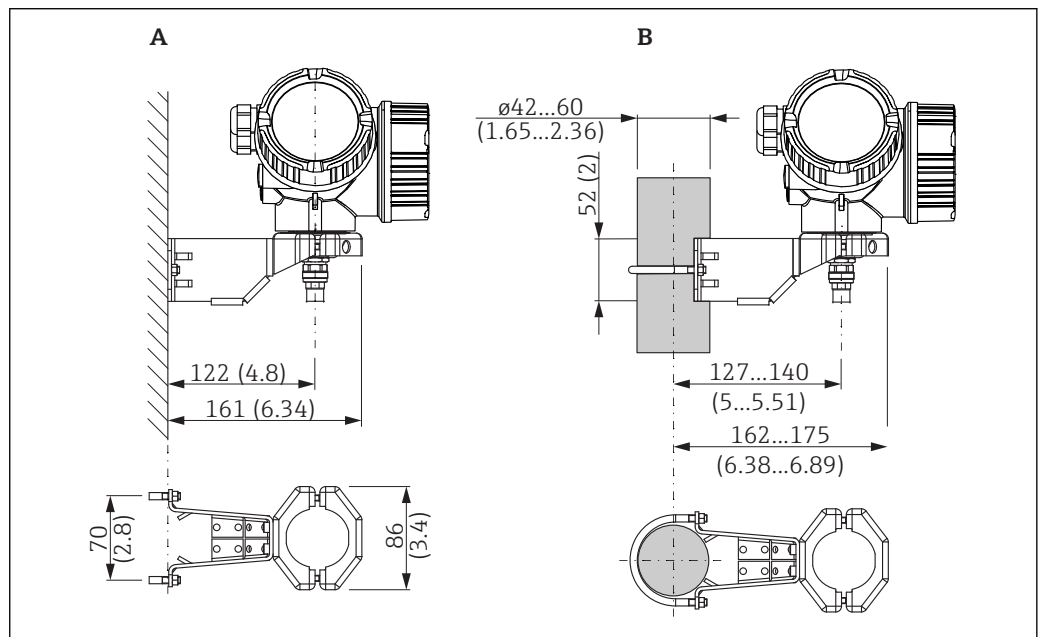


6 Mounting the electronics housing with the mounting bracket. Unit of measurement mm (in)

- A Wall mounting
- B Post mounting

**Connecting the connecting cable**



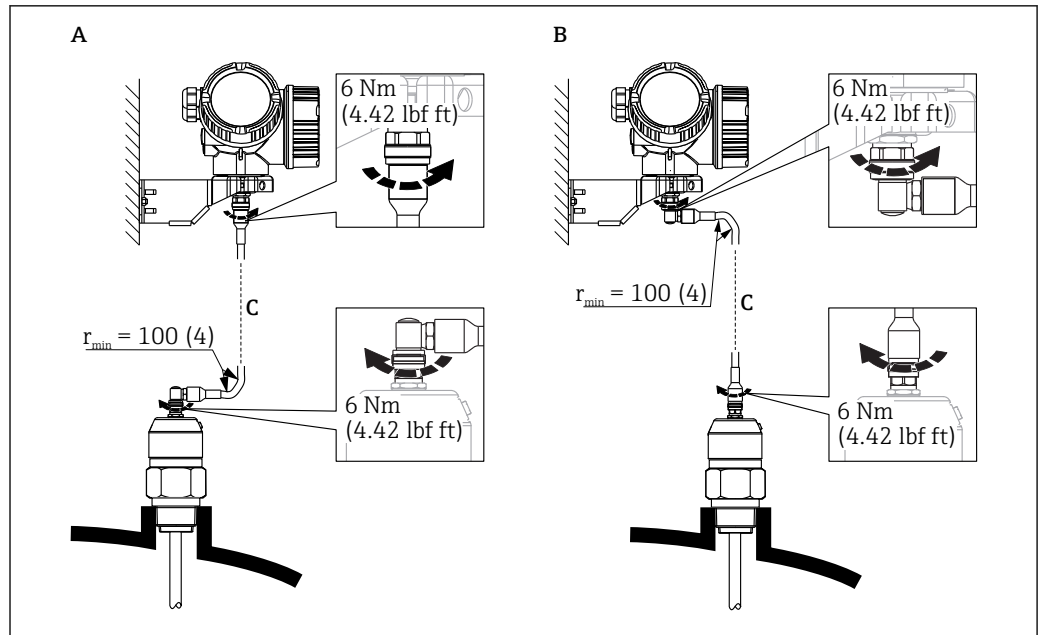


7 Connecting the connecting cable. The cable can be connected in the following ways: Unit of measurement mm (in)

- A Angled plug at the probe
- B Angled plug at the electronics housing
- C Length of the remote cable as ordered

### 6.2.4 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

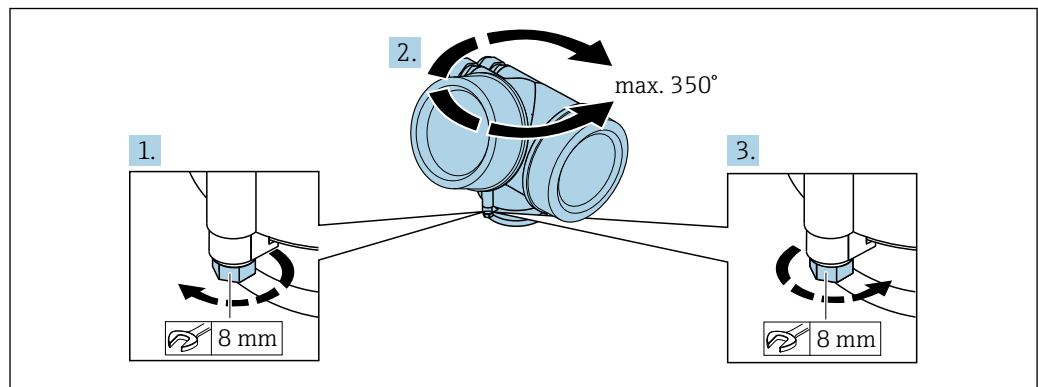

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1.5 Nm for plastic housing; 2.5 Nm for aluminum or stainless steel housing).


### 6.2.5 Turning the display

#### Opening the cover

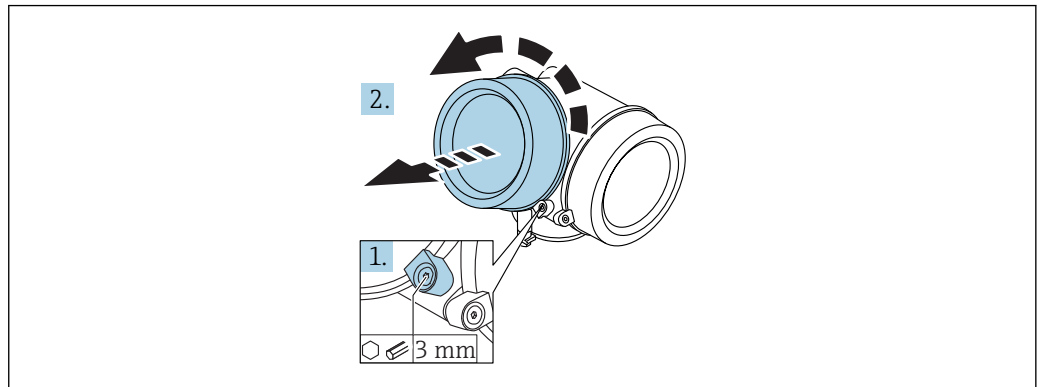


1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90 ° counterclockwise.
2. Unscrew the cover and check the cover seal, replace it if necessary.

#### Turning the display module

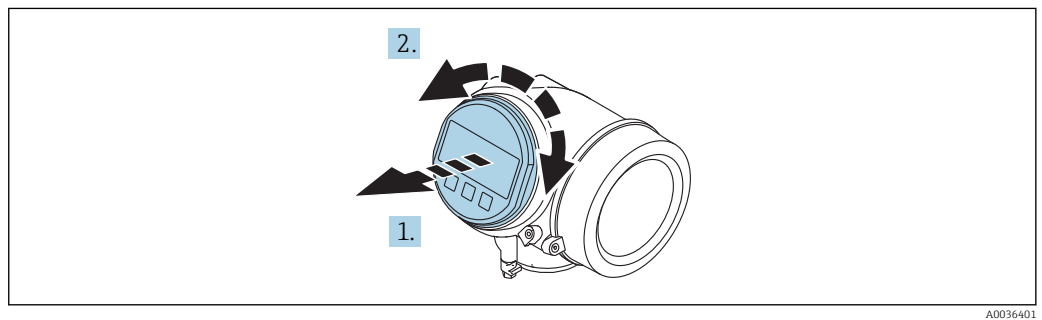

1. Pull out the display module with a gentle rotational movement.
2. Turn the display module to the desired position: max. 8 × 45 ° in each direction.
3. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

#### Closing the cover of the electronics compartment

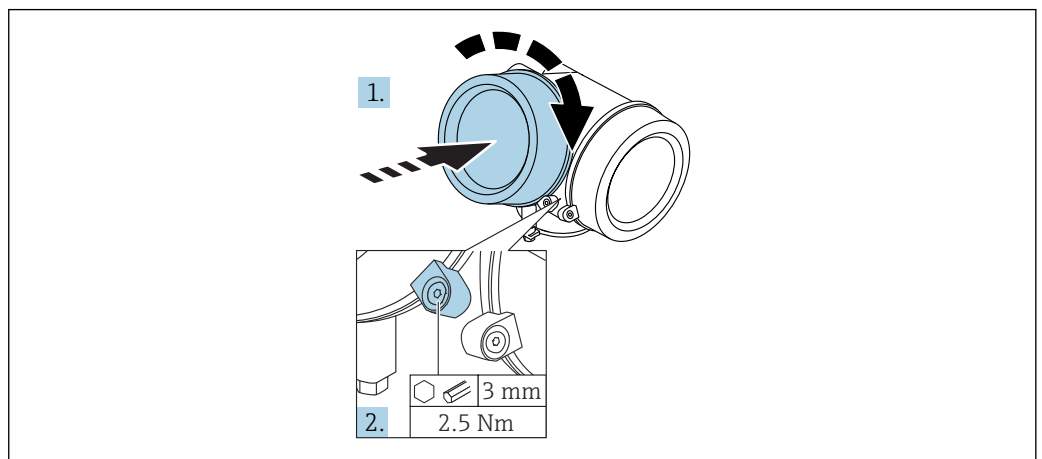

1. Screw down the cover of the electronics compartment.
2. Turn the securing clamp 90 ° clockwise and tighten the screw of the securing clamp of the electronics compartment cover with 3 mm using the Allen key (2.5 Nm).

### 6.3 Post-installation check


- Is the device undamaged (visual inspection)?
- Does the device comply with the measuring point specifications?
  - Process temperature
  - Process pressure
  - Ambient temperature range
  - Measuring range
- Are the measuring point identification and labeling correct (visual inspection)?
- Is the device adequately protected against precipitation and direct sunlight?
- Is the device adequately protected against impact?
- Are all mounting and safety screws securely tightened?
- Is the device properly secured?

## 7 Electrical connection

### 7.1 Connection conditions

#### 7.1.1 Terminal assignment

##### Terminal assignment 2-wire: 4-20 mA HART

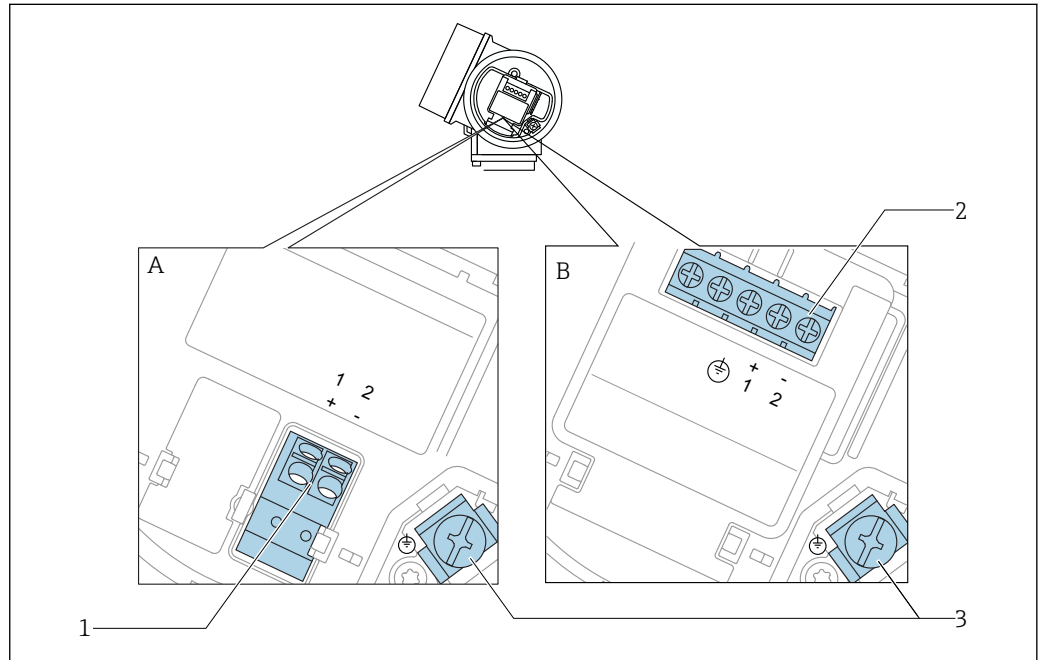

**8** Terminal assignment 2-wire: 4-20 mA HART

A Without integrated overvoltage protection


B With integrated overvoltage protection

1 Connection 4-20 mA HART passive: terminals 1 and 2, without integrated overvoltage protection

2 Connection 4-20 mA HART passive: terminals 1 and 2, with integrated overvoltage protection

3 Terminal for cable screen

##### Block diagram 2-wire: 4-20 mA HART

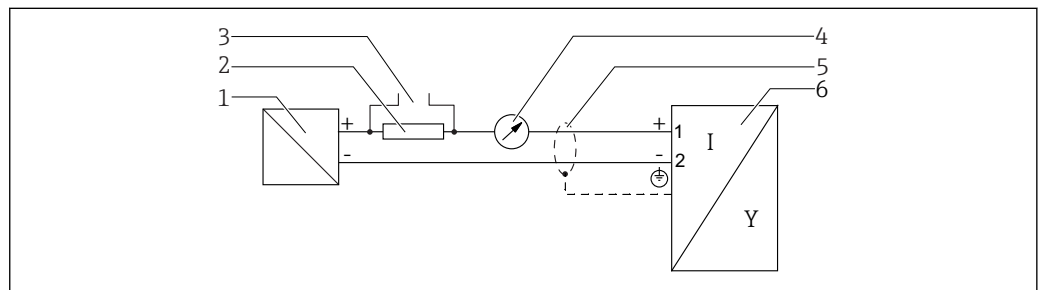

**9** Block diagram 2-wire: 4-20 mA HART

1 Active barrier with power supply (e.g. RN221N); observe terminal voltage

2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load


3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)

4 Analog display device; observe maximum load

5 Cable screen; observe cable specification

6 Measuring device

### Terminal assignment 2-wire: 4-20 mA HART, switch output

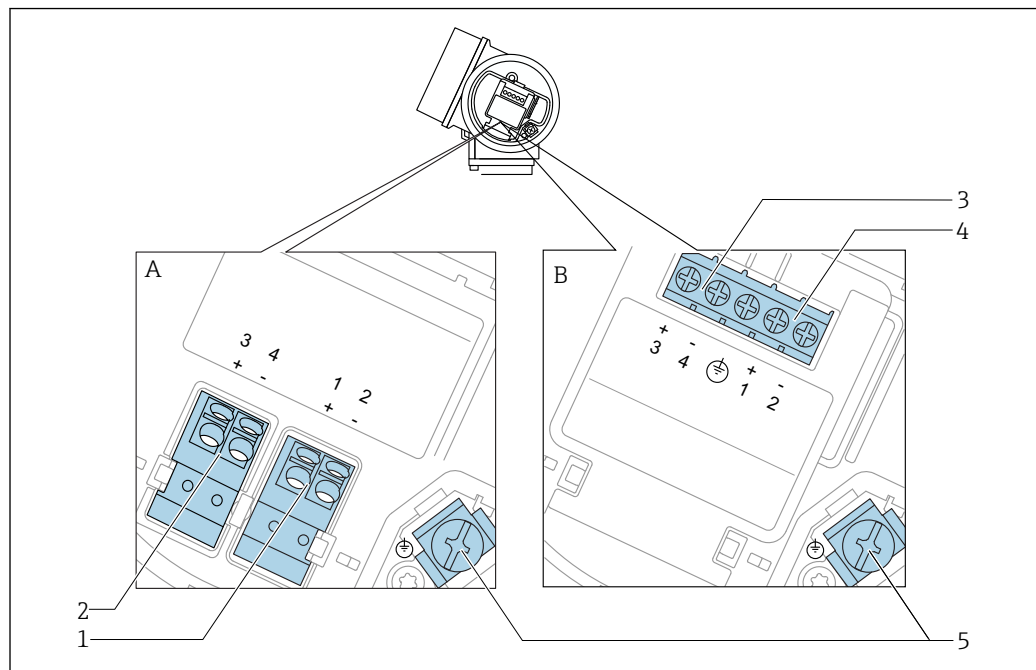

A0036500

10 Terminal assignment 2-wire: 4-20 mA HART, switch output

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Connection 4-20 mA HART passive: terminals 1 and 2, without integrated overvoltage protection


2 Connection switch output (Open Collector): terminals 3 and 4, without integrated overvoltage protection

3 Connection switch output (Open Collector): terminals 3 and 4, with integrated overvoltage protection

4 Connection 4-20 mA HART passive: terminals 1 and 2, with integrated overvoltage protection

5 Terminal for cable screen

### Block diagram 2-wire: 4-20 mA HART, switch output

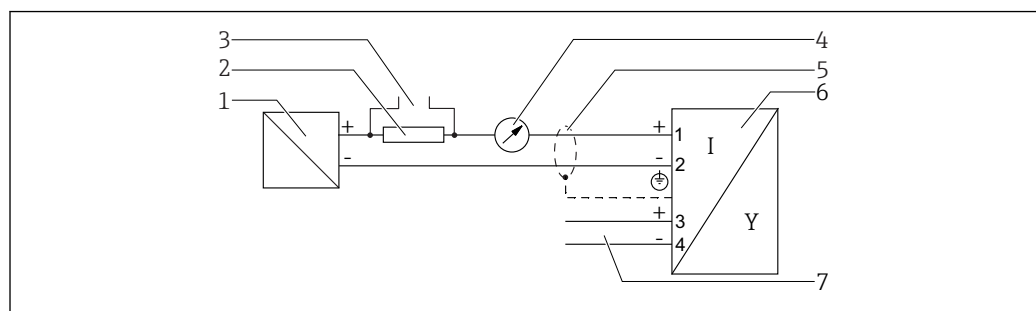

A0036501

11 Block diagram 2-wire: 4-20 mA HART, switch output

1 Active barrier with power supply (e.g. RN221N); observe terminal voltage

2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load

3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)

4 Analog display device; observe maximum load


5 Cable screen; observe cable specification

6 Measuring device

7 Switch output (Open Collector)



**Terminal assignment 2-wire: 4-20 mA HART, 4-20 mA**

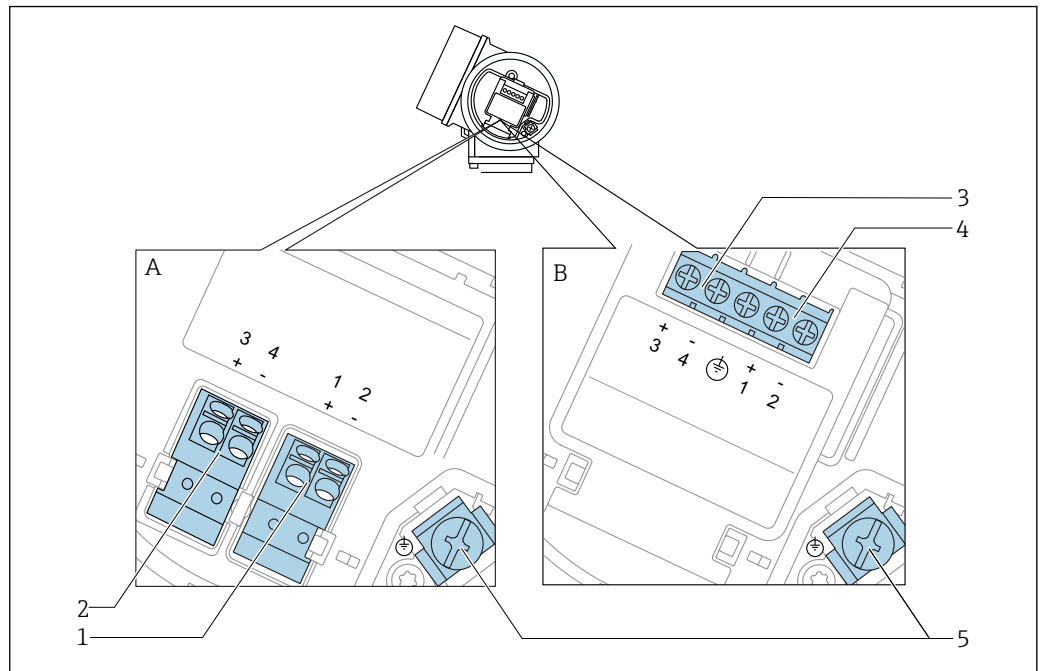

A0036500

**12** Terminal assignment 2-wire: 4-20 mA HART, 4-20 mA

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Connection current output 1, 4-20 mA HART passive: terminals 1 and 2, without integrated overvoltage protection


2 Connection current output 2, 4-20 mA: terminals 3 and 4, without integrated overvoltage protection

3 Connection current output 2, 4-20 mA: terminals 3 and 4, with integrated overvoltage protection

4 Connection current output 1, 4-20 mA HART passive: terminals 1 and 2, with integrated overvoltage protection

5 Terminal for cable screen

**Block diagram 2-wire: 4-20 mA HART, 4-20 mA**

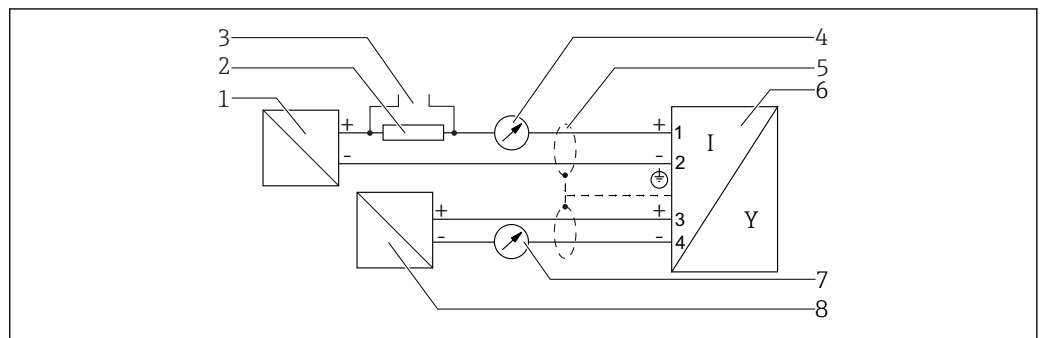

A0036502

**13** Block diagram 2-wire: 4-20 mA HART, 4-20 mA

1 Active barrier with power supply (e.g. RN221N); observe terminal voltage

2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load

3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)


4 Analog display device; observe maximum load

5 Cable screen; observe cable specification

6 Measuring device

7 Analog display device; observe maximum load


8 Active barrier with power supply (e.g. RN221N), current output 2; observe terminal voltage

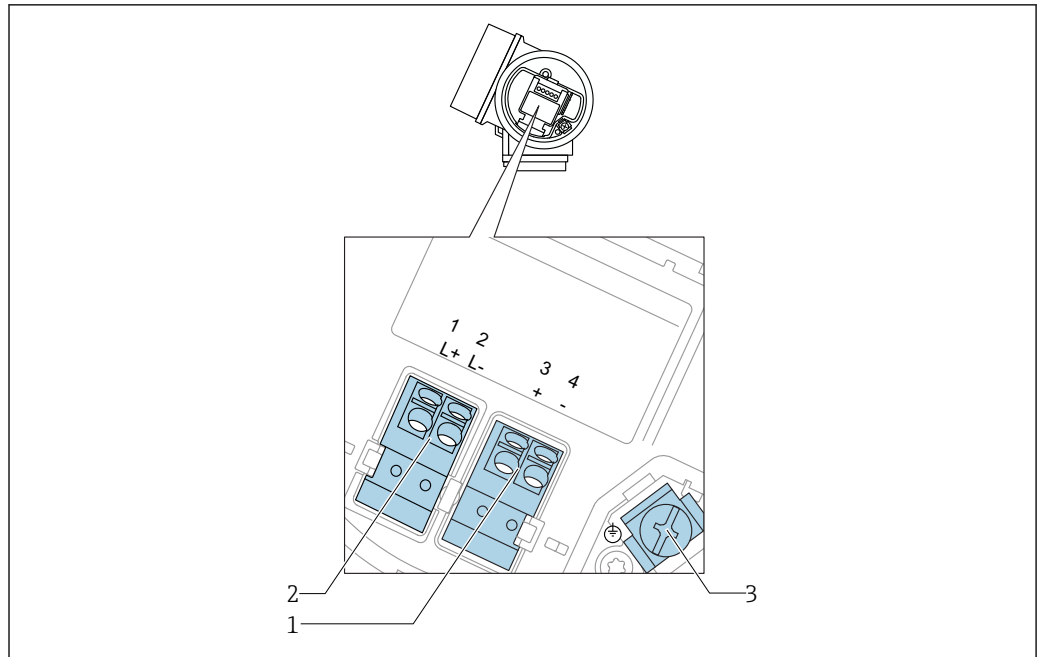**Terminal assignment 4-wire: 4-20 mA HART (10.4 to 48 V<sub>DC</sub>)**

A0036516

▣ 14 Terminal assignment 4-wire: 4-20 mA HART (10.4 to 48 V<sub>DC</sub>)


- 1 Connection 4-20 mA HART (active): terminals 3 and 4
- 2 Connection supply voltage: terminals 1 and 2
- 3 Terminal for cable screen

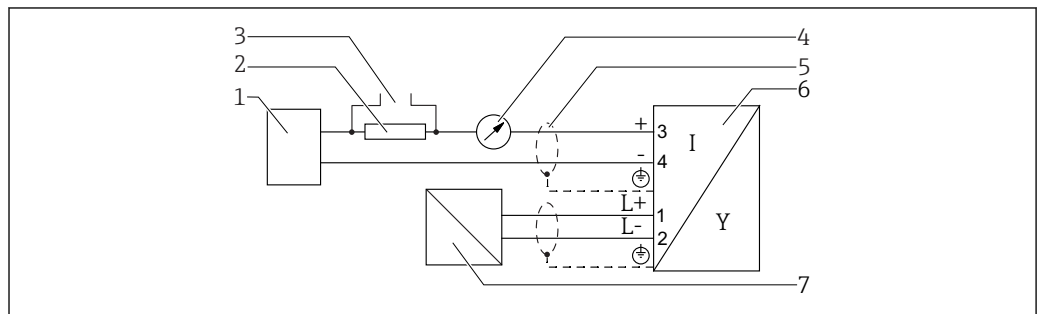**Block diagram 4-wire: 4-20 mA HART (10.4 to 48 V<sub>DC</sub>)**

A0036526

▣ 15 Block diagram 4-wire: 4-20 mA HART (10.4 to 48 V<sub>DC</sub>)

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device; observe maximum load
- 5 Cable screen; observe cable specification
- 6 Measuring device
- 7 Supply voltage; observe terminal voltage, observe cable specification

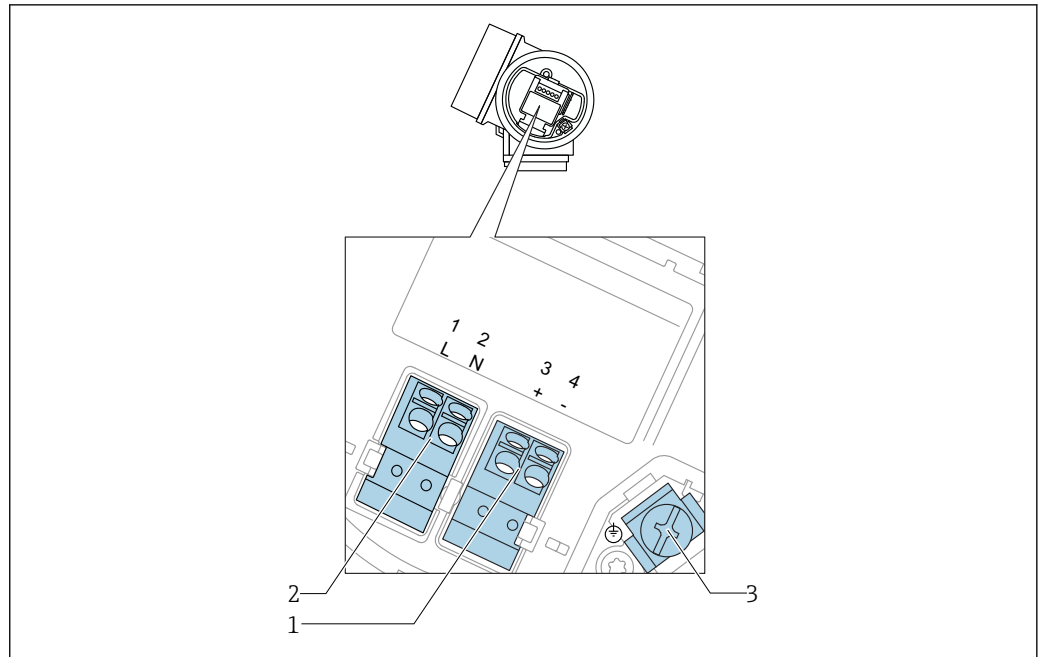**Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)**

A0036519

16 Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)


- 1 Connection 4-20 mA HART (active): terminals 3 and 4
- 2 Connection supply voltage: terminals 1 and 2
- 3 Terminal for cable screen

**CAUTION**

**To ensure electrical safety:**

- ▶ Do not disconnect the protective connection.
- ▶ Disconnect the supply voltage before disconnecting the protective earth.

- i** Connect protective earth to the internal ground terminal (3) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal.
- i** In order to ensure electromagnetic compatibility (EMC): Do **not** only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
- i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnector for the device (IEC/EN61010).

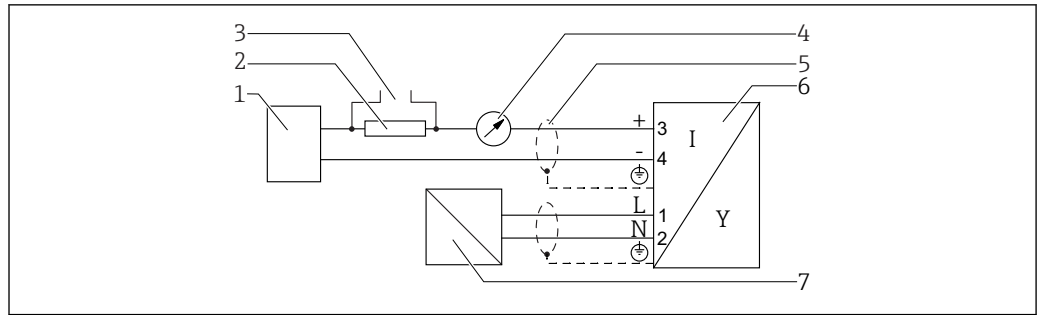**Block diagram 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)**


A0036527

17 Block diagram 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device; observe maximum load
- 5 Cable scree; observe cable specification
- 6 Measuring device
- 7 Supply voltage; observe terminal voltage, observe cable specification


**Connection examples for the switch output**

**i** For HART devices, the switch output is available as an option.

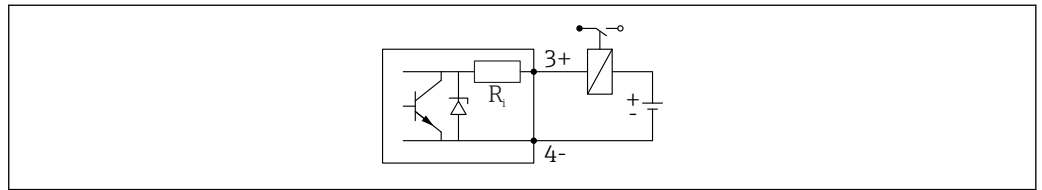

A0015909

**18** Connection of a relay

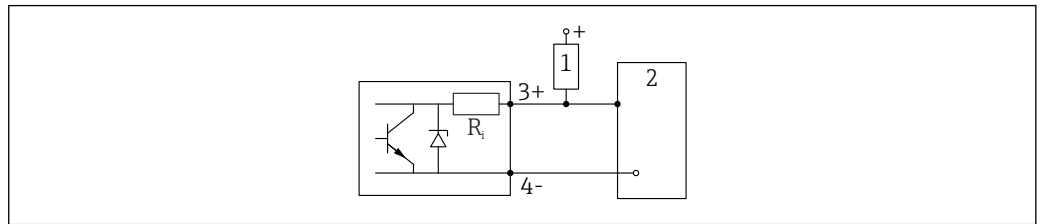

A0015910


**19** Connection to a digital input

- 1 Pull-up resistor
- 2 Digital input

**i** For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or pull-up resistor) of  $< 1\ 000\ \Omega$ .

### HART loop converter HMX50

The dynamic variables of the HART protocol can be converted into individual 4 to 20 mA sections using the HART loop converter HMX50. The variables are assigned to the current output and the measuring ranges of the individual parameters are defined in the HMX50.

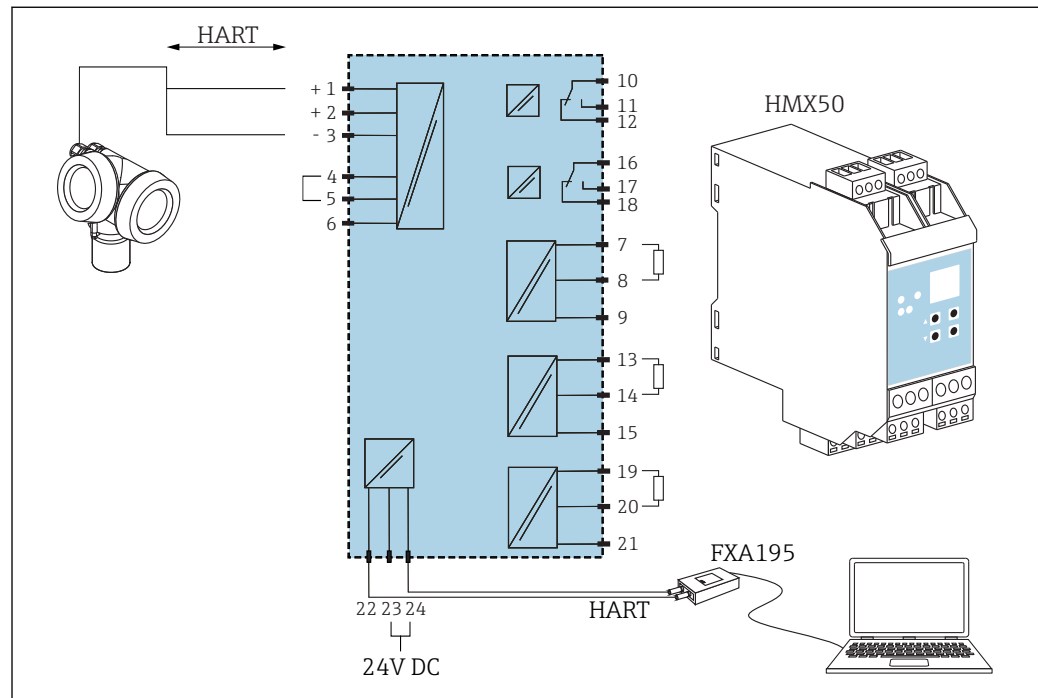

20 Connection diagram for HART loop converter HMX50 (example: passive 2-wire device and current outputs connected as power source)

The HART loop converter HMX50 can be acquired using the order number 71063562.

Additional documentation: TI00429F and BA00371F.

### 7.1.2 Cable specification

#### ■ Devices without integrated overvoltage protection

Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

#### ■ Devices with integrated overvoltage protection


Screw terminals for wire cross-sections 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)


- For ambient temperature  $T_U \geq 60^\circ\text{C}$  (140 °F): use cable for temperature  $T_U + 20\text{ K}$ .

### HART


- A normal device cable suffices if only the analog signal is used.
- A shielded cable is recommended if using the HART protocol. Observe grounding concept of the plant.
- For 4-wire devices: Standard device cable is sufficient for the power line.

### 7.1.3 Device plugs


 In device versions with a device plug (M12 or 7/8"), it is not necessary to open the housing in order to connect the signal cable.

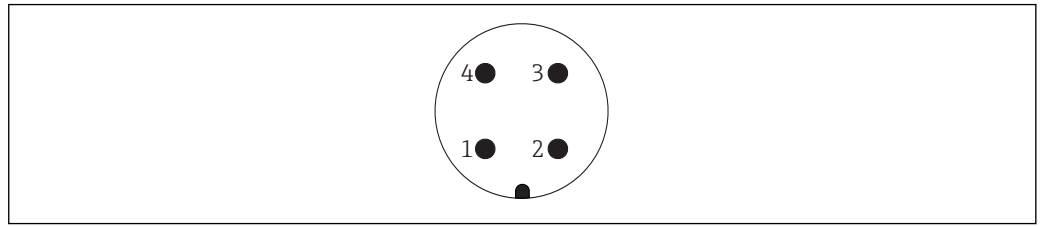


A0011175

 21 Pin assignment of M12 plug

- 1 Signal +
- 2 Not assigned
- 3 Signal -
- 4 Ground

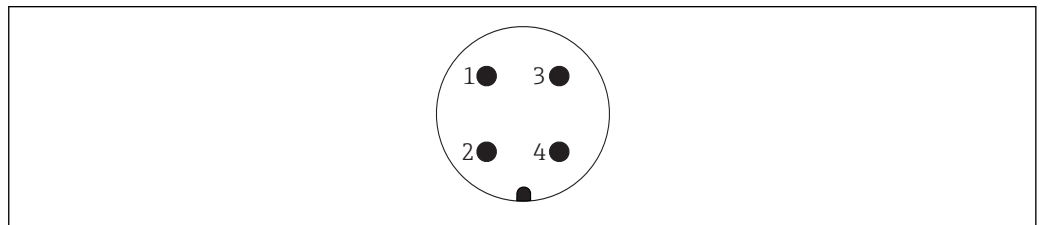

A0011176

 22 Pin assignment of 7/8" plug

- 1 Signal -
- 2 Signal +
- 3 Not assigned
- 4 Shielding

### 7.1.4 Power supply

#### 2-wire, 4-20mA HART, passive

2-wire; 4-20mA HART<sup>1)</sup>

"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
<ul style="list-style-type: none"> <li>■ Non-Ex</li> <li>■ Ex nA</li> <li>■ Ex ic</li> <li>■ CSA GP</li> </ul>	17.5 to 35 V <sup>3)</sup>	<p style="text-align: right; font-size: small;">A0014079</p>
Ex ia / IS	17.5 to 30 V <sup>3)</sup>	
<ul style="list-style-type: none"> <li>■ Ex d / XP</li> <li>■ Ex ic[ia]</li> <li>■ Ex tD / DIP</li> </ul>	16 to 30 V <sup>3)</sup>	<p style="text-align: right; font-size: small;">A0034970</p>

- 1) Feature 020 of the product structure: option A
- 2) Feature 010 of the product structure
- 3) If the Bluetooth modem is used, the minimum supply voltage increases by 2 V.



2-wire; 4-20 mA HART, switch output<sup>1)</sup>

"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
<ul style="list-style-type: none"> <li>■ Non-Ex</li> <li>■ Ex nA</li> <li>■ Ex nA[ia]</li> <li>■ Ex ic</li> <li>■ Ex ic[ia]</li> <li>■ Ex d[ia] / XP</li> <li>■ Ex ta / DIP</li> <li>■ CSA GP</li> </ul>	16 to 35 V <sup>3)</sup>	<p style="text-align: right; font-size: small;">A0034972</p>
<ul style="list-style-type: none"> <li>■ Ex ia / IS</li> <li>■ Ex ia + Ex d[ia] / IS + XP</li> </ul>	16 to 30 V <sup>3)</sup>	

- 1) Feature 020 of the product structure: option B
- 2) Feature 010 of the product structure
- 3) If the Bluetooth modem is used, the minimum supply voltage increases by 2 V.



2-wire; 4-20mA HART, 4-20mA <sup>1)</sup>

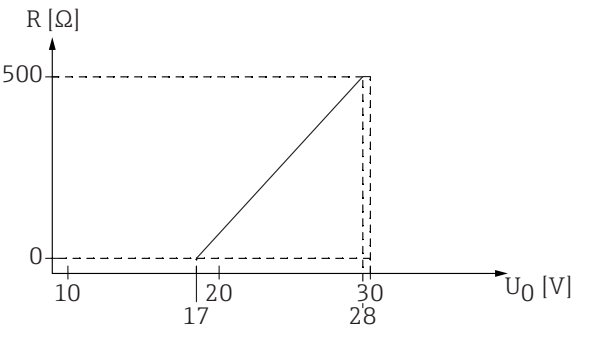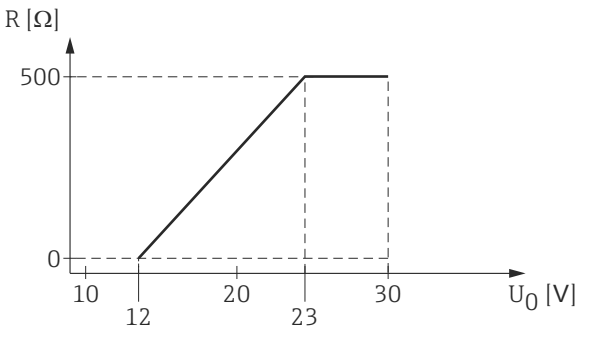"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
any	<b>Channel 1:</b> 17 to 30 V <sup>3)</sup>	
	<b>Channel 2:</b> 12 to 30 V	

- 1) Feature 020 of the product structure: option C
- 2) Feature 010 of the product structure
- 3) If the Bluetooth modem is used, the minimum supply voltage increases by 2 V.

<b>Polarity reversal protection</b>	Yes
<b>Admissible residual ripple at f = 0 to 100 Hz</b>	U <sub>SS</sub> < 1 V
<b>Admissible residual ripple at f = 100 to 10000 Hz</b>	U <sub>SS</sub> < 10 mV

**4-wire, 4-20mA HART, active**

"Power supply; Output" <sup>1)</sup>	Terminal voltage	Maximum load $R_{max}$
<b>K:</b> 4-wire 90-253VAC; 4-20mA HART	90 to 253 V <sub>AC</sub> (50 to 60 Hz), overvoltage category II	500 Ω
<b>L:</b> 4-wire 10,4-48VDC; 4-20mA HART	10.4 to 48 V <sub>DC</sub>	

1) Feature 020 of the product structure

**7.1.5 Overvoltage protection**

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 μs), an overvoltage protection module has to be installed.

**Integrated overvoltage protection module**

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 × 0.5 Ω max.
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 μs)	10 kA

**External overvoltage protection module**

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.



For detailed information please refer to the following documents:

- HAW562: TI01012K
- HAW569: TI01013K


**7.2 Connecting the measuring device****⚠ WARNING****Risk of explosion!**

- ▶ Observe applicable national standards.
- ▶ Comply with the specifications in the Safety Instructions (XA).
- ▶ Use specified cable glands only.
- ▶ Check to ensure that the power supply matches the information on the nameplate.
- ▶ Switch off the power supply before connecting the device.
- ▶ Connect the potential matching line to the outer ground terminal before applying the power supply.

**Required tools/accessories:**

- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.


### 7.2.1 Opening connection compartment cover

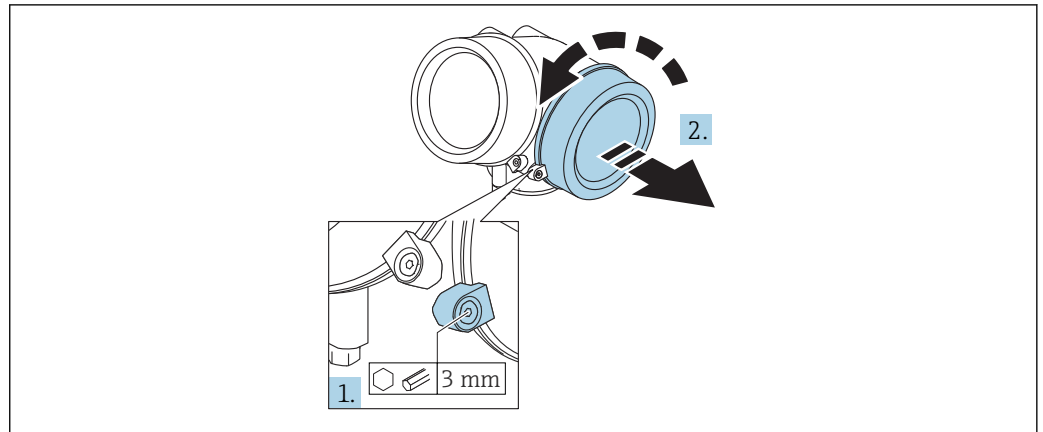

A0021490

1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90° clockwise.
2. Afterwards unscrew connection compartment cover and check lid gasket, replace if necessary.

### 7.2.2 Connecting

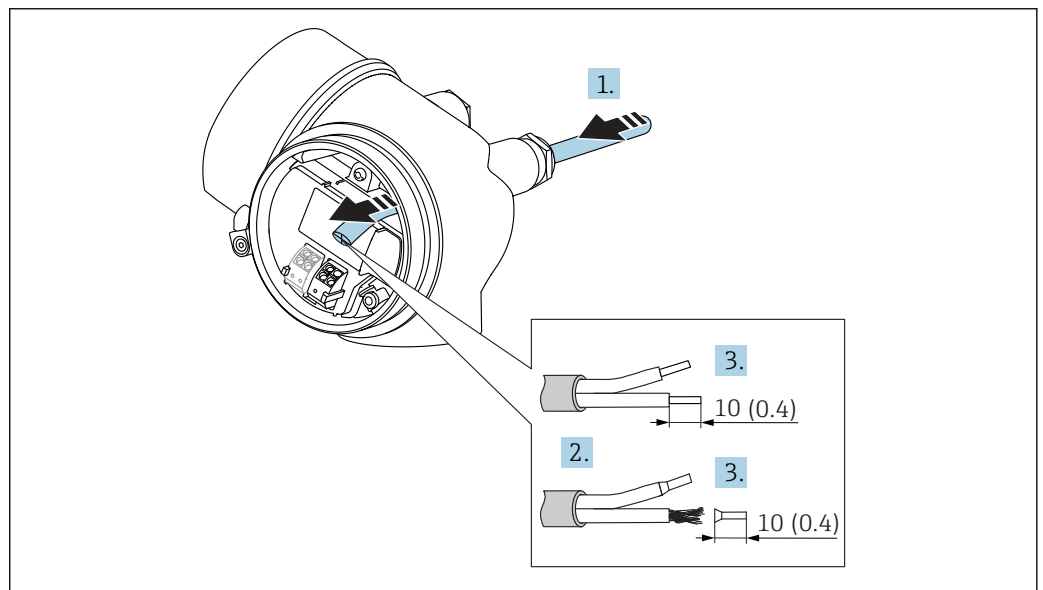


A0036418

23 Dimensions: mm (in)

1. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
2. Remove the cable sheath.
3. Strip the cable ends over a length of 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
4. Firmly tighten the cable glands.

5. Connect the cable in accordance with the terminal assignment.

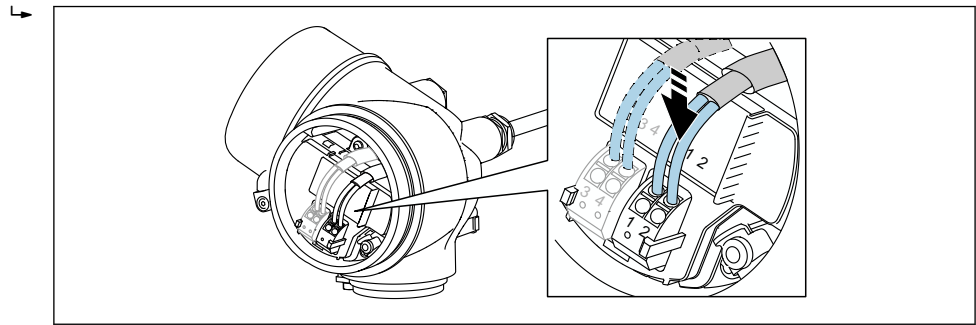


A0034682

6. If using shielded cables: Connect the cable shield to the ground terminal.

### 7.2.3 Plug-in spring-force terminals

In the case of devices without integrated overvoltage protection, electrical connection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

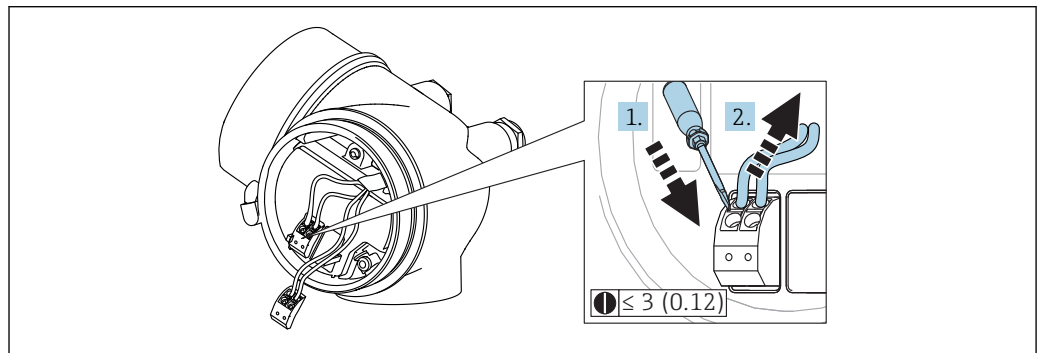


A0013661

24 Dimensions: mm (in)

To remove cables from the terminal:

1. Using a flat-blade screwdriver  $\leq 3$  mm, press down on the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

### 7.2.4 Closing connection compartment cover

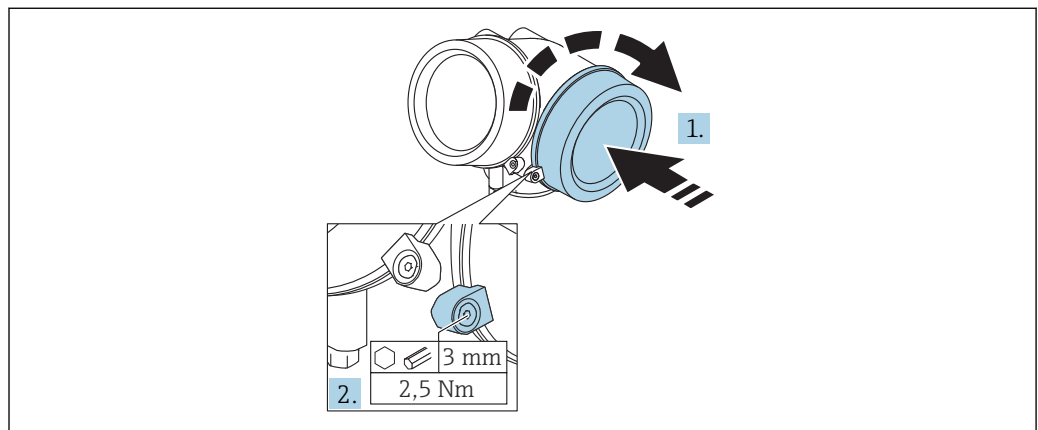

A0021491

1. Screw back firmly connection compartment cover.
2. Turning securing clamp 90 ° counterclockwise and tighten the clamp with 2.5 Nm (1.84 lbf ft) again using the Allen key (3 mm).



### 7.3 Post-connection check

- Is the device or cable undamaged (visual inspection)?
- Do the cables used comply with the requirements?
- Do the mounted cables have adequate strain relief?
- Are all the cable glands installed, firmly tightened and leak-tight?
- Does the supply voltage match the specifications on the nameplate?
- Is the terminal assignment correct?
- If necessary, has a protective ground connection been established?
- If supply voltage is present, is the device ready for operation and do values appear on the display module?
- Are all the housing covers installed and tightened?
- Is the securing clamp firmly tightened?


## 8 Operation options

### 8.1 Overview

#### 8.1.1 Local operation

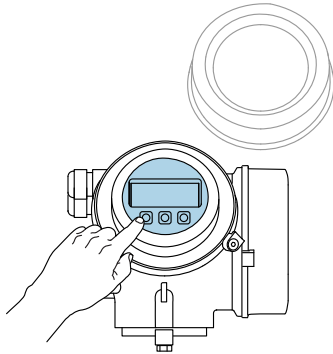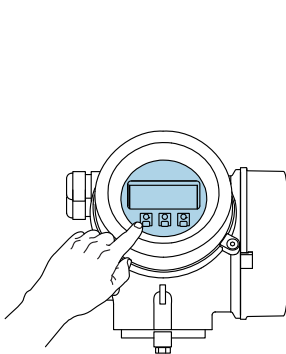Operation with	<i>Pushbuttons</i>	<i>Touch Control</i>
Order code for "Display; Operation"	Option C "SD02"	Option E "SD03"
		
<b>Display elements</b>	4-line display	4-line display white background lighting; switches to red in event of device error
	Format for displaying measured variables and status variables can be individually configured	
	Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range.	
<b>Operating elements</b>	local operation with 3 push buttons (⊕, ⊖, ⊞)	external operation via touch control; 3 optical keys: ⊕, ⊖, ⊞
	Operating elements also accessible in various hazardous areas	
<b>Additional functionality</b>	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display module can be compared to the current device configuration.	
	Data transfer function The transmitter configuration can be transmitted to another device using the display module.	

### 8.1.2 Operation with remote display and operating module FHX50

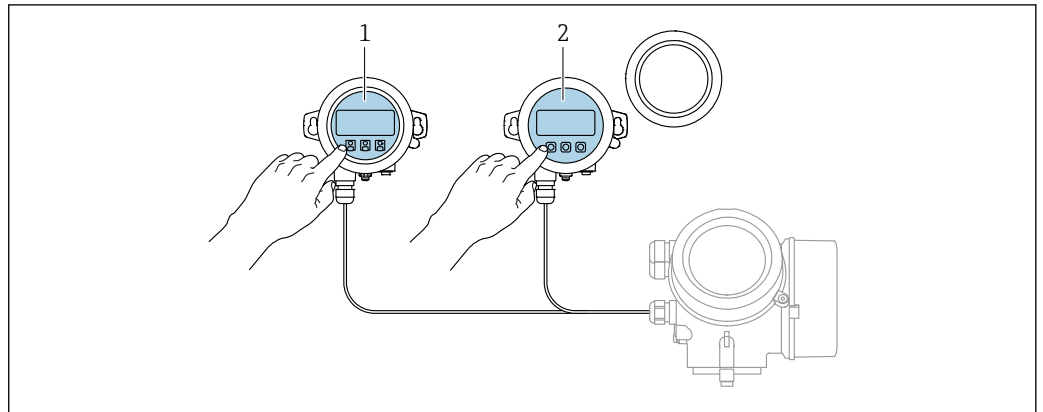


A0036314

#### 25 FHX50 operating options

- 1 Display and operating module SD03, optical keys; can be operated through the glass of the cover
- 2 Display and operating module SD02, push buttons; cover must be removed

### 8.1.3 Operation via Bluetooth® wireless technology

#### Requirements

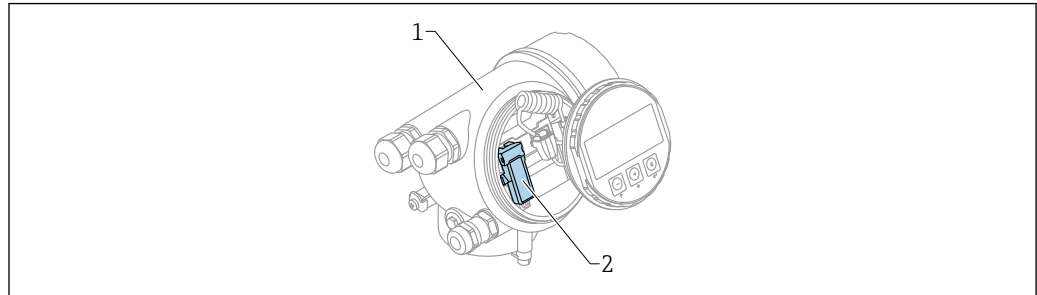

A0036790


26 Device with Bluetooth module

- 1 Electronics housing of the device
- 2 Bluetooth module

This operation option is only available for devices with Bluetooth module. There are the following options:

- The device has been ordered with a Bluetooth module:  
Feature 610 "Accessory Mounted", option NF "Bluetooth"
- The Bluetooth module has been ordered as an accessory (ordering number: 71377355) and has been mounted. See Special Documentation SD02252F.

#### Operation via SmartBlue (app)

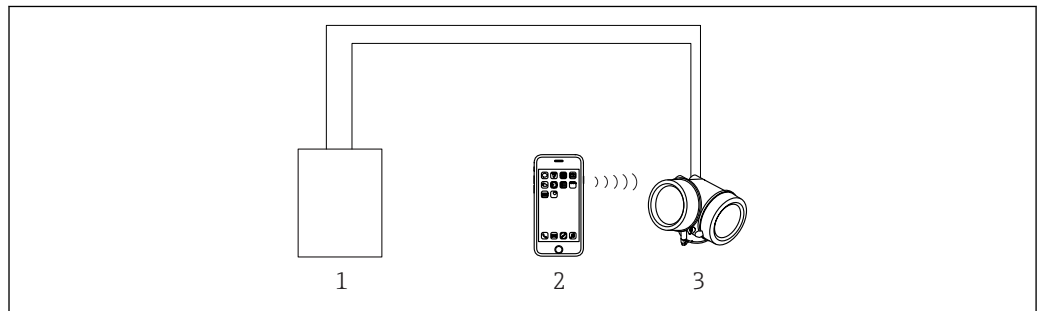

A0034939


27 Operation via SmartBlue (app)

- 1 Transmitter power supply unit
- 2 Smartphone / tablet with SmartBlue (app)
- 3 Transmitter with Bluetooth module



### 8.1.4 Remote operation


#### Via HART protocol

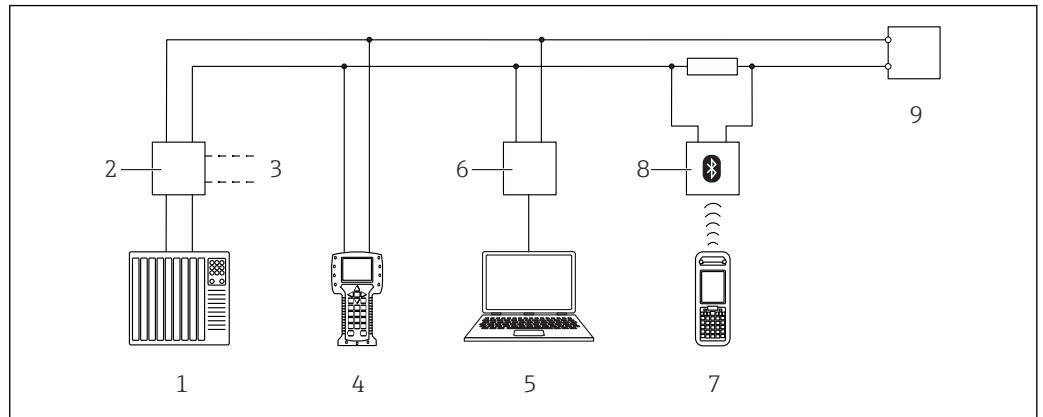

28 Options for remote operation via HART protocol

- 1 PLC (Programmable Logic Controller)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA191, FXA195 and Field Communicator 375, 475
- 4 Field Communicator 475
- 5 Computer with operating tool (e.g. DeviceCare/FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA191 (RS232) or FXA195 (USB)
- 7 Field Xpert SFX350/SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter

#### DeviceCare/FieldCare via service interface (CDI)

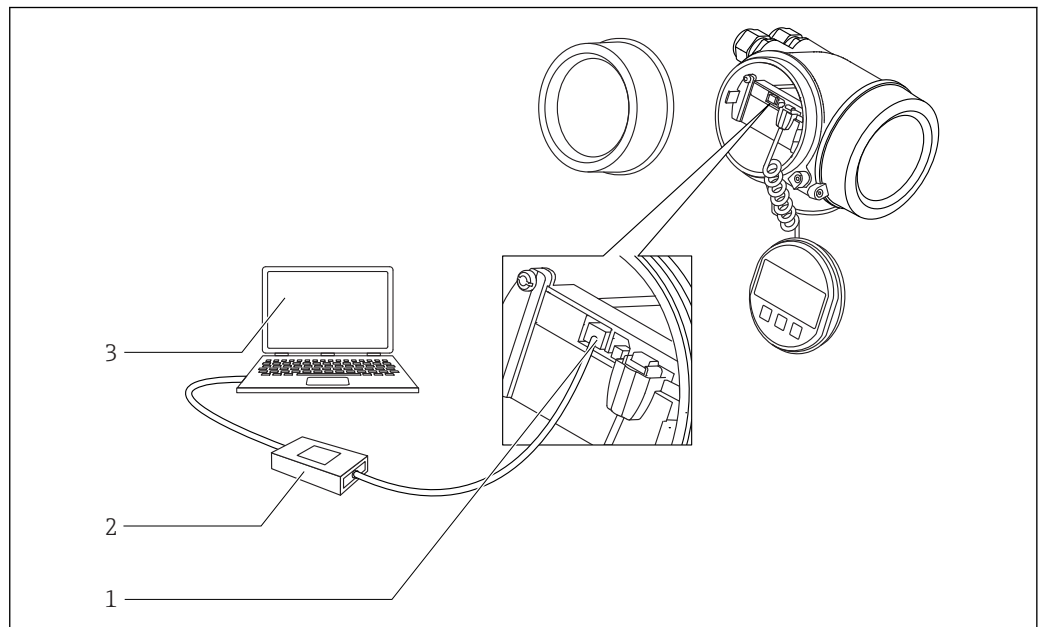

29 DeviceCare/FieldCare via service interface (CDI)

- 1 Service interface (CDI) of the instrument (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with DeviceCare/FieldCare operating tool

## 8.2 Structure and function of the operating menu


### 8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language <sup>1)</sup>	Defines the operating language of the local display.
<b>Commissioning</b> <sup>2)</sup>		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
<b>Setup</b>	Parameter 1 ... Parameter N	When all these parameters have been assigned appropriate values, the measured should be completely configured in a standard application.
	<b>Advanced setup</b>	Contains further submenus and parameters: <ul style="list-style-type: none"> <li>▪ to adapt the device to special measuring conditions.</li> <li>▪ to process the measured value (scaling, linearization).</li> <li>▪ to configure the signal output.</li> </ul>
<b>Diagnostics</b>	<b>Diagnostic list</b>	Contains up to 5 currently active error messages.
	<b>Event logbook</b> <sup>3)</sup>	Contains the last 20 messages (which are no longer active).
	<b>Device information</b>	Contains information needed to identify the device.
	<b>Measured values</b>	Contains all current measured values.
	<b>Data logging</b>	Contains the history of the individual measuring values.
	<b>Simulation</b>	Used to simulate measured values or output values.
	<b>Device check</b>	Contains all parameters needed to check the measurement capability of the device.
	<b>Heartbeat</b> <sup>4)</sup>	Contains all the wizards for the <b>Heartbeat Verification</b> and <b>Heartbeat Monitoring</b> application packages.
<b>Expert</b> <sup>5)</sup> Contains all parameters of the device (including those which are already contained in one of the above submenus). This menu is organized according to the function blocks of the device.  The parameters of the Expert menu are described in: GPO1000F (HART)	<b>System</b>	Contains all general device parameters which do not affect the measurement or the communication interface.
	<b>Sensor</b>	Contains all parameters needed to configure the measurement.
	<b>Output</b>	<ul style="list-style-type: none"> <li>▪ Contains all parameters needed to configure the current output.</li> <li>▪ Contains all parameters needed to configure the switch output (PFS).</li> </ul>

Menu	Submenu / parameter	Meaning
	<b>Communication</b>	Contains all parameters needed to configure the digital communication interface.
	<b>Diagnostics</b>	Contains all parameters needed to detect and analyze operational errors.

- 1) If operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup → Advanced setup → Display"
- 2) Only if operating via an FDT/DTM system
- 3) only available with local operation
- 4) only available if operating via DeviceCare or FieldCare
- 5) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


## 8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  52.

### Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.


 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

## 8.2.3 Data access - Security

### Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

### Define access code via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in **Confirm access code** parameter.
  - ↳ The -symbol appears in front of all write-protected parameters.




### Define access code via operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
  - ↳ Write protection is active.



### Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.



The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the measured value display mode from the navigation and editing view.

-  If write access is activated via access code, it can be also be deactivated only via the access code →  53.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

### Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display →  52.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
  - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

### Deactivation of the write protection via access code

#### Via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Enter **0000**.
3. Repeat **0000** in **Confirm access code** parameter.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

#### Via an operating tool (e.g. FieldCare)


1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Enter **0000**.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

### Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via service interface (CDI)
- Via HART protocol

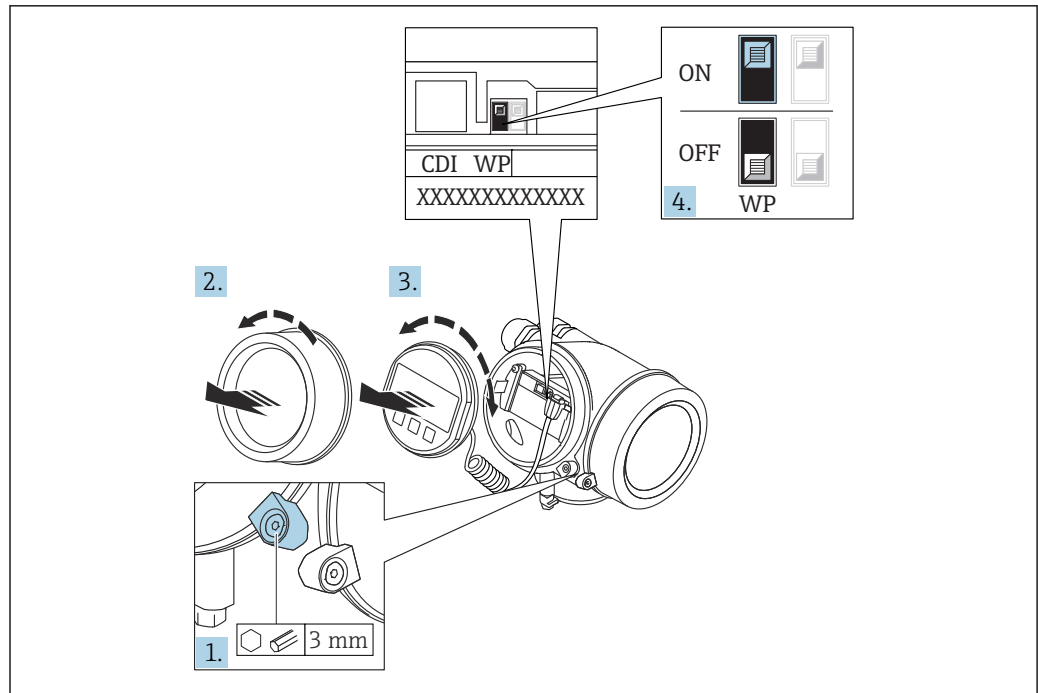


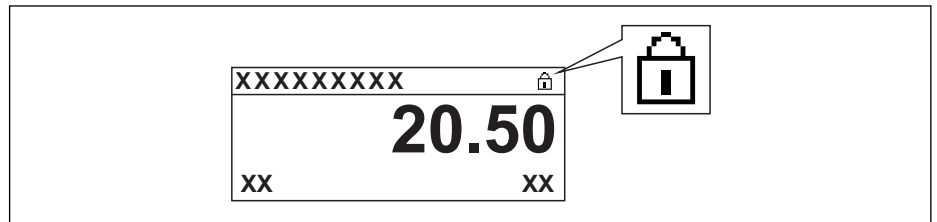
A0026157

1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.
3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.

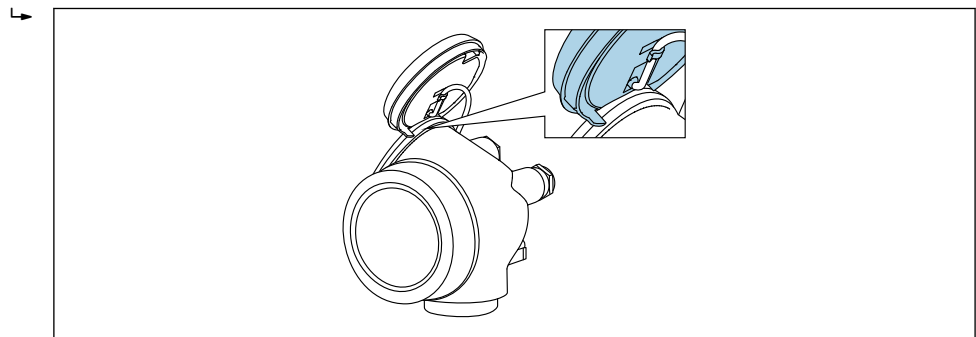


A0036086

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
  - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.



A0015870

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.

### Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

#### Switching on the keypad lock



#### For the SD03 display only

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

#### To activate the keylock manually:

1. The device is in the measured value display.  
Press  $\square$  for at least 2 seconds.  
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.  
↳ The keypad lock is switched on.



If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

#### Switching off the keypad lock

1. The keypad lock is switched on.  
Press  $\square$  for at least 2 seconds.  
↳ A context menu appears.
2. In the context menu select the **Keylock off** option.  
↳ The keypad lock is switched off.

### Bluetooth® wireless technology


#### Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute

- The device is not visible via *Bluetooth*® wireless technology without the SmartBlue app
- Only one point-to-point connection between **one** sensor and **one** smartphone or tablet is established



## 8.3 Display and operating module

### 8.3.1 Display appearance

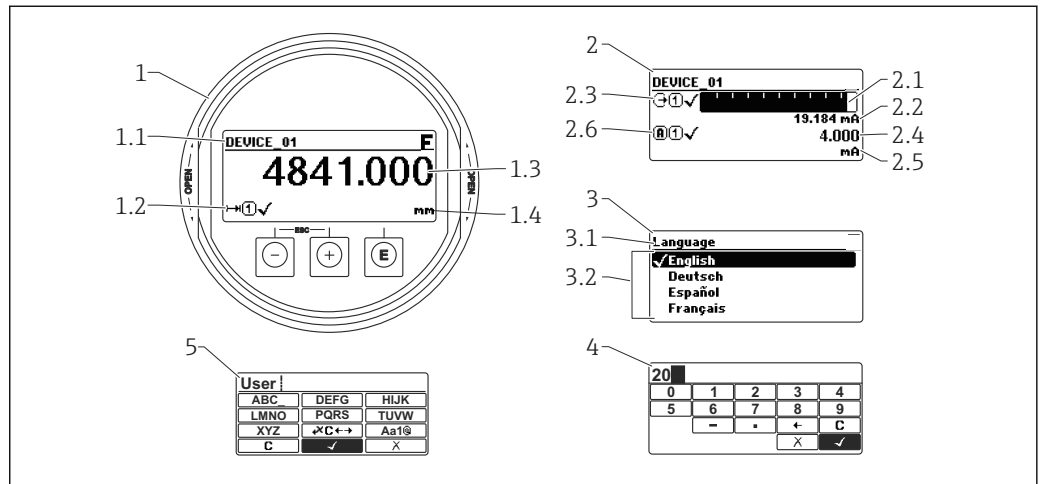





A0012635

30 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list;  marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters



### Display symbols for the submenus

Symbol	Meaning
 A0018367	<b>Display/operat.</b> Appears: <ul style="list-style-type: none"> <li>■ In the main menu next to the "Display/operat." selection</li> <li>■ In the header on the left in the "Display/operat." menu</li> </ul>
 A0018364	<b>Setup</b> Appears: <ul style="list-style-type: none"> <li>■ In the main menu next to the "Setup" selection</li> <li>■ In the header on the left in the "Setup" menu</li> </ul>
 A0018365	<b>Expert</b> Appears: <ul style="list-style-type: none"> <li>■ In the main menu next to the "Expert" selection</li> <li>■ In the header on the left in the "Expert" menu</li> </ul>
 A0018366	<b>Diagnostics</b> Appears: <ul style="list-style-type: none"> <li>■ In the main menu next to the "Diagnostics" selection</li> <li>■ In the header on the left in the "Diagnostics" menu</li> </ul>











### Status signals

Symbol	Meaning
<b>F</b> A0032902	<b>"Failure"</b> A device error has occurred. The measured value is no longer valid.
<b>C</b> A0032903	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).
<b>S</b> A0032904	<b>"Out of specification"</b> The device is being operated: <ul style="list-style-type: none"> <li>■ Outside its technical specifications (e.g. during warmup or cleaning processes)</li> <li>■ Outside the parameter configuration undertaken by the user (e.g. level outside of configured range)</li> </ul>
<b>M</b> A0032905	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.







### Display symbols for locking status

Symbol	Meaning
 A0013148	<b>Read-only parameters</b> The parameter shown is only for display purposes and cannot be edited.
 A0013150	<b>Device locked</b> <ul style="list-style-type: none"> <li>■ In front of a parameter name: The device is locked via software and/or hardware.</li> <li>■ In the header of the measured value screen: The device is locked via hardware.</li> </ul>


**Measured value symbols**

Symbol	Meaning
<b>Measured values</b>	
 <small>A0032892</small>	Level
 <small>A0032893</small>	Distance
 <small>A0032908</small>	Current output
 <small>A0032894</small>	Measured current
 <small>A0032895</small>	Terminal voltage
 <small>A0032896</small>	Electronics or sensor temperature
<b>Measuring channels</b>	
 <small>A0032897</small>	Measuring channel 1
 <small>A0032898</small>	Measuring channel 2
<b>Status of the measured value</b>	
 <small>A0018361</small>	<b>"Alarm" status</b> Measurement is interrupted. The output assumes the defined alarm condition. A diagnostic message is generated.
 <small>A0018360</small>	<b>"Warning" status</b> The device continues to measure. A diagnostic message is generated.

### 8.3.2 Operating elements

Key	Meaning
 <small>A0018330</small>	<p><b>Minus key</b></p> <p><i>For menu, submenu</i>                      Moves the selection bar upwards in a picklist.</p> <p><i>For text and numeric editor</i>                      In the input mask, moves the selection bar to the left (backwards).</p>
 <small>A0018329</small>	<p><b>Plus key</b></p> <p><i>For menu, submenu</i>                      Moves the selection bar downwards in a picklist.</p> <p><i>For text and numeric editor</i>                      In the input mask, moves the selection bar to the right (forwards).</p>
 <small>A0018328</small>	<p><b>Enter key</b></p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> <li>Pressing the key briefly opens the operating menu.</li> <li>Pressing the key for 2 s opens the context menu.</li> </ul> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> <li>Pressing the key briefly                      Opens the selected menu, submenu or parameter.</li> <li>Pressing the key for 2 s for parameter:                      If present, opens the help text for the function of the parameter.</li> </ul> <p><i>For text and numeric editor</i></p> <ul style="list-style-type: none"> <li>Pressing the key briefly                             <ul style="list-style-type: none"> <li>Opens the selected group.</li> <li>Carries out the selected action.</li> </ul> </li> <li>Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
 <small>A0032909</small>	<p><b>Escape key combination (press keys simultaneously)</b></p> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> <li>Pressing the key briefly                             <ul style="list-style-type: none"> <li>Exits the current menu level and takes you to the next higher level.</li> <li>If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>Pressing the key for 2 s returns you to the measured value display ("home position").</li> </ul> <p><i>For text and numeric editor</i>                      Closes the text or numeric editor without applying changes.</p>
 <small>A0032910</small>	<p><b>Minus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0032911</small>	<p><b>Plus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Increases the contrast (darker setting).</p>

### 8.3.3 Enter numbers and text

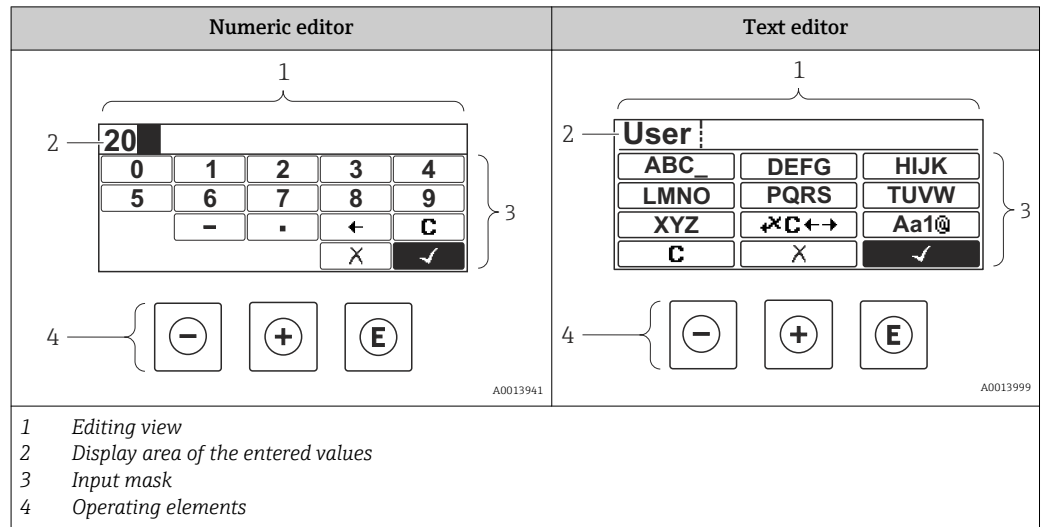

#### Input mask





The following input symbols are available in the input mask of the numeric and text editor:


##### Numeric editor





Symbol	Meaning
 <small>A0013998</small>	Selection of numbers from 0 to 9.
 <small>A0016619</small>	Inserts decimal separator at the input position.
 <small>A0016620</small>	Inserts minus sign at the input position.
 <small>A0013985</small>	Confirms selection.
 <small>A0016621</small>	Moves the input position one position to the left.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

##### Text editor

Symbol	Meaning
 <small>A0013997</small>	Selection of letters from A to Z
 <small>A0013981</small>	Toggle <ul style="list-style-type: none"> <li>Between upper-case and lower-case letters</li> <li>For entering numbers</li> <li>For entering special characters</li> </ul>

 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

*Correction symbols under *

Symbol	Meaning
 <small>A0032907</small>	Clears all entered characters.
 <small>A0018324</small>	Moves the input position one position to the right.
 <small>A0018326</small>	Moves the input position one position to the left.
 <small>A0032906</small>	Deletes one character immediately to the left of the input position.


### 8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Envelope curve
- Keylock on



#### Calling up and closing the context menu

The user is in the operational display.

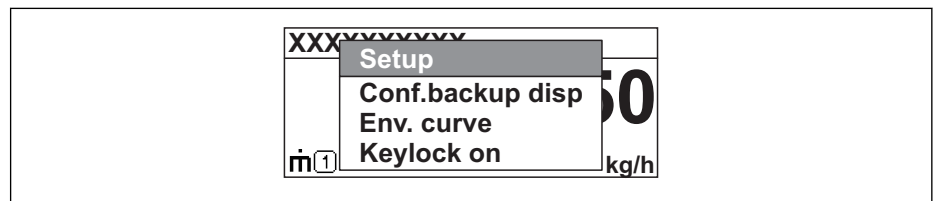

1. Press  for 2 s.
  - ↳ The context menu opens.



A0037872


2. Press  +  simultaneously.
  - ↳ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
  - ↳ The selected menu opens.

### 8.3.5 Envelope curve display on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be shown on the display and operating module:

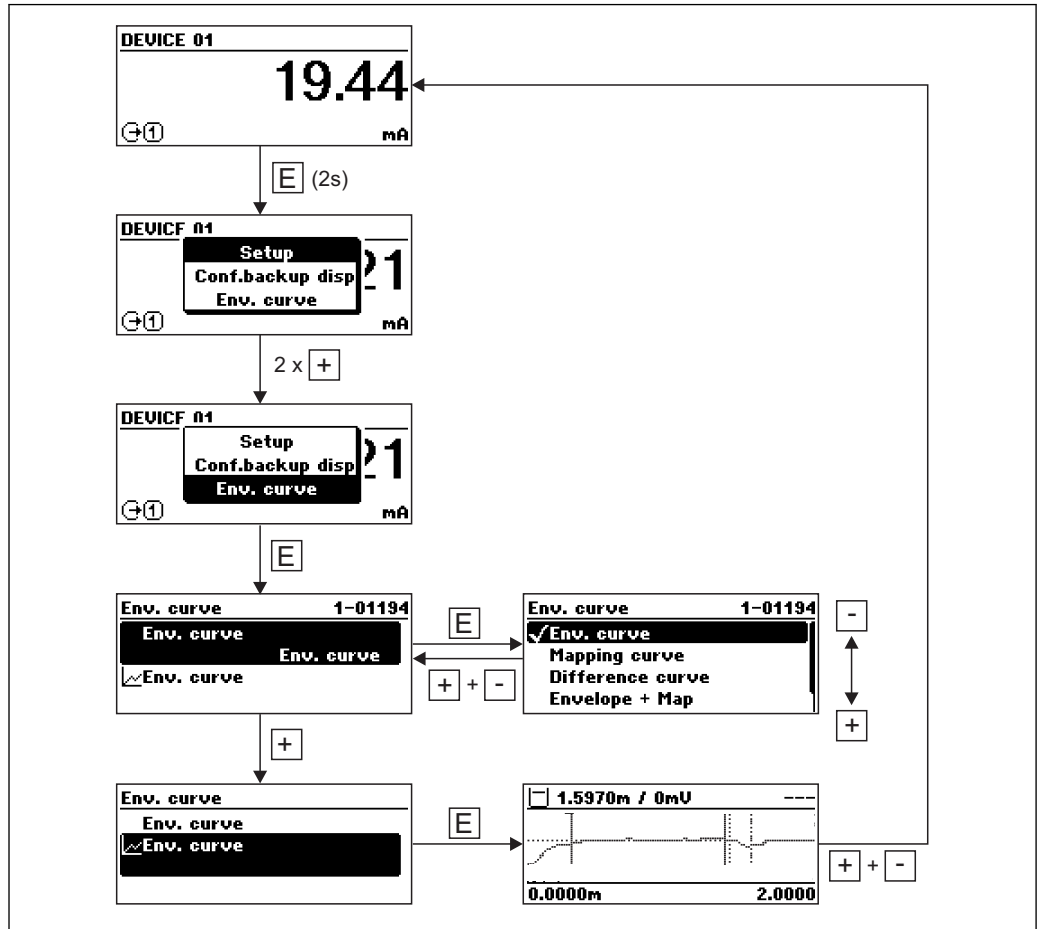

A0014277



## 9 Device integration via the HART protocol

### 9.1 Overview of the Device Description files (DD)

*HART*


Manufacturer ID	0x11
Device type	0x1122
HART specification	7.0
DD files	For information and files see: <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.fieldcommgroup.org">www.fieldcommgroup.org</a></li> </ul>

### 9.2 HART device variables and measuring values

On delivery the following measuring values are assigned to the HART device variables:

*Device variables for interface measurements*

Device variable	Measuring value
Primary variable (PV)	Interface linearized
Secondary variable (SV)	Level linearized
Tertiary variable (TV)	Thickness upper layer
Quaternary variable (QV)	Absolute interface amplitude

 The allocation of the measuring values to the device variables can be changed in the following submenu:

Expert → Communication → Output

## 10 Commissioning via SmartBlue (App)

### 10.1 Requirements

#### Device requirements

Commissioning via SmartBlue is only possible if a Bluetooth module is installed in the device.

#### System requirements

The SmartBlue App is available for download for mobile smartphone or tablet devices in the Google Play Store for Android, and in the App Store for iOS.

- iOS devices: iPhone 5S or higher from iOS11; iPad 5th Generation or higher from iOS11; iPod Touch 6th Generation or higher from iOS11
- Devices with Android: from Android 6.0 and *Bluetooth*® 4.0


#### Initial password

The ID number on the nameplate of the Bluetooth module is used as the initial password when establishing the connection for the first time.

- i** It is important to note the following if the Bluetooth module is removed from one device and installed in another device: all log-in data are only stored in the Bluetooth module and not in the device. This also applies to the password changed by the user.

### 10.2 SmartBlue App

1. Scan the QR code or enter "SmartBlue" in the search field of the App Store.

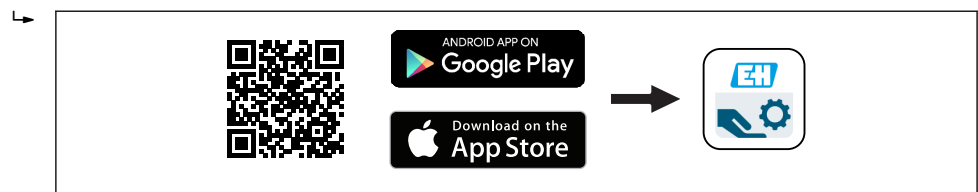

31 Download link

2. Start SmartBlue.
3. Select device from livelist displayed.
4. Enter the login data:
  - ↳ User name: admin
  - Password: serial number of the device
5. Tap the icons for more information.

- i** After logging in for the first time, change the password!

### 10.3 Envelope curve display in SmartBlue

Envelope curves can be displayed and recorded in SmartBlue.

**In addition to the envelope curve, the following values are displayed:**


- D = Distance
- L = Level
- A = Absolute amplitude
- With screenshots, the displayed section (zoom function) is saved
- With video sequences, the whole area without zoom function is saved all the time



A0029486

32 Envelope curve display (sample) in SmartBlue for Android

- 1 Record video
- 2 Create screenshot
- 3 Display mapping menu
- 4 Start/stop video recording
- 5 Move time on time axis

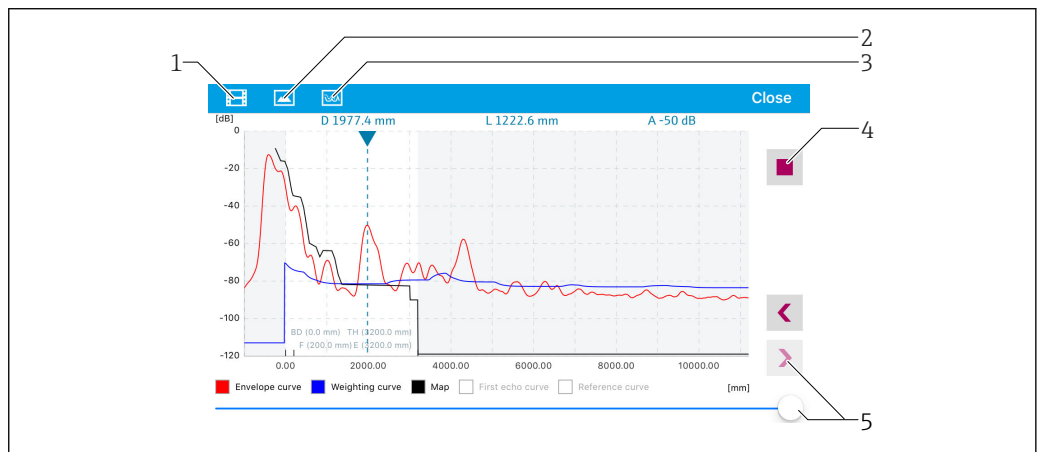

A0029487


33 Envelope curve display (sample) in SmartBlue for iOS

- 1 Record video
- 2 Create screenshot
- 3 Display mapping menu
- 4 Start/stop video recording
- 5 Move time on time axis

## 11 Commissioning using the Commissioning Wizard

A Wizard is provided in FieldCare and DeviceCare <sup>1)</sup> that guides the user through the initial commissioning process.

1. Connect the device with FieldCare or DeviceCare.
2. Open the device in FieldCare or DeviceCare.
  - ↳ The dashboard (homepage) of the device is displayed:

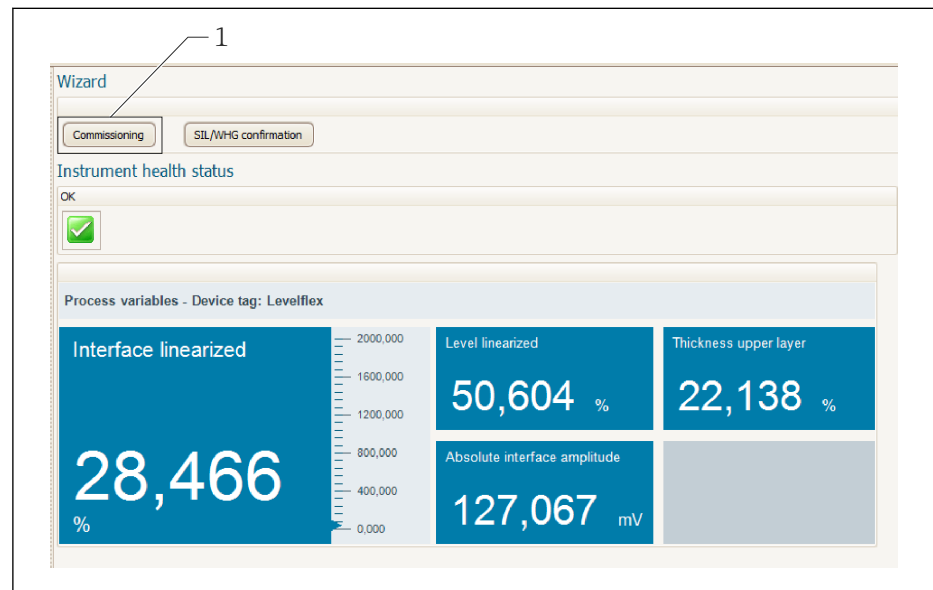

A0025866

1 "Commissioning" button calls up the wizard

3. Click "Commissioning" to launch the Wizard.
  4. Enter the appropriate value in each parameter or select the appropriate option. These values are written directly to the device.
  5. Click "Next" to go to the next page.
  6. Once all the pages have been completed, click "Finish" to close the Wizard.
- i** If you cancel the Wizard before all the necessary parameters have been entered, the device may be in an undefined state. In such situations, it is advisable to reset the device to the factory default settings.

1) DeviceCare is available for download at [www.software-products.endress.com](http://www.software-products.endress.com). To download the software, it is necessary to register in the Endress+Hauser software portal.


## 12 Commissioning via operating menu

### 12.1 Function check

Before commissioning your measuring point, ensure that the post-installation and post-connection checks have been performed:

### 12.2 Setting the operating language


Factory setting: English or ordered local language

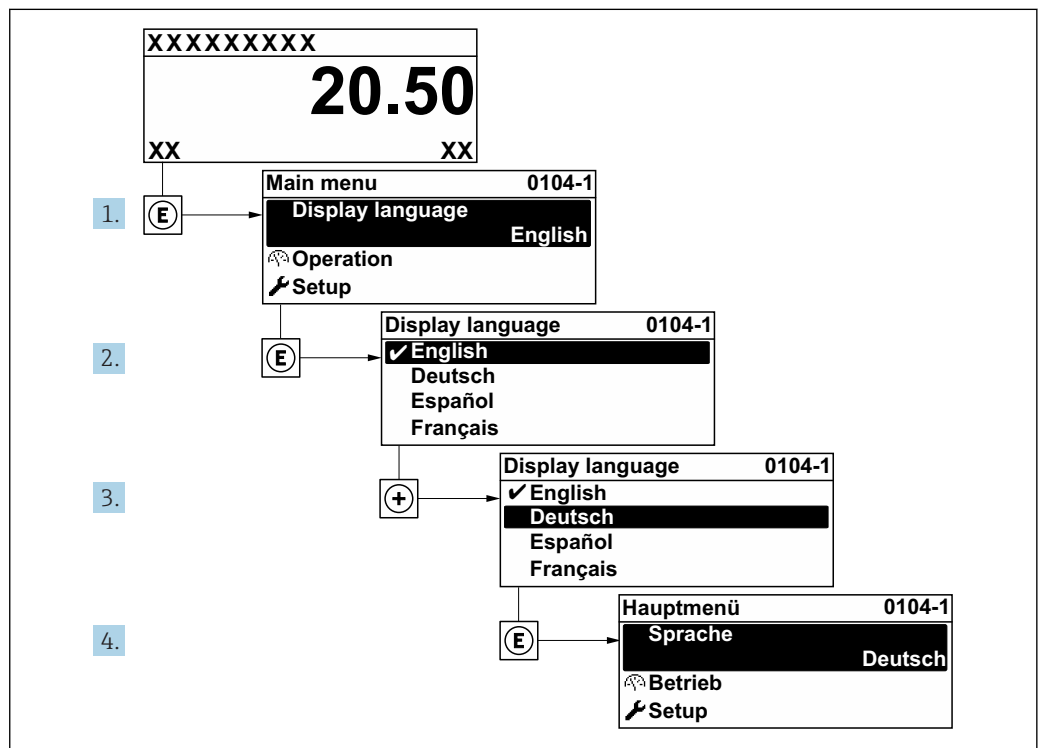

34 Using the example of the local display

A0029420

## 12.3 Configuring an interface measurement

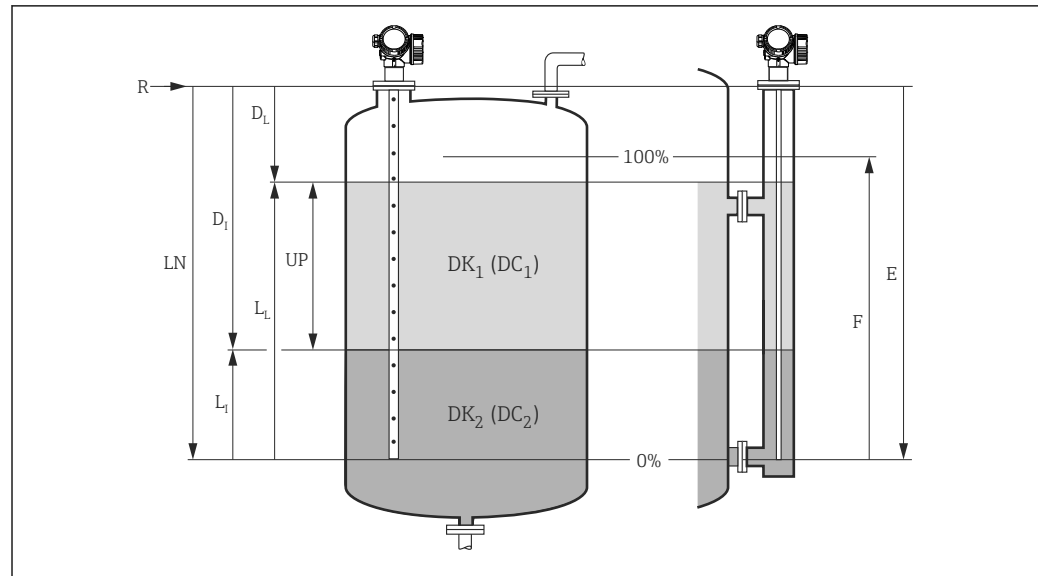

A0011177

35 Configuration parameters for interface measurement

<i>LN</i>	Probe length
<i>R</i>	Reference point of measurement
<i>D1</i>	Interface distance (Distance from flange to lower medium)
<i>L1</i>	Interface
<i>DL</i>	Distance
<i>LL</i>	Level
<i>UP</i>	Thickness upper layer
<i>E</i>	Empty calibration (= zero point)
<i>F</i>	Full calibration (= span)

1. Navigate to: Setup → Device tag
  - ↳ Enter device tag.
2. Navigate to: Setup → Operating mode
  - ↳ Select **Interface with capacitance** option.
3. Navigate to: Setup → Distance unit
  - ↳ Select the length unit.
4. Navigate to: Setup → Tank type
  - ↳ Select tank type.
5. For **Tank type** parameter = Bypass / pipe:
  - Navigate to: Setup → Tube diameter
  - ↳ Specify the diameter of the bypass or stilling well.
6. Navigate to: Setup → DC value
  - ↳ Specify the relative dielectric constant ( $\epsilon_r$ ) of the upper medium.
7. Navigate to: Setup → Empty calibration
  - ↳ Specify empty distance E (Distance from the reference point R to 0% mark).
8. Navigate to: Setup → Full calibration
  - ↳ Specify full distance F (Distance from the 0% to 100%).
9. Navigate to: Setup → Level
  - ↳ Displays the measured level  $L_L$ .
10. Navigate to: Setup → Interface
  - ↳ Displays the interface height  $L_I$ .


11. Navigate to: Setup → Distance
  - ↳ Displays distance  $D_L$  between the reference point R and the level  $L_L$ .
12. Navigate to: Setup → Interface distance
  - ↳ Displays the distance  $D_I$  between the reference point R and the interface  $L_I$ .
13. Navigate to: Setup → Signal quality
  - ↳ Displays the signal quality of the analyzed level echo.
14. Operation via local display:  
Navigate to: Setup → Mapping → Confirm distance
  - ↳ Ensure that the tank is fully drained. Then select the Tank empty option.
15. Via an operating tool (e.g. FieldCare):  
Navigate to: Setup → Confirm distance
  - ↳ Ensure that the tank is fully drained. Then select the Tank empty option.

**NOTICE****Wrong measurement due to incorrect dielectric constant of the lower medium**

- ▶ The dielectric constant of the lower medium must be specified if the lower medium is not water when **Operating mode = Interface with capacitance**. Navigation: Setup → Advanced setup → Interface → DC value lower medium

**NOTICE****Wrong measurement due to incorrect empty capacitance**

- ▶ In the case of rod and rope probes in the bypass, a correct measurement is only possible for **Operating mode = Interface with capacitance** after the empty capacitance has been determined. For this purpose, following installation of the probe, ensure the tank is completely empty and set **Confirm distance = Tank empty**. A calculated empty capacitance can be entered for rod probes in the following parameters in exceptional cases only (if the tank cannot be emptied during commissioning): Expert → Sensor → Interface → Empty capacitance.

-  The empty capacitance is always calibrated ex works in the case of coax probes.

## 12.4 Recording the reference envelope curve


After the measurement has been configured, it is recommended to record the current envelope curve as a reference envelope curve. This can then be used later for diagnostic purposes. The **Save reference curve** parameter is used to record the envelope curve.


### Path in the menu


Expert → Diagnostics → Envelope diagnostics → Save reference curve

### Meaning of the options

- No  
No action
- Yes  
The current envelope curve is saved as a reference curve.

 This submenu is only visible for the "Service" user role in devices supplied with software version 01.00.zz or 01.01.zz.

 The reference envelope curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. The "Load Reference Curve" function in FieldCare is used for this.



 36 "Load Reference Curve" function



## 12.5 Configuring the local display

### 12.5.1 Factory setting of local display for interface measurements

Parameters	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Interface linearized	Interface linearized
Value 2 display	Level linearized	Level linearized
Value 3 display	Thickness upper layer	Current output 1
Value 4 display	Current output 1	Current output 2

### 12.5.2 Adjusting the local display

The local display can be adjusted in the following submenu:  
Setup → Advanced setup → Display

## 12.6 Configuring the current outputs

### 12.6.1 Factory setting of current outputs for interface measurements

Current output	Assigned measured value	4mA value	20mA value
1	Interface linearized	0% or the corresponding linearized value	100% or the corresponding linearized value
2 <sup>1)</sup>	Level linearized	0% or the corresponding linearized value	100% or the corresponding linearized value

1) for devices with two current outputs

### 12.6.2 Adjusting the current outputs

The current outputs can be adjusted in the following submenus:

#### Basic settings

Setup → Advanced setup → Current output 1 to 2

#### Advanced settings

Expert → Output 1 to 2 → Current output 1 to 2

See "Description of Device Parameters" GP01000F

## 12.7 Configuration management

After commissioning, it is possible to save the current device configuration, copy it to another measuring point or restore the previous device configuration. This can be done using the **Configuration management** parameter and its options.

### Path in the menu

Setup → Advanced setup → Configuration backup display → Configuration management

### Meaning of the options

#### ■ **Cancel**

No action is executed and the user exits the parameter.

#### ■ **Execute backup**

A backup copy of the current device configuration is saved from the HistoROM (integrated in the device) to the display module of the device.

#### ■ **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

#### ■ **Duplicate**

The transmitter configuration of the device is duplicated to another device using the display module. The following parameters, which characterize the individual measuring point are **not** transferred:

- HART date code
- HART short tag
- HART message
- HART descriptor
- HART address
- Device tag
- Medium type

#### ■ **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of the comparison is displayed in **Comparison result** parameter.

#### ■ **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.



If an existing backup copy is restored on a device other than the original device with the **Restore** option, individual device functions may no longer be available. In some cases it is also not possible to restore the original state by resetting to the "as-delivered" state.

The **Duplicate** option should always be used to transfer the configuration to a different device.

## 12.8 Protecting settings from unauthorized access





The settings can be protected from unauthorized access in two ways:

- Locking via parameters (software locking)
- Locking via write protection switch (hardware locking)

## 13 Diagnostics and troubleshooting

### 13.1 General troubleshooting

#### 13.1.1 General errors

Error	Possible cause	Solution
Device does not respond.	Supply voltage does not match the value indicated on the nameplate.	Connect the correct voltage.
	The polarity of the supply voltage is wrong.	Correct the polarity.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> <li>■ Increase contrast by pressing  and  simultaneously.</li> <li>■ Decrease contrast by pressing  and  simultaneously.</li> </ul>
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display.	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Replace display.
Duplication of parameters via display from one device to another not working. Only the "Save" and "Cancel" options are available.	Display with backup is not properly detected if a data backup was not carried out on the new device previously.	Connect display (with backup) and restart device.
Output current <3.6 mA	Signal cable connection incorrect.	Check connection.
	Electronics module is defective.	Replace electronics.
HART communication does not function.	Communication resistor missing or incorrectly installed.	Install the communication resistor (250 Ω) correctly.
	Commubox is connected incorrectly.	Connect Commubox correctly.
	Commubox is not set to "HART".	Set Commubox selector switch to "HART".
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parameter configuration error	Check and correct the parameter configuration.
No communication with device via SmartBlue	No Bluetooth connection	Enable Bluetooth function on smartphone or tablet
	The device is already connected with another smartphone/tablet	Disconnect the device from the other smartphone/tablet
	Bluetooth module not connected	Connect Bluetooth module (see SD02252F).
Login via SmartBlue not possible	Device is being put into operation for the first time	Enter initial password (ID of Bluetooth module) and change it

Error	Possible cause	Solution
Device cannot be operated via SmartBlue	Incorrect password entered	Enter the correct password, paying attention to lower/upper case
Device cannot be operated via SmartBlue	Password forgotten	Contact Endress+Hauser Service ( <a href="http://www.addresses.endress.com">www.addresses.endress.com</a> )

### 13.1.2 Error - SmartBlue operation

Error	Possible cause	Solution
Device is not visible in the live list	No Bluetooth connection	Enable Bluetooth® function on smartphone or tablet
		Bluetooth® function of sensor disabled, perform recovery sequence
Device is not visible in the live list	The device is already connected with another smartphone/tablet	Only <b>one</b> point-to-point connection is established between a sensor and a smartphone or tablet
Device is visible in the live list but cannot be accessed via SmartBlue	Android end device	Is the location function enabled for the app, was it approved the first time?
		GPS or positioning function must be activated for certain Android versions in conjunction with Bluetooth®
		Activate GPS - close the app fully and restart - enable the positioning function for the app
Device is visible in the live list but cannot be accessed via SmartBlue	Apple end device	Log in as standard Enter user name "admin" Enter initial password (ID of the Bluetooth module) paying attention to lower/upper case
Login via SmartBlue not possible	Device is being put into operation for the first time	Enter initial password (ID of the Bluetooth module) and change; paying attention to lower/upper case
Device cannot be operated via SmartBlue	Incorrect password entered	Enter correct password
Device cannot be operated via SmartBlue	Password forgotten	Contact the Endress+Hauser Service department ( <a href="http://www.addresses.endress.com">www.addresses.endress.com</a> )

### 13.1.3 Parameter configuration errors

#### Parameter configuration errors for level measurements

Error	Possible cause	Solution
Measured value incorrect	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul style="list-style-type: none"> <li>▪ Check and adjust <b>Empty calibration</b> parameter (→ ☰ 124) if necessary.</li> <li>▪ Check and adjust <b>Full calibration</b> parameter (→ ☰ 125) if necessary.</li> <li>▪ Check and adjust linearization if necessary (<b>Linearization</b> submenu (→ ☰ 143)).</li> </ul>
	If measured distance (Setup → Distance) does not match the real distance: Interference echo	Carry out mapping ( <b>Confirm distance</b> parameter (→ ☰ 129)).
No change of measured value on filling/emptying	Interference echo	Carry out mapping ( <b>Confirm distance</b> parameter (→ ☰ 129)).
	Buildup at the probe.	Clean the probe.
	Error in the echo tracking.	Deactivate echo tracking (Expert → Sensor → Echo tracking → Evaluation mode = <b>History off</b> ).
<b>Echo lost</b> diagnostic message appears after switching on the supply voltage.	Echo threshold too high.	Check <b>Medium group</b> parameter (→ ☰ 123). If necessary, select a more detailed setting in <b>Medium property</b> parameter.
	Level echo suppressed.	Delete mapping and record it again if necessary ( <b>Record map</b> parameter (→ ☰ 131)).
Device displays a level when the tank is empty.	Incorrect probe length	Carry out probe length correction ( <b>Confirm probe length</b> parameter (→ ☰ 159)).
	Interference echo	Carry out mapping over entire probe length while the tank is empty ( <b>Confirm distance</b> parameter (→ ☰ 129)).
Wrong slope of the level throughout the complete measuring range	Wrong tank type selected.	Set <b>Tank type</b> parameter (→ ☰ 123) correctly.

#### Parameter configuration errors for interface measurements


Error	Possible cause	Solution
Incorrect slope of the interface measured value	The dielectric constant (DC value) of the upper medium is incorrectly set.	Enter the correct dielectric constant (DC value) of the upper medium ( <b>DC value</b> parameter (→ ☰ 127)).
The measured value for the interface and for the total level are identical.	The echo threshold for the total level is too high due to an incorrect dielectric constant.	Enter the correct dielectric constant (DC value) of the upper medium ( <b>DC value</b> parameter (→ ☰ 127)).
The total level jumps to the interface level in the case of thin interfaces.	The thickness of the upper medium is lower than 60 mm.	Measurement of the interface is only possible for interface heights greater than 60 mm.



## 13.2 Diagnostic information on local display

### 13.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

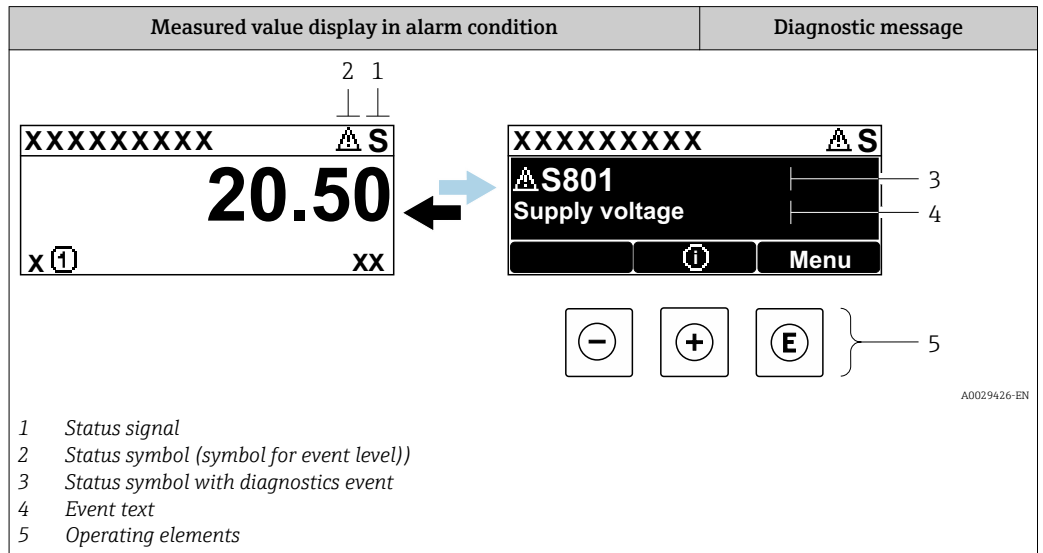

#### Status signals


<b>F</b> <small>A0032902</small>	<b>"Failure (F)" option</b> A device error is present. The measured value is no longer valid.
<b>C</b> <small>A0032903</small>	<b>"Function check (C)" option</b> The device is in service mode (e.g. during a simulation).
<b>S</b> <small>A0032904</small>	<b>"Out of specification (S)" option</b> The device is operated: <ul style="list-style-type: none"> <li>▪ Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>▪ Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>M</b> <small>A0032905</small>	<b>"Maintenance required (M)" option</b> Maintenance is required. The measured value is still valid.

#### Status symbol (symbol for event level)


⊗	<b>"Alarm" status</b> The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
⚠	<b>"Warning" status</b> The device continues to measure. A diagnostic message is generated.

### Diagnostics event and event text

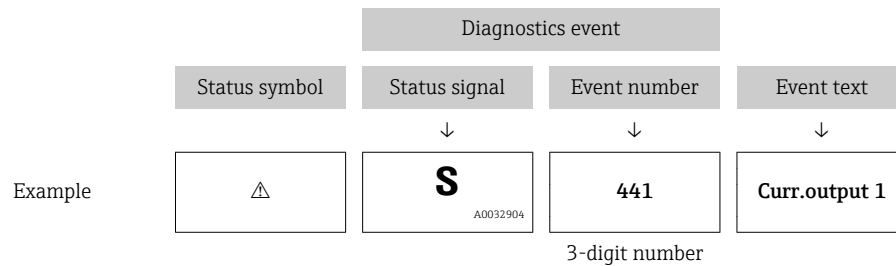

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.




If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in the **Diagnostic list** submenu.

-  Past diagnostic messages that are no longer pending are shown as follows:
- On the local display:  
in the **Event logbook** submenu
  - In FieldCare:  
via the "Event List /HistoROM" function.

### Operating elements

Operating functions in menu, submenu	
	<b>Plus key</b> Opens the message about the remedial measures.
	<b>Enter key</b> Opens the operating menu.

### 13.2.2 Calling up remedial measures

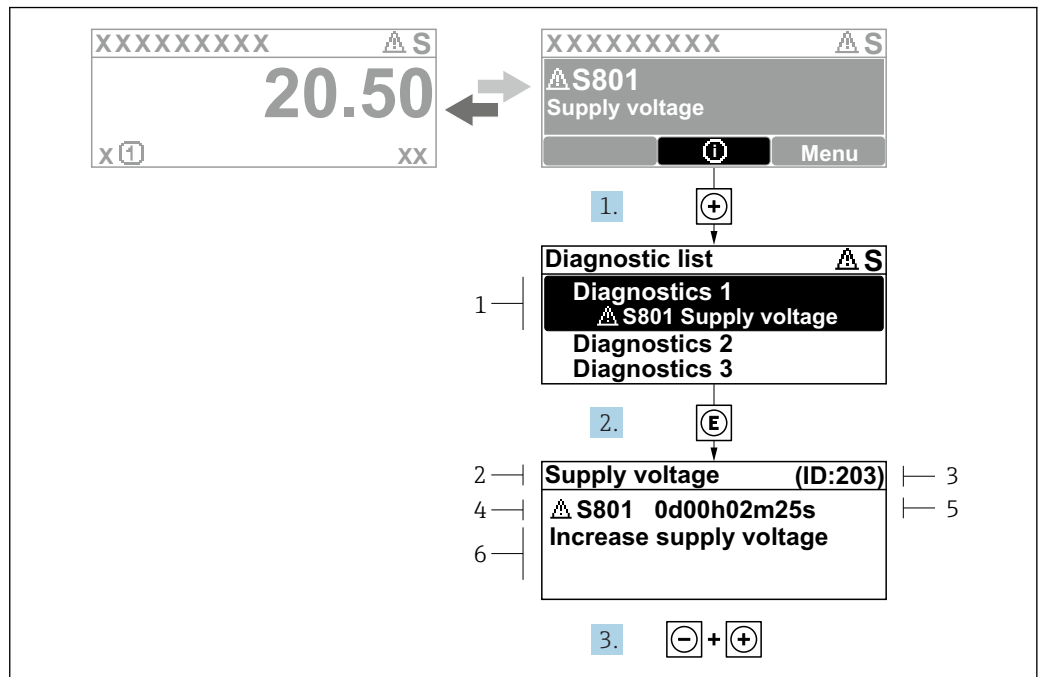

A0029431-EN

37 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press '+' (Ⓢ-Symbol).
  - ↳ **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with '+' or '-' and press 'Ⓢ'.
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press '-' + '+' simultaneously.
  - ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

1. Press 'Ⓢ'.
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press '-' + '+' simultaneously.
  - ↳ The message for the remedial measures closes.


### 13.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)


#### A: Via the operating menu

1. Navigate to the **Diagnostics** menu.
  - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.

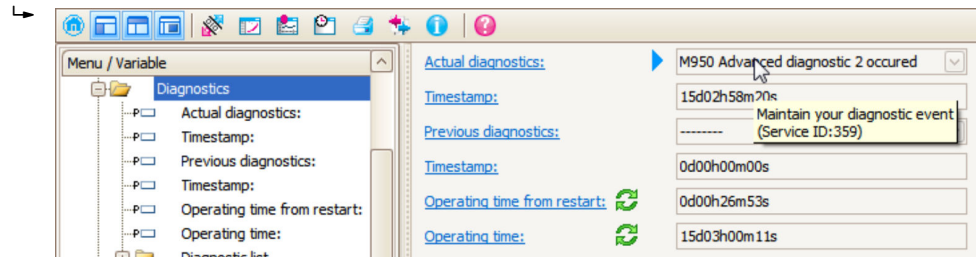


A tool tip with remedial measures for the diagnostic event appears.

#### B: Via the "Create documentation" function

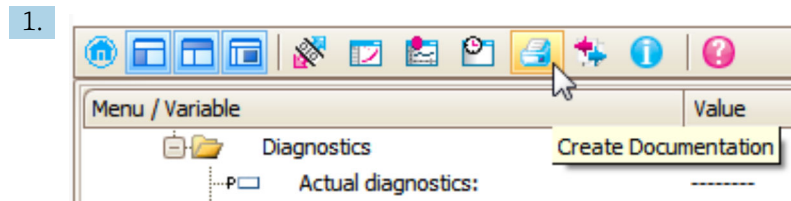


Select the "Create documentation" function.

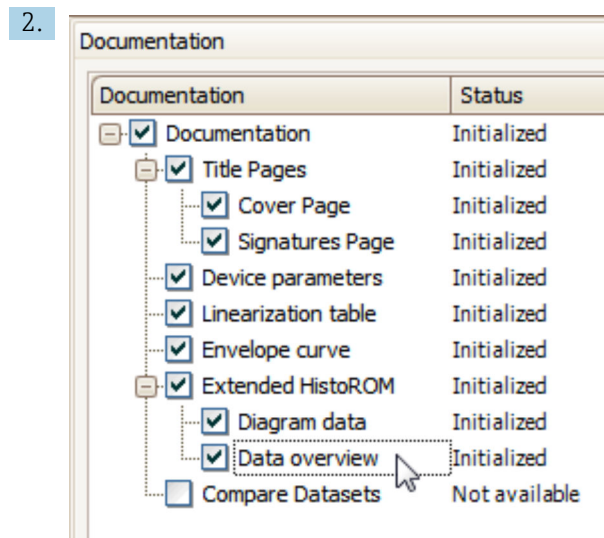

Make sure "Data overview" is marked.

3. Click "Save as ..." and save a PDF of the protocol.
  - ↳ The protocol contains the diagnostic messages and remedy information.

### C: Via the "Eventlist / Extended HistoROM" function

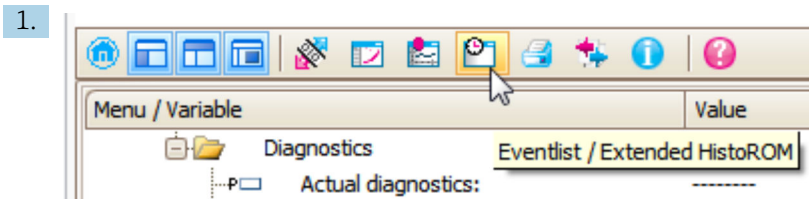

Select the "Eventlist / Extended HistoROM" function.



Select the "Load Eventlist" function.

- ↳ The list of events, including remedy information, is shown in the "Data overview" window.

## 13.4 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

### Navigation path

Diagnostics → Diagnostic list

### Calling up and closing the remedial measures

1. Press  $\square$ .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  $\square$  +  $\boxplus$  simultaneously.
  - ↳ The message about the remedial measures closes.

## 13.5 List of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
<b>Diagnostic of sensor</b>				
003	Broken probe detected	1. Check map 2. Check sensor	F	Alarm
046	Build-up detected	Clean sensor	F	Alarm
104	HF cable	and check sealing 1. Dry HF cable connection 2. Change HF cable	F	Alarm
105	HF cable	1. Tighten HF cable connection 2. Check sensor 3. Change HF cable	F	Alarm
106	Sensor	1. Check sensor 2. Check HF cable 3. Contact service	F	Alarm
<b>Diagnostic of electronic</b>				
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm
252	Modules incompatible	1. Check if correct electronic modul is plugged 2. Replace electronic module	F	Alarm
261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	F	Alarm
262	Module connection	1. Check module connections 2. Change electronic modules	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	F	Alarm
275	I/O module defective	Change I/O module	F	Alarm
276	I/O module faulty	1. Restart device 2. Change I/O module	F	Alarm
276	I/O module faulty		F	Alarm
282	Data storage	1. Restart device 2. Contact service	F	Alarm
283	Memory content	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning
<b>Diagnostic of configuration</b>				
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	C	Warning
412	Processing download	Download active, please wait	C	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
431	Trim 1 to 2	Carry out trim	C	Warning
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
441	Current output 1 to 2	1. Check process 2. Check current output settings	S	Warning
484	Failure mode simulation	Deactivate simulation	C	Alarm
485	Simulation measured value	Deactivate simulation	C	Warning
491	Current output 1 to 2 simulation	Deactivate simulation	C	Warning
494	Switch output simulation	Deactivate simulation switch output	C	Warning
495	Diagnostic event simulation	Deactivate simulation	C	Warning
585	Simulation distance	Deactivate simulation	C	Warning
<b>Diagnostic of process</b>				
801	Energy too low	Increase supply voltage	S	Warning
803	Current loop	1. Check wiring 2. Change I/O module	F	Alarm
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	S	Warning
825	Operating temperature		F	Alarm
921	Change of reference	1. Check reference configuration 2. Check pressure 3. Check sensor	S	Warning
936	EMC interference	Check installation on EMC	F	Alarm
941	Echo lost	Check parameter 'DC value'	F	Alarm <sup>1)</sup>
942	In safety distance	1. Check level 2. Check safety distance 3. Reset self holding	S	Alarm <sup>1)</sup>
943	In blocking distance	Reduced accuracy Check level	S	Warning
944	Level range	Reduced accuracy Level at process connection	S	Warning
950	Advanced diagnostic 1 to 2 occurred	Maintain your diagnostic event	M	Warning <sup>1)</sup>

1) Diagnostic behavior can be changed.

## 13.6 Event logbook

### 13.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu <sup>2)</sup>.

#### Navigation path

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.




Die Ereignishistorie umfasst Einträge zu:

- Diagnostic events
- Information events

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - ☹: Event has occurred
  - ☺: Event has ended
- Information event
  - ☹: Event has occurred

#### Calling up and closing the remedial measures

1. Press 
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
  - ↳ The message about the remedial measures closes.

### 13.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.

#### Navigation path

Diagnostics → Event logbook → Filter options

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

### 13.6.3 Overview of information events

Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed

2) This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.



Info number	Info name
I1092	Embedded HistoROM deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1554	Safety sequence started
I1555	Safety sequence confirmed
I1556	Safety mode off

## 13.7 Firmware history

Date	Firmware version	Modifications	Documentation (FMP55, HART)		
			Operating Instructions	Description of Device Parameters	Technical Information
07.2010	01.00.zz	Original software	BA01003F/00/EN/05.10	GP01000F/00/EN/05.10	TI01003F/00/EN/05.10
01.2011	01.01.zz	<ul style="list-style-type: none"> <li>▪ SIL integrated</li> <li>▪ Improvements and bugfixes</li> <li>▪ Additional languages</li> </ul>	<ul style="list-style-type: none"> <li>▪ BA01003F/00/EN/10.10</li> <li>▪ BA01003F/00/EN/13.11</li> <li>▪ BA01003F/00/EN/14.12</li> </ul>	<ul style="list-style-type: none"> <li>▪ GP01000F/00/EN/10.10</li> <li>▪ GP01000F/00/EN/13.11</li> </ul>	<ul style="list-style-type: none"> <li>▪ TI01003F/00/EN/10.10</li> <li>▪ TI01003F/00/EN/13.11</li> <li>▪ TI01003F/00/EN/14.12</li> <li>▪ TI01003F/00/EN/15.12</li> </ul>
02.2014	01.02.zz	<ul style="list-style-type: none"> <li>▪ Support of SD03</li> <li>▪ Additional languages</li> <li>▪ HistoROM functionality enhanced</li> <li>▪ "Advanced Diagnostics" function block integrated</li> <li>▪ Improvements and bugfixes</li> </ul>	<ul style="list-style-type: none"> <li>▪ BA01003F/00/EN/15.13</li> <li>▪ BA01003F/00/EN/16.14</li> </ul>	<ul style="list-style-type: none"> <li>▪ GP01000F/00/EN/14.13</li> <li>▪ GP01000F/00/EN/15.14</li> </ul>	<ul style="list-style-type: none"> <li>▪ TI01003F/00/EN/16.13</li> <li>▪ TI01003F/00/EN/17.14</li> </ul>
04.2016	01.03.zz	<ul style="list-style-type: none"> <li>▪ Update to HART 7</li> <li>▪ All 17 languages available in the device</li> <li>▪ Improvements and bugfixes</li> </ul>	<ul style="list-style-type: none"> <li>▪ BA01003F/00/EN/17.16</li> <li>▪ BA01003F/00/EN/18.16<sup>1)</sup></li> <li>▪ BA01003F/00/EN/20.18<sup>2)</sup></li> </ul>	GP01000F/00/EN/16.16	<ul style="list-style-type: none"> <li>▪ TI01003F/00/EN/18.16</li> <li>▪ TI01003F/00/EN/20.16<sup>1)</sup></li> <li>▪ TI01003F/00/EN/22.18<sup>2)</sup></li> </ul>

1) Contains information on the Heartbeat wizards available in the current DTM version for DeviceCare and FieldCare.

2) Contains information on the Bluetooth interface.



The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

## **14 Maintenance**

The measuring device requires no special maintenance.

### **14.1 Exterior cleaning**

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

### **14.2 Cleaning coax probes**

For cleaning purposes the ground tube can be stripped of the coaxial probe. When unmounting and remounting the tube, make sure that the PFA spacers do not get out of space. A first spacer is positioned at about 10 cm (4 in) from the end of the probe. Depending of the length of the probe there may be additional spacers evenly spaced along the probe.

## 15 Repair

### 15.1 General notes

#### 15.1.1 Repair concept

Under the Endress+Hauser repair concept, devices have a modular design and repairs are carried out by Endress+Hauser Service or by properly trained customers.

Spare parts are grouped into logical kits with the associated replacement instructions.

For more information on service and spare parts, please contact Endress+Hauser Service.

#### 15.1.2 Repair of Ex-certified devices

When repairing Ex-certified devices, please also note the following:

- Only specialist personnel or Endress+Hauser-Service can carry out repairs to Ex certified devices.
- Relevant standards and national regulations as well as safety instructions (XA) and certificates must be observed.
- Only genuine Endress+Hauser spare parts may be used.
- When ordering spare parts, please check the device designation on the nameplate. Only identical parts may be used as replacements.
- Carry out repairs according to the instructions. Following a repair, the device must fulfill the requirements of the individual tests specified for that device.
- A certified device may be converted to another certified device version by Endress +Hauser Service only.
- All repairs and modifications must be documented.

#### 15.1.3 Replacing electronics modules

When electronics modules have been replaced the device does not need to be recalibrated as the parameters are saved in the HistoROM inside the housing. It may be necessary when replacing the main electronics to record a new interference echo suppression.

#### 15.1.4 Replacing a device


Once a complete device has been replaced, the parameters can be transferred back into the device using one of the following methods:

- Using the display module  
Prerequisite: The configuration of the old device was saved previously to the display module.
- Via FieldCare  
Prerequisite: The configuration of the old device was saved previously to the computer using FieldCare.

You can continue measuring without performing a new calibration. Only interference echo suppression may need to be carried out once again.

## 15.2 Spare parts

- Some replaceable measuring device components are identified by means of a spare part nameplate. This contains information about the spare part.
- In the connection compartment cover of the device there is a spare part nameplate which contains the following information:
  - A list of the most important spare parts for the measuring device, including their ordering information.
  - The URL for the *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)):  
All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

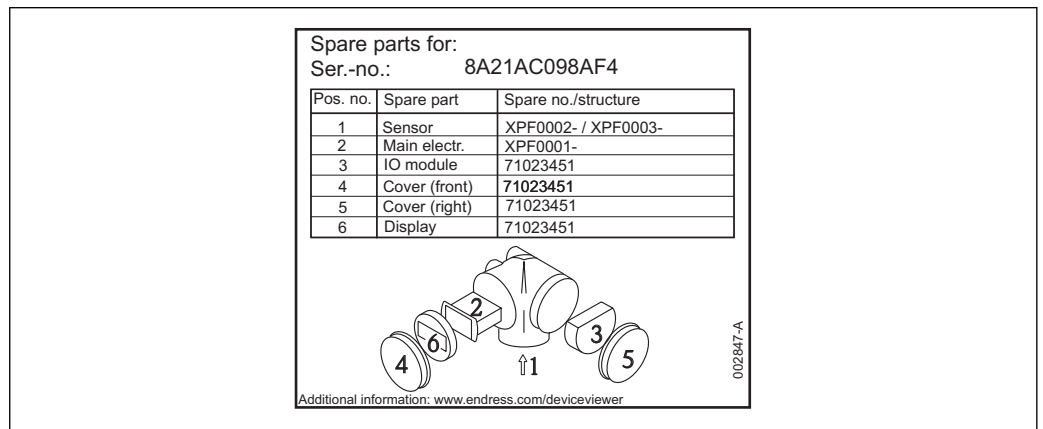

38 Example for spare part nameplate in the connection compartment cover

- i** Measuring device serial number:
  - Located on the device and spare part nameplate.
  - Can be read out via the "Serial number" parameter in the "Device information" submenu.

## 15.3 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the website for more information:  
<http://www.endress.com/support/return-material>
2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

## 15.4 Disposal






If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to Endress+Hauser for disposal under the applicable conditions.



## 16 Accessories
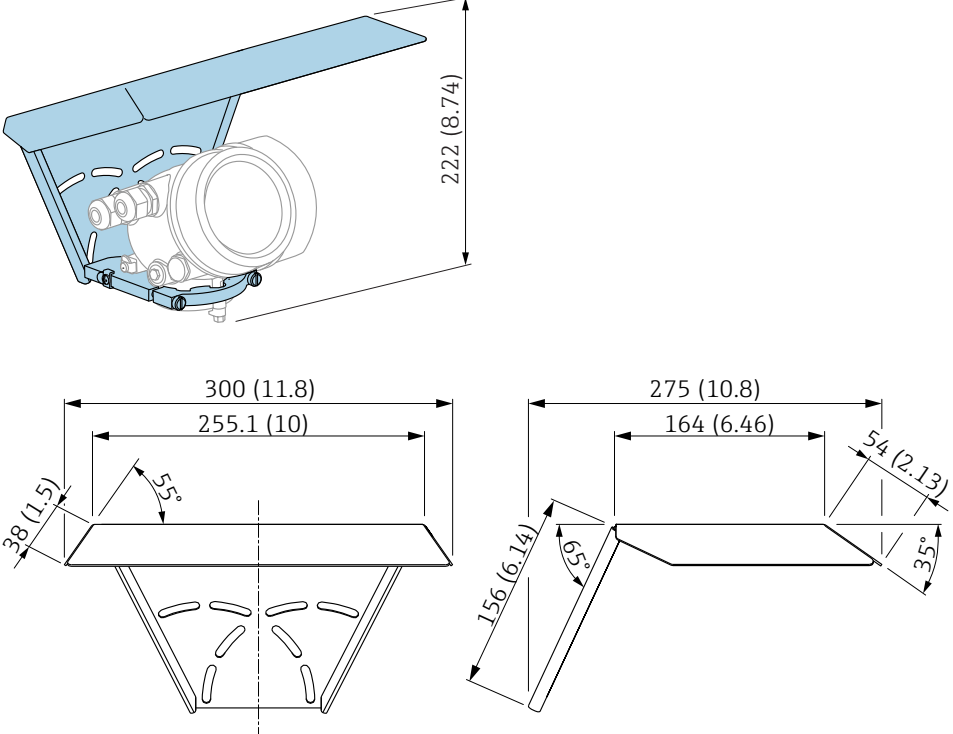
### 16.1 Device-specific accessories



#### 16.1.1 Weather protection cover

Accessory	Description
Weather protection cover	 <p data-bbox="1380 869 1436 884">A0015466</p> <p data-bbox="1380 1281 1436 1296">A0015472</p> <p data-bbox="327 1303 837 1332">  39 Weather protection cover; Dimensions: mm (in)         </p> <p data-bbox="327 1355 1404 1435">  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242.         </p>

### 16.1.2 Mounting bracket for electronics housing

Accessories	Description
<p>Mounting bracket for electronics housing</p>	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p><b>A</b></p> </div> <div style="text-align: center;"> <p><b>B</b></p> </div> </div> <p> 40 Mounting bracket for electronics housing; engineering unit: mm (in)</p> <p>A Wall mounting B Post mounting</p> <p> With "remote sensor" device versions (see feature 060 in the product structure), the mounting bracket is included in the scope of delivery. However, it can also be ordered separately as an accessory (order number: 71102216).</p> <p style="text-align: right; font-size: small;">A0014793</p>


### 16.1.3 Centering star

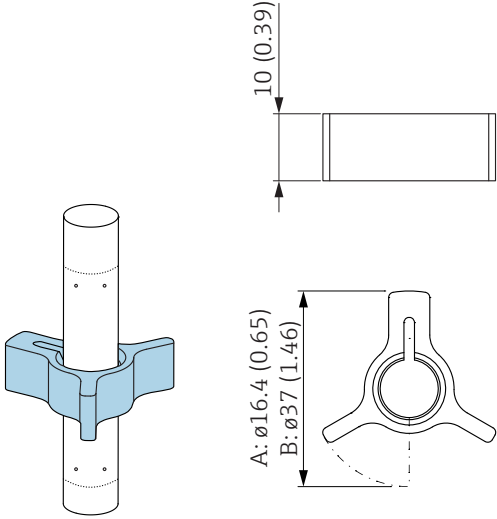Accessories	Description
Centering star PFA <ul style="list-style-type: none"> <li>■ <math>\phi</math> 16.4 mm (0.65 in)</li> <li>■ <math>\phi</math> 37 mm (1.46 in)</li> </ul> suitable for FMP55	<div style="display: flex; align-items: center;">  </div> <p>A For probe 8 mm (0.3 in) B For probes 12 mm (0.47 in) and 16 mm (0.63 in)</p> <p>The centering star is suitable for probes with a rod diameter of 8 mm (0.3 in), 12 mm (0.47 in) and 16 mm (0.63 in) (including coated rod probes) and can be used in pipes from DN40 to DN50. See also Operating Instructions BA00378F/00/A2.</p> <ul style="list-style-type: none"> <li>■ Material: PFA</li> <li>■ Permitted process temperature range: -200 to +250 °C (-328 to +482 °F)</li> <li>■ Order number             <ul style="list-style-type: none"> <li>■ Probe 8 mm (0.3 in) : 71162453</li> <li>■ Probe 12 mm (0.47 in): 71157270</li> <li>■ Probe 16 mm (0.63 in): 71069065</li> </ul> </li> </ul> <p> The PFA centering star can also be ordered directly with the device (Levelflex product structure, feature 610 "Accessory mounted", option OE).</p>




Accessories	Description
<p>Centering star PEEK, Ø 48 to 95 mm (1.9 to 3.7 in) suitable for FMP55</p>	<p>The centering star is suitable for probes with a rope diameter of 4 mm (1/6 in) (including coated rope probes). See also Operating Instructions SD01961F.</p> <ul style="list-style-type: none"> <li>■ Material: PEEK</li> <li>■ Permitted process temperature range: -60 to +250 °C (-76 to +482 °F)</li> <li>■ Order number             <ul style="list-style-type: none"> <li>■ 71373490 (1x)</li> <li>■ 71373492 (5x)</li> </ul> </li> </ul>

### 16.1.4 Remote display FHX50

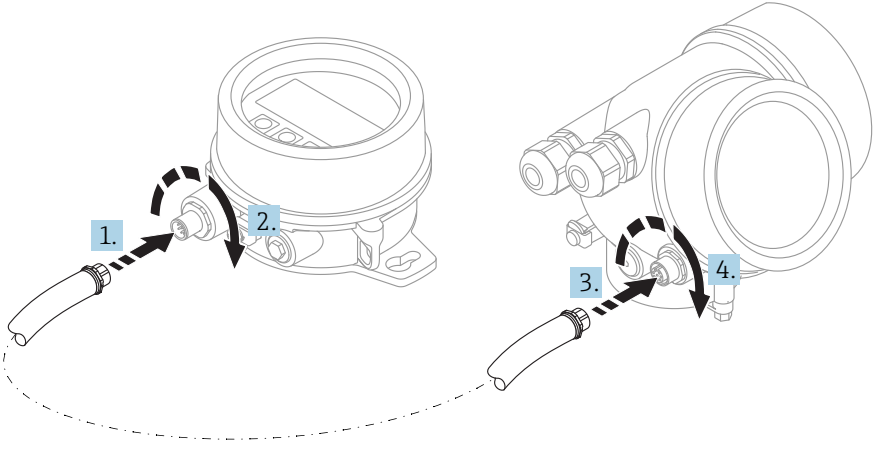Accessories	Description
Remote display FHX50	<div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0019128</p> <ul style="list-style-type: none"> <li>▪ Material: <ul style="list-style-type: none"> <li>▪ Plastic PBT</li> <li>▪ 316L/1.4404</li> <li>▪ Aluminum</li> </ul> </li> <li>▪ Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x</li> <li>▪ Suitable for display modules: <ul style="list-style-type: none"> <li>▪ SD02 (push buttons)</li> <li>▪ SD03 (touch control)</li> </ul> </li> <li>▪ Connecting cable: <ul style="list-style-type: none"> <li>▪ Cable supplied with device up to 30 m (98 ft)</li> <li>▪ Standard cable supplied by customer up to 60 m (196 ft)</li> </ul> </li> <li>▪ Ambient temperature range: -40 to 80 °C (-40 to 176 °F)</li> <li>▪ Ambient temperature range (option): -50 to 80 °C (-58 to 176 °F) <sup>1)</sup></li> </ul> <p> <span style="font-size: small;">i</span> ▪ If the remote display should be used, order the device version "Prepared for display FHX50" (feature 030, version L, M or N). For the FHX50, you must select option A: "Prepared for display FHX50" under feature 050 "Measuring device version". </p> <p> <span style="font-size: small;">i</span> ▪ If the device version "Prepared for display FHX50" was not originally ordered and a FHX50 display is to be retrofitted, you must select version B "Not prepared for display FHX50" under feature 050: "Measuring device version" when ordering the FHX50. In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used. </p> <p> <span style="font-size: small;">i</span> Use of the FHX50 may be restricted for transmitters with an approval. A device can only be retrofitted with the FHX50 if the option L, M or N ("Prepared for FHX50") is listed under <i>Basic specifications</i>, item 4 "Display, operation" in the Safety Instructions (XA) for the device.  Also pay attention to the Safety Instructions (XA) of the FHX50. </p> <p> <span style="font-size: small;">i</span> Retrofitting is not possible on transmitters with: <ul style="list-style-type: none"> <li>▪ An approval for use in areas with flammable dust (dust ignition-proof approval)</li> <li>▪ Ex nA type of protection</li> </ul> </p> <p> <span style="font-size: small;">i</span> For details, see document SD01007F. </p>

1) This range is valid if option JN "Ambient temperature transmitter -50 °C (-58 °F)" has been selected in ordering feature 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), failure rates may be increased.

### 16.1.5 Overvoltage protection

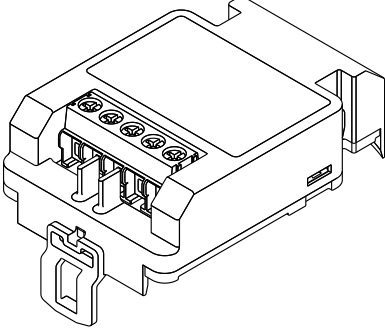Accessories	Description
<p>Overvoltage protection for 2-wire devices                      OVP10 (1-channel)                      OVP20 (2-channel)</p>	<div style="text-align: right; font-size: small; margin-bottom: 10px;">A0021734</div>  <p><b>Technical data</b></p> <ul style="list-style-type: none"> <li>■ Resistance per channel: <math>2 \times 0.5 \Omega_{\max}</math></li> <li>■ Threshold DC voltage: 400 to 700 V</li> <li>■ Threshold surge voltage: &lt; 800 V</li> <li>■ Capacitance at 1 MHz: &lt; 1.5 pF</li> <li>■ Nominal leakage current (8/20 <math>\mu</math>s): 10 kA</li> <li>■ Suitable for conductor cross-sections: 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)</li> </ul> <p><b>i</b> <b>Ordered with the device</b>                      Ideally, the overvoltage protection module should be ordered directly with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate order necessary only if retrofitting.</p> <p><b>i</b> <b>Order numbers for retrofitting</b></p> <ul style="list-style-type: none"> <li>■ For 1-channel devices (feature 020, option A):                          OVP10: 71128617</li> <li>■ For 2-channel devices (feature 020, options B, C, E or G)                          OVP20: 71128619</li> </ul> <p><b>Housing cover for retrofitting</b>                      In order to keep the necessary safety distances when using the surge arrester module, the housing cover also needs to be replaced when the device is retrofitted. Depending on the housing type, the suitable cover can be ordered using the following material number:</p> <ul style="list-style-type: none"> <li>■ Housing GT18: cover 71185516</li> <li>■ Housing GT19: cover 71185518</li> <li>■ Housing GT20: cover 71185517</li> </ul> <p><b>i</b> <b>Restrictions in case of retrofitting</b>                      The use of the OVP module may be restricted depending on the transmitter approval. A device may only be retrofitted with the OVP module if the option <i>NA</i> (overvoltage protection) is listed under <i>Optional specifications</i> in the Safety Instructions (XA) associated with the device.</p> <p><b>i</b> For details, see SD01090F.</p>

### 16.1.6 Bluetooth module for HART devices

Accessory	Description
Bluetooth module	<div data-bbox="325 327 970 768" data-label="Image"> </div> <div data-bbox="1382 779 1437 792" data-label="Text"> <p>A0036493</p> </div> <ul style="list-style-type: none"> <li>▪ Quick and easy commissioning via SmartBlue (app)</li> <li>▪ No additional tools or adapters required</li> <li>▪ Signal curve via SmartBlue (app)</li> <li>▪ Encrypted single point-to-point data transmission (tested by Fraunhofer institute) and password protected communication via Bluetooth® wireless technology</li> <li>▪ Range under reference conditions: &gt; 10 m (33 ft)</li> </ul> <p><b>i</b> When using the Bluetooth module the minimum supply voltage increases by up to 3 V.</p> <p><b>i</b> <b>Ordering with device</b> The Bluetooth module is preferably ordered with the device. See product structure, feature 610 "Accessory Mounted", option NF "Bluetooth". A separate order is only necessary in case of retrofitting.</p> <p><b>i</b> <b>Order code for retrofitting</b> Bluetooth module (BT10): 71377355</p> <p><b>i</b> <b>Restrictions in case of retrofitting</b> Depending on the approval of the transmitter, application of the Bluetooth module may be restricted. A device may only be retrofitted with a Bluetooth module if the option <i>NF</i> (Bluetooth) is listed in the associated Safety Instructions (XA) under <i>Optional specifications</i>.</p> <p><b>i</b> For details refer to SD02252F.</p>

## 16.2 Communication-specific accessories

### Commubox FXA195 HART

For intrinsically safe HART communication with FieldCare via the USB interface



For details, see "Technical Information" TI00404F

### Commubox FXA291

Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop

Order number: 51516983



For details, see "Technical Information" TI00405C

### HART Loop Converter HMX50

Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values

Order number: 71063562



For details, see "Technical Information" TI00429F and Operating Instructions BA00371F

### WirelessHART adapter SWA70

- Is used for the wireless connection of field devices
- The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks



For details, see Operating Instructions BA00061S

### Connect Sensor FXA30/FXA30B

Fully integrated, battery-powered gateway for simple applications with SupplyCare Hosting. Up to 4 field devices with 4 to 20 mA communication (FXA30/FXA30B), serial Modbus (FXA30B) or HART (FXA30B) can be connected. With its robust design and ability to run for years on the battery, it is ideal for remote monitoring in isolated locations. Version with LTE (USA, Canada and Mexico only) or 3G mobile transmission for worldwide communication.



For details, see "Technical Information" TI01356S and Operating Instructions BA01710S.

### Fieldgate FXA42

Fieldgates enable communication between connected 4 to 20 mA, Modbus RS485 and Modbus TCP devices and SupplyCare Hosting or SupplyCare Enterprise. The signals are transmitted either via Ethernet TCP/IP, WLAN or mobile communications (UMTS).

Advanced automation capabilities are available, such as an integrated Web-PLC, OpenVPN and other functions.



For details, see "Technical Information" TI01297S and Operating Instructions BA01778S.

### SupplyCare Enterprise SCE30B

Inventory management software that displays the level, volume, mass, temperature, pressure, density or other parameters of tanks. The parameters are recorded and transmitted by means of gateways like Fieldgate FXA42, Connect Sensor FXA30B or other gateway types.

This Web-based software is installed on a local server and can also be visualized and operated with mobile terminals such as a smartphone or tablet.



For details, see Technical Information TI01228S and Operating Instructions BA00055S

### SupplyCare Hosting SCH30

Inventory management software that displays the level, volume, mass, temperature, pressure, density or other parameters of tanks. The parameters are recorded and


transmitted by means of gateways like Fieldgate FXA42, Connect Sensor FXA30B or other gateway types.

SupplyCare Hosting is offered as a hosting service (Software as a Service, SaaS). In the Endress+Hauser portal, the user is provided with the data over the Internet.

 For details, see Technical Information TI01229S and Operating Instructions BA00050S

#### **Field Xpert SFX350**

Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the **non-Ex area**.

 For details, see Operating Instructions BA01202S

#### **Field Xpert SFX370**

Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the **non-Ex area** and the **Ex area**.

 For details, see Operating Instructions BA01202S

## 16.3 Service-specific accessories

#### **DeviceCare SFE100**

Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus field devices

 Technical Information TI01134S

#### **FieldCare SFE500**

FDT-based plant asset management tool

It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

 Technical Information TI00028S

## 16.4 System components

#### **Memograph M graphic data manager**

The Memograph M graphic data manager provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.

 Technical Information TI00133R and Operating Instructions BA00247R

#### **RN221N**

Active barrier with power supply for safe separation of 4 to 20 mA standard signal circuits. Offers bidirectional HART transmission.

 Technical Information TI00073R and Operating Instructions BA00202R

#### **RN221**






















Supply unit for powering two 2-wire measuring devices solely in the non-Ex area. Bidirectional communication is possible via the HART communication jacks.


























 Technical Information TI00081R and Brief Operating Instructions KA00110R

# 17 Operating menu


























## 17.1 Overview of the operating menu (SmartBlue)

Navigation  SmartBlue

<b>Setup</b>	→  122
Device tag	→  122
Operating mode	→  122
Distance unit	→  122
Tank type	→  123
Tube diameter	→  123
DC value	→  127
Medium group	→  123
Empty calibration	→  124
Full calibration	→  125
Level	→  125
Interface	→  128
Distance	→  126
Interface distance	→  129
Signal quality	→  127
Confirm distance	→  129
Present mapping	→  130
Mapping end point	→  131
Record map	→  131
<b>▶ Advanced setup</b>	→  133
Locking status	→  133

Access status tooling	→  133
Enter access code	→  134
<b>► Interface</b>	→  135
Process property	→  135
Interface property	→  135
DC value lower medium	→  136
Level unit	→  137
Blocking distance	→  137
Level correction	→  138
Manual thickness upper layer	→  138
Measured thickness upper layer	→  139
DC value	→  139
Calculated DC value	→  139
Use calculated DC value	→  140
<b>► Linearization</b>	→  143
Linearization type	→  145
Unit after linearization	→  146
Free text	→  147
Level linearized	→  148
Interface linearized	→  148
Maximum value	→  148
Diameter	→  149
Intermediate height	→  149
Table mode	→  150
Table number	→  151



Level	→  151
Level	→  151
Customer value	→  151
Activate table	→  152
<b>► Probe settings</b>	→  158
Probe grounded	→  158
Present probe length	→  158
Confirm probe length	→  159
<b>► Safety settings</b>	→  153
Output echo lost	→  153
Value echo lost	→  153
Ramp at echo lost	→  154
Blocking distance	→  154
<b>► Current output 1 to 2</b>	→  161
Assign current output	→  161
Current span	→  162
Fixed current	→  163
Damping output	→  163
Failure mode	→  163
Failure current	→  164
Output current 1 to 2	→  164
<b>► Switch output</b>	→  165
Switch output function	→  165
Assign status	→  166
Assign limit	→  166

	Assign diagnostic behavior	→ 166
	Switch-on value	→ 167
	Switch-on delay	→ 168
	Switch-off value	→ 168
	Switch-off delay	→ 169
	Failure mode	→ 169
	Switch status	→ 169
	Invert output signal	→ 169
<b>Diagnostics</b>		→ 183
	Actual diagnostics	→ 183
	Timestamp	→ 183
	Previous diagnostics	→ 183
	Timestamp	→ 184
	Operating time from restart	→ 184
	Operating time	→ 177
	<b>► Diagnostic list</b>	→ 185
	Diagnostics 1 to 5	→ 185
	Timestamp 1 to 5	→ 185
	<b>► Measured values</b>	→ 190
	Distance	→ 126
	Level linearized	→ 148
	Interface distance	→ 129
	Interface linearized	→ 148
	Thickness upper layer	→ 191
	Output current 1 to 2	→ 164

Measured current 1	→ 192
Terminal voltage 1	→ 192
<b>► Device information</b>	→ 187
Device tag	→ 187
Serial number	→ 187
Firmware version	→ 187
Device name	→ 187
Order code	→ 188
Extended order code 1 to 3	→ 188
Device revision	→ 188
Device ID	→ 188
Device type	→ 189
Manufacturer ID	→ 189
<b>► Simulation</b>	→ 197
Assign measurement variable	→ 198
Process variable value	→ 198
Current output 1 to 2 simulation	→ 198
Value current output 1 to 2	→ 199
Switch output simulation	→ 199
Switch status	→ 199
Device alarm simulation	→ 200

























## 17.2 Overview of the operating menu (display module)

Navigation




























Operating menu

Language	→ 171
<b>Setup</b>	→ 122
Device tag	→ 122
Operating mode	→ 122
Distance unit	→ 122
Tank type	→ 123
Tube diameter	→ 123
DC value	→ 127
Medium group	→ 123
Empty calibration	→ 124
Full calibration	→ 125
Level	→ 125
Interface	→ 128
Distance	→ 126
Interface distance	→ 129
Signal quality	→ 127
<b>Mapping</b>	→ 132
Confirm distance	→ 132
Mapping end point	→ 132
Record map	→ 132
Distance	→ 132
<b>Advanced setup</b>	→ 133
Locking status	→ 133

Access status display	→  134
Enter access code	→  134
<b>► Interface</b>	→  135
Process property	→  135
Interface property	→  135
DC value lower medium	→  136
Level unit	→  137
Blocking distance	→  137
Level correction	→  138
<b>► Automatic DC calculation</b>	→  141
Manual thickness upper layer	→  141
DC value	→  141
Use calculated DC value	→  141
<b>► Linearization</b>	→  143
Linearization type	→  145
Unit after linearization	→  146
Free text	→  147
Maximum value	→  148
Diameter	→  149
Intermediate height	→  149
Table mode	→  150
<b>► Edit table</b>	
Level	→  151
Customer value	→  151
Activate table	→  152

▶ Safety settings	→ 153
Output echo lost	→ 153
Value echo lost	→ 153
Ramp at echo lost	→ 154
Blocking distance	→ 154
▶ SIL/WHG confirmation	→ 156
▶ Deactivate SIL/WHG	→ 157
Reset write protection	→ 157
Code incorrect	→ 157
▶ Probe settings	→ 158
Probe grounded	→ 158
▶ Probe length correction	→ 160
Confirm probe length	→ 160
Present probe length	→ 160
▶ Current output 1 to 2	→ 161
Assign current output	→ 161
Current span	→ 162
Fixed current	→ 163
Damping output	→ 163
Failure mode	→ 163
Failure current	→ 164
Output current 1 to 2	→ 164
▶ Switch output	→ 165
Switch output function	→ 165
Assign status	→ 166

Assign limit	→  166
Assign diagnostic behavior	→  166
Switch-on value	→  167
Switch-on delay	→  168
Switch-off value	→  168
Switch-off delay	→  169
Failure mode	→  169
Switch status	→  169
Invert output signal	→  169
<b>► Display</b>	→  171
Language	→  171
Format display	→  171
Value 1 to 4 display	→  173
Decimal places 1 to 4	→  173
Display interval	→  174
Display damping	→  174
Header	→  174
Header text	→  175
Separator	→  175
Number format	→  175
Decimal places menu	→  175
Backlight	→  176
Contrast display	→  176
<b>► Configuration backup display</b>	→  177
Operating time	→  177

Last backup	→  177
Configuration management	→  177
Comparison result	→  178
<b>▶ Administration</b>	→  180
<b>▶ Define access code</b>	→  182
Define access code	→  182
Confirm access code	→  182
Device reset	→  180
<b>🔍 Diagnostics</b>	→  183
Actual diagnostics	→  183
Previous diagnostics	→  183
Operating time from restart	→  184
Operating time	→  177
<b>▶ Diagnostic list</b>	→  185
Diagnostics 1 to 5	→  185
<b>▶ Event logbook</b>	→  186
Filter options	→  186
<b>▶ Event list</b>	→  186
<b>▶ Device information</b>	→  187
Device tag	→  187
Serial number	→  187
Firmware version	→  187
Device name	→  187
Order code	→  188
Extended order code 1 to 3	→  188



















































Device revision	→ 188
Device ID	→ 188
Device type	→ 189
Manufacturer ID	→ 189
<b>► Measured values</b>	→ 190
Distance	→ 126
Level linearized	→ 148
Interface distance	→ 129
Interface linearized	→ 148
Thickness upper layer	→ 191
Output current 1 to 2	→ 164
Measured current 1	→ 192
Terminal voltage 1	→ 192
<b>► Data logging</b>	→ 193
Assign channel 1 to 4	→ 193
Logging interval	→ 194
Clear logging data	→ 194
<b>► Display channel 1 to 4</b>	→ 195
<b>► Simulation</b>	→ 197
Assign measurement variable	→ 198
Process variable value	→ 198
Current output 1 to 2 simulation	→ 198
Value current output 1 to 2	→ 199
Switch output simulation	→ 199

Switch status	→ 📄 199
Device alarm simulation	→ 📄 200
▶ Device check	→ 📄 201
Start device check	→ 📄 201
Result device check	→ 📄 201
Last check time	→ 📄 201
Level signal	→ 📄 202
Launch signal	→ 📄 202
Interface signal	→ 📄 202

























### 17.3 Overview of the operating menu (operating tool)

Navigation  Operating menu

























<b>Setup</b>	→  122
Device tag	→  122
Operating mode	→  122
Distance unit	→  122
Tank type	→  123
Tube diameter	→  123
Medium group	→  123
Empty calibration	→  124
Full calibration	→  125
Level	→  125
Distance	→  126
Signal quality	→  127
DC value	→  127
Interface	→  128
Interface distance	→  129
Confirm distance	→  129
Present mapping	→  130
Mapping end point	→  131
Record map	→  131
<b>▶ Advanced setup</b>	→  133
Locking status	→  133
Access status tooling	→  133
Enter access code	→  134

<b>► Interface</b>	→  135
Process property	→  135
Interface property	→  135
DC value lower medium	→  136
Level unit	→  137
Blocking distance	→  137
Level correction	→  138
Manual thickness upper layer	→  138
Measured thickness upper layer	→  139
DC value	→  139
Calculated DC value	→  139
Use calculated DC value	→  140
<b>► Linearization</b>	→  143
Linearization type	→  145
Unit after linearization	→  146
Free text	→  147
Level linearized	→  148
Interface linearized	→  148
Maximum value	→  148
Diameter	→  149
Intermediate height	→  149
Table mode	→  150
Table number	→  151
Level	→  151
Level	→  151

Customer value	→ 151
Activate table	→ 152
<b>► Safety settings</b>	→ 153
Output echo lost	→ 153
Value echo lost	→ 153
Ramp at echo lost	→ 154
Blocking distance	→ 154
<b>► SIL/WHG confirmation</b>	→ 156
<b>► Deactivate SIL/WHG</b>	→ 157
Reset write protection	→ 157
Code incorrect	→ 157
<b>► Probe settings</b>	→ 158
Probe grounded	→ 158
Present probe length	→ 158
Confirm probe length	→ 159
<b>► Current output 1 to 2</b>	→ 161
Assign current output	→ 161
Current span	→ 162
Fixed current	→ 163
Damping output	→ 163
Failure mode	→ 163
Failure current	→ 164
Output current 1 to 2	→ 164
<b>► Switch output</b>	→ 165
Switch output function	→ 165

Assign status	→  166
Assign limit	→  166
Assign diagnostic behavior	→  166
Switch-on value	→  167
Switch-on delay	→  168
Switch-off value	→  168
Switch-off delay	→  169
Failure mode	→  169
Switch status	→  169
Invert output signal	→  169
<b>► Display</b>	→  171
Language	→  171
Format display	→  171
Value 1 to 4 display	→  173
Decimal places 1 to 4	→  173
Display interval	→  174
Display damping	→  174
Header	→  174
Header text	→  175
Separator	→  175
Number format	→  175
Decimal places menu	→  175
Backlight	→  176
Contrast display	→  176




<ul style="list-style-type: none"> <li>▶ Configuration backup display</li> <li> <ul style="list-style-type: none"> <li>Operating time</li> <li>Last backup</li> <li>Configuration management</li> <li>Backup state</li> <li>Comparison result</li> </ul> </li> <li>▶ Administration</li> <li> <ul style="list-style-type: none"> <li>Define access code</li> <li>Device reset</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>→ 177</li> <li>→ 177</li> <li>→ 177</li> <li>→ 177</li> <li>→ 178</li> <li>→ 178</li> <li>→ 180</li> <li>→ 182</li> <li>→ 180</li> </ul>
<ul style="list-style-type: none"> <li>🔍 Diagnostics</li> <li> <ul style="list-style-type: none"> <li>Actual diagnostics</li> <li>Timestamp</li> <li>Previous diagnostics</li> <li>Timestamp</li> <li>Operating time from restart</li> <li>Operating time</li> <li>▶ Diagnostic list</li> <li> <ul style="list-style-type: none"> <li>Diagnostics 1 to 5</li> <li>Timestamp 1 to 5</li> </ul> </li> <li>▶ Device information</li> <li> <ul style="list-style-type: none"> <li>Device tag</li> <li>Serial number</li> <li>Firmware version</li> <li>Device name</li> <li>Order code</li> </ul> </li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>→ 183</li> <li>→ 183</li> <li>→ 183</li> <li>→ 184</li> <li>→ 184</li> <li>→ 177</li> <li>→ 185</li> <li>→ 185</li> <li>→ 185</li> <li>→ 187</li> <li>→ 187</li> <li>→ 187</li> <li>→ 187</li> <li>→ 187</li> <li>→ 188</li> </ul>

Extended order code 1 to 3	→  188
Device revision	→  188
Device ID	→  188
Device type	→  189
Manufacturer ID	→  189
<b>► Measured values</b>	→  190
Distance	→  126
Level linearized	→  148
Interface distance	→  129
Interface linearized	→  148
Thickness upper layer	→  191
Output current 1 to 2	→  164
Measured current 1	→  192
Terminal voltage 1	→  192
<b>► Data logging</b>	→  193
Assign channel 1 to 4	→  193
Logging interval	→  194
Clear logging data	→  194
<b>► Simulation</b>	→  197
Assign measurement variable	→  198
Process variable value	→  198
Current output 1 to 2 simulation	→  198
Value current output 1 to 2	→  199
Switch output simulation	→  199



Switch status	→ 199
Device alarm simulation	→ 200
▶ Device check	→ 201
Start device check	→ 201
Result device check	→ 201
Last check time	→ 201
Level signal	→ 202
Launch signal	→ 202
Interface signal	→ 202
▶ Heartbeat	→ 203


## 17.4 "Setup" menu

- i
  -  : Indicates navigation to the parameter via the display and operating module
  -  : Indicates navigation to the parameter via operating tools (e.g. FieldCare)
  -  : Indicates parameters that can be locked via the access code.

Navigation  Setup


---

### Device tag

<b>Navigation</b>	 Setup → Device tag
<b>Description</b>	Enter a unique name for the measuring point to identify the device quickly within the plant.
<b>Factory setting</b>	FMP5x


---

### Operating mode

<b>Navigation</b>	 Setup → Operating mode
<b>Prerequisite</b>	The device has the "interface measurement" application package <sup>3)</sup> . FMP55 always contains this package.
<b>Description</b>	Select operating mode.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Level</li> <li>▪ Interface with capacitance *</li> <li>▪ Interface *</li> </ul>
<b>Factory setting</b>	FMP55: <b>Interface with capacitance</b>
<b>Additional information</b>	The <b>Interface with capacitance</b> option is only available for FMP55.

---

### Distance unit

<b>Navigation</b>	 Setup → Distance unit				
<b>Description</b>	Used for the basic calibration (Empty / Full).				
<b>Selection</b>	<table border="0" style="width: 100%;"> <tr> <td style="width: 50%; vertical-align: top;"><i>SI units</i></td> <td style="width: 50%; vertical-align: top;"><i>US units</i></td> </tr> <tr> <td style="vertical-align: top;"> <ul style="list-style-type: none"> <li>▪ mm</li> <li>▪ m</li> </ul> </td> <td style="vertical-align: top;"> <ul style="list-style-type: none"> <li>▪ ft</li> <li>▪ in</li> </ul> </td> </tr> </table>	<i>SI units</i>	<i>US units</i>	<ul style="list-style-type: none"> <li>▪ mm</li> <li>▪ m</li> </ul>	<ul style="list-style-type: none"> <li>▪ ft</li> <li>▪ in</li> </ul>
<i>SI units</i>	<i>US units</i>				
<ul style="list-style-type: none"> <li>▪ mm</li> <li>▪ m</li> </ul>	<ul style="list-style-type: none"> <li>▪ ft</li> <li>▪ in</li> </ul>				

3) Product structure: Feature 540 "Application Package", Option EB "Interface measurement"  
 \* Visibility depends on order options or device settings

**Factory setting** m

---

## Tank type

---

**Navigation**   Setup → Tank type

**Prerequisite** **Medium type = Liquid**

**Description** Select tank type.

**Selection**

- Metallic
- Bypass / pipe
- Non metallic
- Mounted outside
- Coaxial

**Factory setting** Depending on the probe

**Additional information**

- Depending on the probe some of the options mentioned above may not be available or there may be additional options.
- For coax probes and probes with metallic center washer **Tank type** parameter corresponds to the type of probe and cannot be changed.


---

## Tube diameter

---

**Navigation**   Setup → Tube diameter

**Prerequisite**

- **Tank type** (→  123) = **Bypass / pipe**
- The probe is coated.

**Description** Specify diameter of bypass or stilling well.

**User entry** 0 to 9.999 m

**Factory setting** 0.0384 m


---

## Medium group

---

**Navigation**   Setup → Medium group

**Prerequisite**

- For FMP51/FMP52/FMP54/FMP55: **Operating mode** (→  122) = **Level**
- **Medium type** = **Liquid**

**Description** Select medium group.

- Selection**
- Others
  - Water based (DC >= 4)

**Factory setting** Others

**Additional information** This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter.

The **Medium group** parameter presets the **Medium property** parameter as follows:

Medium group	Medium property
Others	Unknown
Water based (DC >= 4)	DC 4 ... 7

**i** The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.

**i** The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

**Empty calibration**




**Navigation** Setup → Empty calibr.

**Description** Distance between process connection and minimum level (0%).

**User entry** Depending on the probe

**Factory setting** Depending on the probe

**Additional information**

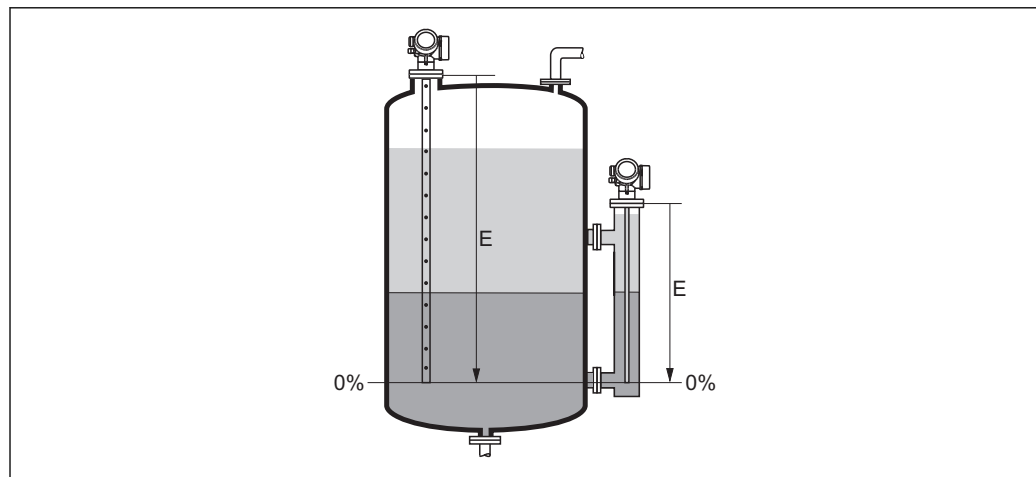

A0013177

**i** 41 Empty calibration (E) for interface measurements

**i** In the case of interface measurements the **Empty calibration** parameter is valid for both, the total and the interface level.

---

**Full calibration**
**Navigation**

Setup → Full calibr.

**Description**


Distance between minimum level (0%) and maximum level (100%).

**User entry**

Depending on the probe

**Factory setting**

Depending on the probe

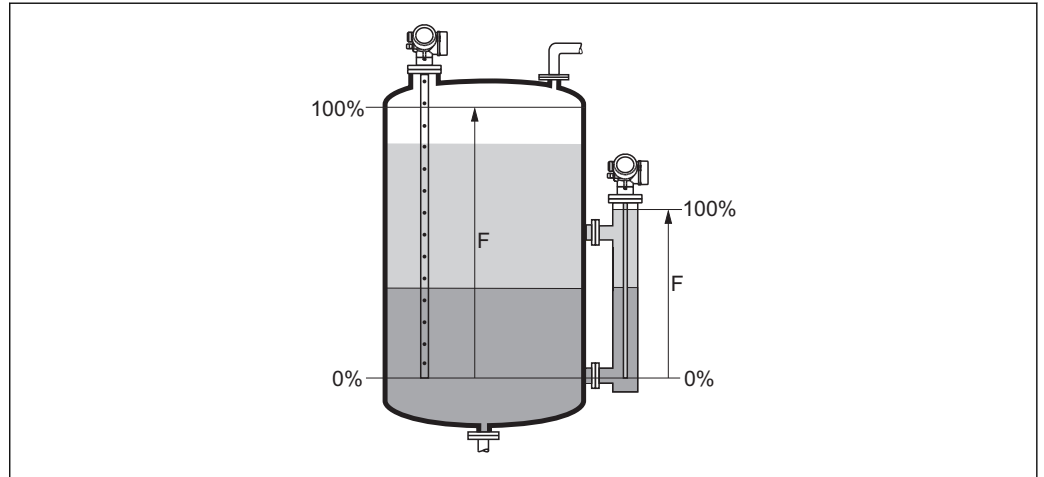**Additional information**

A0013188

42 Full calibration (F) for interface measurements



In the case of interface measurements the **Full calibration** parameter is valid for both, the total and the interface level.


---

**Level**
**Navigation**

Setup → Level



**Description**Displays measured level  $L_L$  (before linearization).

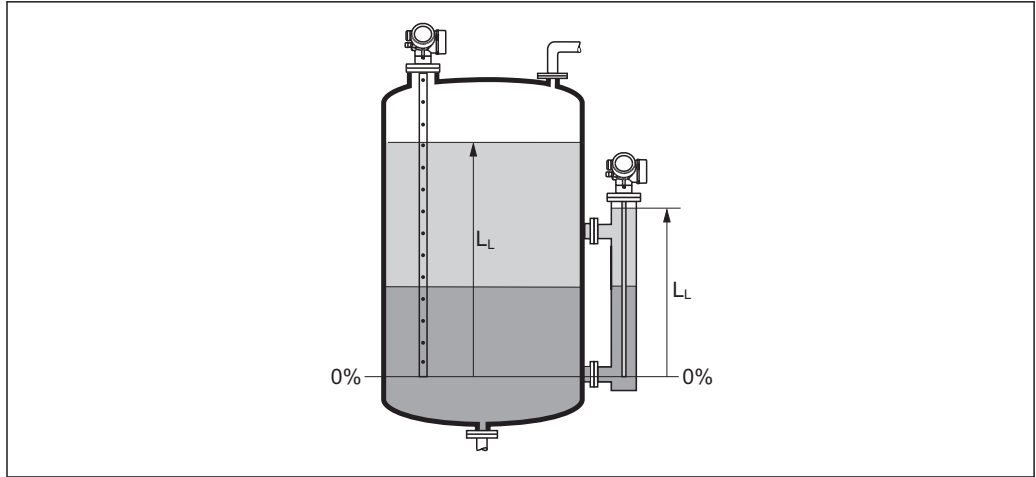**Additional information**



A0013195

43 Level in case of interface measurements



-  The unit is defined in the **Level unit** parameter (→ 137).
-  In case of interface measurements, this parameter always refers to the total level.

---

**Distance**

---


**Navigation**

  Setup → Distance

**Description**

Displays the measured distance  $D_L$  between the reference point (lower edge of the flange or threaded connection) and the level.

**Additional information**

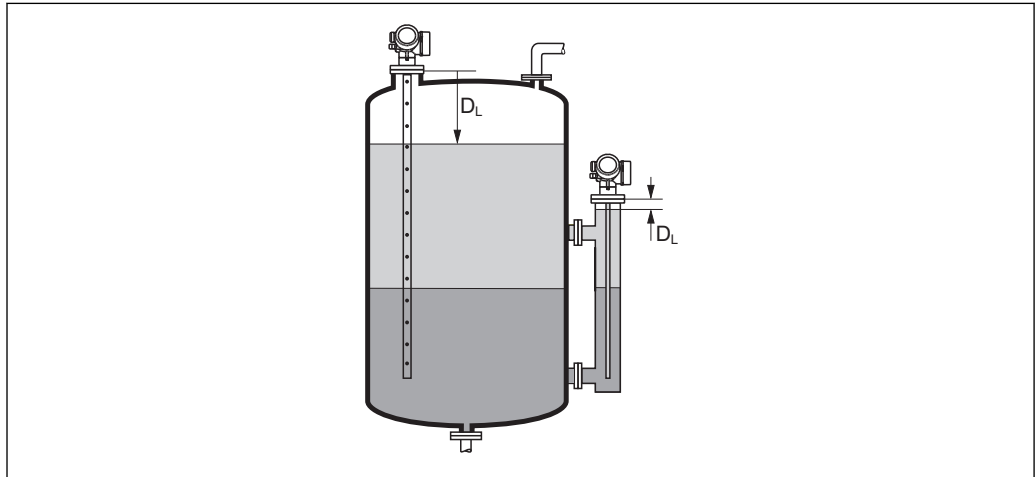

A0013199

44 Distance for interface measurements

-  The unit is defined in the **Distance unit** parameter (→ 122).

---

**Signal quality**


---


**Navigation**   Setup → Signal quality



**Description** Displays the signal quality of the evaluated echo.

**Additional information****Meaning of the display options**

- **Strong**  
The evaluated echo exceeds the threshold by at least 10 mV.
- **Medium**  
The evaluated echo exceeds the threshold by at least 5 mV.
- **Weak**  
The evaluated echo exceeds the threshold by less than 5 mV.
- **No signal**  
The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level/interface echo <sup>4)</sup> or the end-of-probe echo. To differentiate between these two, the quality of the end-of-probe echo is always displayed in brackets.

 In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→  153) = **Alarm**.
- S941, if another option has been selected in **Output echo lost** (→  153).

---

**DC value**


---



**Navigation**   Setup → DC value

**Prerequisite** The device has the "interface measurement" application package <sup>5)</sup>.

**Description** Specify relative dielectric constant  $\epsilon_r$  of the upper medium (DC<sub>1</sub>).


**User entry** 1.0 to 100

**Factory setting** 2.0

4) Of these two echos the one with the lower quality is indicated.


5) Product structure: Feature 540 "Application Package", Option EB "Interface measurement"

Additional information

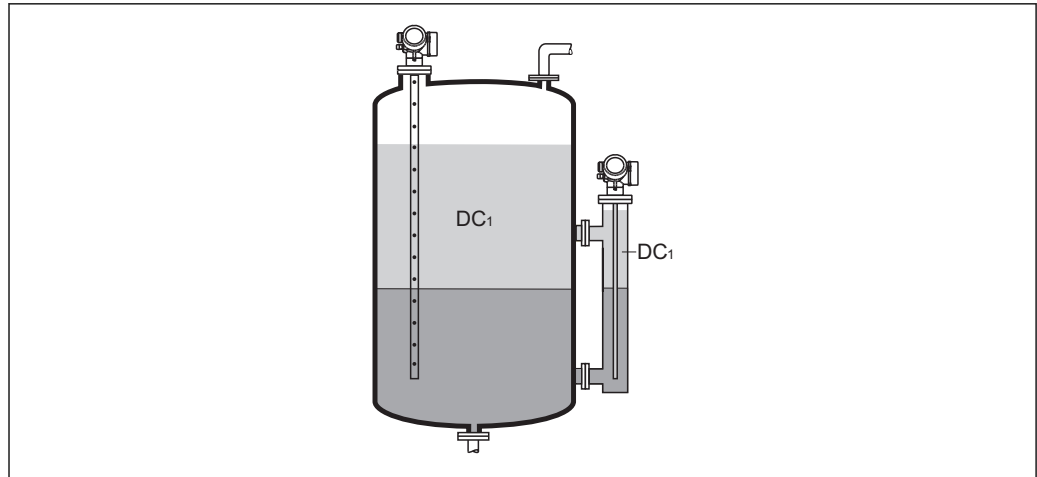


A0013181

DC1 Relative dielectric constant of the upper medium.

-  For dielectric constants (DC values) of many media commonly used in various industries refer to:
  - the Endress+Hauser DC manual (CP01076F)
  - the Endress+Hauser "DC Values App" (available for Android and iOS)

Interface

Navigation

 Setup → Interface


Prerequisite

Operating mode (→  122) = **Interface** or **Interface with capacitance**

Description

Displays the measured interface level  $L_I$  (before linearization).

Additional information

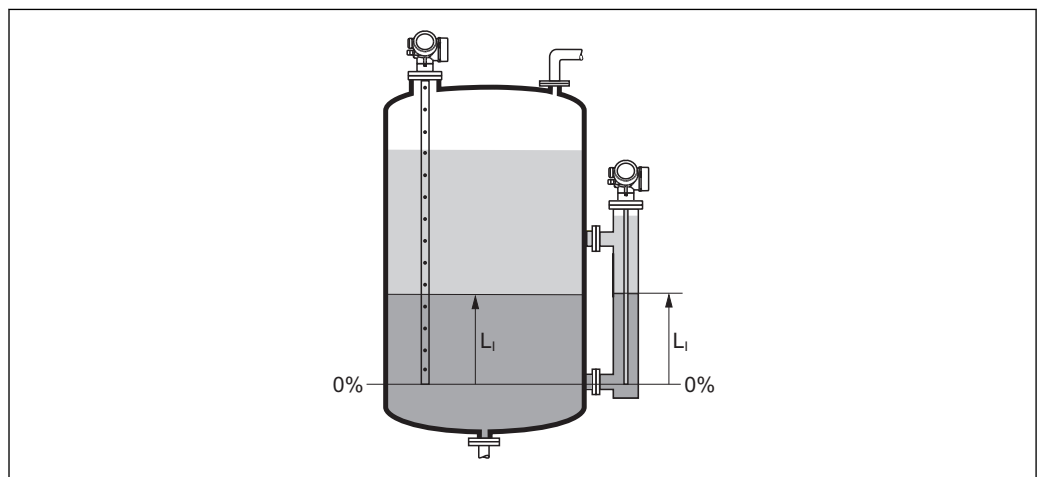

A0013197


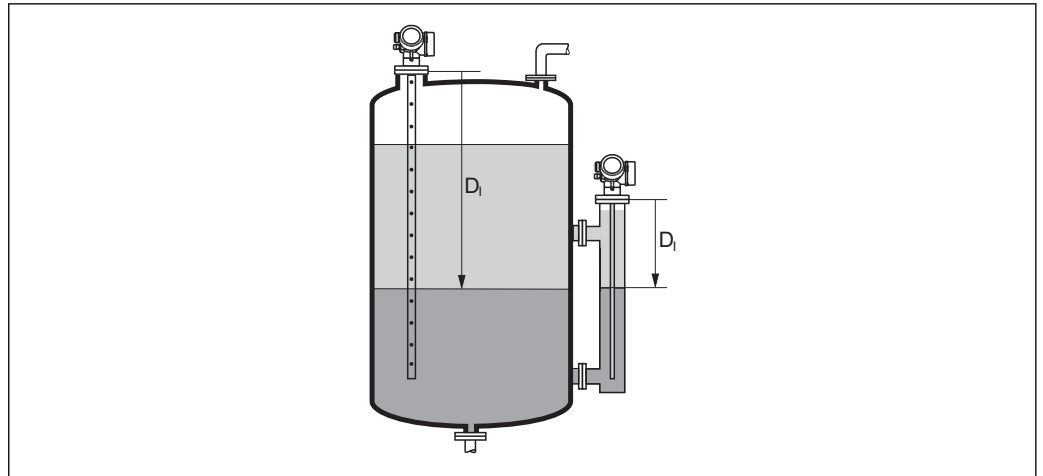
-  The unit is defined in the **Level unit** parameter (→  137).



---

**Interface distance**


---

**Navigation**
 Setup → Interface dist.
**Prerequisite**
**Operating mode** (→  122) = **Interface** or **Interface with capacitance**
**Description**
 Displays the measured distance  $D_1$  between the reference point (lower edge of flange or threaded connection) and the interface.
**Additional information**


A0013202

 The unit is defined in the **Distance unit** parameter (→  122).

---

**Confirm distance**


---

**Navigation**
 Setup → Confirm distance
**Description**

Specify, whether the measured distance matches the real distance.

Depending on the selection the device automatically sets the range of mapping.

**Selection**

- Manual map
- Distance ok
- Distance unknown
- Distance too small\*
- Distance too big\*
- Tank empty
- Delete map

**Factory setting**


Distance unknown

---

 \* Visibility depends on order options or device settings

**Additional information****Meaning of the options**

- **Manual map**

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→  131). In this case it is not necessary to confirm the distance.

- **Distance ok**

To be selected if the measured distance matches the actual distance. The device performs a mapping.

- **Distance unknown**

To be selected if the actual distance is unknown. A mapping can not be performed in this case.

- **Distance too small**

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

- **Distance too big<sup>6)</sup>**

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.


- **Tank empty**


To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range.



To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range minus **Map gap to LN**.

- **Factory map**


To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.

 When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.

 For interface measurements the distance always refers to the total level (not the interface level).

 For FMP55 with rope probes and **Operating mode** (→  122) = **Interface with capacitance** the mapping must be recorded with the tank being empty, and the **Tank empty** option must be selected. Otherwise the device can not register the correct empty capacitance.

For FMP55 with coax probes a mapping must be recorded at least in the upper part of the probe, as tightening the flange has an influence on the envelope curve. However, even with coax probes it is recommended to record the mapping with the tank being completely empty (and selecting the **Tank empty** option).


 If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

---

**Present mapping**

---

**Navigation**

 Setup → Present mapping

**Description**

Indicates up to which distance a mapping has already been recorded.

6) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"

---

**Mapping end point**




<b>Navigation</b>	Setup → Map. end point
<b>Prerequisite</b>	<b>Confirm distance</b> (→  129) = <b>Manual map</b> or <b>Distance too small</b>
<b>Description</b>	Specify new end of the mapping.
<b>User entry</b>	0 to 200 000.0 m
<b>Factory setting</b>	0.1 m
<b>Additional information</b>	<p>This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.</p> <p> For reference purposes the <b>Present mapping</b> parameter (→  130) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.</p>


---

**Record map**


<b>Navigation</b>	Setup → Record map
<b>Prerequisite</b>	<b>Confirm distance</b> (→  129) = <b>Manual map</b> or <b>Distance too small</b>
<b>Description</b>	Start recording of the map.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Record map</li> <li>▪ Delete map</li> </ul>
<b>Factory setting</b>	No
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>▪ <b>No</b> The map is not recorded.</li> <li>▪ <b>Record map</b> The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing <input checked="" type="checkbox"/>.</li> <li>▪ <b>Delete map</b> The mapping (if one exists) is deleted and the device displays the recalculated measured distance and the mapping range. When operating via the local display, these values must be confirmed by pressing <input checked="" type="checkbox"/>.</li> </ul>

### 17.4.1 "Mapping" wizard


 The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  122).

 In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

*Navigation*       Setup → Mapping

---


#### Confirm distance

**Navigation**       Setup → Mapping → Confirm distance

**Description**      →  129

---

#### Mapping end point

**Navigation**       Setup → Mapping → Map. end point

**Description**      →  131

---

#### Record map


**Navigation**       Setup → Mapping → Record map

**Description**      →  131


---

#### Distance

**Navigation**       Setup → Mapping → Distance

**Description**      →  126





## 17.4.2 "Advanced setup" submenu

Navigation  Setup → Advanced setup

---

### Locking status






---

<b>Navigation</b>	  Setup → Advanced setup → Locking status
<b>Description</b>	Indicates the write protection with the highest priority that is currently active.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Hardware locked</li> <li>▪ SIL locked</li> <li>▪ CT active - defined parameters</li> <li>▪ WHG locked</li> <li>▪ Temporarily locked</li> </ul>
<b>Additional information</b>	<p><b>Meaning and priorities of the types of write protection</b></p> <ul style="list-style-type: none"> <li>▪ <b>Hardware locked (priority 1)</b> The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters.</li> <li>▪ <b>SIL locked (priority 2)</b> The SIL mode is activated. Writing access to the relevant parameters is denied.</li> <li>▪ <b>WHG locked (priority 3)</b> The WHG mode is activated. Writing access to the relevant parameters is denied.</li> <li>▪ <b>Temporarily locked (priority 4)</b> Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.</li> </ul> <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p>

---

### Access status tooling






---

<b>Navigation</b>	 Setup → Advanced setup → Access stat.tool
<b>Description</b>	Shows the access authorization to the parameters via the operating tool.
<b>Additional information</b>	<p> The access authorization can be changed via the <b>Enter access code</b> parameter (→  134).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  133).</p>

---

**Access status display**







---

<b>Navigation</b>	 Setup → Advanced setup → Access stat.disp
<b>Prerequisite</b>	The device has a local display.
<b>Description</b>	Indicates access authorization to parameters via local display.
<b>Additional information</b>	<p> The access authorization can be changed via the <b>Enter access code</b> parameter (→  134).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  133).</p>

---


**Enter access code**



---

<b>Navigation</b>	 Setup → Advanced setup → Ent. access code
<b>Description</b>	Enter access code to disable write protection of parameters.
<b>User entry</b>	0 to 9999
<b>Additional information</b>	<ul style="list-style-type: none"> <li>▪ For local operation, the customer-specific access code, which has been defined in the <b>Define access code</b> parameter (→  180), has to be entered.</li> <li>▪ If an incorrect access code is entered, the user retains his current access authorization.</li> <li>▪ The write protection affects all parameters marked with the -symbol in this document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected.</li> <li>▪ If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s.</li> </ul> <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p>

**"Interface" submenu**

Navigation  Setup → Advanced setup → Interface

**Process property** 

**Navigation**  Setup → Advanced setup → Interface → Process property


**Description** Specify typical rate of change for the interface position.


- Selection**
- Fast > 1 m (40 in)/min
  - Standard < 1 m (40in) /min
  - Medium < 10 cm (4in) /min
  - Slow < 1 cm (0.4in) /min
  - No filter / test


**Factory setting** Standard < 1 m (40in) /min

**Additional information** The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Process property	Step response time / s
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	15
Medium < 10 cm (4in) /min	40
Slow < 1 cm (0.4in) /min	74
No filter / test	2.2

**Interface property** 

**Navigation**  Setup → Advanced setup → Interface → Interface prop.

**Prerequisite** **Operating mode (→  122) = Interface with capacitance**


**Description** Select interface property.  
The interface property determines how the Guided Radar and the Capacitance Measurement interact.

- Selection**
- Special: automatic DC
  - Build up
  - Standard
  - Emulsion layer




**Factory setting** Standard

<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>▪ <b>Special: automatic DC</b> <ul style="list-style-type: none"> <li>▪ Condition: The specific capacitance (pF/m) is known.<sup>7)</sup></li> <li>▪ Signal evaluation: As long as a clear interface is detected, both the total and the interface level are determined via the Guided Radar. The dielectric constant of the upper medium is continuously adjusted. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.</li> </ul> </li> <li>▪ <b>Build up</b> <ul style="list-style-type: none"> <li>▪ Condition: The dielectric constant of the upper medium and the specific capacitance (pF/m) are known.<sup>7)</sup></li> <li>▪ Signal evaluation: As long as a clear interface is detected, the interface level is determined via the Guided Radar as well as via the Capacitance Measurement. If these two values start to diverge from each other due to build-up formation, an error message is generated. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.</li> </ul> </li> <li>▪ <b>Standard</b> <ul style="list-style-type: none"> <li>▪ Condition: The dielectric constant of the upper medium is known.</li> <li>▪ Signal evaluation: As long as a clear interface is detected, the specific capacitance (pF/m) is continuously adjusted. Therefore build-up has only little influence on the measurement. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.</li> </ul> </li> <li>▪ <b>Oil/Water condensate</b> <ul style="list-style-type: none"> <li>▪ Condition: The dielectric constant of the upper medium and the specific capacitance (pF/m) are known.<sup>7)</sup></li> <li>▪ Signal evaluation: The total level is always determined via the Guided Radar. The interface level is always determined via the Capacitance Measurement.</li> </ul> </li> </ul>
-------------------------------	--

---



<b>DC value lower medium</b>	
------------------------------	---

---

<b>Navigation</b>	  Setup → Advanced setup → Interface → DC lower medium
<b>Prerequisite</b>	<b>Operating mode (→  122) = Interface or Interface with capacitance</b>
<b>Description</b>	Specify the relative dielectric constant $\epsilon_r$ of the lower medium.
<b>User entry</b>	1 to 100
<b>Factory setting</b>	80.0






7) The specific capacitance of the media depends on the DC value and the geometry of the probe, which may differ noticeably. For rod probes < 2 m, the probe geometry is measured after production and the resulting specific capacitance for conductive media is preset on delivery.



- Additional information**
-  For dielectric constants (DC values) of many media commonly used in various industries refer to:
    - the Endress+Hauser DC manual (CP01076F)
    - the Endress+Hauser "DC Values App" (available for Android and iOS)
  -  The factory setting,  $\epsilon_r = 80$ , is valid for water at 20 °C (68 °F).



**Level unit**




- Navigation**   Setup → Advanced setup → Interface → Level unit
- Description** Select level unit.
- Selection**
- | <i>SI units</i> | <i>US units</i> |
|-----------------|-----------------|
| ▪ %             | ▪ ft            |
| ▪ m             | ▪ in            |
| ▪ mm            |                 |
- Factory setting** %
- Additional information** The level unit may differ from the distance unit defined in the **Distance unit** parameter (→  122):
- The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty calibration** (→  124) and **Full calibration** (→  125)).
  - The unit defined in the **Level unit** parameter is used to display the (nonlinearized) level and interface position.

**Blocking distance**



- Navigation**   Setup → Advanced setup → Interface → Blocking dist.
- Description** Specify upper blocking distance UB.
- User entry** 0 to 200 m
- Factory setting**
- For coax probes: 100 mm (3.9 in)
  - For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
  - For rod and rope probes above 8 m (26 ft): 0.025 \* length of probe
- Additional information** Echoes from within the blocking distance are not taken into account in the signal evaluation. The upper blocking distance is used
- to suppress interference echoes at the top end of the probe.
  - to suppress the echo of the total level in the case of flooded bypasses.

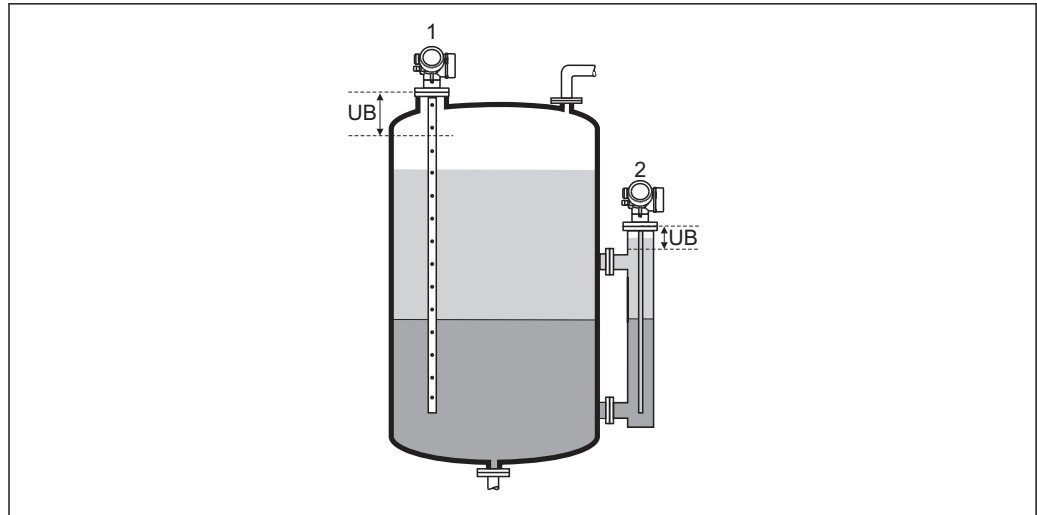

A0013220

- 1 Suppression of interference echoes at the top end of the probe.
- 2 Suppression of the level signal in case of a flooded bypass.
- UB Upper blocking distance

**Level correction**




<b>Navigation</b>	☰☰ Setup → Advanced setup → Interface → Level correction
<b>Description</b>	Specify level correction (if required).
<b>User entry</b>	-200 000.0 to 200 000.0 %
<b>Factory setting</b>	0.0 %
<b>Additional information</b>	The value specified in this parameter is added to the measured total and interface levels (before linearization).

**Manual thickness upper layer**



<b>Navigation</b>	☰ Setup → Advanced setup → Interface → Man.thick.up.lay
<b>Description</b>	Specify the manually determined interface thickness UP (i.e. the thickness of the upper medium).
<b>User entry</b>	0 to 200 m
<b>Factory setting</b>	0 m

**Additional information**

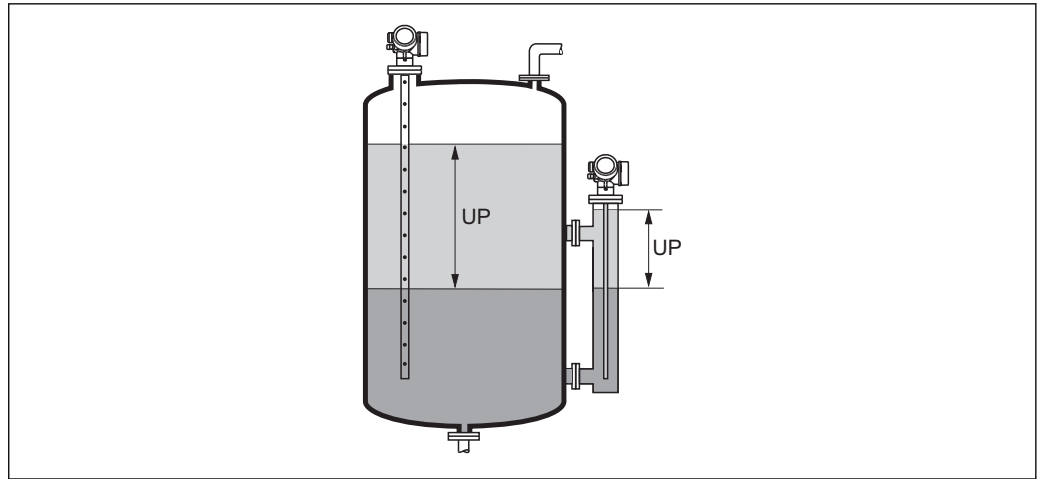

A0013313

UP Interface thickness (= thickness of upper medium)




On the local display, the measured interface thickness is indicated together with the manual interface thickness. By comparing these two values the device can automatically adjust the dielectric constant of the upper medium.

---

**Measured thickness upper layer**

---

**Navigation**

 Setup → Advanced setup → Interface → Meas.thick.u.lay

**Description**

Displays the measured interface thickness. (Thickness UP of the upper medium).

---

**DC value**

---



**Navigation**

 Setup → Advanced setup → Interface → DC value

**Description**

Displays relative dielectric constant  $\epsilon_r$  of the upper medium (DC<sub>1</sub>) before correction.

---

**Calculated DC value**

---

**Navigation**

 Setup → Advanced setup → Interface → Calc. DC value

**Description**

Displays calculated (i.e. corrected) relative dielectric constant  $\epsilon_r$  (DC1) of the upper medium.

---

**Use calculated DC value**

---

**Navigation**

Setup → Advanced setup → Interface → Use calc. DC

**Description**

Specify whether the calculated dielectric constant is to be used.

**Selection**

- Save and exit
- Cancel and exit

**Factory setting**

Cancel and exit




**Additional information****Meaning of the options**

- Save and exit  
The calculated constant is assumed to be the correct one.
- Cancel and exit  
The calculated dielectric constant is rejected; the previous dielectric constant remains active.




On the local display, the **Calculated DC value** parameter (→ 139) is displayed together with this parameter.


*"Automatic DC calculation" wizard*

-  The **Automatic DC calculation** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the automatic DC calculation are located directly in the **Interface** submenu (→  135)
-  In the **Automatic DC calculation** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

*Navigation*            Setup → Advanced setup → Interface → Autom. DC calc.


---

**Manual thickness upper layer** 

**Navigation**            Setup → Advanced setup → Interface → Autom. DC calc. → Man.thick.up.lay

**Description**      →  138


---

**DC value** 

**Navigation**            Setup → Advanced setup → Interface → Autom. DC calc. → DC value

**Description**      →  139


---

**Use calculated DC value** 

**Navigation**            Setup → Advanced setup → Interface → Autom. DC calc. → Use calc. DC

**Description**      →  140

"Linearization" submenu

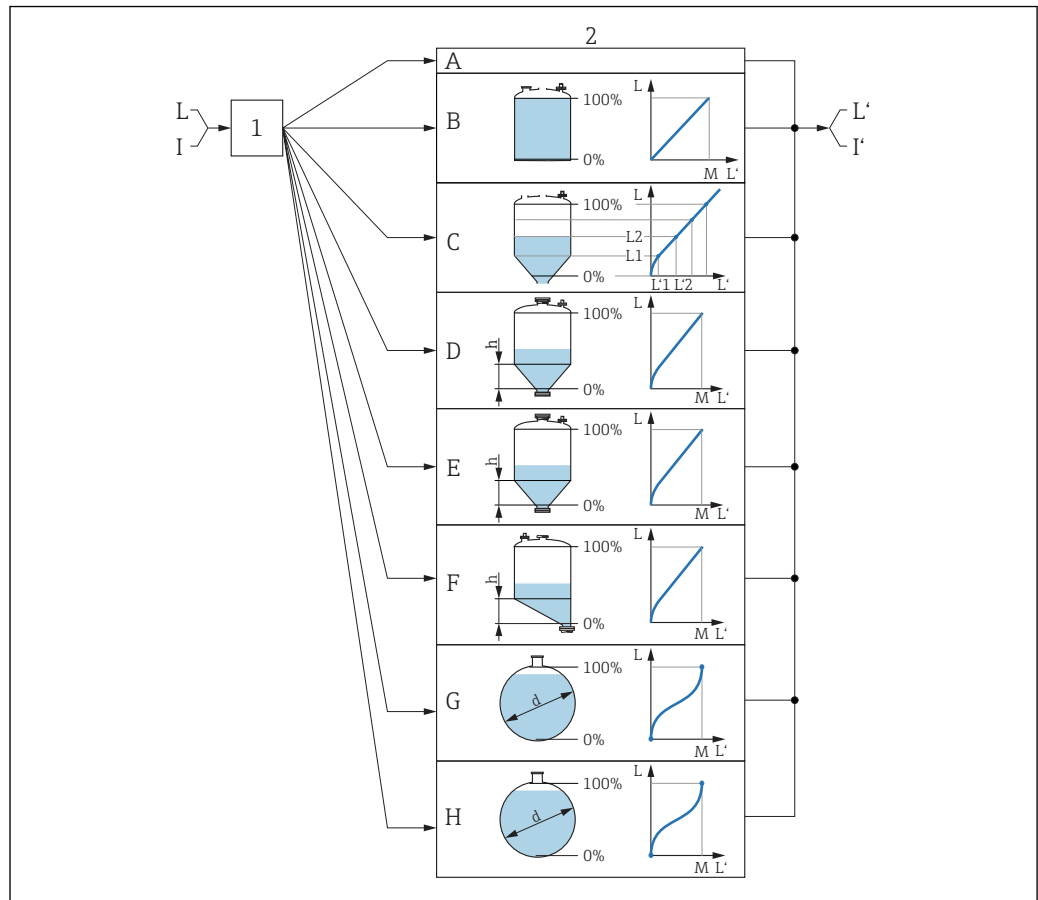












A0016084

45 Linearization: Conversion of the level and, if applicable, interface into a volume or a weight; the conversion depends on the vessel shape


- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 145) = None
- B Linearization type (→ 145) = Linear
- C Linearization type (→ 145) = Table
- D Linearization type (→ 145) = Pyramid bottom
- E Linearization type (→ 145) = Conical bottom
- F Linearization type (→ 145) = Angled bottom
- G Linearization type (→ 145) = Horizontal cylinder
- H Linearization type (→ 145) = Sphere
- I For "Operating mode (→ 122)" = "Interface" or "Interface with capacitance": Interface before linearization (measured in level unit)
- I' For "Operating mode (→ 122)" = "Interface" or "Interface with capacitance": Interface after linearization (corresponds to volume or weight)
- L Level before linearization (measured in level unit)
- L' Level linearized (→ 148) (corresponds to volume or weight)
- M Maximum value (→ 148)
- d Diameter (→ 149)
- h Intermediate height (→ 149)















*Structure of the submenu on the local display*

Navigation  Setup → Advanced setup → Linearization

<b>► Linearization</b>	
Linearization type	→  145
Unit after linearization	→  146
Free text	→  147
Maximum value	→  148
Diameter	→  149
Intermediate height	→  149
Table mode	→  150
<b>► Edit table</b>	
Level	→  151
Customer value	→  151
Activate table	→  152


Structure of the submenu in the operating tool (e.g. FieldCare)


Navigation  Setup → Advanced setup → Linearization

<b>▶ Linearization</b>	
Linearization type	→  145
Unit after linearization	→  146
Free text	→  147
Level linearized	→  148
Interface linearized	→  148
Maximum value	→  148
Diameter	→  149
Intermediate height	→  149
Table mode	→  150
Table number	→  151
Level	→  151
Level	→  151
Customer value	→  151
Activate table	→  152



*Description of the parameters*

Navigation  Setup → Advanced setup → Linearization

**Linearization type** 


**Navigation**  Setup → Advanced setup → Linearization → Lineariz. type


**Description** Select linearization type.

- Selection**
- None
  - Linear
  - Table
  - Pyramid bottom
  - Conical bottom
  - Angled bottom
  - Horizontal cylinder
  - Sphere

**Factory setting** None

**Additional information**

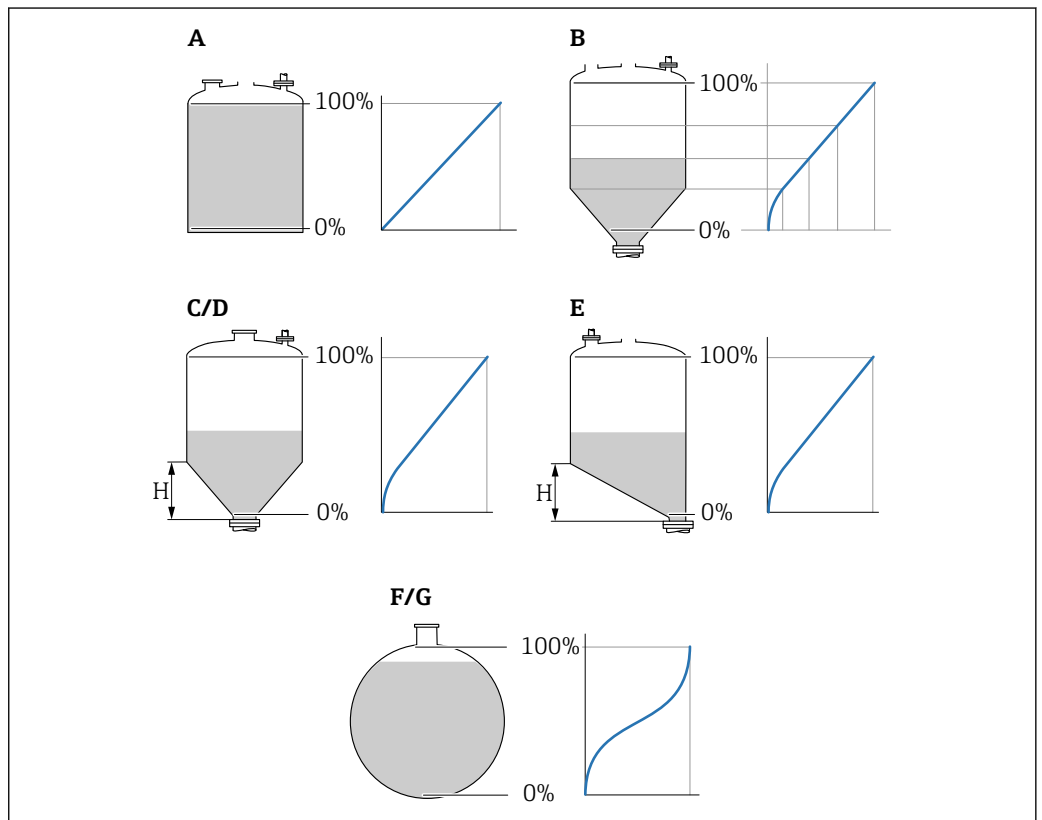

 46 Linearization types

- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder


**Meaning of the options**


- **None**

The level is output in the level unit without being converted (linearized) beforehand.

- **Linear**


The output value (volume/weight) is proportional to the level L. This applies, for example, to vertical cylindrical tanks and silos. The following parameters must also be specified:

- **Unit after linearization** (→  146)

- **Maximum value** (→  148): Maximum volume or weight


- **Table**


The relationship between the measured level L and the output value (volume/weight) is defined by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight" respectively. The following parameters must also be defined:

- **Unit after linearization** (→  146)

- **Table mode** (→  150)

- For each table point: **Level** (→  151)


- For each table point: **Customer value** (→  151)


- **Activate table** (→  152)


- **Pyramid bottom**

The output value corresponds to the volume or weight in a silo with a pyramid bottom.

The following parameters must also be defined:

- **Unit after linearization** (→  146)


- **Maximum value** (→  148): Maximum volume or weight


- **Intermediate height** (→  149): The height of the pyramid


- **Conical bottom**

The output value corresponds to the volume or weight in a tank with a conical bottom.

The following parameters must also be defined:

- **Unit after linearization** (→  146)


- **Maximum value** (→  148): Maximum volume or weight


- **Intermediate height** (→  149): The height of the conical part


- **Angled bottom**

The output value corresponds to the volume or weight in a silo with an angled bottom.

The following parameters must also be defined:


- **Unit after linearization** (→  146)


- **Maximum value** (→  148): Maximum volume or weight


- **Intermediate height** (→  149): The height of the angled bottom

- **Horizontal cylinder**

The output value corresponds to the volume or weight in a horizontal cylinder. The following parameters must also be defined:


- **Unit after linearization** (→  146)


- **Maximum value** (→  148): Maximum volume or weight


- **Diameter** (→  149)

- **Sphere**

The output value corresponds to the volume or weight in a spherical tank. The following parameters must also be defined:



- **Unit after linearization** (→  146)

- **Maximum value** (→  148): Maximum volume or weight


- **Diameter** (→  149)


---

**Unit after linearization**
**Navigation**

  Setup → Advanced setup → Linearization → Unit lineariz.

**Prerequisite**

**Linearization type** (→  145) ≠ None




<b>Description</b>	Select the unit for the linearized value.
<b>Selection</b>	<p>Selection/input (uint16)</p> <ul style="list-style-type: none"> <li>■ 1095 = [short Ton]</li> <li>■ 1094 = [lb]</li> <li>■ 1088 = [kg]</li> <li>■ 1092 = [Ton]</li> <li>■ 1048 = [US Gal.]</li> <li>■ 1049 = [Imp. Gal.]</li> <li>■ 1043 = [ft<sup>3</sup>]</li> <li>■ 1571 = [cm<sup>3</sup>]</li> <li>■ 1035 = [dm<sup>3</sup>]</li> <li>■ 1034 = [m<sup>3</sup>]</li> <li>■ 1038 = [l]</li> <li>■ 1041 = [hl]</li> <li>■ 1342 = [%]</li> <li>■ 1010 = [m]</li> <li>■ 1012 = [mm]</li> <li>■ 1018 = [ft]</li> <li>■ 1019 = [inch]</li> <li>■ 1351 = [l/s]</li> <li>■ 1352 = [l/min]</li> <li>■ 1353 = [l/h]</li> <li>■ 1347 = [m<sup>3</sup>/s]</li> <li>■ 1348 = [m<sup>3</sup>/min]</li> <li>■ 1349 = [m<sup>3</sup>/h]</li> <li>■ 1356 = [ft<sup>3</sup>/s]</li> <li>■ 1357 = [ft<sup>3</sup>/min]</li> <li>■ 1358 = [ft<sup>3</sup>/h]</li> <li>■ 1362 = [US Gal./s]</li> <li>■ 1363 = [US Gal./min]</li> <li>■ 1364 = [US Gal./h]</li> <li>■ 1367 = [Imp. Gal./s]</li> <li>■ 1358 = [Imp. Gal./min]</li> <li>■ 1359 = [Imp. Gal./h]</li> <li>■ 32815 = [ML/s]</li> <li>■ 32816 = [ML/min]</li> <li>■ 32817 = [ML/h]</li> <li>■ 1355 = [ML/d]</li> </ul>
<b>Factory setting</b>	%
<b>Additional information</b>	<p>The selected unit is only used for display purposes. The measured value is <b>not</b> converted on the basis of the selected unit.</p> <p> Distance-to-distance linearization is also possible, i.e. a linearization from the level unit to another length unit. Select the <b>Linear</b> linearization mode for this purpose. To specify the new level unit, select the <b>Free text</b> option in the <b>Unit after linearization</b> parameter and enter the unit in the <b>Free text</b> parameter (→  147).</p>
<b>Free text</b>	
<b>Navigation</b>	  Setup → Advanced setup → Linearization → Free text
<b>Prerequisite</b>	<b>Unit after linearization</b> (→  146) = <b>Free text</b>

<b>Description</b>	Enter unit symbol.
<b>User entry</b>	Up to 32 alphanumerical characters (letters, numbers, special characters)
<b>Factory setting</b>	Free text

---

### Level linearized





---

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Level linearized
<b>Description</b>	Displays linearized level.
<b>Additional information</b>	 <ul style="list-style-type: none"> <li>▪ The unit is defined by the <b>Unit after linearization</b> parameter →  146.</li> <li>▪ For interface measurements, this parameter always refers to the total level.</li> </ul>

---

### Interface linearized




---

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Interf. lineariz
<b>Prerequisite</b>	<b>Operating mode</b> (→  122) = <b>Interface</b> or <b>Interface with capacitance</b>
<b>Description</b>	Displays the linearized interface height.
<b>Additional information</b>	 The unit is defined in the <b>Unit after linearization</b> parameter →  146.

---

### Maximum value

---

<b>Navigation</b>	  Setup → Advanced setup → Linearization → Maximum value
<b>Prerequisite</b>	<b>Linearization type</b> (→  145) has one of the following values: <ul style="list-style-type: none"> <li>▪ Linear</li> <li>▪ Pyramid bottom</li> <li>▪ Conical bottom</li> <li>▪ Angled bottom</li> <li>▪ Horizontal cylinder</li> <li>▪ Sphere</li> </ul>
<b>Description</b>	Linearized value corresponding to a level of 100%.
<b>User entry</b>	-50 000.0 to 50 000.0 %
<b>Factory setting</b>	100.0 %

---

**Diameter**
**Navigation**

Setup → Advanced setup → Linearization → Diameter

**Prerequisite**
**Linearization type** (→ 145) has one of the following values:

- Horizontal cylinder
- Sphere

**Description**

Diameter of the cylindrical or spherical tank.

**User entry**

0 to 9999.999 m

**Factory setting**

2 m

**Additional information**The unit is defined in the **Distance unit** parameter (→ 122).

---

**Intermediate height**
**Navigation**

Setup → Advanced setup → Linearization → Intermed. height

**Prerequisite**
**Linearization type** (→ 145) has one of the following values:

- Pyramid bottom
- Conical bottom
- Angled bottom

**Description**


Height of the pyramid, conical or angled bottom.

**User entry**

0 to 200 m

**Factory setting**

0 m

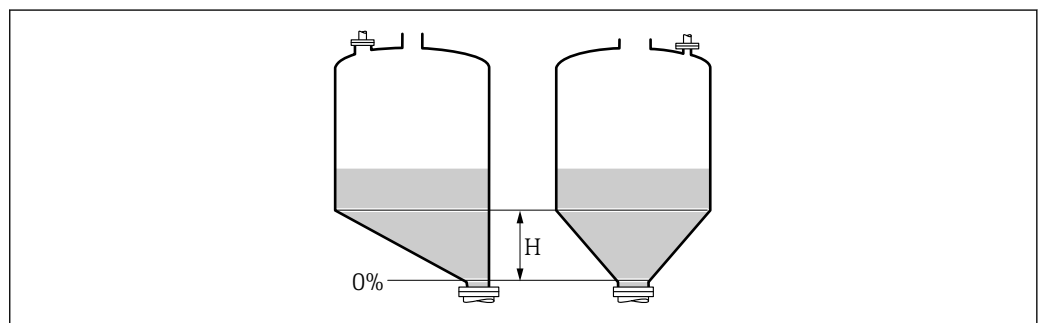**Additional information**

A0013264

*H* Intermediate height

The unit is defined in the **Distance unit** parameter (→ 122).

---

**Table mode**


---



<b>Navigation</b>	Setup → Advanced setup → Linearization → Table mode
<b>Prerequisite</b>	<b>Linearization type</b> (→  145) = <b>Table</b>
<b>Description</b>	Select editing mode of the linearization table.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Manual</li> <li>▪ Semiautomatic</li> <li>▪ Clear table</li> <li>▪ Sort table</li> </ul>
<b>Factory setting</b>	Manual
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>▪ <b>Manual</b> The level and the associated linearized value are entered manually for each linearization point.</li> <li>▪ <b>Semiautomatic</b> The level is measured by the device for each linearization point. The associated linearized value is entered manually.</li> <li>▪ <b>Clear table</b> Deletes the existing linearization table.</li> <li>▪ <b>Sort table</b> Rearranges the linearization points into an ascending order.</li> </ul> <p><b>Conditions the linearization table must meet:</b></p> <ul style="list-style-type: none"> <li>▪ The table may consist of up to 32 pairs of values "Level - Linearized Value".</li> <li>▪ The table must be monotonic (monotonically increasing or decreasing).</li> <li>▪ The first linearization point must refer to the minimum level.</li> <li>▪ The last linearization point must refer to the maximum level.</li> </ul> <p> Before entering a linearization table, the values for <b>Empty calibration</b> (→  124) and <b>Full calibration</b> (→  125) must be set correctly.</p> <p>If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (<b>Table mode</b> (→  150) = <b>Clear table</b>). Then enter a new table.</p> <p><b>How to enter the table</b></p> <ul style="list-style-type: none"> <li>▪ Via FieldCare The table points can be entered via the <b>Table number</b> (→  151), <b>Level</b> (→  151) and <b>Customer value</b> (→  151) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)</li> <li>▪ Via local display Select the <b>Edit table</b> submenu to call up the graphic table editor. The table is displayed and can be edited line by line.</li> </ul> <p> The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the <b>Level unit</b> parameter (→  137) beforehand.</p> <p> If a decreasing table is entered, the values for 20 mA and 4 mA of the current output are interchanged. That means: 20 mA refers to the lowest level, whereas 4 mA refers to the highest level.</p>

---

**Table number**

---



<b>Navigation</b>	Setup → Advanced setup → Linearization → Table number
<b>Prerequisite</b>	<b>Linearization type</b> (→  145) = <b>Table</b>
<b>Description</b>	Select table point you are going to enter or change.
<b>User entry</b>	1 to 32
<b>Factory setting</b>	1

---

**Level (Manual)**

---



<b>Navigation</b>	Setup → Advanced setup → Linearization → Level
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Linearization type</b> (→  145) = <b>Table</b></li> <li>▪ <b>Table mode</b> (→  150) = <b>Manual</b></li> </ul>
<b>Description</b>	Enter level value of the table point (value before linearization).
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 %

---

**Level (Semiautomatic)**

---

<b>Navigation</b>	Setup → Advanced setup → Linearization → Level
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Linearization type</b> (→  145) = <b>Table</b></li> <li>▪ <b>Table mode</b> (→  150) = <b>Semiautomatic</b></li> </ul>
<b>Description</b>	Displays measured level (value before linearization). This value is transmitted to the table.

---

**Customer value**

---



<b>Navigation</b>	Setup → Advanced setup → Linearization → Customer value
<b>Prerequisite</b>	<b>Linearization type</b> (→  145) = <b>Table</b>
<b>Description</b>	Enter linearized value for the table point.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 %

---

**Activate table**


---




<b>Navigation</b>	Setup → Advanced setup → Linearization → Activate table
<b>Prerequisite</b>	<b>Linearization type (→  145) = Table</b>
<b>Description</b>	Activate (enable) or deactivate (disable) the linearization table.
<b>Selection</b>	<ul style="list-style-type: none"><li>▪ Disable</li><li>▪ Enable</li></ul>
<b>Factory setting</b>	Disable
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"><li>▪ <b>Disable</b> The measured level is not linearized. If <b>Linearization type (→  145) = Table</b> at the same time, the device issues error message F435.</li><li>▪ <b>Enable</b> The measured level is linearized according to the table.</li></ul> <p> When editing the table, the <b>Activate table</b> parameter is automatically reset to <b>Disable</b> and must be reset to <b>Enable</b> after the table has been entered.</p>



**"Safety settings" submenu**

Navigation  Setup → Advanced setup → Safety sett.

**Output echo lost** 




**Navigation**  Setup → Advanced setup → Safety sett. → Output echo lost


**Description** Output signal in case of a lost echo.

- Selection**
- Last valid value
  - Ramp at echo lost
  - Value echo lost
  - Alarm


**Factory setting** Last valid value

**Additional information** **Meaning of the options**

- **Last valid value**  
The last valid value is kept in the case of a lost echo.
- **Ramp at echo lost**<sup>8)</sup>  
In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the **Ramp at echo lost** parameter (→  154).
- **Value echo lost**<sup>8)</sup>  
In the case of a lost echo the output assumes the value defined in the **Value echo lost** parameter (→  153).
- **Alarm**  
In the case of a lost echo the device generates an alarm; see the **Failure mode** parameter (→  163)

**Value echo lost** 

**Navigation**  Setup → Advanced setup → Safety sett. → Value echo lost



**Prerequisite** **Output echo lost** (→  153) = **Value echo lost**

**Description** Output value in case of a lost echo

**User entry** 0 to 200 000.0 %

**Factory setting** 0.0 %

**Additional information** Use the unit which has been defined for the measured value output:

- without linearization: **Level unit** (→  137)
- with linearization: **Unit after linearization** (→  146)

8) Only visible if "Linearization type (→  145)" = "None"

**Ramp at echo lost**



**Navigation**                      Setup → Advanced setup → Safety sett. → Ramp echo lost


**Prerequisite**                      **Output echo lost (→ 153) = Ramp at echo lost**

**Description**                      Slope of the ramp in the case of a lost echo

**User entry**                      Signed floating-point number

**Factory setting**                      0.0 %/min

**Additional information**

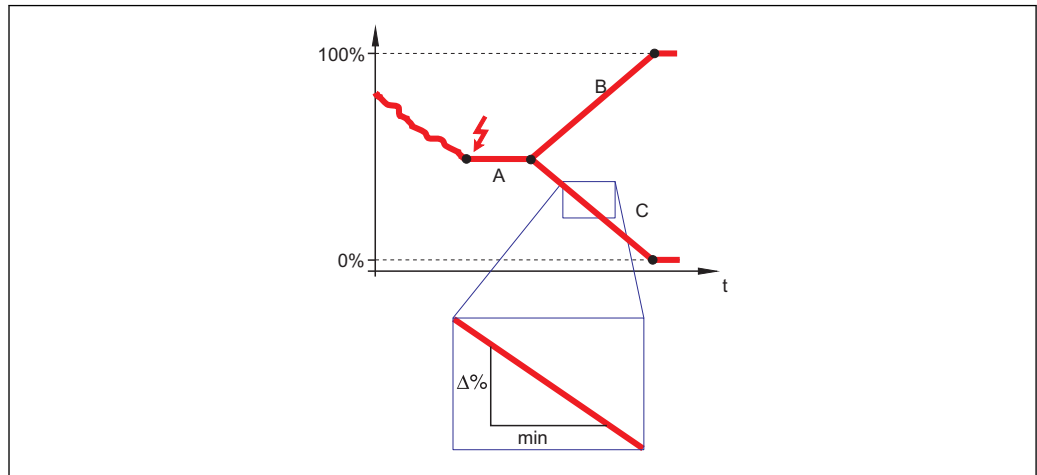

A0013269

- A    Delay time echo lost
- B    Ramp at echo lost (→ 154) (positive value)
- C    Ramp at echo lost (→ 154) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

**Blocking distance**



**Navigation**                      Setup → Advanced setup → Safety sett. → Blocking dist.

**Description**                      Specify upper blocking distance UB.

**User entry**                      0 to 200 m

- Factory setting**
- For coax probes: 0 mm (0 in)
  - For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
  - For rod and rope probes above 8 m (26 ft): 0.025 \* Sondenlänge

For FMP51/FMP52/FMP54 with the **Interface measurement** application package<sup>9)</sup> and for FMP55:  
100 mm (3.9 in) for all antenna types

### Additional information


Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- i** This behavior is only valid if the following two conditions are met:
- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**)
  - Expert → Sensor → Gas phase compensation → GPC mode= **On, Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.

- i** A different behavior for signals in the blocking distance can be defined in the **Blocking distance evaluation mode** parameter.

- i** If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

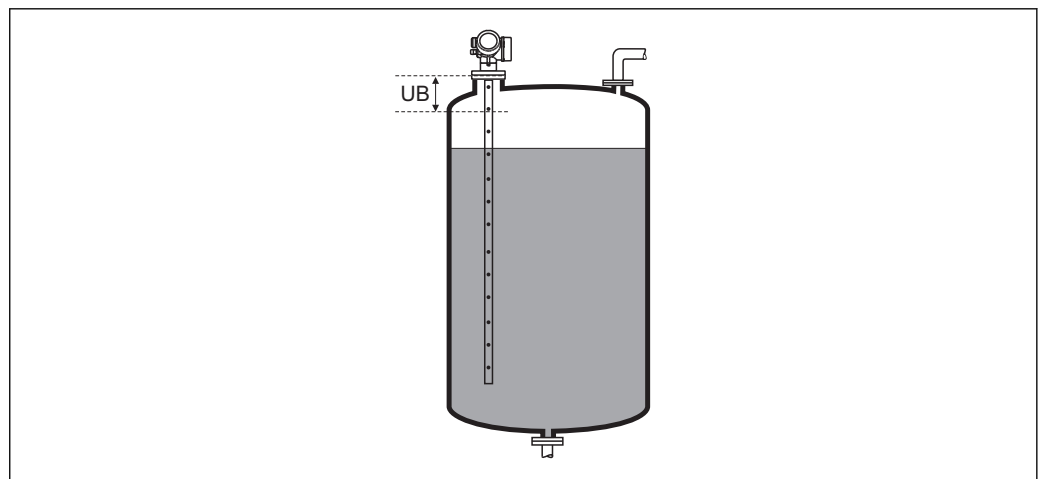


47 Blocking distance (UB) for liquid measurements


A0013219

9) Ordering feature 540 "Application Package", option EB "Interface measurement"



**"SIL/WHG confirmation" wizard**



 The **SIL/WHG confirmation** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overflow prevention" ) which are currently **not** in the SIL- or WHG-locked state.

The **SIL/WHG confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of the sequence.

*Navigation*       Setup → Advanced setup → SIL/WHG confirm.

**"Deactivate SIL/WHG" wizard**



 The **Deactivate SIL/WHG** wizard (→  157) is only visible if the device is SIL-locked or WHG-locked. For details refer to the "Functional Safety Manual" of the respective device.

*Navigation*        Setup → Advanced setup → Deactiv. SIL/WHG

---

**Reset write protection**





<b>Navigation</b>	  Setup → Advanced setup → Deactiv. SIL/WHG → Res. write prot.
<b>Description</b>	Enter unlocking code.
<b>User entry</b>	0 to 65 535
<b>Factory setting</b>	0


---








**Code incorrect**





<b>Navigation</b>	  Setup → Advanced setup → Deactiv. SIL/WHG → Code incorrect
<b>Description</b>	Indicates that a wrong unlocking code has been entered. Select procedure.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Reenter code</li> <li>■ Abort sequence</li> </ul>
<b>Factory setting</b>	Reenter code

**"Probe settings" submenu**

The **Probe settings** submenu helps to ensure that the end of probe signal within the envelope curve is correctly assigned by the evaluation algorithm. The assignment is correct if the length of probe indicated by the device matches the actual length of the probe. The automatic probe length correction can only be performed if the probe is installed in the vessel and is completely uncovered (no medium). For partially filled vessels and if the probe length is known, select **Confirm probe length** (→  159) = **Manual input** in order to enter the value manually.




-  If a mapping (interference echo suppression) has been recorded after shortening the probe, it is no longer possible to perform an automatic probe length correction. In this case there are two options:
  - Delete the map using the **Record map** parameter (→  131) before performing the automatic probe length correction. After the probe length correction, a new map can be recorded using the **Record map** parameter (→  131).
  - Alternative: Select **Confirm probe length** (→  159) = **Manual input** and enter the probe length manually into the **Present probe length** parameter →  158.
-  An automatic probe length correction is only possible after the correct option has been selected in the **Probe grounded** parameter (→  158).

*Navigation*        Setup → Advanced setup → Probe settings

---

**Probe grounded** 



---

<b>Navigation</b>	  Setup → Advanced setup → Probe settings → Probe grounded
<b>Prerequisite</b>	<b>Operating mode</b> (→  122) = <b>Level</b>
<b>Description</b>	Specify whether the probe is grounded.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>
<b>Factory setting</b>	No

---

**Present probe length** 

---

<b>Navigation</b>	 Setup → Advanced setup → Probe settings → Pres. length
<b>Description</b>	<ul style="list-style-type: none"> <li>▪ In most cases: Displays the length of the probe according to the currently measured end-of-probe signal.</li> <li>▪ For <b>Confirm probe length</b> (→  159) = <b>Manual input</b>: Enter actual length of probe.</li> </ul>
<b>User entry</b>	0 to 200 m
<b>Factory setting</b>	4 m

---

**Confirm probe length**
**Navigation**

Setup → Advanced setup → Probe settings → Confirm length

**Description**

Select, whether the value displayed in the **Present probe length** parameter → 158 matches the actual length of the probe. Based on this input, the device performs a probe length correction.

**Selection**

- Probe length OK
- Probe length too small
- Probe length too big
- Probe covered
- Manual input
- Probe length unknown

**Factory setting**

Probe length OK

**Additional information****Meaning of the options**

- **Probe length OK**

To be selected if the indicated length is correct. An adjustment is not required. The device quits the sequence.

- **Probe length too small**

To be selected if the displayed length is smaller than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter → 158. This procedure has to be repeated until the displayed value matches the actual length of the probe.

- **Probe length too big**

To be selected if the displayed length is bigger than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is indicated in the **Present probe length** parameter → 158. This procedure has to be repeated until the displayed value matches the actual length of the probe.

- **Probe covered**

To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case. The device quits the sequence.

- **Manual input**

To be selected if no automatic probe length correction is to be performed. Instead, the actual length of the probe must be entered manually into the **Present probe length** parameter → 158<sup>10)</sup>.



- **Probe length unknown**


To be selected if the actual length of the probe is unknown. A probe length correction is impossible in this case and the device quits the sequence.

---

10) When operated via FieldCare, the **Manual input** option needs not to be selected explicitly. In FieldCare the length of the probe can always be edited.

*"Probe length correction" wizard*


 The **Probe length correction** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the probe length correction are located directly in the **Probe settings** submenu (→  158).

*Navigation*       Setup → Advanced setup → Probe settings → Prob.length corr

---

**Confirm probe length**

---



**Navigation**       Setup → Advanced setup → Probe settings → Prob.length corr → Confirm length


**Description**      →  159

---

**Present probe length**

---







**Navigation**       Setup → Advanced setup → Probe settings → Prob.length corr → Pres. length


**Description**      →  158



**"Current output 1 to 2" submenu**

 The **Current output 2** submenu (→  161) is only available for devices with two current outputs.

*Navigation*   Setup → Advanced setup → Curr.output 1 to 2

**Assign current output 1 to 2** 

**Navigation**   Setup → Advanced setup → Curr.output 1 to 2 → Assign curr.

**Description** Select process variable for current output.



- Selection**
- Level linearized
  - Distance
  - Electronic temperature
  - Für FMP55: Measured capacitance
  - Relative echo amplitude
  - Analog output adv. diagnostics 1
  - Analog output adv. diagnostics 2

**Additionally for Operating mode = "Interface" or "Interface with capacitance":**

- Interface linearized
- Interface distance
- Thickness upper layer
- Relative interface amplitude

- Factory setting**
- For interface measurements**
- Current output 1: Interface linearized
  - Current output 2 <sup>11)</sup>: Level linearized


**Additional information** *Definition of the current range for the process variables*

Process variable	4 mA value	20 mA value
Level linearized	0 % <sup>1)</sup> or the associated linearized value	100 % <sup>2)</sup> or the associated linearized value
Distance	0 (i.e. level is at the reference point)	<b>Empty calibration</b> (→  124) (i.e. level is at 0 %)
Electronic temperature	-50 °C (-58 °F)	100 °C (212 °F)
Measured capacitance	0 pF	4 000 pF
Relative echo amplitude	0 mV	2 000 mV
Analog output adv. diagnostics 1/2	depending on the parametrization of the Advanced Diagnostics	
Interface linearized	0 % <sup>1)</sup> or the associated linearized value	100 % <sup>2)</sup> or the associated linearized value
Interface distance	0 (i.e. interface at the reference point)	<b>Empty calibration</b> (→  124) (i.e. interface is at 0 %)

11) only for devices with two current outputs


Process variable	4 mA value	20 mA value
Thickness upper layer	0 % <sup>1)</sup> or the associated linearized value	100 % <sup>2)</sup> or the associated linearized value
Relative interface amplitude	0 mV	2 000 mV

- 1) the 0% level is defined by **Empty calibration** parameter (→ ⓘ 124)
- 2) The 100% level is defined by **Full calibration** parameter (→ ⓘ 125)



 It may be necessary to adjust the 4mA and 20mA values to the application (especially in the case of the **Analog output adv. diagnostics 1/2** option ).

This can be done by the following parameters:

- Expert → Output → Current output 1 to 2 → Turn down
- Expert → Output → Current output 1 to 2 → 4 mA value
- Expert → Output → Current output 1 to 2 → 20 mA value

**Current span** 

**Navigation**

  Setup → Advanced setup → Curr.output 1 to 2 → Current span

**Description**

Determines the current range used to transmit the measured value. '4...20mA': Measured variable: 4 ...20 mA '4...20mA NAMUR': Measured variable: 3.8 ... 20.5 mA '4...20mA US': Measured variable: 3.9 ... 20.8 mA 'Fixed current': Measured variable transmitted via HART only Note: Currents below 3.6 mA or above 21.95 mA can be used to signal an alarm.

**Selection**

- 4...20 mA
- 4...20 mA NAMUR
- 4...20 mA US
- Fixed current


**Factory setting**


4...20 mA NAMUR

**Additional information**

*Meaning of the options*

Option	Current range for process variable	Lower alarm signal level	Upper alarm signal level
4...20 mA	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA NAMUR	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA US	3.9 to 20.8 mA	< 3.6 mA	> 21.95 mA
Fixed current	Constant current, defined in the <b>Fixed current</b> parameter (→ ⓘ 163).		

-  In the case of an error, the output current assumes the value defined in the **Failure mode** parameter (→ ⓘ 163).
- If the measured value is out of the measuring range, **Current output** diagnostic message is issued.

-  In a HART multidrop loop only one device can use the analog current to transmit a signal. For all other devices one must set:
  - **Current span = Fixed current**
  - **Fixed current (→ ⓘ 163) = 4 mA**

---

**Fixed current**


<b>Navigation</b>	Setup → Advanced setup → Curr.output 1 to 2 → Fixed current
<b>Prerequisite</b>	<b>Current span (→  162) = Fixed current</b>
<b>Description</b>	Define constant value of the output current.
<b>User entry</b>	4 to 22.5 mA
<b>Factory setting</b>	4 mA

---

**Damping output**


<b>Navigation</b>	Setup → Advanced setup → Curr.output 1 to 2 → Damping out.
<b>Description</b>	Reaction time of the output signal on fluctuation in the measured value.
<b>User entry</b>	0.0 to 999.9 s
<b>Factory setting</b>	0.0 s
<b>Additional information</b>	Fluctuations of the measured value affect the output current with an exponential delay, the time constant $\tau$ of which is defined in this parameter. With a small time constant the output reacts immediately to changes of the measured value. With a big time constant the reaction of the output is more delayed. For $\tau = 0$ (factory setting) there is no damping.




---

**Failure mode**


<b>Navigation</b>	Setup → Advanced setup → Curr.output 1 to 2 → Failure mode
<b>Prerequisite</b>	<b>Current span (→  162) ≠ Fixed current</b>
<b>Description</b>	Defines which current the output assumes in the case of an error. 'Min.': < 3.6mA 'Max.': > 21.95mA 'Last valid value': Last valid value before occurrence of the error. 'Actual value': Output current is equal to the measured value; error is ignored. 'Defined value': User defined value.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Min.</li> <li>■ Max.</li> <li>■ Last valid value</li> <li>■ Actual value</li> <li>■ Defined value</li> </ul>
<b>Factory setting</b>	Max.

**Additional information**

**Meaning of the options**

- **Min.**  
The current output adopts the value of the lower alarm level according to the **Current span** parameter (→  162).
- **Max.**  
The current output adopts the value of the upper alarm level according to the **Current span** parameter (→  162).
- **Last valid value**  
The current remains constant at the last value it had before the error occurred.
- **Actual value**  
The output current follows the actual measured value; the error is ignored.
- **Defined value**  
The output current assumes the value defined in the **Failure current** parameter (→  164).



 The error behavior of other output channels is not influenced by these settings but is defined in separate parameters.

---


**Failure current**



**Navigation**

  Setup → Advanced setup → Curr.output 1 to 2 → Failure current

**Prerequisite**

**Failure mode** (→  163) = **Defined value**

**Description**

Defines which current the output assumes in case of an error.

**User entry**

3.59 to 22.5 mA



**Factory setting**

22.5 mA

---

**Output current 1 to 2**



**Navigation**



  Setup → Advanced setup → Curr.output 1 to 2 → Output curr. 1 to 2

**Description**



Shows the actual calculated value of the output current.

**"Switch output" submenu**

 The **Switch output** submenu (→  165) is only visible for devices with switch output.<sup>12)</sup>

*Navigation*        Setup → Advanced setup → Switch output

**Switch output function****Navigation**

  Setup → Advanced setup → Switch output → Switch out funct

**Description**

Defines the function of the switch output. 'Off' The switch output is always open (non-conductive) 'On' The switch output is always closed (conductive). 'Diagnostic behavior' The switch output is normally closed and is only opened if a diagnostic event is present. 'Limit' The switch output is normally closed and is only opened if a measured variable exceeds a defined limit. 'Digital output' The switch output is controlled by one of the digital output blocks of the device.






**Selection**


- Off
- On
- Diagnostic behavior
- Limit
- Digital Output

**Factory setting**

Off


**Additional information****Meaning of the options**

- **Off**  
The output is always open (non-conductive).
- **On**  
The output is always closed (conductive).
- **Diagnostic behavior**  
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter (→  166) determines for which type of event the output is opened.
- **Limit**  
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:
  - **Assign limit** (→  166)
  - **Switch-on value** (→  167)
  - **Switch-off value** (→  168)
- **Digital Output**  
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter (→  166).

 The **Off** and **On** options can be used to simulate the switch output.


<sup>12)</sup> Ordering feature 020 "Power supply; Output", option B, E or G

---

**Assign status**



---

**Navigation**   Setup → Advanced setup → Switch output → Assign status

**Prerequisite** **Switch output function (→  165) = Digital Output**


**Selection**

- Off
- Digital output AD 1
- Digital output AD 2



**Factory setting** Off


**Additional information** The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

---

**Assign limit**



---

**Navigation**   Setup → Advanced setup → Switch output → Assign limit


**Prerequisite** **Switch output function (→  165) = Limit**

**Selection**

- Off
- Level linearized
- Distance
- Interface linearized \*
- Interface distance \*
- Thickness upper layer \*
- Terminal voltage
- Electronic temperature
- Measured capacitance \*
- Relative echo amplitude
- Relative interface amplitude \*
- Absolute echo amplitude
- Absolute interface amplitude \*


**Factory setting** Off

---

**Assign diagnostic behavior**



---

**Navigation**   Setup → Advanced setup → Switch output → Assign diag. beh

**Prerequisite** **Switch output function (→  165) = Diagnostic behavior**

**Description** Defines to which behavior of diagnostic events the switch output reacts.

---

\* Visibility depends on order options or device settings

**Selection**                   ▪ Alarm  
                                   ▪ Alarm or warning  
                                   ▪ Warning

**Factory setting**           Alarm

**Switch-on value**



**Navigation**                   🏠🏠 Setup → Advanced setup → Switch output → Switch-on value

**Prerequisite**               **Switch output function (→ 📄 165) = Limit**

**Description**                Defines the switch-on point. The output is closed if the assigned process variable rises above this point.


**User entry**                 Signed floating-point number

**Factory setting**            0

**Additional information**    The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

**Switch-on value > Switch-off value**

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

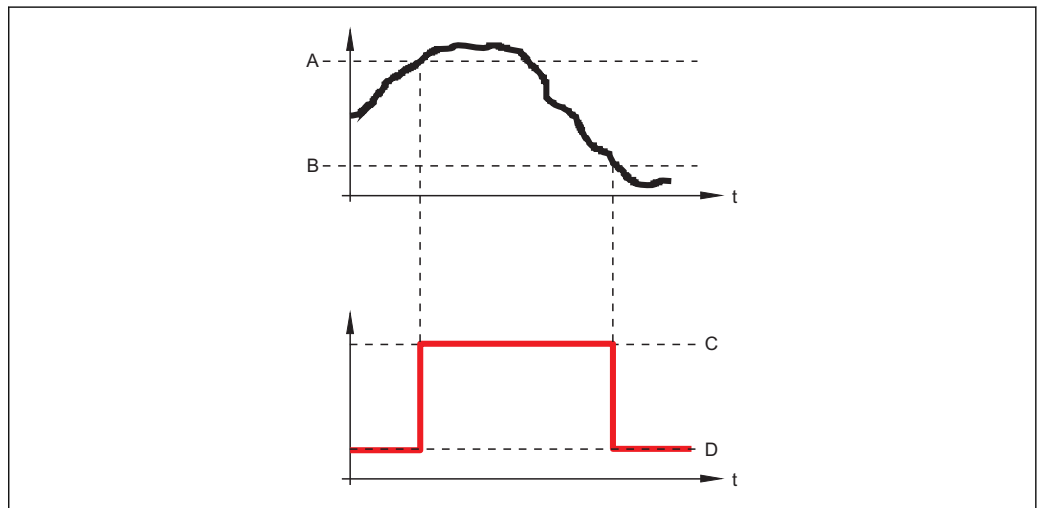


A0015585

- A    Switch-on value
- B    Switch-off value
- C    Output closed (conductive)
- D    Output opened (non-conductive)

**Switch-on value < Switch-off value**

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

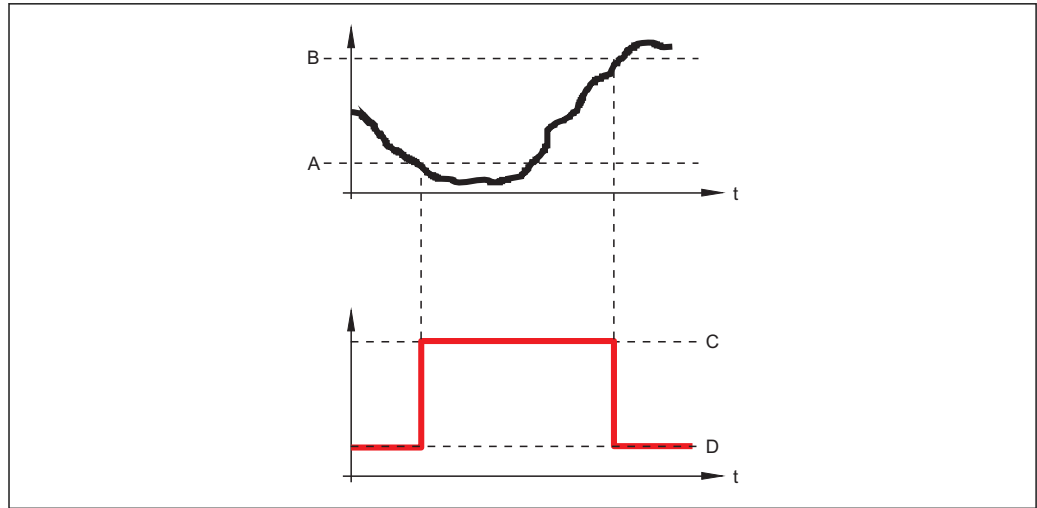

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay



<b>Navigation</b>	☰☰ Setup → Advanced setup → Switch output → Switch-on delay
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ Switch output function (→ ☰ 165) = Limit</li> <li>▪ Assign limit (→ ☰ 166) ≠ Off</li> </ul>
<b>Description</b>	Defines the delay applied before the output is switched on.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

Switch-off value



<b>Navigation</b>	☰☰ Setup → Advanced setup → Switch output → Switch-off value
<b>Prerequisite</b>	<b>Switch output function (→ ☰ 165) = Limit</b>
<b>Description</b>	Defines the switch-off point. The output is opened if the assigned process variable falls below this point.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	The switching behavior depends on the relative position of the <b>Switch-on value</b> and <b>Switch-off value</b> parameters; description: see the <b>Switch-on value</b> parameter (→ ☰ 167).



---

**Switch-off delay**


<b>Navigation</b>	Setup → Advanced setup → Switch output → Switch-off delay
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Switch output function</b> (→  165) = <b>Limit</b></li> <li>▪ <b>Assign limit</b> (→  166) ≠ <b>Off</b></li> </ul>
<b>Description</b>	Defines the delay applied before the output is switched off.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

---

**Failure mode**


<b>Navigation</b>	Setup → Advanced setup → Switch output → Failure mode
<b>Prerequisite</b>	<b>Switch output function</b> (→  165) = <b>Limit</b> or <b>Digital Output</b>
<b>Description</b>	Defines the state of the switch output in case of an error.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Actual status</li> <li>▪ Open</li> <li>▪ Closed</li> </ul>
<b>Factory setting</b>	Open
<b>Additional information</b>	

---

**Switch status**

<b>Navigation</b>	Setup → Advanced setup → Switch output → Switch status
<b>Description</b>	Current status of the switch output.

---

**Invert output signal**


<b>Navigation</b>	Setup → Advanced setup → Switch output → Invert outp.sig.
<b>Description</b>	'No' The switch output behaves as per its parameter setting. 'Yes' The switching behavior is inverted as compared to its parameter setting.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>

**Factory setting**

No

**Additional information****Meaning of the options**■ **No**

The behavior of the switch output is as described above.

■ **Yes**The states **Open** and **Closed** are inverted as compared to the description above.

**"Display" submenu**

The **Display** submenu is only visible if a display module is connected to the device.

*Navigation*



Setup → Advanced setup → Display

**Language****Navigation**

Setup → Advanced setup → Display → Language

**Description**

Set display language.

**Selection**

- English
- Deutsch \*
- Français \*
- Español \*
- Italiano \*
- Nederlands \*
- Portuguesa \*
- Polski \*
- русский язык (Russian) \*
- Svenska \*
- Türkçe \*
- 中文 (Chinese) \*
- 日本語 (Japanese) \*
- 한국어 (Korean) \*
- Bahasa Indonesia \*
- tiếng Việt (Vietnamese) \*
- čeština (Czech) \*

**Factory setting**

The language selected in feature 500 of the product structure.  
If no language has been selected: **English**

**Additional information****Format display****Navigation**

Setup → Advanced setup → Display → Format display

**Description**

Select how measured values are shown on the display.

**Selection**


- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

**Factory setting**

1 value, max. size


\* Visibility depends on order options or device settings

Additional information

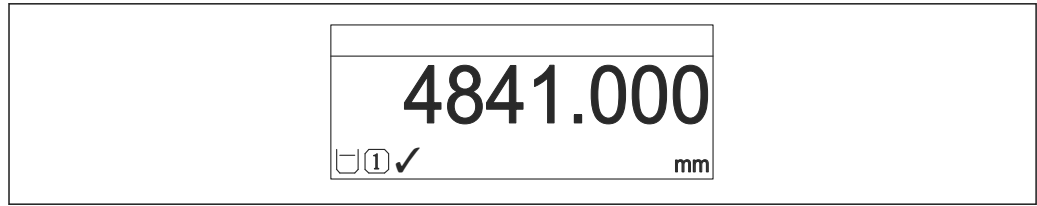


A0019963

48 "Format display" = "1 value, max. size"

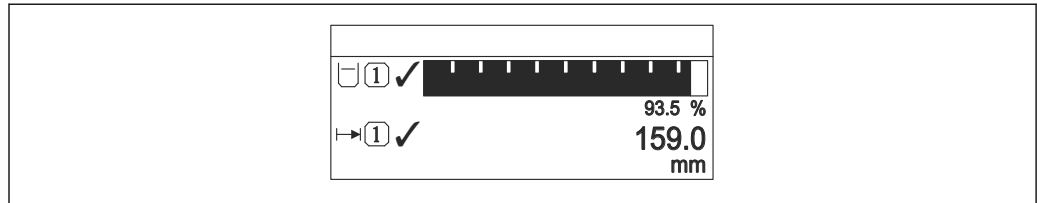


A0019964

49 "Format display" = "1 bargraph + 1 value"

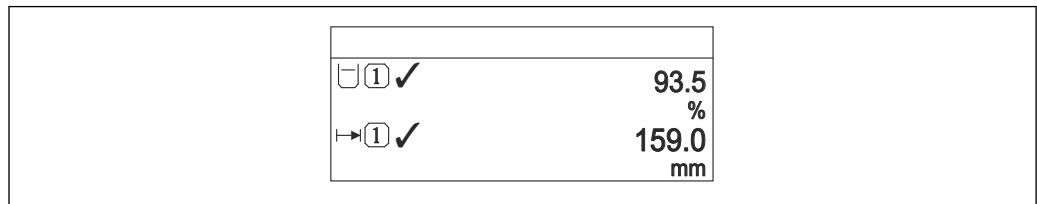


A0019965

50 "Format display" = "2 values"

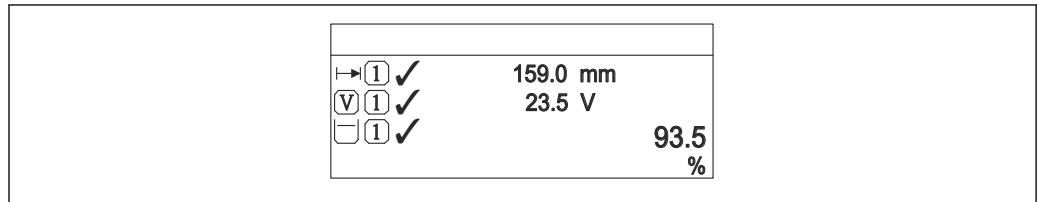

A0019966

51 "Format display" = "1 value large + 2 values"

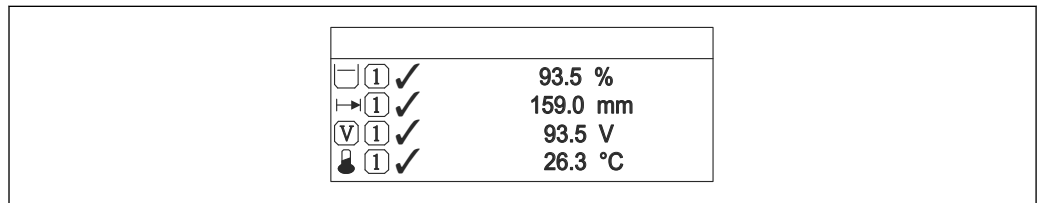

A0019968

52 "Format display" = "4 values"

- i
■
 The **Value 1 to 4 display** → 173 parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 174).

---

**Value 1 to 4 display**


<b>Navigation</b>	Setup → Advanced setup → Display → Value 1 display
<b>Description</b>	Select the measured value that is shown on the local display.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Level linearized</li> <li>■ Distance</li> <li>■ Interface linearized *</li> <li>■ Interface distance *</li> <li>■ Thickness upper layer *</li> <li>■ Current output 1</li> <li>■ Measured current</li> <li>■ Current output 2 *</li> <li>■ Terminal voltage</li> <li>■ Electronic temperature</li> <li>■ Measured capacitance *</li> <li>■ Analog output adv. diagnostics 1</li> <li>■ Analog output adv. diagnostics 2</li> </ul>
<b>Factory setting</b>	<p><b>For interface measurements and one current output</b></p> <ul style="list-style-type: none"> <li>■ Value 1 display: Interface linearized</li> <li>■ Value 2 display: Level linearized</li> <li>■ Value 3 display: Thickness upper layer</li> <li>■ Value 4 display: Current output 1</li> </ul> <p><b>For interface measurements and two current outputs</b></p> <ul style="list-style-type: none"> <li>■ Value 1 display: Interface linearized</li> <li>■ Value 2 display: Level linearized</li> <li>■ Value 3 display: Current output 1</li> <li>■ Value 4 display: Current output 2</li> </ul>

---

**Decimal places 1 to 4**


<b>Navigation</b>	Setup → Advanced setup → Display → Decimal places 1
<b>Description</b>	This selection does not affect the measurement and calculation accuracy of the device.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>
<b>Factory setting</b>	x.xx
<b>Additional information</b>	The setting does not affect the measuring or computational accuracy of the device.

---

\* Visibility depends on order options or device settings

**Display interval**

<b>Navigation</b>	☰☰ Setup → Advanced setup → Display → Display interval
<b>Description</b>	Set time measured values are shown on display if display alternates between values.
<b>User entry</b>	1 to 10 s
<b>Factory setting</b>	5 s
<b>Additional information</b>	This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

**Display damping**




<b>Navigation</b>	☰☰ Setup → Advanced setup → Display → Display damping
<b>Description</b>	Set display reaction time to fluctuations in the measured value.
<b>User entry</b>	0.0 to 999.9 s
<b>Factory setting</b>	0.0 s

**Header**



<b>Navigation</b>	☰☰ Setup → Advanced setup → Display → Header
<b>Description</b>	Select header contents on local display.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Device tag</li> <li>■ Free text</li> </ul>
<b>Factory setting</b>	Device tag

**Additional information**

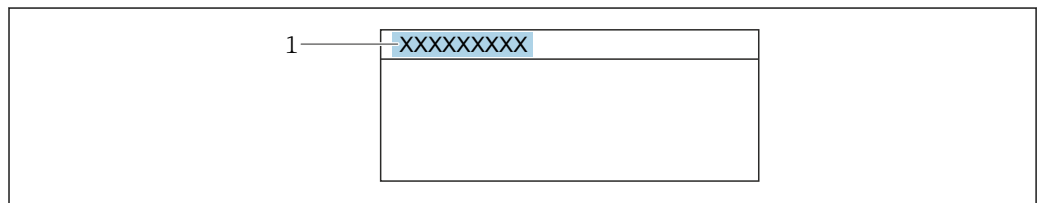

A0029422

1 Position of the header text on the display

*Meaning of the options*

- **Device tag**  
Is defined in the **Device tag** parameter (→ ☰ 122)
- **Free text**  
Is defined in the **Header text** parameter (→ ☰ 175)

---

**Header text**

---

**Navigation**

Setup → Advanced setup → Display → Header text

**Prerequisite****Header (→ 174) = Free text****Description**

Enter display header text.

**Factory setting**

-----

**Additional information**

The number of characters which can be displayed depends on the characters used.

---

**Separator**

---

**Navigation**

Setup → Advanced setup → Display → Separator

**Description**

Select decimal separator for displaying numerical values.

**Selection**

- .
- ,

**Factory setting**

.

---

**Number format**

---

**Navigation**

Setup → Advanced setup → Display → Number format

**Description**

Choose number format for the display.

**Selection**

- Decimal
- ft-in-1/16"

**Factory setting**

Decimal

**Additional information**The **ft-in-1/16"** option is only valid for distance units.

---

**Decimal places menu**


---

**Navigation**

Setup → Advanced setup → Display → Dec. places menu

**Description**




Select number of decimal places for the representation of numbers within the operating menu.

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ X</li> <li>■ X.X</li> <li>■ X.XX</li> <li>■ X.XXX</li> <li>■ X.XXXX</li> </ul>
<b>Factory setting</b>	x.xxxx
<b>Additional information</b>	<ul style="list-style-type: none"> <li>■ Is only valid for numbers in the operating menu (e.g. <b>Empty calibration, Full calibration</b>), but not for the measured value display. The number of decimal places for the measured value display is defined in the <b>Decimal places 1 to 4</b> →  173 parameters.</li> <li>■ The setting does not affect the accuracy of the measurement or the calculations.</li> </ul>

---

## Backlight








---

<b>Navigation</b>	  Setup → Advanced setup → Display → Backlight
<b>Prerequisite</b>	The device has the SD03 local display (with optical keys).
<b>Description</b>	Switch the local display backlight on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Disable</li> <li>■ Enable</li> </ul>
<b>Factory setting</b>	Disable
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>■ <b>Disable</b> Switches the backlight off.</li> <li>■ <b>Enable</b> Switches the backlight on.</li> </ul> <p> Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.</p>

---

## Contrast display

---



<b>Navigation</b>	  Setup → Advanced setup → Display → Contrast display
<b>Description</b>	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
<b>User entry</b>	20 to 80 %
<b>Factory setting</b>	Dependent on the display.
<b>Additional information</b>	<p> Setting the contrast via push-buttons:</p> <ul style="list-style-type: none"> <li>■ Darker: press the   buttons simultaneously.</li> <li>■ Brighter: press the   buttons simultaneously.</li> </ul>





**"Configuration backup display" submenu**

 This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

 Configurations can only be exchanged between devices which are in the same operating mode (see the **Operating mode** parameter (→  122)).

*Navigation*        Setup → Advanced setup → Conf.backup disp

**Operating time**

**Navigation**        Setup → Advanced setup → Conf.backup disp → Operating time

**Description**      Indicates how long the device has been in operation.

**Additional information**      *Maximum time*  
9 999 d ( ≈ 27 years)

**Last backup**

**Navigation**        Setup → Advanced setup → Conf.backup disp → Last backup

**Description**      Indicates when the last data backup was saved to the display module.

**Configuration management**



**Navigation**        Setup → Advanced setup → Conf.backup disp → Config. managem.




**Description**      Select action for managing the device data in the display module.

- Selection**
- Cancel
  - Execute backup
  - Restore
  - Duplicate
  - Compare
  - Clear backup data

**Factory setting**      Cancel

**Additional information**

**Meaning of the options**



- **Cancel**  
No user is executed and the user exits the parameter.
  - **Execute backup**  
A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.
  - **Restore**  
The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.
  - **Duplicate**  
The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:
    - HART date code
    - HART short tag
    - HART message
    - HART descriptor
    - HART address
    - Device tag
    - Medium type
  - **Compare**  
The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter (→  178).
  - **Clear backup data**  
The backup copy of the device configuration is deleted from the display module of the device.
-  While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
-  If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.
- In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

---

**Backup state**

---

**Navigation**

  Setup → Advanced setup → Conf.backup disp → Backup state

**Description**



Displays which backup action is currently in progress.

---

**Comparison result**

---

**Navigation**

  Setup → Advanced setup → Conf.backup disp → Compar. result

**Description**

Comparison between present device data and display backup.

**Additional information****Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

**■ Settings not identical**

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

**■ No backup available**

There is no backup copy of the device configuration of the HistoROM in the display module.

**■ Backup settings corrupt**

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.


**■ Check not done**

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.


**■ Dataset incompatible**

The data sets are incompatible and can not be compared.





To start the comparison, set **Configuration management** (→  177) = **Compare**.














If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  177) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.



**"Administration" submenu**

Navigation  Setup → Advanced setup → Administration

**Define access code** 

<b>Navigation</b>	 Setup → Advanced setup → Administration → Def. access code
<b>Description</b>	Define release code for write access to parameters.
<b>User entry</b>	0 to 9999
<b>Factory setting</b>	0
<b>Additional information</b>	<p> If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the <i>Maintenance</i> role.</p> <p> The write protection affects all parameters marked with the  symbol in this document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.</p> <p> Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the <b>Enter access code</b> parameter (→  134).</p> <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p> <p> For display operation: The new access code is only valid after it has been confirmed in the <b>Confirm access code</b> parameter (→  182).</p>

**Device reset** 

<b>Navigation</b>	  Setup → Advanced setup → Administration → Device reset
<b>Description</b>	Reset the device configuration - either entirely or in part - to a defined state.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ To factory defaults</li> <li>▪ To delivery settings</li> <li>▪ Of customer settings</li> <li>▪ To transducer defaults</li> <li>▪ Restart device</li> </ul>
<b>Factory setting</b>	Cancel

**Additional information****Meaning of the options****■ Cancel**

No action

**■ To factory defaults**

All parameters are reset to the order-code specific factory setting.

**■ To delivery settings**

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

**■ Of customer settings**

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.


**■ To transducer defaults**


Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.


**■ Restart device**


The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.


*"Define access code" wizard*


 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.


*Navigation*  Setup → Advanced setup → Administration → Def. access code

**Define access code** 

**Navigation**  Setup → Advanced setup → Administration → Def. access code → Def. access code

**Description** →  180

**Confirm access code** 


**Navigation**  Setup → Advanced setup → Administration → Def. access code → Confirm code

**Description** Confirm the entered access code.

**User entry** 0 to 9 999

**Factory setting** 0

## 17.5 "Diagnostics" menu

Navigation   Diagnostics

---

### Actual diagnostics


---



**Navigation**   Diagnostics → Actual diagnos.

**Description** Displays current diagnostic message.

**Additional information** The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

---

### Timestamp

---

**Navigation**  Diagnostics → Timestamp

**Description** Displays the timestamp for the currently active diagnostic message.

---

### Previous diagnostics



---

**Navigation**   Diagnostics → Prev.diagnostics

**Description** Displays the last diagnostic message which has been active before the current message.

**Additional information** The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

---

**Timestamp**

---

**Navigation**  Diagnostics → Timestamp

**Description** Shows the timestamp of the previous diagnostic message.

---

**Operating time from restart**

---

**Navigation**   Diagnostics → Time fr. restart

**Description** Displays the time the device has been in operation since the last device restart.

---

**Operating time**

---

**Navigation**   Diagnostics → Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** *Maximum time*  
9999 d ( ≈ 27 years)





### 17.5.1 "Diagnostic list" submenu

*Navigation*        Diagnostics → Diagnostic list

---

#### Diagnostics 1 to 5


---

<b>Navigation</b>	  Diagnostics → Diagnostic list → Diagnostics 1
<b>Description</b>	Display the current diagnostics messages with the highest to fifth-highest priority.
<b>Additional information</b>	The display consists of: <ul style="list-style-type: none"><li>■ Symbol for event behavior</li><li>■ Code for diagnostic behavior</li><li>■ Operating time of occurrence</li><li>■ Event text</li></ul>


---

#### Timestamp 1 to 5

---

<b>Navigation</b>	 Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Timestamp of the diagnostic message.

## 17.5.2 "Event logbook" submenu



 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

*Navigation*  Diagnostics → Event logbook


---

### Filter options



---



<b>Navigation</b>	 Diagnostics → Event logbook → Filter options
<b>Description</b>	Define which category of event messages is shown in the Events list submenu.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ All</li> <li>▪ Failure (F)</li> <li>▪ Function check (C)</li> <li>▪ Out of specification (S)</li> <li>▪ Maintenance required (M)</li> <li>▪ Information (I)</li> </ul>
<b>Factory setting</b>	All
<b>Additional information</b>	 <ul style="list-style-type: none"> <li>▪ This parameter is only used for operation via the local display.</li> <li>▪ The status signals are categorized according to NAMUR NE 107.</li> </ul>

### "Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  186). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

### Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

*Navigation*  Diagnostics → Event logbook → Event list



### 17.5.3 "Device information" submenu

Navigation   Diagnostics → Device info

---

#### Device tag





---

<b>Navigation</b>	  Diagnostics → Device info → Device tag
<b>Description</b>	Enter the name for the measuring point.
<b>Factory setting</b>	FMP5x

---

#### Serial number




---

<b>Navigation</b>	  Diagnostics → Device info → Serial number
<b>Description</b>	Shows the serial number of the measuring device.
<b>Additional information</b>	<p> <b>Uses of the serial number</b></p> <ul style="list-style-type: none"> <li>▪ To identify the device quickly, e.g. when contacting Endress+Hauser.</li> <li>▪ To obtain specific information on the device using the Device Viewer: <a href="http://www.endress.com/deviceviewer">www.endress.com/deviceviewer</a></li> </ul> <p> The serial number is also indicated on the nameplate.</p>

---

#### Firmware version



---

<b>Navigation</b>	  Diagnostics → Device info → Firmware version
<b>Description</b>	Shows the device firmware version installed.
<b>User interface</b>	xx.yy.zz
<b>Additional information</b>	<p> For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.</p>

---

#### Device name

---

<b>Navigation</b>	  Diagnostics → Device info → Device name
<b>Description</b>	Shows the name of the transmitter.

---

**Order code**

---

**Navigation**

Diagnostics → Device info → Order code

**Description**

Shows the device order code.

**Additional information**

The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.

---

**Extended order code 1 to 3**

---

**Navigation**

Diagnostics → Device info → Ext. order cd. 1

**Description**

Display the three parts of the extended order code.

**Additional information**

The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.

---

**Device revision**

---

**Navigation**

Diagnostics → Device info → Device revision

**Description**

Shows the device revision with which the device is registered with the HART Communication Foundation.

**Additional information**

The device revision is used to allocate the correct Device Description file (DD) to the device.

---

**Device ID**

---

**Navigation**

Diagnostics → Device info → Device ID

**Description**

Shows the device ID for identifying the device in a HART network.

**Additional information**

In addition to the Device type and Manufacturer ID, the Device ID is part of the unique device identification (Unique ID) which characterizes each HART device unambiguously.

---

**Device type**

---

**Navigation** Diagnostics → Device info → Device type**Description**

Shows the device type with which the measuring device is registered with the HART Communication Foundation.

**Additional information**

---

**Manufacturer ID**

---

**Navigation** Diagnostics → Device info → Manufacturer ID**Description**

Use this function to view the manufacturer ID with which the measuring device is registered with the HART Communication Foundation.

**User interface**

2-digit hexadecimal number


**Factory setting**

0x11 (for Endress+Hauser)

## 17.5.4 "Measured values" submenu


Navigation  Diagnostics → Measured val.

### Distance


Navigation  Diagnostics → Measured val. → Distance

Description Displays the measured distance  $D_L$  between the reference point (lower edge of the flange or threaded connection) and the level.

### Additional information

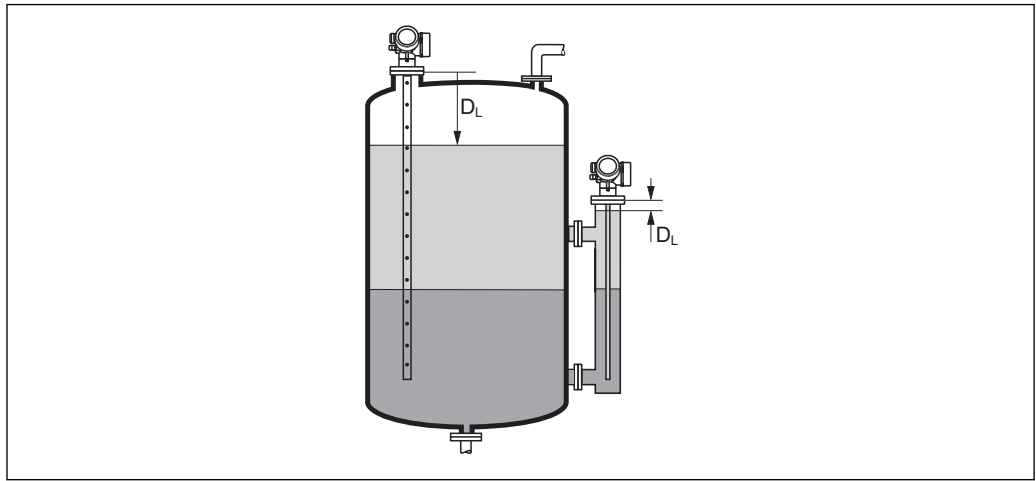

A0013199


 53 Distance for interface measurements


 The unit is defined in the **Distance unit** parameter (→  122).

### Level linearized

Navigation  Diagnostics → Measured val. → Level linearized


Description Displays linearized level.

Additional information 

- The unit is defined by the **Unit after linearization** parameter →  146.
- For interface measurements, this parameter always refers to the total level.


### Interface distance

Navigation  Diagnostics → Measured val. → Interface dist.

Prerequisite **Operating mode** (→  122) = **Interface** or **Interface with capacitance**

**Description**

Displays the measured distance  $D_1$  between the reference point (lower edge of flange or threaded connection) and the interface.

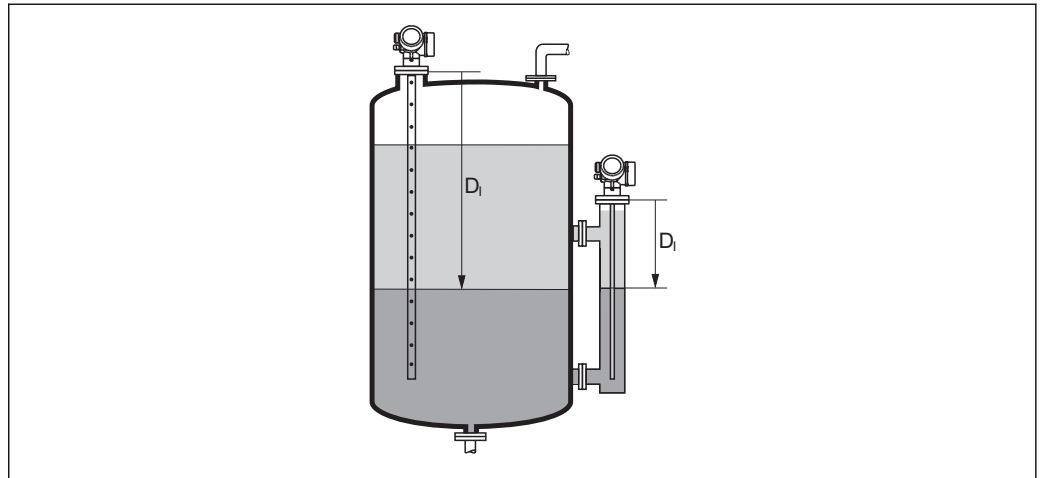**Additional information**

A0013202



The unit is defined in the **Distance unit** parameter (→ 122).

**Interface linearized****Navigation**

Diagnostics → Measured val. → Interf. lineariz

**Prerequisite**

**Operating mode** (→ 122) = **Interface** or **Interface with capacitance**

**Description**

Displays the linearized interface height.

**Additional information**

The unit is defined in the **Unit after linearization** parameter → 146.

**Thickness upper layer****Navigation**

Diagnostics → Measured val. → Thickn.upp.layer


**Prerequisite**

**Operating mode** (→ 122) = **Interface** or **Interface with capacitance**

**Description**

Displays the upper interface thickness (UP).

## Additional information

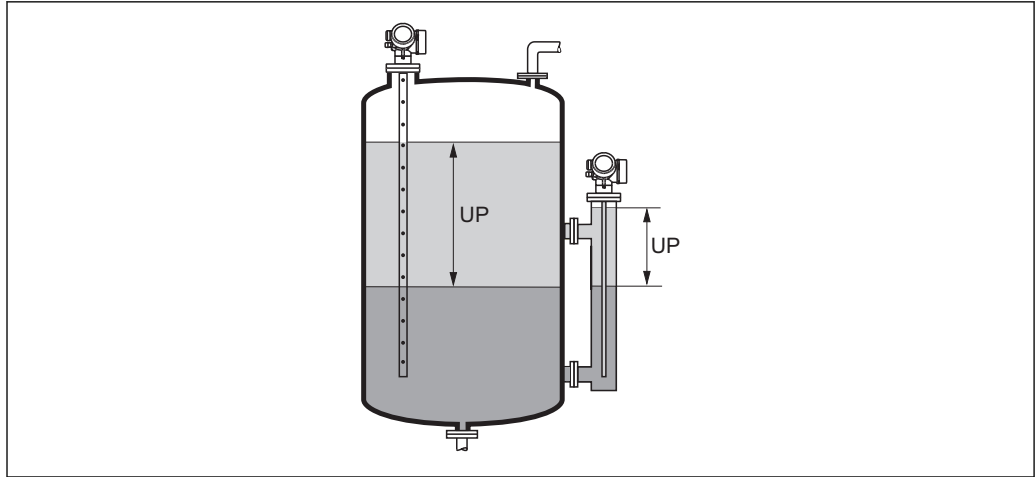

A0013313

UP Thickness upper layer



The unit is defined by the **Unit after linearization** parameter → 146.

---

**Output current 1 to 2**


---

**Navigation**

Diagnostics → Measured val. → Output curr. 1 to 2

**Description**

Shows the actual calculated value of the output current.

---

**Measured current 1**


---

**Navigation**

Diagnostics → Measured val. → Measur. curr. 1

**Prerequisite**

Only available for current output 1

**Description**

Shows the current value of the current output which is currently measured.

---

**Terminal voltage 1**


---

**Navigation**

Diagnostics → Measured val. → Terminal volt. 1

**Description**

Shows the current terminal voltage that is applied at the output.




## 17.5.5 "Data logging" submenu

Navigation  Diagnostics → Data logging

---

### Assign channel 1 to 4

---

**Navigation**  Diagnostics → Data logging → Assign chan. 1 to 4

**Description** Assign a process variable to logging channel.

**Selection**

- Off
- Level linearized
- Distance
- Unfiltered distance
- Interface linearized \*
- Interface distance \*
- Unfiltered interface distance
- Thickness upper layer \*
- Current output 1
- Measured current
- Current output 2 \*
- Terminal voltage
- Electronic temperature
- Measured capacitance \*
- Absolute echo amplitude
- Relative echo amplitude
- Absolute interface amplitude \*
- Relative interface amplitude \*
- Absolute EOP amplitude
- EOP shift
- Noise of signal
- Calculated DC value \*
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

**Factory setting** Off

**Additional information** A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

---

\* Visibility depends on order options or device settings

---

**Logging interval**


<b>Navigation</b>	Diagnostics → Data logging → Logging interval Diagnostics → Data logging → Logging interval
<b>Description</b>	Define the logging interval $t_{log}$ for data logging. This value defines the time interval between the individual data points in the memory.
<b>User entry</b>	1.0 to 3 600.0 s
<b>Factory setting</b>	30.0 s
<b>Additional information</b>	<p>This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time <math>T_{log}</math>:</p> <ul style="list-style-type: none"> <li>▪ If 1 logging channel is used: <math>T_{log} = 1000 \cdot t_{log}</math></li> <li>▪ If 2 logging channels are used: <math>T_{log} = 500 \cdot t_{log}</math></li> <li>▪ If 3 logging channels are used: <math>T_{log} = 333 \cdot t_{log}</math></li> <li>▪ If 4 logging channels are used: <math>T_{log} = 250 \cdot t_{log}</math></li> </ul> <p>Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of <math>T_{log}</math> always remains in the memory (ring memory principle).</p> <p> The logged data are deleted if this parameter is changed.</p> <p><i>Example</i></p> <p><b>When using 1 logging channel</b></p> <ul style="list-style-type: none"> <li>▪ <math>T_{log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}</math></li> <li>▪ <math>T_{log} = 1000 \cdot 10 \text{ s} = 1000 \text{ s} \approx 2.75 \text{ h}</math></li> <li>▪ <math>T_{log} = 1000 \cdot 80 \text{ s} = 80\,000 \text{ s} \approx 22 \text{ h}</math></li> <li>▪ <math>T_{log} = 1000 \cdot 3\,600 \text{ s} = 3\,600\,000 \text{ s} \approx 41 \text{ d}</math></li> </ul>

---


**Clear logging data**


<b>Navigation</b>	Diagnostics → Data logging → Clear logging Diagnostics → Data logging → Clear logging
<b>Description</b>	Clear the entire logging data.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Clear data</li> </ul>
<b>Factory setting</b>	Cancel

### "Display channel 1 to 4" submenu

**i** The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

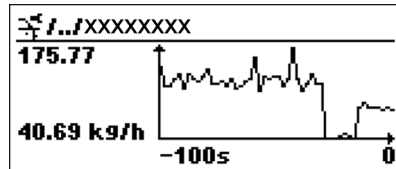

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.









**i** To return to the operating menu, press  $\oplus$  and  $\ominus$  simultaneously.

Navigation  $\left[ \text{Menu} \right] \left[ \text{Menu} \right]$  Diagnostics  $\rightarrow$  Data logging  $\rightarrow$  Displ.channel 1 to 4

### 17.5.6 "Simulation" submenu

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

*Conditions which can be simulated*

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul style="list-style-type: none"> <li>▪ Assign measurement variable (→  198)</li> <li>▪ Process variable value (→  198)</li> </ul>
Specific value of the output current	<ul style="list-style-type: none"> <li>▪ Current output simulation (→  198)</li> <li>▪ Value current output (→  199)</li> </ul>
Specific state of the switch output	<ul style="list-style-type: none"> <li>▪ Switch output simulation (→  199)</li> <li>▪ Switch status (→  199)</li> </ul>
Existence of an alarm	Device alarm simulation (→  200)
Existence of a specific diagnostic message	Diagnostic event simulation (→  200)

**Structure of the submenu**

*Navigation*  Expert → Diagnostics → Simulation

► Simulation	
Assign measurement variable	→ 198
Process variable value	→ 198
Current output 1 to 2 simulation	→ 198
Value current output 1 to 2	→ 199
Switch output simulation	→ 199
Switch status	→ 199
Device alarm simulation	→ 200
Diagnostic event simulation	→ 200



### Description of parameters

*Navigation*  Expert → Diagnostics → Simulation

---

#### Assign measurement variable



---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Assign meas.var.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Level</li> <li>■ Interface *</li> <li>■ Thickness upper layer *</li> <li>■ Level linearized</li> <li>■ Interface linearized</li> <li>■ Thickness linearized</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<ul style="list-style-type: none"> <li>■ The value of the variable to be simulated is defined in the <b>Process variable value</b> parameter (→  198).</li> <li>■ If <b>Assign measurement variable</b> ≠ <b>Off</b>, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category.</li> </ul>

---

#### Process variable value


---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Proc. var. value
<b>Prerequisite</b>	<b>Assign measurement variable</b> (→  198) ≠ <b>Off</b>
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

---

#### Current output 1 to 2 simulation

---


<b>Navigation</b>	 Expert → Diagnostics → Simulation → Curr.out. 1 to 2 sim.
<b>Description</b>	Switch the simulation of the current output on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>

---




\* Visibility depends on order options or device settings

<b>Factory setting</b>	Off
<b>Additional information</b>	An active simulation is indicated by a diagnostic message of the <i>Function check (C)</i> category.


---

**Value current output 1 to 2**





---

<b>Navigation</b>	  Expert → Diagnostics → Simulation → Value curr.out 1 to 2
<b>Prerequisite</b>	<b>Current output simulation (→  198) = On</b>
<b>Description</b>	Defines the value of the simulated output current.
<b>User entry</b>	3.59 to 22.5 mA
<b>Factory setting</b>	3.59 mA
<b>Additional information</b>	The current output assumes the value specified in this parameter. In this way, users can verify the correct adjustment of the current output and the correct function of connected control units.


---

**Switch output simulation**






---

<b>Navigation</b>	  Expert → Diagnostics → Simulation → Switch sim.
<b>Description</b>	Switch the simulation of the switch output on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>
<b>Factory setting</b>	Off

---

**Switch status**



---



<b>Navigation</b>	  Expert → Diagnostics → Simulation → Switch status
<b>Prerequisite</b>	<b>Switch output simulation (→  199) = On</b>
<b>Description</b>	Current status of the switch output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Open</li> <li>■ Closed</li> </ul>
<b>Factory setting</b>	Open

**Additional information** The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

---

### Device alarm simulation

---


**Navigation**   Expert → Diagnostics → Simulation → Dev. alarm sim.

**Description** Switch the device alarm on and off.

**Selection**

- Off
- On



**Factory setting** Off

**Additional information** When selecting the **On** option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.  
An active simulation is indicated by the  **C484 Failure mode simulation** diagnostic message.

---

### Diagnostic event simulation

---

**Navigation**   Expert → Diagnostics → Simulation → Diag. event sim.

**Description** Select the diagnostic event to be simulated. Note: To terminate the simulation, select 'Off'.

**Factory setting** Off

**Additional information** When operated via the local display, the selection list can be filtered according to the event categories (**Diagnostic event category** parameter).





## 17.5.7 "Device check" submenu

Navigation   Diagnostics → Device check

---

### Start device check



---

Navigation	  Diagnostics → Device check → Start dev. check
Description	Start a device check.
Selection	<ul style="list-style-type: none"> <li>■ No</li> <li>■ Yes</li> </ul>
Factory setting	No
Additional information	In the case of a lost echo a device check can not be performed.

---

### Result device check



---

Navigation	  Diagnostics → Device check → Result dev.check
Description	Displays the result of the device check.
Additional information	<p><b>Meaning of the display options</b></p> <ul style="list-style-type: none"> <li>■ <b>Installation ok</b> Measurement possible without restrictions.</li> <li>■ <b>Accuracy reduced</b> A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes.</li> <li>■ <b>Measurement capability reduced</b> A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium.</li> <li>■ <b>Check not done</b> No device check has been performed.</li> </ul>

---

### Last check time



---

Navigation	  Diagnostics → Device check → Last check time
Description	Displays the operating time at which the last device check has been performed.

---

**Level signal**




---

<b>Navigation</b>	  Diagnostics → Device check → Level signal
<b>Prerequisite</b>	Device check has been performed.
<b>Description</b>	Displays result of the device check for the level signal.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Check not done</li> <li>▪ Check not OK</li> <li>▪ Check OK</li> </ul>
<b>Additional information</b>	For <b>Level signal = Check not OK</b> : Check the mounting position of the device and the dielectric constant of the medium.

---

**Launch signal**





---

<b>Navigation</b>	  Diagnostics → Device check → Launch signal
<b>Prerequisite</b>	Device check has been performed.
<b>Description</b>	Displays result of the display check for the launch signal.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Check not done</li> <li>▪ Check not OK</li> <li>▪ Check OK</li> </ul>
<b>Additional information</b>	For <b>Launch signal = Check not OK</b> : Check the mounting position of the device. In non-metallic vessels use a metal plate or a metal flange.


---

**Interface signal**


---

<b>Navigation</b>	  Diagnostics → Device check → Interface signal
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Operating mode</b> (→  122) = <b>Interface</b> or <b>Interface with capacitance</b></li> <li>▪ Device check has been performed.</li> </ul>
<b>Description</b>	Displays result of the device check for the interface signal.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Check not done</li> <li>▪ Check not OK</li> <li>▪ Check OK</li> </ul>

### 17.5.8 "Heartbeat" submenu

 The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

#### Detailed description

SD01872F

*Navigation*  Diagnostics → Heartbeat

# Index

## A

- Access authorization to parameters
  - Read access . . . . . 52
  - Write access . . . . . 52
- Access code . . . . . 52
  - Incorrect input . . . . . 52
- Access status display (Parameter) . . . . . 134
- Access status tooling (Parameter) . . . . . 133
- Accessories
  - Communication-specific . . . . . 101
  - Device-specific . . . . . 94
  - Service-specific . . . . . 102
  - System components . . . . . 102
- Activate table (Parameter) . . . . . 152
- Actual diagnostics (Parameter) . . . . . 183
- Administration (Submenu) . . . . . 180
- Advanced setup (Submenu) . . . . . 133
- Application . . . . . 9
- Assign channel 1 to 4 (Parameter) . . . . . 193
- Assign current output (Parameter) . . . . . 161
- Assign diagnostic behavior (Parameter) . . . . . 166
- Assign limit (Parameter) . . . . . 166
- Assign measurement variable (Parameter) . . . . . 198
- Assign status (Parameter) . . . . . 166
- Automatic DC calculation (Wizard) . . . . . 141

## B

- Backlight (Parameter) . . . . . 176
- Backup state (Parameter) . . . . . 178
- Blocking distance (Parameter) . . . . . 137, 154
- Bluetooth® wireless technology . . . . . 48
- Bypass . . . . . 23

## C

- Calculated DC value (Parameter) . . . . . 139
- Cleaning . . . . . 91
- Clear logging data (Parameter) . . . . . 194
- Coax probe
  - Design . . . . . 11
- Coax probes
  - Lateral loading capacity . . . . . 20
- Code incorrect (Parameter) . . . . . 157
- Comparison result (Parameter) . . . . . 178
- Configuration backup display (Submenu) . . . . . 177
- Configuration management (Parameter) . . . . . 177
- Configuration of an interface measurement . . . . . 70
- Configuring an interface measurement . . . . . 70
- Confirm access code (Parameter) . . . . . 182
- Confirm distance (Parameter) . . . . . 129, 132
- Confirm probe length (Parameter) . . . . . 159, 160
- Context menu . . . . . 63
- Contrast display (Parameter) . . . . . 176
- Current output 1 to 2 (Submenu) . . . . . 161
- Current output 1 to 2 simulation (Parameter) . . . . . 198
- Current span (Parameter) . . . . . 162
- Customer value (Parameter) . . . . . 151

## D

- Damping output (Parameter) . . . . . 163
- Data logging (Submenu) . . . . . 193
- DC value (Parameter) . . . . . 127, 139, 141
- DC value lower medium (Parameter) . . . . . 136
- DD . . . . . 65
- Deactivate SIL/WHG (Wizard) . . . . . 157
- Decimal places 1 (Parameter) . . . . . 173
- Decimal places menu (Parameter) . . . . . 175
- Define access code . . . . . 52
- Define access code (Parameter) . . . . . 180, 182
- Define access code (Wizard) . . . . . 182
- Designated use . . . . . 9
- Device alarm simulation (Parameter) . . . . . 200
- Device check (Submenu) . . . . . 201
- Device Descriptions . . . . . 65
- Device ID (Parameter) . . . . . 188
- Device information (Submenu) . . . . . 187
- Device name (Parameter) . . . . . 187
- Device replacement . . . . . 92
- Device reset (Parameter) . . . . . 180
- Device revision (Parameter) . . . . . 188
- Device tag (Parameter) . . . . . 122, 187
- Device type (Parameter) . . . . . 189
- Diagnostic event
  - In the operating tool . . . . . 84
- Diagnostic event simulation (Parameter) . . . . . 200
- Diagnostic events . . . . . 81
- Diagnostic list . . . . . 85
- Diagnostic list (Submenu) . . . . . 185
- Diagnostic message . . . . . 81
- Diagnostics
  - Symbols . . . . . 81
- Diagnostics (Menu) . . . . . 183
- Diagnostics 1 (Parameter) . . . . . 185
- Diagnostics event . . . . . 82
- Diameter (Parameter) . . . . . 149
- DIP switch
  - see Write protection switch
- Display (Submenu) . . . . . 171
- Display and operating module FHX50 . . . . . 47
- Display channel 1 to 4 (Submenu) . . . . . 195
- Display damping (Parameter) . . . . . 174
- Display interval (Parameter) . . . . . 174
- Display module . . . . . 57
- Display symbols . . . . . 58
- Disposal . . . . . 93
- Distance (Parameter) . . . . . 126, 132, 190
- Distance unit (Parameter) . . . . . 122
- Document
  - Function . . . . . 5
- Document function . . . . . 5

## E

- Electronics housing
  - Design . . . . . 12

Empty calibration (Parameter) . . . . . 124  
 Enter access code (Parameter) . . . . . 134  
 Envelope curve display . . . . . 64  
 Event history . . . . . 88  
 Event level  
     Explanation . . . . . 81  
     Symbols . . . . . 81  
 Event list (Submenu) . . . . . 186  
 Event logbook (Submenu) . . . . . 186  
 Event text . . . . . 82  
 Events list . . . . . 88  
 Extended order code 1 (Parameter) . . . . . 188  
 Exterior cleaning . . . . . 91

**F**

Failure current (Parameter) . . . . . 164  
 Failure mode (Parameter) . . . . . 163, 169  
 FHX50 . . . . . 47  
 Field of application  
     Residual risks . . . . . 9  
 Filter options (Parameter) . . . . . 186  
 Filtering the event logbook . . . . . 88  
 Firmware version (Parameter) . . . . . 187  
 Fixed current (Parameter) . . . . . 163  
 Flange . . . . . 26  
 Format display (Parameter) . . . . . 171  
 Free text (Parameter) . . . . . 147  
 Full calibration (Parameter) . . . . . 125  
 FV (HART device variable) . . . . . 65

**H**

Hardware write protection . . . . . 53  
 HART device variables . . . . . 65  
 HART loop converter HMX50 . . . . . 38  
 HART protocol . . . . . 49  
 HART-Integration . . . . . 65  
 Header (Parameter) . . . . . 174  
 Header text (Parameter) . . . . . 175  
 Heartbeat (Submenu) . . . . . 203  
 HMX50 . . . . . 38  
 Housing  
     Design . . . . . 12  
     Turning . . . . . 28

**I**

Input mask . . . . . 61  
 Interface (Parameter) . . . . . 128  
 Interface (Submenu) . . . . . 135  
 Interface distance (Parameter) . . . . . 129, 190  
 Interface linearized (Parameter) . . . . . 148, 191  
 Interface property (Parameter) . . . . . 135  
 Interface signal (Parameter) . . . . . 202  
 Intermediate height (Parameter) . . . . . 149  
 Invert output signal (Parameter) . . . . . 169

**K**

Keypad lock  
     Disabling . . . . . 56  
     Switching on . . . . . 56

**L**

Language (Parameter) . . . . . 171  
 Last backup (Parameter) . . . . . 177  
 Last check time (Parameter) . . . . . 201  
 Launch signal (Parameter) . . . . . 202  
 Level (Parameter) . . . . . 125, 151  
 Level correction (Parameter) . . . . . 138  
 Level linearized (Parameter) . . . . . 148, 190  
 Level signal (Parameter) . . . . . 202  
 Level unit (Parameter) . . . . . 137  
 Linearization (Submenu) . . . . . 143, 144, 145  
 Linearization type (Parameter) . . . . . 145  
 Local display . . . . . 46  
     see Diagnostics message  
     see In alarm condition  
 Locking status . . . . . 58  
 Locking status (Parameter) . . . . . 133  
 Logging interval (Parameter) . . . . . 194

**M**

Maintenance . . . . . 91  
 Managing the device configuration . . . . . 75  
 Manual thickness upper layer (Parameter) . . . . . 138, 141  
 Manufacturer ID (Parameter) . . . . . 189  
 Mapping (Wizard) . . . . . 132  
 Mapping end point (Parameter) . . . . . 131, 132  
 Maximum value (Parameter) . . . . . 148  
 Measured current 1 (Parameter) . . . . . 192  
 Measured thickness upper layer (Parameter) . . . . . 139  
 Measured value symbols . . . . . 59  
 Measured values (Submenu) . . . . . 190  
 Media . . . . . 9  
 Medium group (Parameter) . . . . . 123  
 Menu  
     Diagnostics . . . . . 183  
     Setup . . . . . 122  
 Mounting position for interface measurements . . . . . 18

**N**

Number format (Parameter) . . . . . 175

**O**

Occupational safety . . . . . 10  
 Operating elements  
     Diagnostics message . . . . . 82  
 Operating mode (Parameter) . . . . . 122  
 Operating module . . . . . 57  
 Operating time (Parameter) . . . . . 177, 184  
 Operating time from restart (Parameter) . . . . . 184  
 Operational safety . . . . . 10  
 Order code (Parameter) . . . . . 188  
 Output current 1 to 2 (Parameter) . . . . . 164, 192  
 Output echo lost (Parameter) . . . . . 153  
 Overvoltage protection  
     General information . . . . . 42

**P**

Present mapping (Parameter) . . . . . 130  
 Present probe length (Parameter) . . . . . 158, 160

- Previous diagnostics (Parameter) . . . . . 183  
 Probe grounded (Parameter) . . . . . 158  
 Probe length correction (Wizard) . . . . . 160  
 Probe settings (Submenu) . . . . . 158  
 Process property (Parameter) . . . . . 135  
 Process variable value (Parameter) . . . . . 198  
 Product safety . . . . . 10  
 PV (HART device variable) . . . . . 65
- R**
- Ramp at echo lost (Parameter) . . . . . 154  
 Read access . . . . . 52  
 Record map (Parameter) . . . . . 131, 132  
 Registered trademarks . . . . . 8  
 Remedial measures  
     Calling up . . . . . 83  
     Closing . . . . . 83  
 Remote operation . . . . . 49  
 Repair concept . . . . . 92  
 Replacing a device . . . . . 92  
 Requirements for personnel . . . . . 9  
 Reset write protection (Parameter) . . . . . 157  
 Result device check (Parameter) . . . . . 201  
 Return . . . . . 93  
 Rod probe  
     Design . . . . . 11  
 Rod probes  
     Lateral loading capacity . . . . . 20  
 Rope probe  
     Design . . . . . 11  
 Rope probes  
     Installation . . . . . 26  
     Tensile loading capacity . . . . . 20
- S**
- Safety instructions  
     Basic . . . . . 9  
 Safety Instructions (XA) . . . . . 7  
 Safety settings (Submenu) . . . . . 153  
 Securing coax probes . . . . . 22  
 Separator (Parameter) . . . . . 175  
 Serial number (Parameter) . . . . . 187  
 Service interface (CDI) . . . . . 49  
 Setting the operating language . . . . . 69  
 Settings  
     Managing the device configuration . . . . . 75  
     Operating language . . . . . 69  
 Setup (Menu) . . . . . 122  
 Signal quality (Parameter) . . . . . 127  
 SIL/WHG confirmation (Wizard) . . . . . 156  
 Simulation (Submenu) . . . . . 197, 198  
 Spare parts . . . . . 93  
     Nameplate . . . . . 93  
 Start device check (Parameter) . . . . . 201  
 Status signals . . . . . 58, 81  
 Stilling well . . . . . 23  
 Submenu  
     Administration . . . . . 180  
     Advanced setup . . . . . 133
- Configuration backup display . . . . . 177  
 Current output 1 to 2 . . . . . 161  
 Data logging . . . . . 193  
 Device check . . . . . 201  
 Device information . . . . . 187  
 Diagnostic list . . . . . 185  
 Display . . . . . 171  
 Display channel 1 to 4 . . . . . 195  
 Event list . . . . . 186  
 Event logbook . . . . . 186  
 Events list . . . . . 88  
 Heartbeat . . . . . 203  
 Interface . . . . . 135  
 Linearization . . . . . 143, 144, 145  
 Measured values . . . . . 190  
 Probe settings . . . . . 158  
 Safety settings . . . . . 153  
 Simulation . . . . . 197, 198  
 Switch output . . . . . 165  
 SV (HART device variable) . . . . . 65  
 Switch output (Submenu) . . . . . 165  
 Switch output function (Parameter) . . . . . 165  
 Switch output simulation (Parameter) . . . . . 199  
 Switch status (Parameter) . . . . . 169, 199  
 Switch-off delay (Parameter) . . . . . 169  
 Switch-off value (Parameter) . . . . . 168  
 Switch-on delay (Parameter) . . . . . 168  
 Switch-on value (Parameter) . . . . . 167  
 Symbols  
     For correction . . . . . 61  
     In the text and numeric editor . . . . . 61  
 System components . . . . . 102
- T**
- Table mode (Parameter) . . . . . 150  
 Table number (Parameter) . . . . . 151  
 Tank type (Parameter) . . . . . 123  
 Terminal voltage 1 (Parameter) . . . . . 192  
 Thermal insulation . . . . . 25  
 Thickness upper layer (Parameter) . . . . . 191  
 Timestamp (Parameter) . . . . . 183, 184, 185  
 Tool . . . . . 26  
 Transmitter  
     Turning the display . . . . . 29  
     Turning the display module . . . . . 29  
 Transmitter housing  
     Turning . . . . . 28  
 Troubleshooting . . . . . 77  
 Tube diameter (Parameter) . . . . . 123  
 Turning the display . . . . . 29  
 Turning the display module . . . . . 29  
 TV (HART device variable) . . . . . 65
- U**
- Underground tanks . . . . . 24  
 Unit after linearization (Parameter) . . . . . 146  
 Use calculated DC value (Parameter) . . . . . 140, 141  
 Use of the measuring device  
     see Designated use

Using measuring devices	
Borderline cases . . . . .	9
Incorrect use . . . . .	9

**V**

Value 1 display (Parameter) . . . . .	173
Value current output 1 to 2 (Parameter) . . . . .	199
Value echo lost (Parameter) . . . . .	153

**W**

Wizard	
Automatic DC calculation . . . . .	141
Deactivate SIL/WHG . . . . .	157
Define access code . . . . .	182
Mapping . . . . .	132
Probe length correction . . . . .	160
SIL/WHG confirmation . . . . .	156
Write access . . . . .	52
Write protection	
Via access code . . . . .	52
Via write protection switch . . . . .	53
Write protection switch . . . . .	53



71488044

[www.addresses.endress.com](http://www.addresses.endress.com)

---