


Operating Instructions

Micropilot NMR81

Tank Gauging



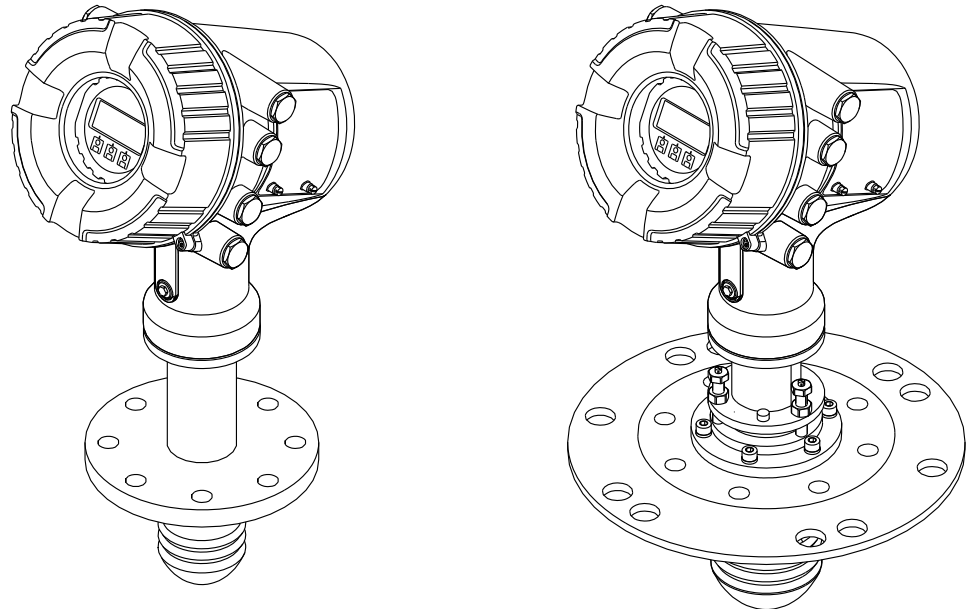

A0023555

Table of contents

1	About this document	4	9.2	Initial settings	55
1.1	Document function	4	9.3	Configuring the measuring device	58
1.2	Symbols	4	9.4	Configuring the tank gauging application	60
1.3	Documentation	7	9.5	Advanced settings	82
1.4	Registered trademarks	9	9.6	Simulation	82
			9.7	Protecting settings from unauthorized access	82
2	Basic safety instructions	10	10	Operation	83
2.1	Requirements for the personnel	10	10.1	Reading off the device locking status	83
2.2	Designated use	10	10.2	Reading off measured values	83
2.3	Workplace safety	11	11	Diagnostics and troubleshooting ...	84
2.4	Operational safety	11	11.1	General trouble shooting	84
2.5	Product safety	11	11.2	Diagnostic information on local display	85
3	Product description	12	11.3	Diagnostic information in FieldCare	88
3.1	Product design	12	11.4	Overview of the diagnostic messages	90
4	Incoming acceptance and product identification	13	11.5	Diagnostic list	96
4.1	Incoming acceptance	13	11.6	Reset measuring device	97
4.2	Product identification	13	11.7	Device information	97
4.3	Storage and transport	15	11.8	Firmware history	97
5	Installation	16	12	Maintenance	98
5.1	Installation conditions	16	12.1	Maintenance tasks	98
5.2	Post-installation check	18	12.2	Endress+Hauser services	98
6	Electrical connection	19	13	Repair	99
6.1	Terminal assignment	19	13.1	General information on repairs	99
6.2	Connecting requirements	34	13.2	Spare parts	99
6.3	Ensuring the degree of protection	35	13.3	Endress+Hauser services	100
6.4	Post-connection check	35	13.4	Return	100
7	Operability	36	13.5	Disposal	100
7.1	Overview of the operation options	36	14	Accessories	101
7.2	Structure and function of the operating menu	37	14.1	Device-specific accessories	101
7.3	Access to the operating menu via the local or remote display and operating module.	38	14.2	Communication-specific accessories	103
7.4	Access to the operating menu via the service interface and FieldCare	50	14.3	Service-specific accessories	103
7.5	Access to the operating menu via Tankvision Tank Scanner NXA820 and FieldCare	51	14.4	System components	103
8	System integration	54	15	Operating menu	104
8.1	Overview of the Device Description files (DTM)	54	15.1	Overview of the operating menu	104
9	Commissioning	55	15.2	"Operation" menu	113
9.1	Terms related to tank measurement	55	15.3	"Setup" menu	122
			15.4	"Diagnostics" menu	238
			Index	250	





1 About this document

1.1 Document function




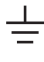


These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols




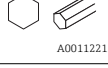

1.2.1 Safety symbols

Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.













1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.


1.2.3 Tool symbols

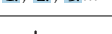

Symbol	Meaning
 A0013442	Torx screwdriver
 A0011220	Flat blade screwdriver
 A0011219	Cross-head screwdriver
 A0011221	Allen key
 A0011222	Hexagon wrench

1.2.4 Symbols for certain types of information



Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

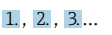1.2.5 Symbols in graphics


Symbol	Meaning
1, 2, 3 ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections

Symbol	Meaning
	Hazardous area Indicates a hazardous area.
	Safe area (non-hazardous area) Indicates the non-hazardous area.

1.2.6 Symbols at the device

Symbol	Meaning
	Safety instructions Observe the safety instructions contained in the associated Operating Instructions.
	Temperature resistance of the connection cables Specifies the minimum value of the temperature resistance of the connection cables.

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

1.3.1 Technical Information (TI)

The Technical Information contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

Device	Technical Information
Micropilot NMR81	TI01252G

1.3.2 Brief Operating Instructions (KA)

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

Device	Brief Operating Instructions
Micropilot NMR81	KA01194G

1.3.3 Operating Instructions (BA)

The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

It also contains a detailed explanation of each individual parameter in the operating menu (except the **Expert** menu). The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

Device	Operating Instructions
Micropilot NMR81	BA01450G

1.3.4 Description of Device Parameters (GP)

The Description of Device Parameters provides a detailed explanation of each individual parameter in the 2nd part of the operating menu: the **Expert** menu. It contains all the device parameters and allows direct access to the parameters by entering a specific code. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

Device	Description of Device Parameters
Micropilot NMR81	GP01068G

1.3.5 Safety instructions (XA)

Ordering feature 010 "Approval"	Meaning	XA
BE	ATEX II 1/2G Ex ia/db IIC T4 Ga/Gb ATEX II 2 (1)G Ex db [ia Ga] IIC T4 Gb	XA01410G
FE	FM C/US XP-AIS Cl.I Div.1 Gr.BCD T4 AEx d[ia] IIC T4	XA01436G
GE	EAC Ga/Gb Ex ia/db IIC T4...T1 X EAC 1 Ex db [ia] IIC T4...T1 X	XA01582G
IE	IEC Ex ia/db IIC T4 Ga/Gb IEC Ex db [ia Ga] IIC T4 Gb	XA01410G
KE	KC Ex ia/db IIC T4 Ga/Gb KC Ex db [ia Ga] IIC T4 Gb	XA01579G
ME	INMETRO Ex ia/db IIC T4 Ga/Gb INMETRO Ex db [ia Ga] IIC T4 Gb	XA01580G
NE	NEPSI Ex ia/db IIC T4 Ga/Gb NEPSI Ex db [ia Ga] IIC T4 Gb	XA01581G
TA	TIIS Ex d[ia] IIC T6 Ga/Gb	in preparation

1.4 Registered trademarks

FieldCare®

Registered trademark of the Endress+Hauser Process Solutions AG, Reinach, Switzerland

MODBUS®

Registered trademark of the MODBUS-IDA, Hopkinton, MA, USA

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use

Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contact-less level measurement of liquids. The device must be installed in closed metallic tanks or reinforced concrete tanks, or similar enclosure structures made of comparable attenuating material. Operation is completely harmless to humans and animals.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.
- ▶ Observe the limit values in the "Technical Information".

The manufacturer is not liable for damage caused by improper or non-designated use.

Residual risk

During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

- ▶ For high process temperatures: Install protection against contact in order to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.


2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

3 Product description

3.1 Product design

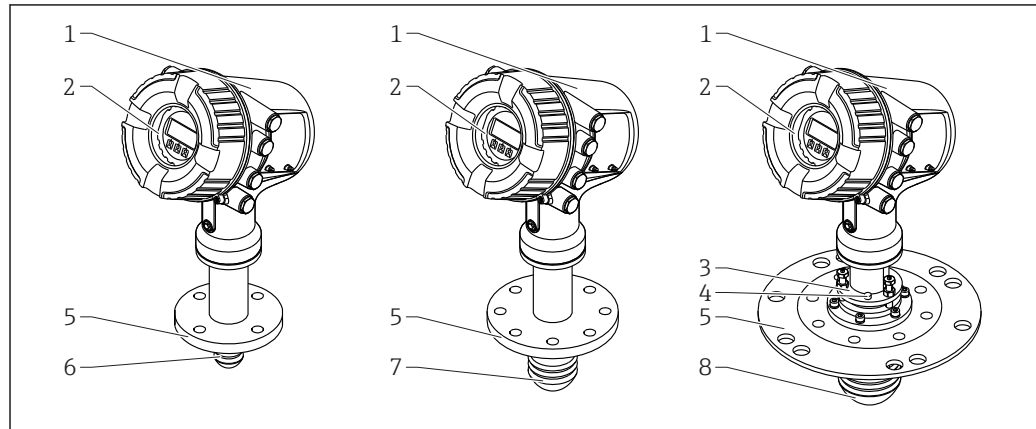

1 Design of Micropilot NMR81

- 1 Electronics housing
- 2 Display and operating module (can be operated without opening the cover)
- 3 Alignment device for antenna 100 mm (4 in)
- 4 Level tool (used to check the correct alignment of the antenna)
- 5 Process connection (flange)
- 6 Antenna 50 mm (2 in)
- 7 Antenna 80 mm (3 in)
- 8 Antenna 100 mm (4 in)

4 Incoming acceptance and product identification

4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) enclosed?



If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

4.2 Product identification

The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Nameplate

The nameplate layout includes the following fields:

- 1: Manufacturer address
- 2: Device name
- 3: Order code
- 4: Serial number
- 5: Extended order code
- 6: Supply voltage
- 7: Maximum process pressure
- 8: Maximum process temperature
- 9: Permitted ambient temperature (T_a)
- 10: Temperature resistance of cable
- 11: Thread for cable entry
- 12: Material in contact with process
- 13: Device ID
- 14: Firmware version
- 15: Device revision
- 16: Metrology certification numbers
- 17: Customized parametrization data
- 18: Ambient temperature range
- 19: CE mark / C-tick mark
- 20: Additional information on the device version
- 21: Ingress protection
- 22: Certificate symbol
- 23: Data concerning the Ex approval
- 24: General certificate of approval
- 25: Associated Safety Instructions (XA)
- 26: Manufacturing date
- 27: RoHS mark
- 28: QR code for the Endress+Hauser Operations App

A0027791

2 Nameplate

- 1 Manufacturer address
- 2 Device name
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Supply voltage
- 7 Maximum process pressure
- 8 Maximum process temperature
- 9 Permitted ambient temperature (T_a)
- 10 Temperature resistance of cable
- 11 Thread for cable entry
- 12 Material in contact with process
- 13 Device ID
- 14 Firmware version
- 15 Device revision
- 16 Metrology certification numbers
- 17 Customized parametrization data
- 18 Ambient temperature range
- 19 CE mark / C-tick mark
- 20 Additional information on the device version
- 21 Ingress protection
- 22 Certificate symbol
- 23 Data concerning the Ex approval
- 24 General certificate of approval
- 25 Associated Safety Instructions (XA)
- 26 Manufacturing date
- 27 RoHS mark
- 28 QR code for the Endress+Hauser Operations App

4.2.2 Manufacturer address

Endress+Hauser SE+Co. KG
 Hauptstraße 1
 79689 Maulburg, Germany
 Address of the manufacturing plant: See nameplate.

4.3 Storage and transport

4.3.1 Storage conditions

- Storage temperature: -50 to +80 °C (-58 to +176 °F)
- Store the device in its original packaging.

4.3.2 Transport

NOTICE

Housing or antenna may be damaged or break away.

Risk of injury

- ▶ Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ▶ Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

5 Installation

5.1 Installation conditions

5.1.1 Mounting position

General conditions


- Do not install in the centre of the tank.
- Do not install above a filling stream.
- Avoid any tank installations (e.g. limit switches, temperature probes) within in the signal beam.

Minimum wall distance

Measuring range	Minimum wall distance		
	Antenna 50mm/2" ¹⁾	Antenna 80mm/3" ²⁾	Antenna 100mm/4" ³⁾
5 m (16 ft)	0.3 m (0.98 ft)	0.17 m (0.55 ft)	0.13 m (0.44 ft)
10 m (33 ft)	0.6 m (1.9 ft)	0.33 m (1.1 ft)	0.27 m (0.87 ft)
15 m (49 ft)	0.9 m (2.9 ft)	0.5 m (1.6 ft)	0.4 m (1.3 ft)
20 m (66 ft)	1.2 m (3.9 ft)	0.67 m (2.2 ft)	0.53 m (1.7 ft)
25 m (82 ft)	1.5 m (4.9 ft)	0.83 m (2.7 ft)	0.67 m (2.2 ft)
30 m (98 ft)	1.8 m (5.9 ft)	1.0 m (3.3 ft)	0.8 m (2.6 ft)

- 1) Ordering feature 100 "Antenna", option AB
- 2) Ordering feature 100 "Antenna", option AC
- 3) Ordering feature 100 "Antenna", option AD

5.1.2 Mounting nozzle

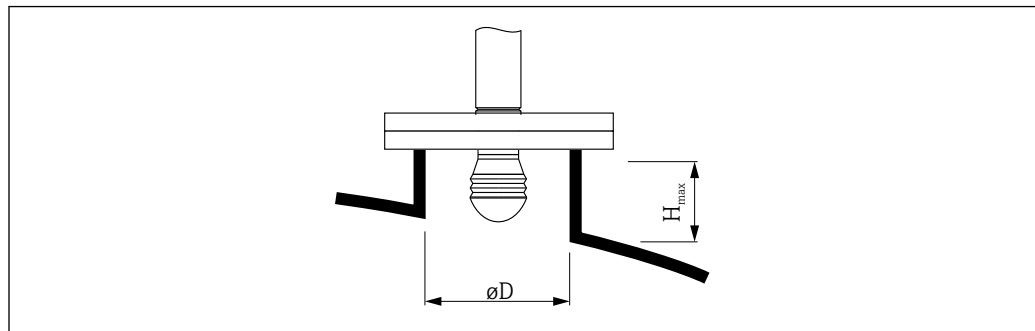

A0032956


Inner nozzle diameter ($\varnothing D$)	Maximum nozzle length (H_{max}) ¹⁾		
	Antenna AB ²⁾ : 50mm/2"	Antenna AC ²⁾ : 80mm/3"	Antenna AD ²⁾ : 100mm/4"
> 45 mm (1.77 in); ≤ 75 mm (2.95 in)	600 mm (24 in)	-	-
> 75 mm (2.95 in); ≤ 95 mm (3.74 in)	1000 mm (40 in)	1700 mm (68 in)	-
> 95 mm (3.74 in); ≤ 150 mm (5.91 in)	1250 mm (50 in)	2150 mm (86 in)	2850 mm (114 in)
> 150 mm (5.91 in)	1850 mm (74 in)	3200 mm (128 in)	4300 mm (172 in)

- 1) In case of longer nozzles, a reduced measuring performance is to be expected.
- 2) Feature 100 of the product structure

5.1.3 Vertical alignment of the 50mm(2") and 80mm (3") antenna

For optimum measuring accuracy the antenna must be installed at right angles to the medium surface. An adjustable seal is available for the alignment.

Adjustable seal

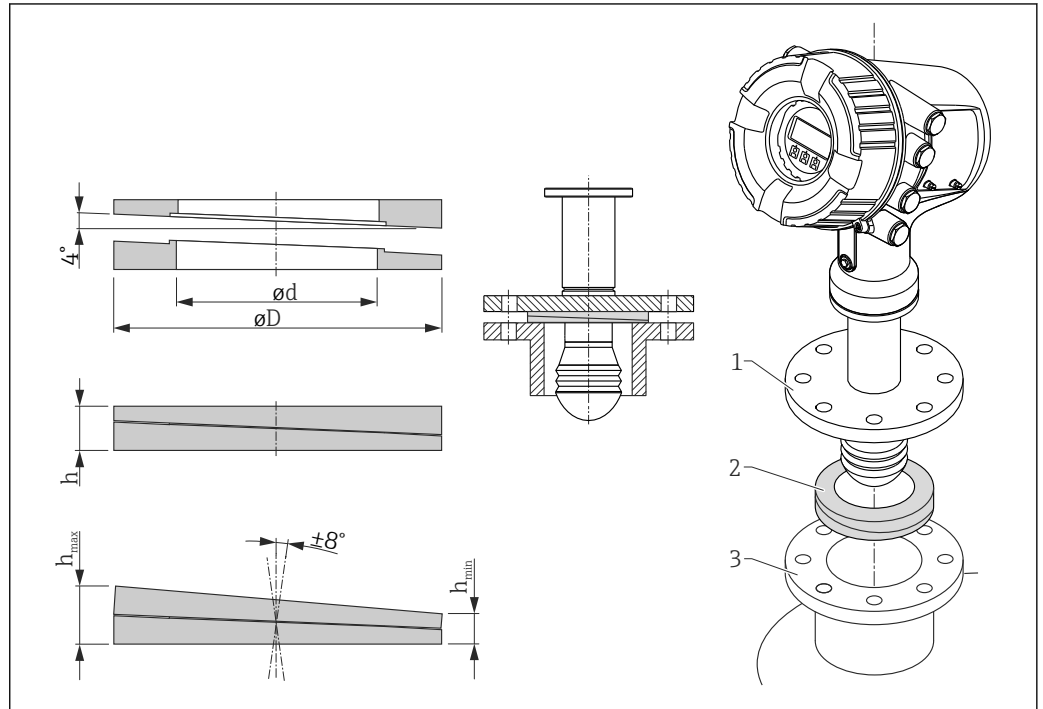

3 Adjustable seal used to align the device by $\pm 8^\circ$


A0027767

Property	Ordering feature 620 "Accessory Enclosed" ¹⁾		
	PS	PT	PU
Order code ²⁾	71285499	71285501	71285503
Compatible with	<ul style="list-style-type: none"> ▪ DN50 PN10-40 ▪ ASME 2" 150lbs ▪ JIS 50A 10K 	DN80 PM10-40	<ul style="list-style-type: none"> ▪ ASME 3" 150lbs ▪ JIS 80A 10K
Length of screws	100 mm (3.9 in)	100 mm (3.9 in)	100 mm (3.9 in)
Size of screws	M14	M14	M14
Material	FKM	FKM	FKM
Process pressure	-0.1 to +0.1 bar (-1.45 to +1.45 psi)		
Process temperature	-40 to +80 °C (-40 to +176 °F)		
ØD	105 mm (4.13 in)	142 mm (5.59 in)	133 mm (5.24 in)
Ød	60 mm (2.36 in)	89 mm (3.5 in)	89 mm (3.5 in)
h	16.5 mm (0.65 in)	22 mm (0.87 in)	22 mm (0.87 in)
h _{min}	9 mm (0.35 in)	14 mm (0.55 in)	14 mm (0.55 in)
h _{max}	24 mm (0.95 in)	30 mm (1.18 in)	30 mm (1.18 in)

- 1) With this ordering feature the adjustable seal is supplied together with the device.
 2) This order code must be used if the adjustable seal is ordered separately.

5.1.4 Vertical alignment of the 100mm(4") antenna

For optimum measuring accuracy the antenna must be installed at right angles to the medium surface. For this purpose the 100mm(4") antenna always has an alignment unit. A level tool indicating the correct alignment is attached to the alignment tool. A level tool indicating the correct alignment is attached to the alignment tool.

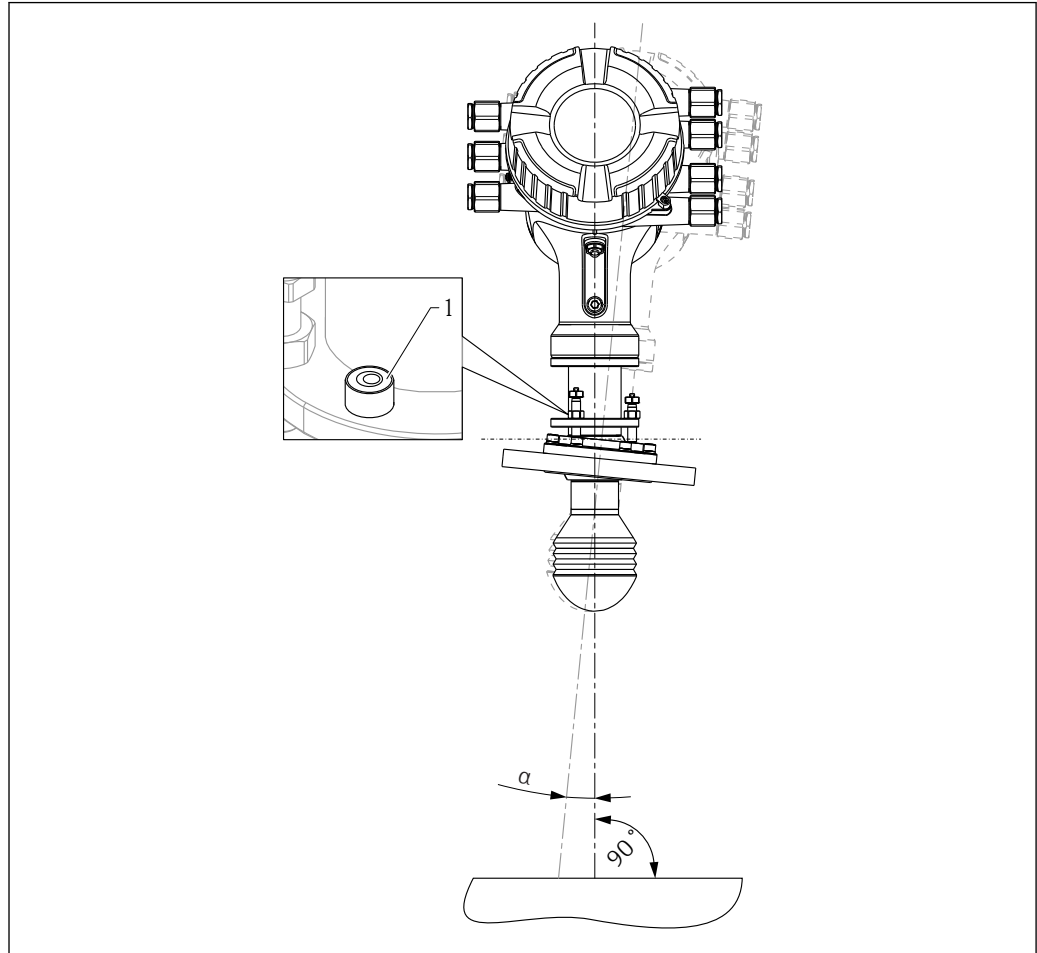

A0027776

4 Alignment unit of the 100mm(4") antenna

1 Level tool indicating the correct alignment


α Alignment angle; $\alpha_{max} = 25^\circ$

5.2 Post-installation check

<input type="radio"/>	Is the device undamaged (visual inspection)?
<input type="radio"/>	Does the device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> ▪ Process temperature ▪ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document) ▪ Ambient temperature range ▪ Measuring range
<input type="radio"/>	Are the measuring point identification and labeling correct (visual inspection)?
<input type="radio"/>	Is the device adequately protected from precipitation and direct sunlight?

6 Electrical connection

6.1 Terminal assignment

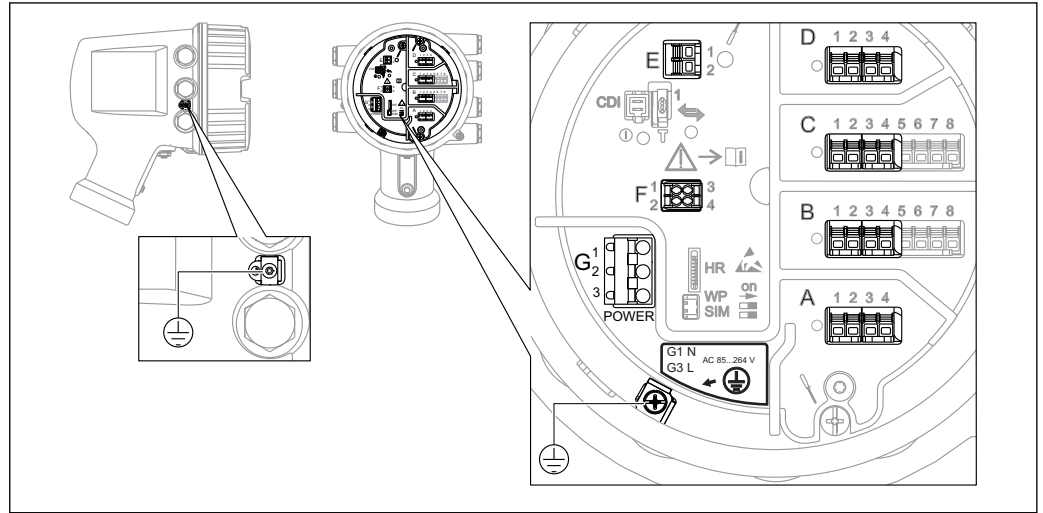


A0026372

5 Terminal compartment (typical example) and ground terminals

Terminal area	Module
A/B/C/D (slots for I/O modules)	<p>Up to four I/O modules, depending on the order code</p> <ul style="list-style-type: none"> Modules with four terminals can be in any of these slots. Modules with eight terminals can be in slot B or C. <p>i The exact assignment of the modules to the slots is dependent on the device version → 22.</p>
E	<p>HART Ex i/IS interface</p> <ul style="list-style-type: none"> E1: H+ E2: H-
F	<p>Remote display</p> <ul style="list-style-type: none"> F1: V_{CC} (connect to terminal 81 of the remote display) F2: Signal B (connect to terminal 84 of the remote display) F3: Signal A (connect to terminal 83 of the remote display) F4: Gnd (connect to terminal 82 of the remote display)
G	<p>Power supply: 85 to 264 V_{AC}</p> <ul style="list-style-type: none"> G1: N G2: not connected G3: L
	<p>Protective ground connection (M4 screw)</p>

A0018339

6.1.1 Power supply

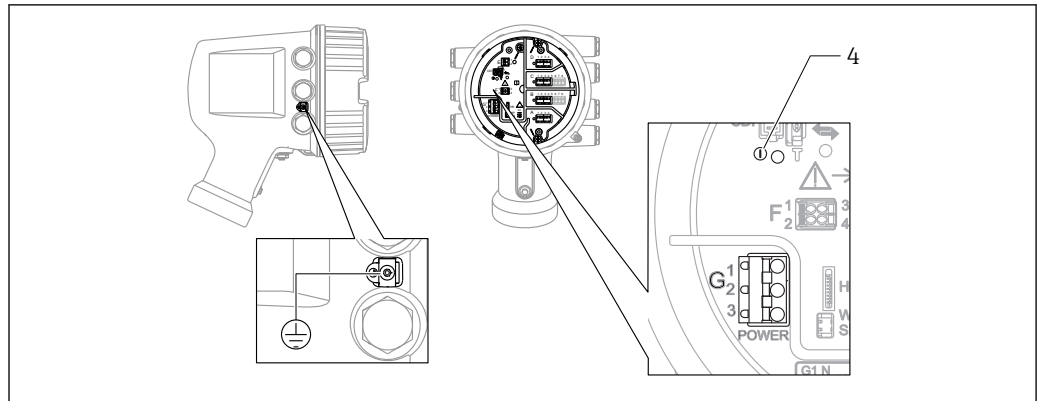

A0039413


- G1 N
 G2 not connected
 G3 L
 4 Green LED: indicates power supply

Supply voltage

85 to 264 V_{AC}, 50/60 Hz, 28.8 VA ¹⁾

i The supply voltage is also indicated on the nameplate.

6.1.2 Remote display and operating module DKX001

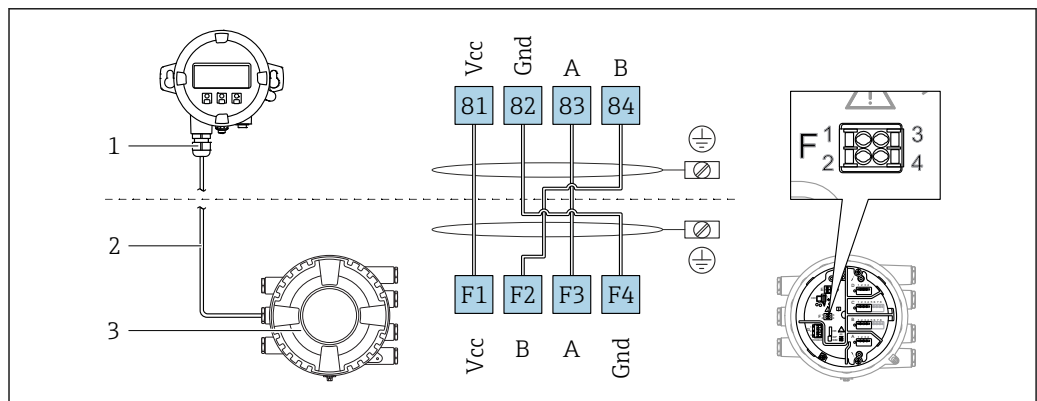

A0037025

6 Connection of the remote display and operating module DKX001 to the Tank Gauging device (NMR8x, NMS8x or NRF8x)


- 1 Remote display and operating module
 2 Connecting cable
 3 Tank Gauging device (NMR8x, NMS8x or NRF8x)

i The remote display and operating module DKX001 is available as an accessory. For details refer to SD01763D.

- i**
 - The measured value is indicated on the DKX001 and on the local display and operating module simultaneously.
 - The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).

1) maximum value; actual value depending on modules installed. 28.8 VA includes the nominal power, and the cabling specification has to meet this value. On the other hand, the effective power consumption is 12 W.

6.1.3 HART Ex i/IS interface

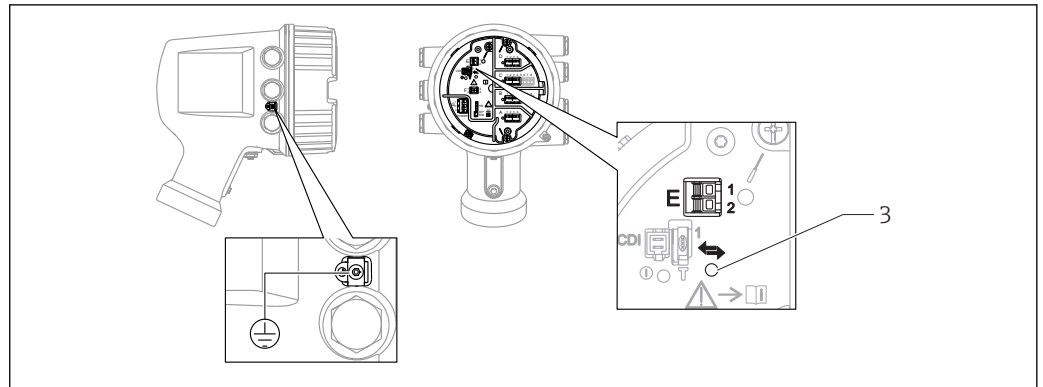

A0033414

E1 H+

E2 H-


3 Orange LED: indicates data communication

i This interface always operates as the main HART master for connected HART slave transmitters. The Analog I/O modules, on the other hand, can be configured as a HART master or slave → 29 → 31.

6.1.4 Slots for I/O modules

The terminal compartment contains four slots (A, B, C and D) for I/O modules. Depending on the device version (ordering features 040, 050 and 060) these slots contain different I/O modules. The table below shows which module is located in which slot for a specific device version.

i The slot assignment for the device is also indicated on a label attached to the back cover of the display module.

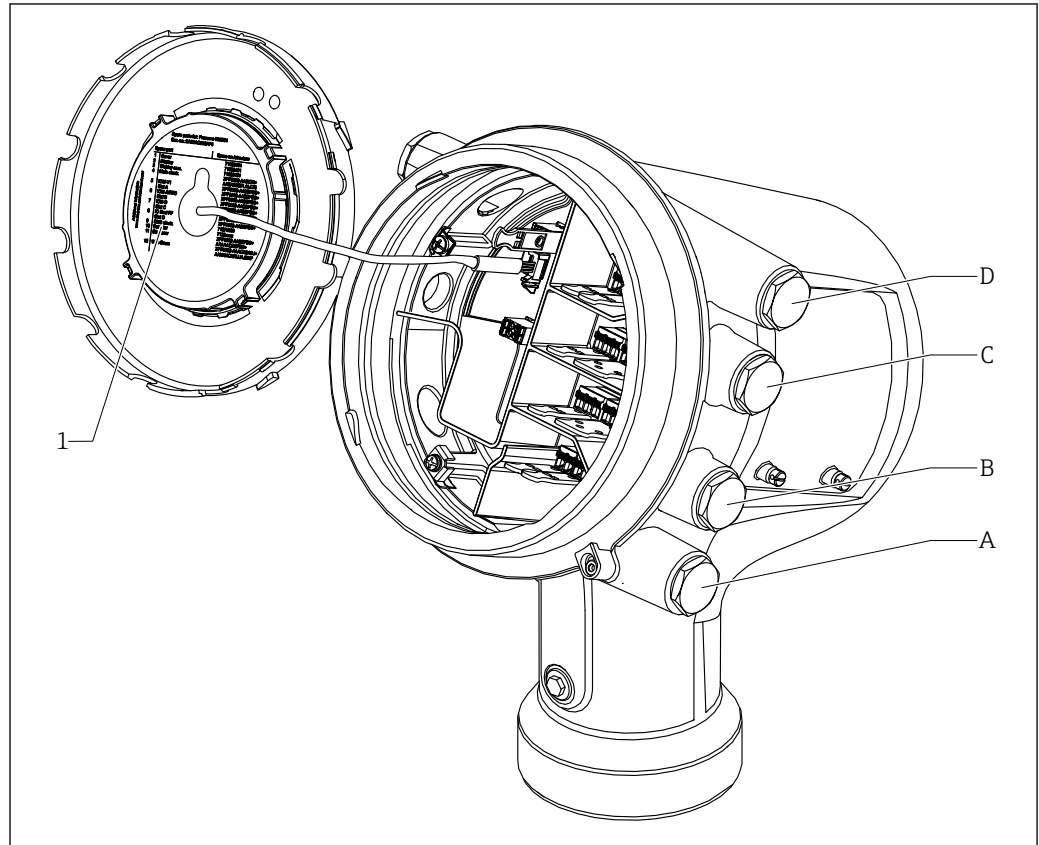

A0030070

- 1 Label showing (among other things) the modules in the slots A to D.
- A Cable entry for slot A
- B Cable entry for slot B
- C Cable entry for slot C
- D Cable entry for slot D

"Primary Output" (040) = "Modbus" (A1)

Ordering feature			Terminal area			
NMx8x - xxxx <u>XX</u> <u>XX</u> <u>XX</u> ... 040 050 060						
040 Primary Output	050 Secondary IO Analog	060 Secondary IO Digital Ex d/XP				
A1	X0	X0	Modbus	-	-	-
A1	X0	A1	Modbus	-	-	Digital
A1	X0	A2	Modbus	-	Digital	Digital
A1	X0	A3	Modbus	Digital	Digital	Digital
A1	X0	B1	Modbus	Modbus	-	-
A1	X0	B2	Modbus	Modbus	-	Digital
A1	X0	B3	Modbus	Modbus	Digital	Digital
A1	A1	X0	Modbus	Analog Ex d/XP	-	-
A1	A1	A1	Modbus	Analog Ex d/XP	-	Digital
A1	A1	A2	Modbus	Analog Ex d/XP	Digital	Digital
A1	A1	B1	Modbus	Modbus	Analog Ex d/XP	-
A1	A1	B2	Modbus	Modbus	Analog Ex d/XP	Digital
A1	A2	X0	Modbus	Analog Ex d/XP	Analog Ex d/XP	-
A1	A2	A1	Modbus	Analog Ex d/XP	Analog Ex d/XP	Digital
A1	A2	B1	Modbus	Analog Ex d/XP	Analog Ex d/XP	Modbus
A1	B1	X0	Modbus	Analog Ex i/IS	-	-
A1	B1	A1	Modbus	Analog Ex i/IS	-	Digital
A1	B1	A2	Modbus	Analog Ex i/IS	Digital	Digital
A1	B1	B1	Modbus	Modbus	Analog Ex i/IS	-
A1	B1	B2	Modbus	Modbus	Analog Ex i/IS	Digital
A1	B2	X0	Modbus	Analog Ex i/IS	Analog Ex i/IS	-
A1	B2	A1	Modbus	Analog Ex i/IS	Analog Ex i/IS	Digital
A1	B2	B1	Modbus	Analog Ex i/IS	Analog Ex i/IS	Modbus
A1	C2	X0	Modbus	Analog Ex i/IS	Analog Ex d/XP	-
A1	C2	A1	Modbus	Analog Ex i/IS	Analog Ex d/XP	Digital
A1	C2	B1	Modbus	Analog Ex i/IS	Analog Ex d/XP	Modbus

"Primary Output" (040) = "V1" (B1)

Ordering feature			Terminal area			
NMx8x - xxxx <u>XX</u> <u>XX</u> <u>XX</u> ... 040 050 060						
040 Primary Output	050 Secondary IO Analog	060 Secondary IO Digital Ex d/XP				
B1	X0	X0	V1	-	-	-
B1	X0	A1	V1	-	-	Digital
B1	X0	A2	V1	-	Digital	Digital
B1	X0	A3	V1	Digital	Digital	Digital
B1	X0	B1	V1	Modbus	-	-
B1	X0	B2	V1	Modbus	-	Digital
B1	X0	B3	V1	Modbus	Digital	Digital
B1	A1	X0	V1	Analog Ex d/XP	-	-
B1	A1	A1	V1	Analog Ex d/XP	-	Digital
B1	A1	A2	V1	Analog Ex d/XP	Digital	Digital
B1	A1	B1	V1	Modbus	Analog Ex d/XP	-
B1	A1	B2	V1	Modbus	Analog Ex d/XP	Digital
B1	A2	X0	V1	Analog Ex d/XP	Analog Ex d/XP	-
B1	A2	A1	V1	Analog Ex d/XP	Analog Ex d/XP	Digital
B1	A2	B1	V1	Analog Ex d/XP	Analog Ex d/XP	Modbus
B1	B1	X0	V1	Analog Ex i/IS	-	-
B1	B1	A1	V1	Analog Ex i/IS	-	Digital
B1	B1	A2	V1	Analog Ex i/IS	Digital	Digital
B1	B1	B1	V1	Modbus	Analog Ex i/IS	-
B1	B1	B2	V1	Modbus	Analog Ex i/IS	Digital
B1	B2	X0	V1	Analog Ex i/IS	Analog Ex i/IS	-
B1	B2	A1	V1	Analog Ex i/IS	Analog Ex i/IS	Digital
B1	B2	B1	V1	Analog Ex i/IS	Analog Ex i/IS	Modbus
B1	C2	X0	V1	Analog Ex i/IS	Analog Ex d/XP	-
B1	C2	A1	V1	Analog Ex i/IS	Analog Ex d/XP	Digital
B1	C2	B1	V1	Analog Ex i/IS	Analog Ex d/XP	Modbus


"Primary Output" (040) = "4-20mA HART Ex d" (E1)

Ordering feature			Terminal area			
NMx8x - xxxx <u>XX</u> <u>XX</u> <u>XX</u> ... 040 050 060						
040 Primary Output	050 Secondary IO Analog	060 Secondary IO Digital Ex d/XP				
E1	X0	X0	-	Analog Ex d/XP	-	-
E1	X0	A1	-	Analog Ex d/XP	-	Digital
E1	X0	A2	-	Analog Ex d/XP	Digital	Digital
E1	X0	A3	Digital	Analog Ex d/XP	Digital	Digital
E1	X0	B1	Modbus	Analog Ex d/XP	-	-
E1	X0	B2	Modbus	Analog Ex d/XP	-	Digital
E1	X0	B3	Modbus	Analog Ex d/XP	Digital	Digital
E1	A1	X0	-	Analog Ex d/XP	Analog Ex d/XP	-
E1	A1	A1	-	Analog Ex d/XP	Analog Ex d/XP	Digital
E1	A1	A2	Digital	Analog Ex d/XP	Analog Ex d/XP	Digital
E1	A1	B1	Modbus	Analog Ex d/XP	Analog Ex d/XP	-
E1	A1	B2	Modbus	Analog Ex d/XP	Analog Ex d/XP	Digital
E1	B1	X0	-	Analog Ex d/XP	Analog Ex i/IS	-
E1	B1	A1	-	Analog Ex d/XP	Analog Ex i/IS	Digital
E1	B1	A2	Digital	Analog Ex d/XP	Analog Ex i/IS	Digital
E1	B1	B1	Modbus	Analog Ex d/XP	Analog Ex i/IS	-
E1	B1	B2	Modbus	Analog Ex d/XP	Analog Ex i/IS	Digital

"Primary Output" (040) = "4-20mA HART Ex i" (H1)

Ordering feature			Terminal area			
NMx8x - xxxx <u>XX</u> <u>XX</u> <u>XX</u> ... 040 050 060						
040 Primary Output	050 Secondary IO Analog	060 Secondary IO Digital Ex d/XP				
H1	X0	X0	-	Analog Ex i/IS	-	-
H1	X0	A1	-	Analog Ex i/IS	-	Digital
H1	X0	A2	-	Analog Ex i/IS	Digital	Digital
H1	X0	A3	Digital	Analog Ex i/IS	Digital	Digital
H1	X0	B1	Modbus	Analog Ex i/IS	-	-
H1	X0	B2	Modbus	Analog Ex i/IS	-	Digital
H1	X0	B3	Modbus	Analog Ex i/IS	Digital	Digital
H1	A1	X0	-	Analog Ex i/IS	Analog Ex d/XP	-
H1	A1	A1	-	Analog Ex i/IS	Analog Ex d/XP	Digital
H1	A1	A2	Digital	Analog Ex i/IS	Analog Ex d/XP	Digital
H1	A1	B1	Modbus	Analog Ex i/IS	Analog Ex d/XP	-
H1	A1	B2	Modbus	Analog Ex i/IS	Analog Ex d/XP	Digital
H1	B1	X0	-	Analog Ex i/IS	Analog Ex i/IS	-
H1	B1	A1	-	Analog Ex i/IS	Analog Ex i/IS	Digital
H1	B1	A2	Digital	Analog Ex i/IS	Analog Ex i/IS	Digital
H1	B1	B1	Modbus	Analog Ex i/IS	Analog Ex i/IS	-
H1	B1	B2	Modbus	Analog Ex i/IS	Analog Ex i/IS	Digital

6.1.5 Terminals of the "Modbus" or "V1" module

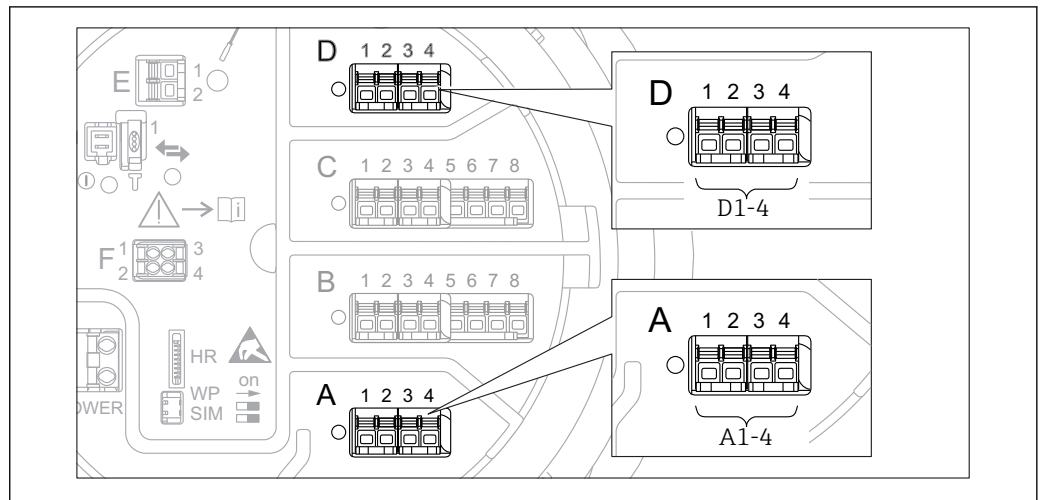

7 Designation of the "Modbus" or "V1" modules (examples); depending on the device version these modules may also be in slot B or C.

Depending on the device version, the "Modbus" and/or "V1" module may be in different slots of the terminal compartment. In the operating menu the "Modbus" and "V1" interfaces are designated by the respective slot and the terminals within this slot: **A1-4, B1-4, C1-4, D1-4.**

Terminals of the "Modbus" module

Terminal ¹⁾	Name	Description
X1	S	Cable shielding connected via a capacitor to EARTH
X2	0V	Common reference
X3	B-	Non-inverting signal line
X4	A+	Inverting signal line
Designation of the module in the operating menu: Modbus X1-4 ; (X = A, B, C or D)		


1) In this column, "X" stands for one of the slots "A", "B", "C", or "D".

Terminals of the "V1" module

Terminal ¹⁾	Name	Description
X1	S	Cable shielding connected via capacitor to EARTH
X2		not connected
X3	B-	Protocol loop signal -
X4	A+	Protocol loop signal +
Designation of the module in the operating menu: V1 X1-4 ; (X = A, B, C or D)		

1) In this column, "X" stands for one of the slots "A", "B", "C", or "D".

6.1.6 Terminals of the "Analog I/O" module (Ex d /XP or Ex i/IS)

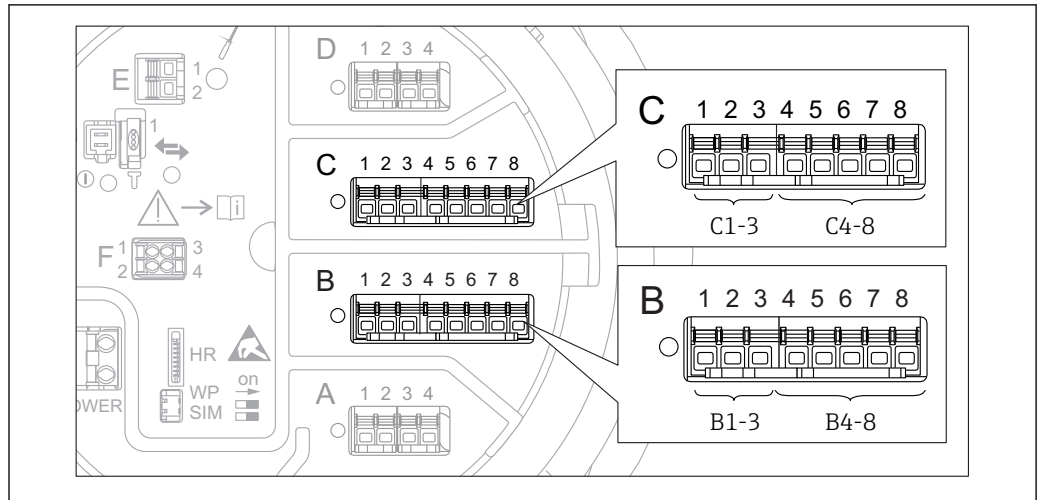


A0031168

Terminals	Function	Connection diagrams	Designation in the operating menu
B1-3	Analog input or output (configurable)	<ul style="list-style-type: none"> ▪ Passive usage: → 29 ▪ Active usage: → 31 	Analog I/O B1-3 (→ 142)
C1-3			Analog I/O C1-3 (→ 142)
B4-8	Analog input	RTD: → 32	Analog IP B4-8 (→ 136)
C4-8			Analog IP C4-8 (→ 136)

6.1.7 Connection of the "Analog I/O" module for passive usage

- i** In the passive usage the supply voltage for the communication line must be supplied by an external source.
- The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.
- Screened cable must be used for the 4...20mA signal line.

"Operating mode" = "4...20mA output" or "HART slave + 4...20mA output"

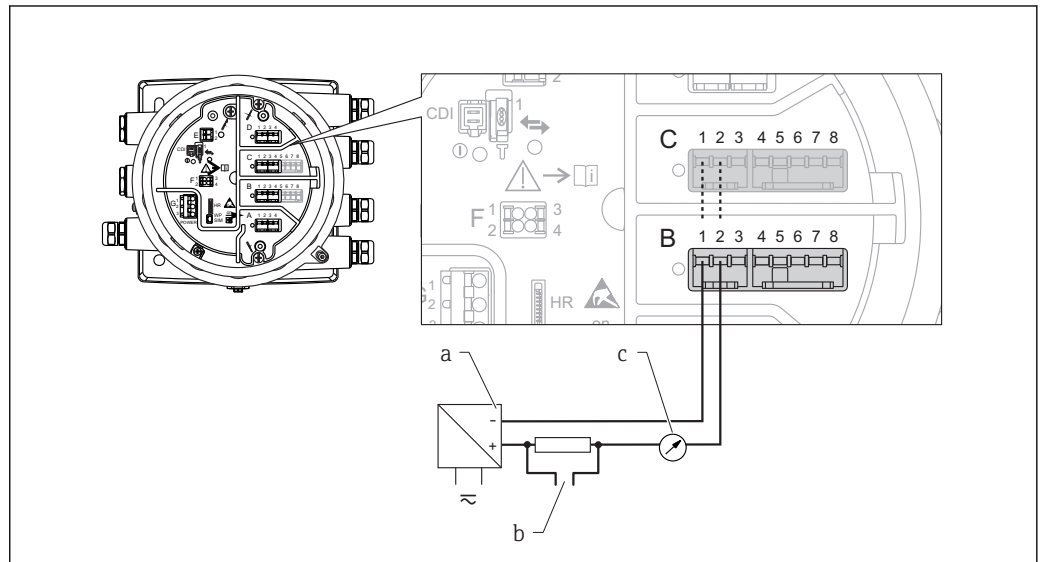


A0027931

8 Passive usage of the Analog I/O module in the output mode

- a Power supply
- b HART signal output
- c Analog signal evaluation


"Operating mode" = "4...20mA input" or "HART master+4...20mA input"

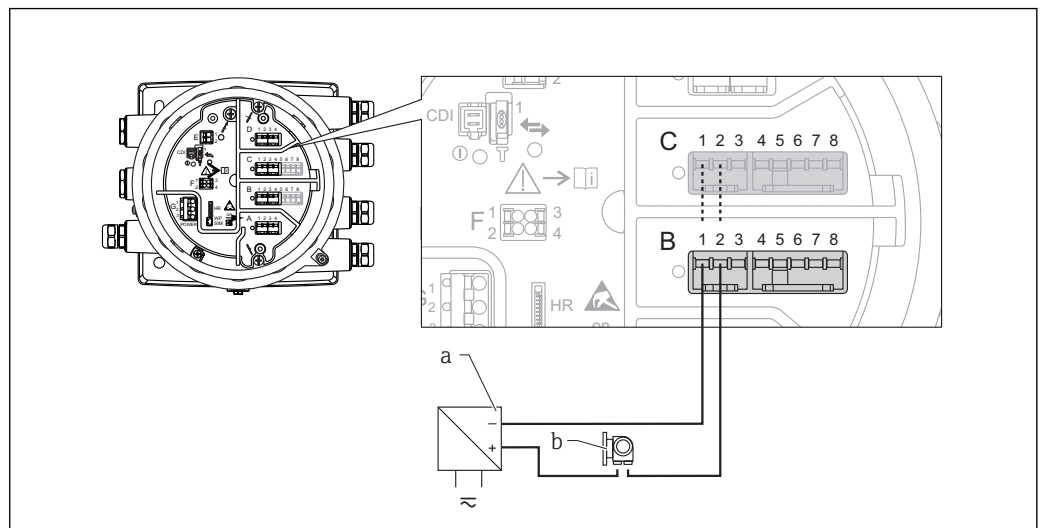


A0027933

9 Passive usage of the Analog I/O module in the input mode

- a Power supply
- b External device with 4...20mA and/or HART signal output

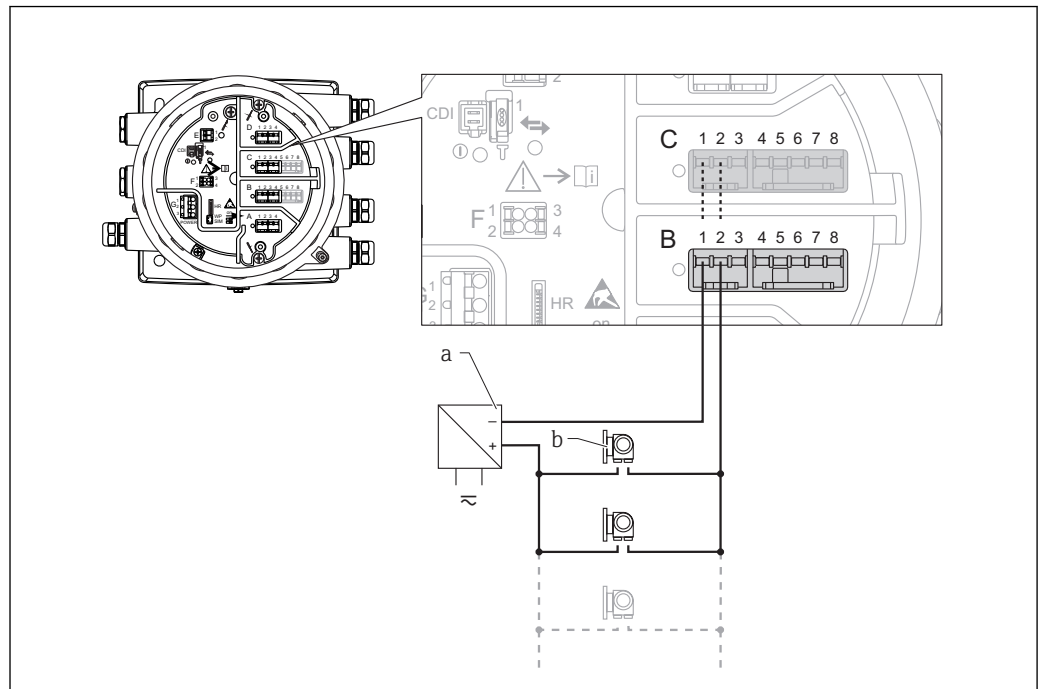"Operating mode" = "HART master"

A0027934


 10 *Passive usage of the Analog I/O module in the HART master mode*

- a* Power supply
- b* Up to 6 external devices with HART signal output

6.1.8 Connection of the "Analog I/O" module for active usage

- i** ■ In the active usage the supply voltage for the communication line is supplied by the device itself. There is no need of an external power supply.
 - The wiring must be in accordance with the intended operating mode of the Analog I/O module; see the drawings below.
 - Screened cable must be used for the 4...20mA signal line.
- i** ■ Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
 - Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
 - Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA


"Operating mode" = "4..20mA output" or "HART slave +4..20mA output"

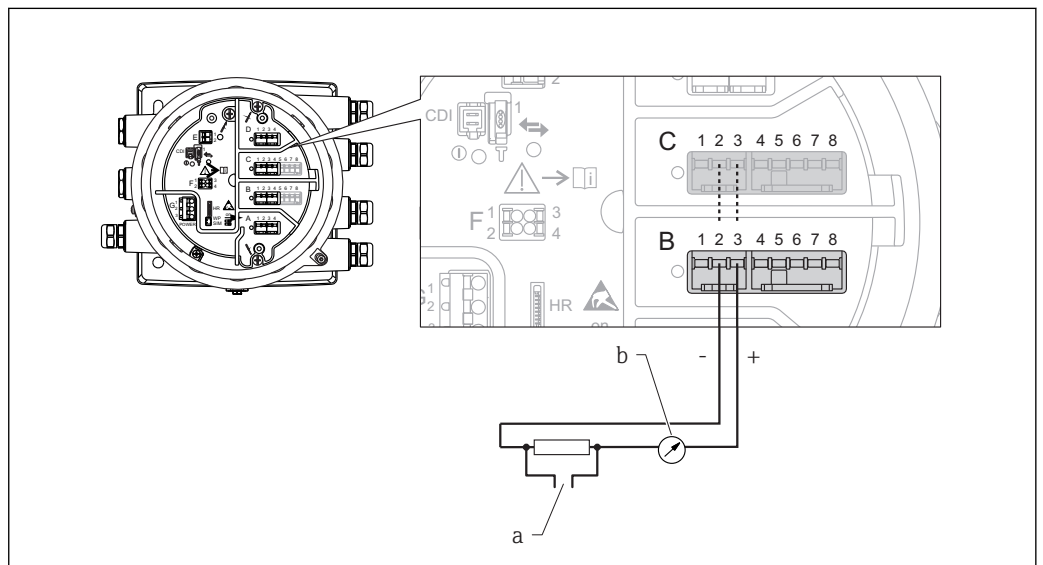

11 Active usage of the Analog I/O module in the output mode

- a HART signal output
- b Analog signal evaluation


"Operating mode" = "4..20mA input" or "HART master+4..20mA input"

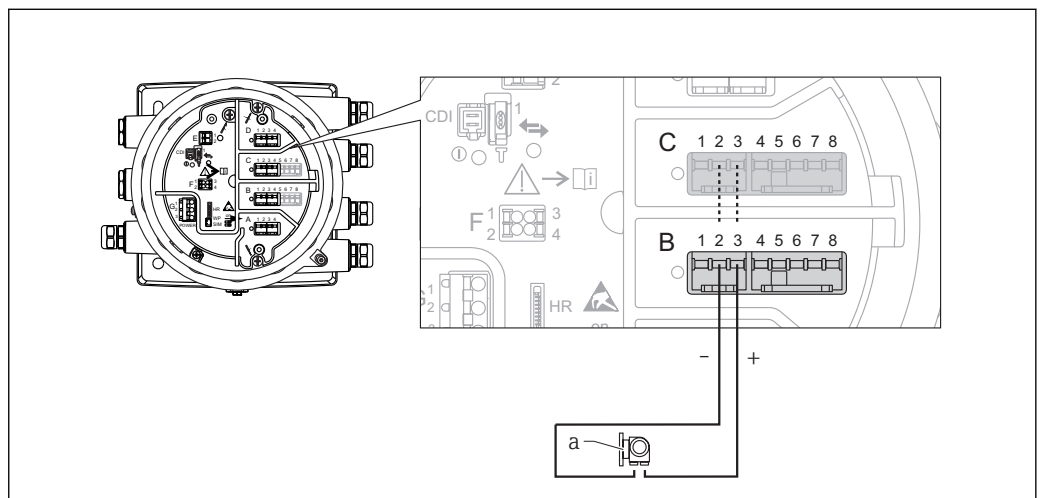

12 Active usage of the Analog I/O module in the input mode

- a External device with 4...20mA and/or HART signal output

"Operating mode" = "HART master"

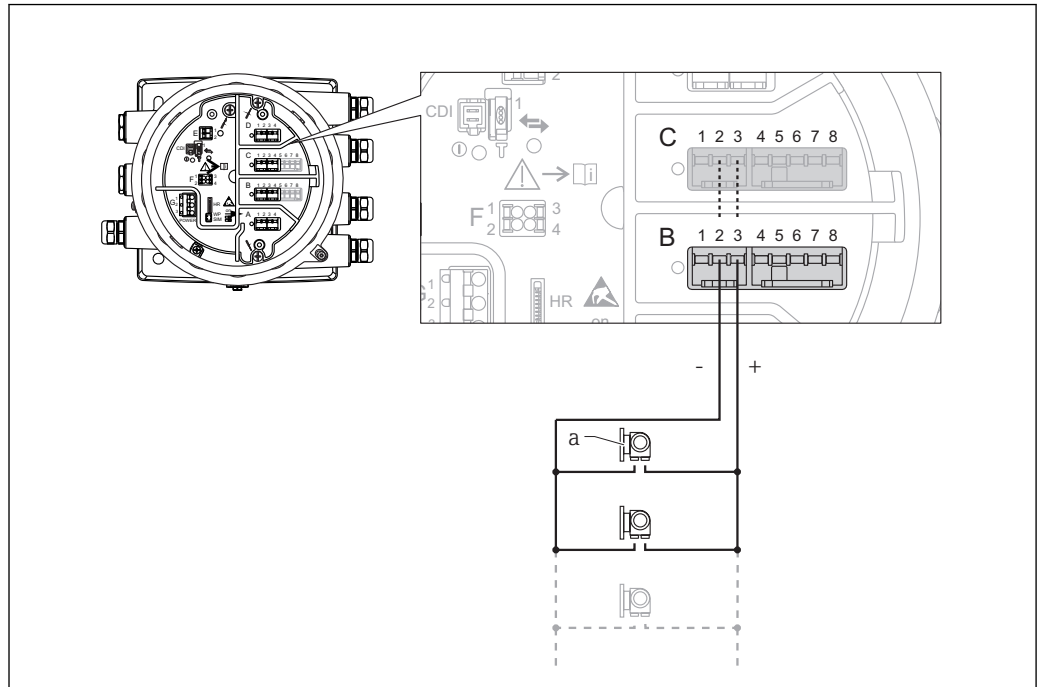


A0027936

13 Active usage of the Analog I/O module in the HART master mode

a Up to 6 external devices with HART signal output

i The maximum current consumption for the connected HART devices is 24 mA (i.e. 4 mA per device if 6 devices are connected).

6.1.9 Connection of a RTD

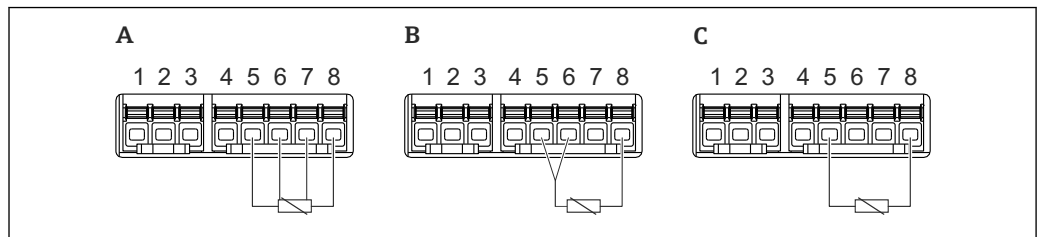

A0026371


A 4-wire RTD connection

B 3-wire RTD connection

C 2-wire RTD connection

i Screened cable must be used for the connection of the RTD.

6.1.10 Terminals of the "Digital I/O" module

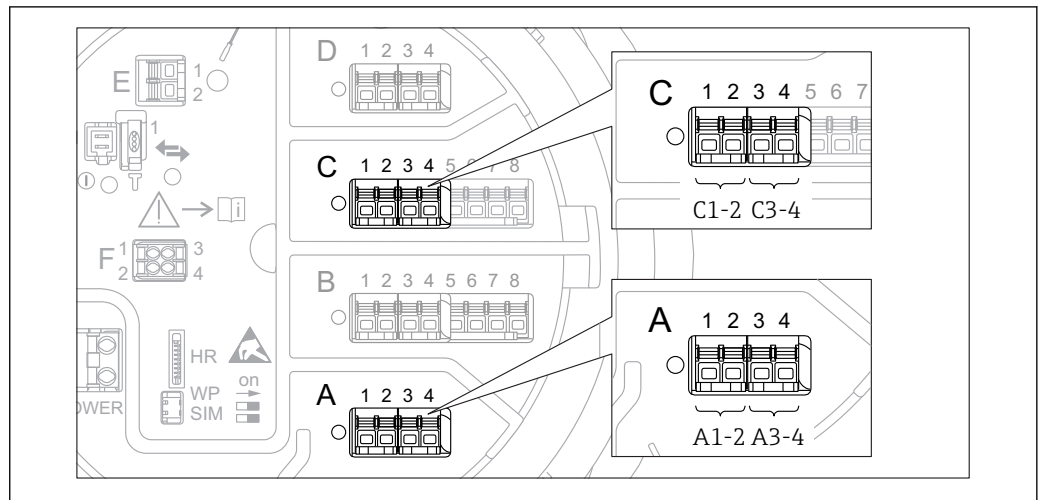

14 Designation of the digital inputs or outputs (examples)

- Each Digital IO Module provides two digital inputs or outputs.
- In the operating menu each input or output is designated by the respective slot and two terminals within this slot. **A1-2**, for example, denotes terminals 1 and 2 of slot **A**. The same is valid for slots **B**, **C** and **D** if they contain a Digital IO module.
- For each of these pairs of terminals, one of the following operating modes can be selected in the operating menu:
 - Disable
 - Passive Output
 - Passive Input
 - Active Input

6.2 Connecting requirements

6.2.1 Cable specification

Terminals

Terminal	Wire cross section
Signal and power supply <ul style="list-style-type: none"> ▪ Spring terminals (NMx8x-xx1...) ▪ Screw terminals (NMx8x-xx2...) 	0.2 to 2.5 mm ² (24 to 13 AWG)
Ground terminal in the terminal compartment	max. 2.5 mm ² (13 AWG)
Ground terminal at the housing	max. 4 mm ² (11 AWG)

Power supply line

Standard device cable is sufficient for the power line.

Analog signal lines

Screened cable must be used for:

- the 4...20mA signal lines.
- the RTD connection.

HART communication line

Shielded cable is recommended if using the HART protocol. Observe the grounding concept of the plant.

Modbus communication line

- Observe the cable conditions from the TIA-485-A, Telecommunications Industry Association.
- Additional conditions: Use shielded cable.


V1 communication line

- Two wire (twisted pair) screened or un-screened cable
- Resistance in one cable: $\leq 120 \Omega$
- Capacitance between lines: $\leq 0.3 \mu\text{F}$

6.3 Ensuring the degree of protection

To guarantee the specified degree of protection, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.
4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

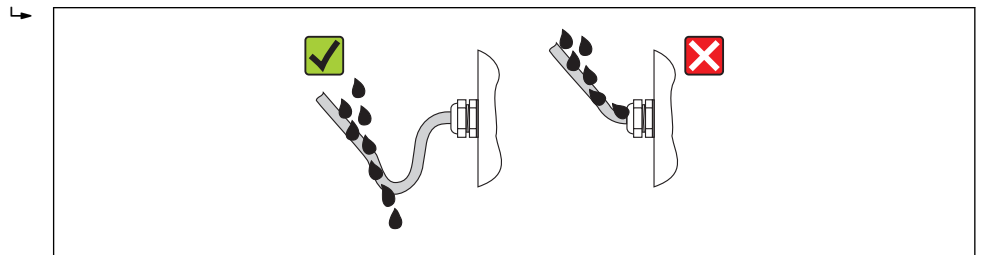

A0013960

5. Insert blind plugs appropriate for the safety rating of the device (e.g. Ex d/XP).





6.4 Post-connection check

<input type="radio"/>	Are cables or the device undamaged (visual inspection)?
<input type="radio"/>	Do the cables comply with the requirements?
<input type="radio"/>	Do the cables have adequate strain relief?
<input type="radio"/>	Are all cable glands installed, firmly tightened and correctly sealed?
<input type="radio"/>	Does the supply voltage match the specifications on the transmitter nameplate?
<input type="radio"/>	Is the terminal assignment correct → 19?
<input type="radio"/>	If required: Is the protective earth connected correctly ?
<input type="radio"/>	If supply voltage is present: Is the device ready for operation and do values appear on the display module?
<input type="radio"/>	Are all housing covers installed and firmly tightened?
<input type="radio"/>	Is the securing clamp tightened correctly?

7 Operability

7.1 Overview of the operation options

The device is operated via an operating menu →  37. This menu can be accessed by the following interfaces:


- The display and operating module at the device or the remote display and operating module DKX001 (→  38).
- FieldCare connected through the service interface in the terminal compartment of the device (→  50).
- FieldCare connected through Tankvision Tank Scanner NXA820 (remote operation; →  51).
- FieldCare connected through Commubox FXA195 (→  103) to a HART interface of the device.

7.2 Structure and function of the operating menu

Menu	Submenu / parameter	Meaning
Operation	Level	Shows the measured and calculated level values.
	Temperature	Shows the measured and calculated temperature values.
	Density	Shows the measured and calculated density values.
	Pressure	Shows the measured and calculated pressure values.
	GP values	Shows the general purpose values.
Setup	Parameters 1 to N	Standard commissioning parameters
	Advanced setup	Contains further parameters and submenus: <ul style="list-style-type: none"> ▪ to adapt the device to special measuring conditions. ▪ to process the measured value. ▪ to configure the signal output.
Diagnostics	Diagnostic parameters	Indicates: <ul style="list-style-type: none"> ▪ The latest diagnostic messages and their timestamps. ▪ The operating time (overall time and time since last restart). ▪ The time according to the real-time clock.
	Diagnostic list	Contains up to 5 currently active error messages.
	Device information	Contains information needed to identify the device.
	Simulation	Used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
Expert ¹⁾ Contains all parameters of the device (including those which are already contained in one of the other menus). This menu is organized according to the function blocks of the device. The parameter of the Expert menu are described in: GPO1068G (NMR81)	System	Contains all general device parameters which do not affect the measurement or the communication interface.
	Sensor	Contains all parameters needed to configure the measurement.
	Input/output	Contains submenus to configure the analog and discrete I/O modules and connected HART devices.
	Communication	Contains all parameters needed to configure the digital communication interface.
	Application	Contains submenus to configure <ul style="list-style-type: none"> ▪ the tank gauging application ▪ the tank calculations ▪ the alarms.
	Tank values	Shows measured and calculated tank values
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

1) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


7.3 Access to the operating menu via the local or remote display and operating module.

- i
 - Operating via the remote display and operating module DKX001 (→  20) or the local display and operating module at the device are equivalent.
 - The measured value is indicated on the DKX001 and on the local display and operating module simultaneously.
 - The operating menu cannot be accessed on both modules at the same time. If the operating menu is entered in one of these modules, the other module is automatically locked. This locking remains active until the menu is closed in the first module (back to measured value display).


7.3.1 Display and operating elements

The device has an illuminated **liquid crystal display (LCD)** that shows measured and calculated values as well as the device status in the standard view. Other views are used to navigate through the operating menu and to set parameter values.

The device is operated by **three optical keys**, namely "-", "+" and "E". They are actuated when the appropriate field on the protective glass of the front is touched with the finger ("touch control").

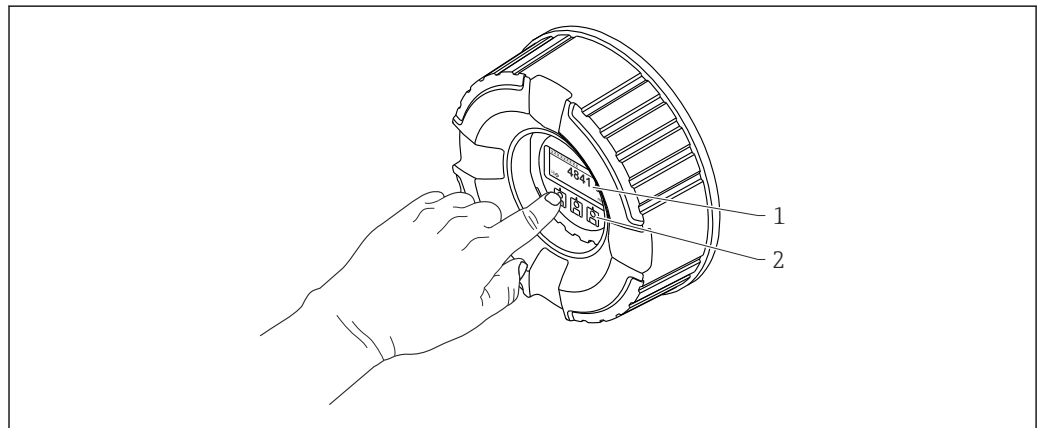


A0028345

 15 Display and operating elements

- 1 Liquid crystal display (LCD)
- 2 Optical keys; can be operated through the cover glass.

7.3.2 Standard view (measured value display)

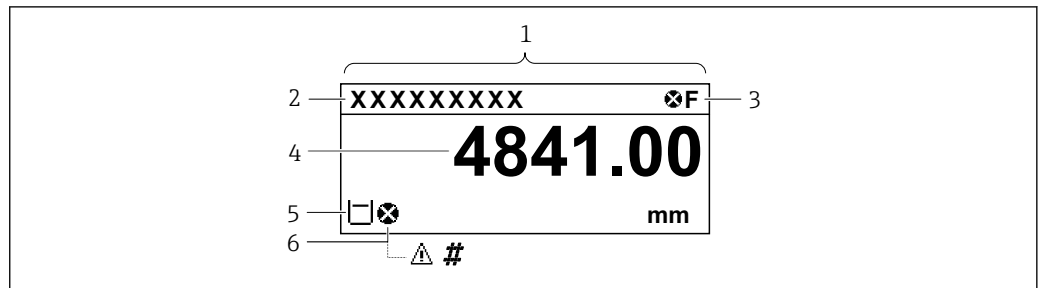

A0028317

16 Typical appearance of the standard view (measured value display)















- 1 Display module
- 2 Device tag
- 3 Status area
- 4 Display area for measured values
- 5 Display area for measured value and status symbols
- 6 Measured value status symbol

Status symbols




Symbol	Meaning
F A0013956	"Failure" A device error is present. The measured value is no longer valid.
C A0013959	"Function check" The device is in service mode (e.g. during a simulation).
S A0013958	"Out of specification" The device is operated: <ul style="list-style-type: none"> ▪ Outside of its technical specifications (e.g. during startup or a cleaning) ▪ Outside of the configuration carried out by the user (e.g. level outside configured span)
M A0013957	"Maintenance required" Maintenance is required. The measured value is still valid.

Measured value symbols



Symbol 1	Symbol 2	Measured value
 A0028148		<ul style="list-style-type: none"> ▪ Tank level ▪ Measured level ▪ Tank level %
 A0028149		Water level
T A0028528		Liquid temperature
T A0028528	V A0027990	Vapor temperature
T A0028528	A A0027991	Air temperature
 A0027993		<ul style="list-style-type: none"> ▪ Tank ullage ▪ Tank ullage %
ρ A0028150		Observed density value

Symbol 1	Symbol 2	Measured value
 A0028151	 A0028141	P1 (bottom)
 A0028151	 A0028142	P2 (middle)
 A0028151	 A0028146	P3 (top)
 A0027992	 A0028141	GP 1 value This is used for an external device.
 A0027992	 A0028142	GP 2 value This is used for an external device.
 A0027992	 A0028146	GP 3 value This is used for an external device.
 A0027992	 A0028147	GP 4 value This is used for an external device.


Measured value status symbols

Symbol	Meaning
 A0012102	Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
 A0012103	Status "Warning" The device continues measuring. A diagnostic message is generated.
 A0031169	Calibration to regulatory standards disturbed Is displayed in the following situations: <ul style="list-style-type: none"> ▪ The write protection switch is OFF. → 48 ▪ The write protection switch is ON but the level value can currently not be guaranteed.


Locking state symbols

Symbol	Meaning
 A0011978	Display parameter Marks display-only parameters which cannot be edited.
 A0011979	Device locked <ul style="list-style-type: none"> ▪ In front of a parameter name: The device is locked via software and/or hardware. ▪ In the header of the measured value screen: The device is locked via hardware.

Meaning of the keys in the standard view

Key	Meaning
 A0028326	Enter key <ul style="list-style-type: none"> ▪ Pressing the key briefly opens the operating menu. ▪ Pressing the key for 2 s opens the context menu: <ul style="list-style-type: none"> - Level (visible if the keylock is inactive): Shows the measured levels. - Keylock on (visible if the keylock is inactive): Activates the keylock. - Keylock off (visible if the keylock is active): Deactivates the keylock.

7.3.3 Navigation view

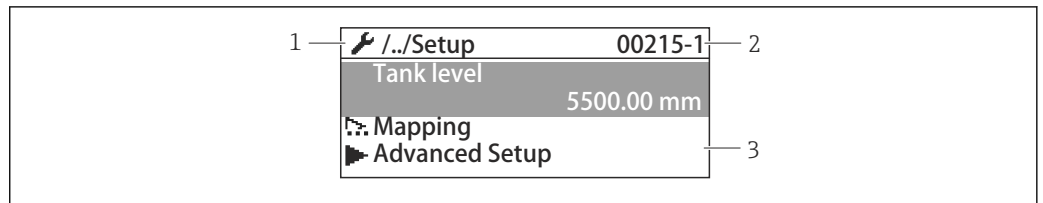








A0028346-EN





17 Navigation view

- 1 Current submenu or wizard
- 2 Quick access code
- 3 Display area for navigation


Navigation symbols

Symbol	Meaning
 A0011975	Operation Is displayed: <ul style="list-style-type: none"> ▪ in the main menu next to the selection Operation ▪ in the header, if you are in the Operation menu.
 A0011974	Setup Is displayed: <ul style="list-style-type: none"> ▪ in the main menu next to the selection Setup ▪ in the header, if you are in the Setup menu
 A0011976	Expert Is displayed: <ul style="list-style-type: none"> ▪ in the main menu next to the selection Expert ▪ in the header, if you are in the Expert menu
 A0011977	Diagnostics Is displayed: <ul style="list-style-type: none"> ▪ in the main menu next to the selection Diagnostics ▪ in the header, if you are in the Diagnostics menu
 A0013967	Submenu
 A0013968	Wizard
 A0013963	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked.

Meaning of the keys in the navigation view

Key	Meaning
 <p style="text-align: right; font-size: small;">A0028324</p>	<p>Minus key Moves the selection bar upwards in a picklist.</p>
 <p style="text-align: right; font-size: small;">A0028325</p>	<p>Plus key Moves the selection bar downwards in a picklist.</p>
 <p style="text-align: right; font-size: small;">A0028326</p>	<p>Enter key</p> <ul style="list-style-type: none"> ■ Pressing the key briefly opens the selected menu, submenu or parameter. ■ For parameters: Pressing the key for 2 s opens the help text for the function of the parameter (if present).
 <p style="text-align: right; font-size: small;">A0028327</p>	<p>Escape key combination (press keys simultaneously)</p> <ul style="list-style-type: none"> ■ Pressing the keys briefly <ul style="list-style-type: none"> - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. ■ Pressing the keys for 2 s returns you to the measured value display ("standard view").

7.3.4 Wizard view

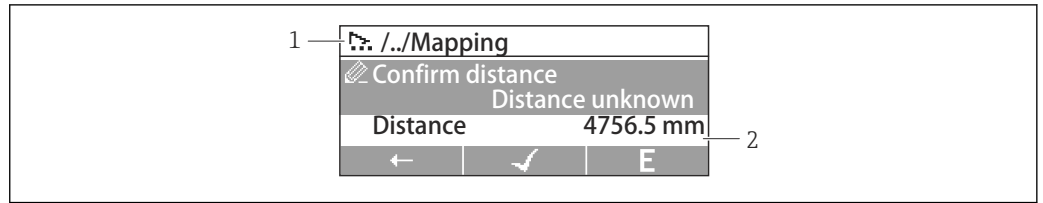






A0028349-EN

18 Wizard view on the display module


- 1 Current wizard
- 2 Display area for navigation

Wizard navigation symbols

Symbol	Meaning
 A0013972	Parameters within a wizard
 A0013978	Switches to the previous parameter.
 A0013976	Confirms the parameter value and switches to the next parameter.
 A0013977	Opens the editing view of the parameter.

 In the wizard view the meaning of the keys is indicated by the navigation symbol directly above the respective key (softkey functionality).



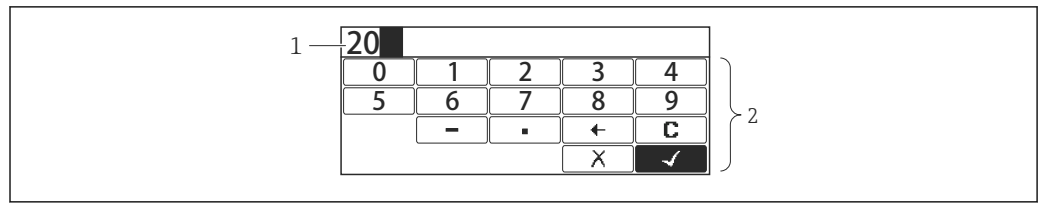




7.3.5 Numeric editor







A0028341

19 Numeric editor on the display module


- 1 Display area of the entered value
- 2 Input mask

Symbol	Meaning
 <small>A0013998</small>	Selection of numbers from 0 to 9.
 <small>A0016619</small>	Inserts decimal separator at the input position.
 <small>A0016620</small>	Inserts minus sign at the input position.
 <small>A0013985</small>	Confirms selection.
 <small>A0016621</small>	Moves the input position one position to the left.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Meaning of the keys in the numeric editor

Key	Meaning
 <small>A0028324</small>	Minus key In the input mask, moves the selection bar to the left (backwards).
 <small>A0028325</small>	Plus key In the input mask, moves the selection bar to the right (forwards).
 <small>A0028326</small>	Enter key <ul style="list-style-type: none"> ■ Pressing the key briefly adds the selected number to the current decimal place or carries out the selected action. ■ Pressing the key for 2 s confirms the edited parameter value.
 <small>A0028327</small>	Escape key combination (press keys simultaneously) Closes the text or numeric editor without applying changes.

7.3.6 Text editor

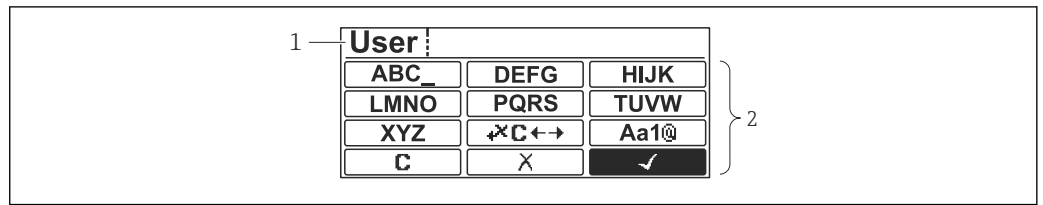

A0028342

20 Text editor on the display module

- 1 Display area of the entered text
- 2 Input mask





Text editor symbols

Symbol	Meaning
 ... <small>A0013997</small>	Selection of letters from A to Z
 <small>A0013981</small>	Toggle <ul style="list-style-type: none"> ▪ Between upper-case and lower-case letters ▪ For entering numbers ▪ For entering special characters
 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Correction symbols under

 <small>A0013989</small>	Clears all entered characters.
 <small>A0013991</small>	Moves the input position one position to the right.
 <small>A0013990</small>	Moves the input position one position to the left.
 <small>A0013988</small>	Deletes one character immediately to the left of the input position.

Meaning of the keys in the text editor


Key	Meaning
 A0028324	Minus key In the input mask, moves the selection bar to the left (backwards).
 A0028325	Plus key In the input mask, moves the selection bar to the right (forwards).
 A0028326	Enter key <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> - Opens the selected group. - Carries out the selected action. ▪ Pressing the key for 2 s confirms the edited parameter value.
 A0028327	Escape key combination (press keys simultaneously) Closes the text or numeric editor without applying changes.

7.3.7 Keypad lock


Automatic keypad lock

Operation via the local display is automatically locked:

- after a start-up or restart of the device.
- if the device has not been operated via the display for > 1 minute.


 When attempting to access the operating menu while the keylock is enabled, the **Keylock on** message appears.

Disabling the keypad lock

1. The keylock is enabled.
 Press  for at least 2 seconds.
 - ↳ A context menu appears.
2. Select **Keylock off** from the context menu.
 - ↳ The keylock is disabled.

Manual activation of the keypad lock

After commissioning of the device the keypad lock can be activated manually.


1. The device is in the measured value display.
 Press  for at least 2 seconds.
 - ↳ A context menu appears.
2. Select **Keylock on** from the context menu.
 - ↳ The keylock is enabled.

7.3.8 Access code and user roles


Meaning of the access code

An access code can be defined in order to distinguish between the following user roles:


User role	Definition
Maintenance	<ul style="list-style-type: none"> ▪ Knows the access code. ▪ Has write access to all parameters (except service parameters).
Operator	<ul style="list-style-type: none"> ▪ Doesn't know the access code. ▪ Has write access to only a few parameters.



-  The description of parameters states which role is needed at least for read and write access to each parameter.
- The current user role is indicated by the **Access status display** parameter.
- If the access code is "0000", every user is in the **Maintenance** role. This is the default setting on delivery of the device.

Defining an access code

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Enter the intended access code (max. 4 digits).
3. Repeat the same code in the **Confirm access code** parameter.
 - ↳ The user is in the **Operator** role. The -symbol appears in front of all write-protected parameters.

Switching to the "Maintenance" role

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected because the user is in the **Operator** role. To switch to the **Maintenance** role, proceed as follows:

1. Press .
 - ↳ The input prompt for the access code appears.
2. Enter the access code.
 - ↳ The user is in the **Maintenance** role. The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.


Switching back to the "Operator" role automatically

The user automatically switches back to the **Operator** role:

- if no key is pressed for 10 minutes in the navigation and editing mode.
- 60 s after going back from the navigation and editing mode to the standard view (measured value display).


7.3.9 Write protection switch

The operating menu can be locked by a hardware switch in the connection compartment. In this locking state W&M related parameters are read only.

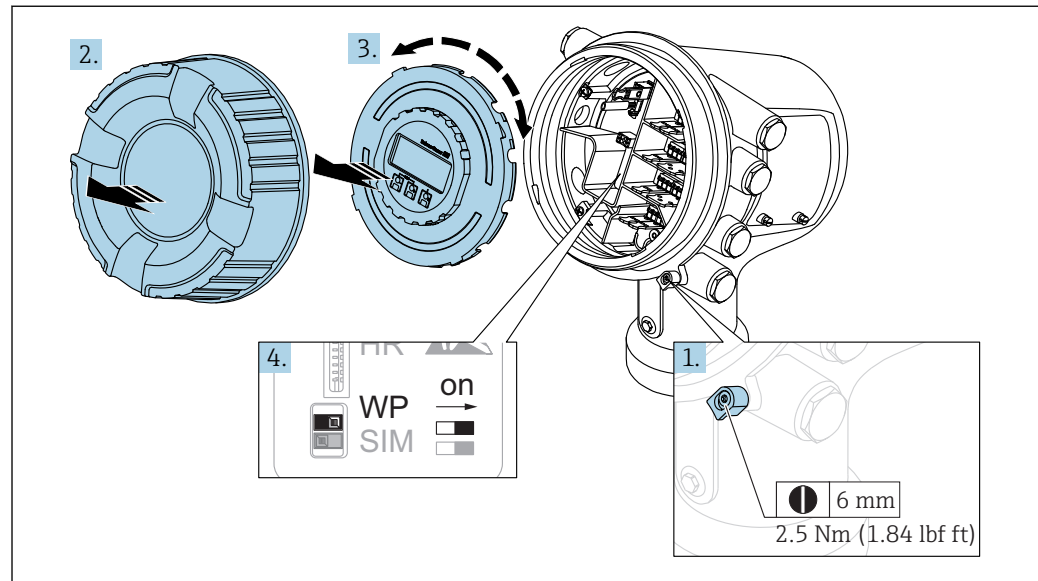


A0028363


1. Loosen the securing clamp.
 2. Unscrew the housing cover.
 3. Pull out the display module with a gentle rotation movement.
 4. Using a flat blade screwdriver or a similar tool, set the write protection switch (**WP**) into the desired position. **ON**: operating menu is locked; **OFF**: operating menu is unlocked.
 5. Put the display module onto the connection compartment, screw the cover closed and tighten the securing clamp.
- i** To avoid access to the write protection switch, the cover of the connection compartment can be secured by a lead seal.
 - For devices with alignment unit: To avoid unauthorized changes of the antenna alignment, the alignment unit can be secured by a lead seal.

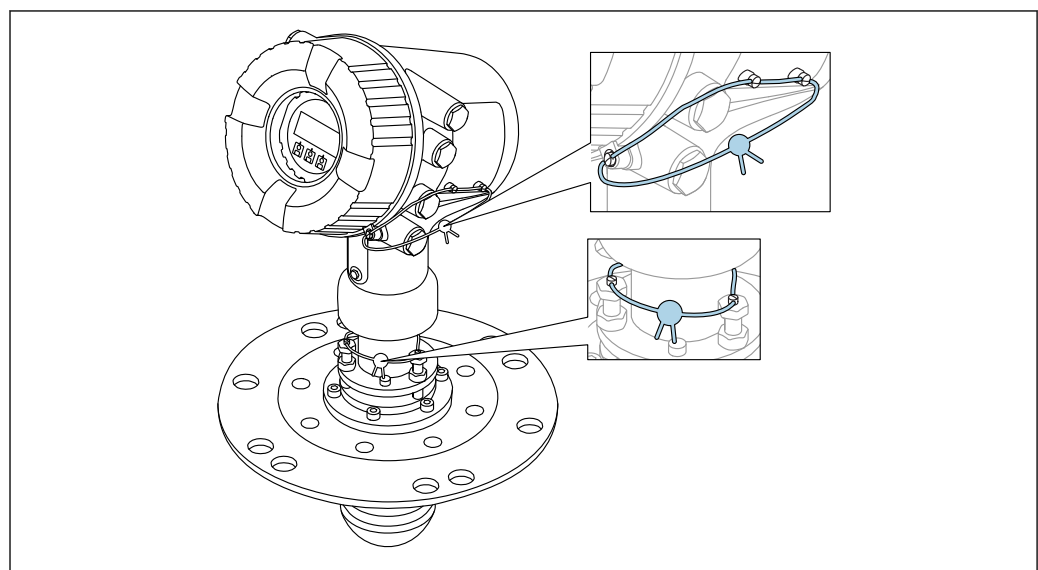

A0033299


21 Sealing of the cover of the connection compartment (top) and the alignment unit (bottom)

-  The display module can be attached to the edge of the electronics compartment. This makes it easier to access the lock switch.

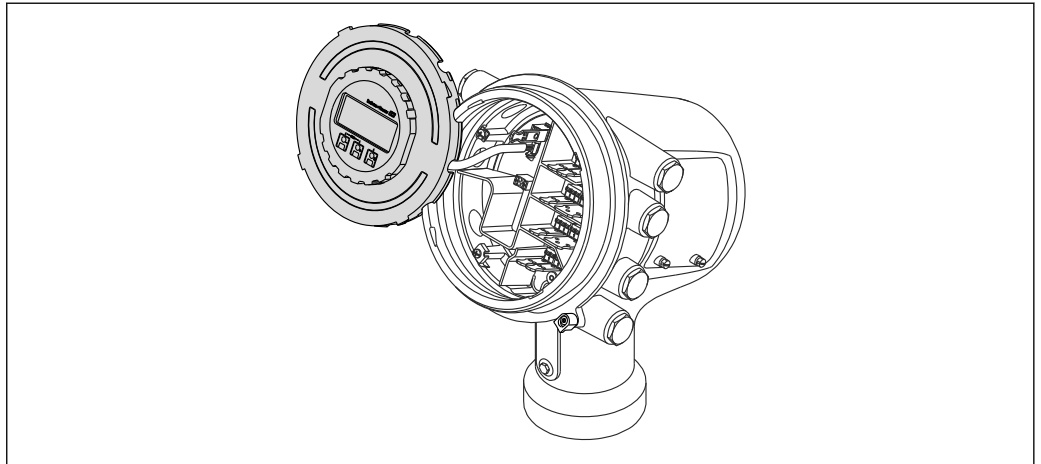


A0028381

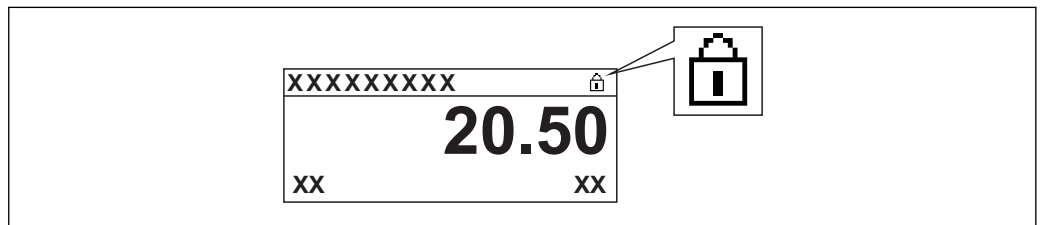

Indication of the locking state




A0015870

-  22 Write protection symbol in the header of the display


Write protection via locking switch is indicated as follows:

- **Locking status** (→  128) = **Hardware locked**
-  appears in the header of the display.

7.4 Access to the operating menu via the service interface and FieldCare

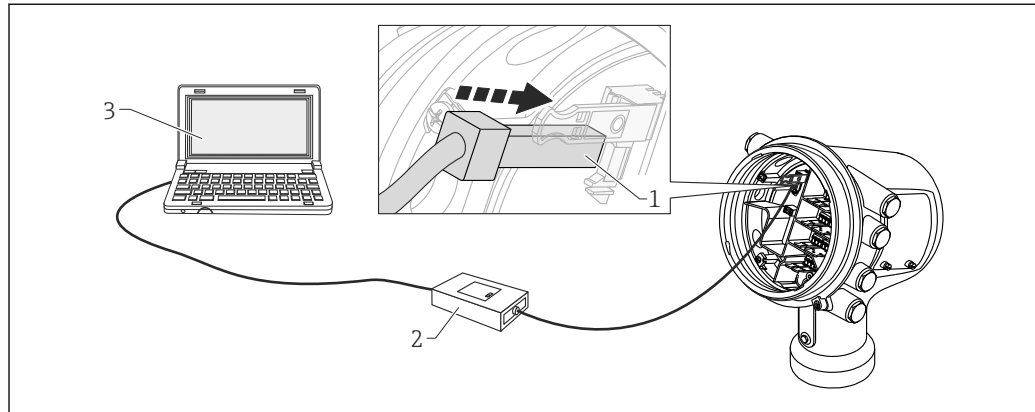

A0023737

 23 Operation via service interface

- 1 Service interface (CDI = Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool and "CDI Communication FXA291" COM DTM

The "Save/Restore" function


After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup → **Advanced setup** → **Administration** → **Device reset** = **Restart device**.

This ensures correct operation of the device after the restore.

7.5 Access to the operating menu via Tankvision Tank Scanner NXA820 and FieldCare

7.5.1 Wiring scheme

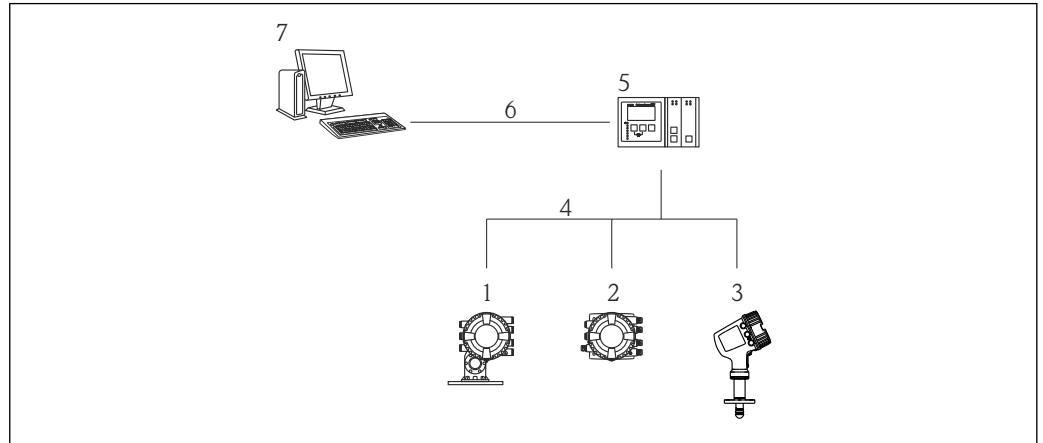


A0025621

24 Connection of Tank Gauging devices to FieldCare via the Tankvision Tank Scanner NXA820

- 1 Proservo NMS8x
- 2 Tankside Monitor NRF81
- 3 Micropilot NMR8x
- 4 Field protocol (e.g. Modbus, V1)
- 5 Tankvision Tank Scanner NXA820
- 6 Ethernet
- 7 Computer with FieldCare installed


7.5.2 Establishing the connection between FieldCare and the device

1. Make sure the **HART CommDTM NXA** is installed and update the DTM catalogue if required.
2. Create a new project in FieldCare.
- 3.

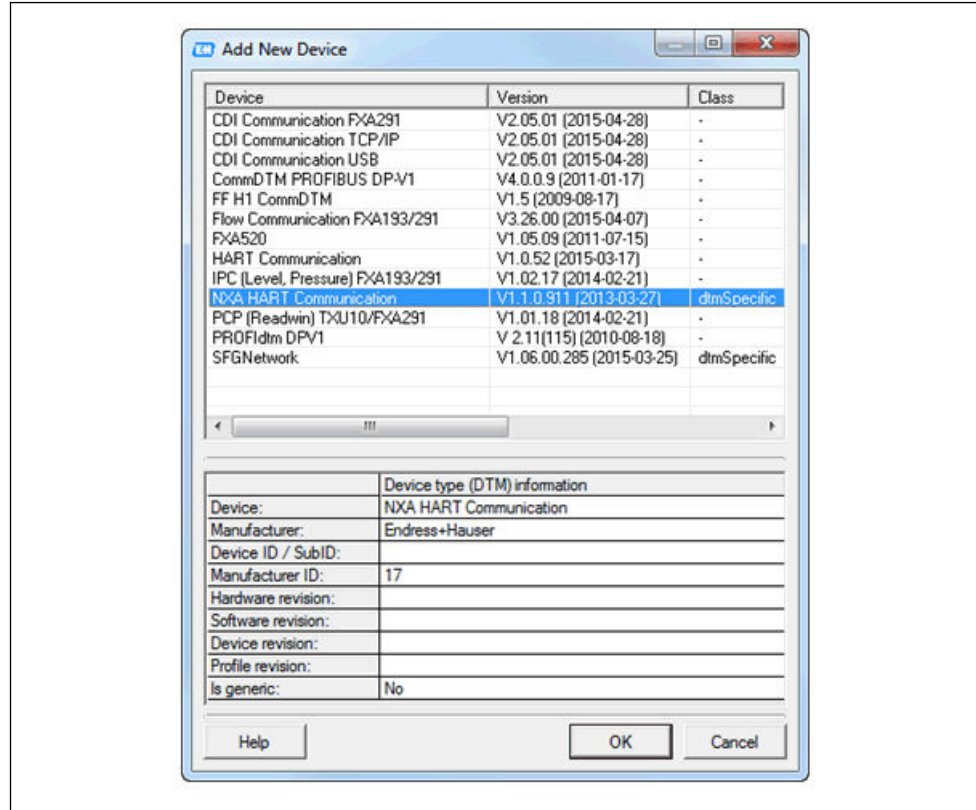

A0028515


Add a new device: **NXA HART Communication**

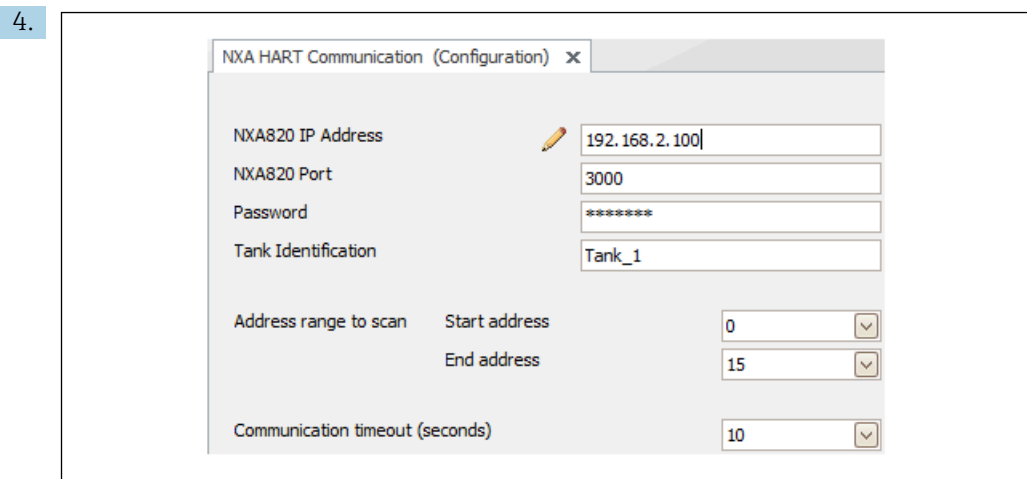

A0028516

Open the configuration of the DTM and enter the required data (IP address of the NXA820; "Password" = "hart"; "Tank identification" only with NXA V1.05 or higher)

5.

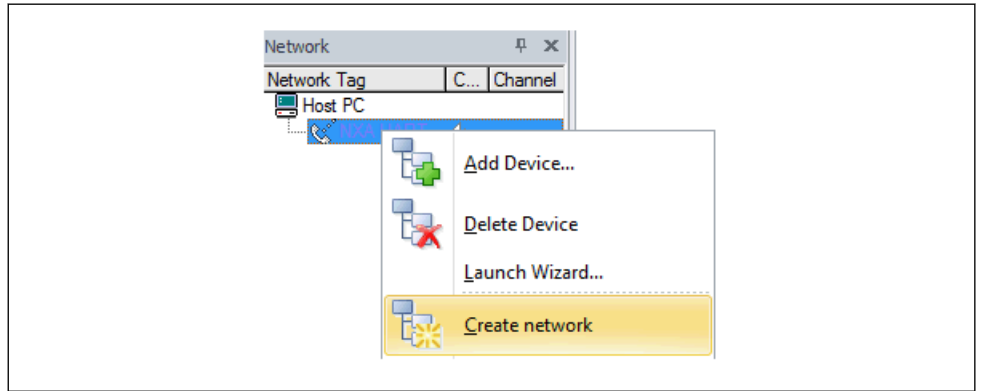


A0028517

Select **Create network** from the context menu.

↳ The device is detected and the DTM is assigned.

6.

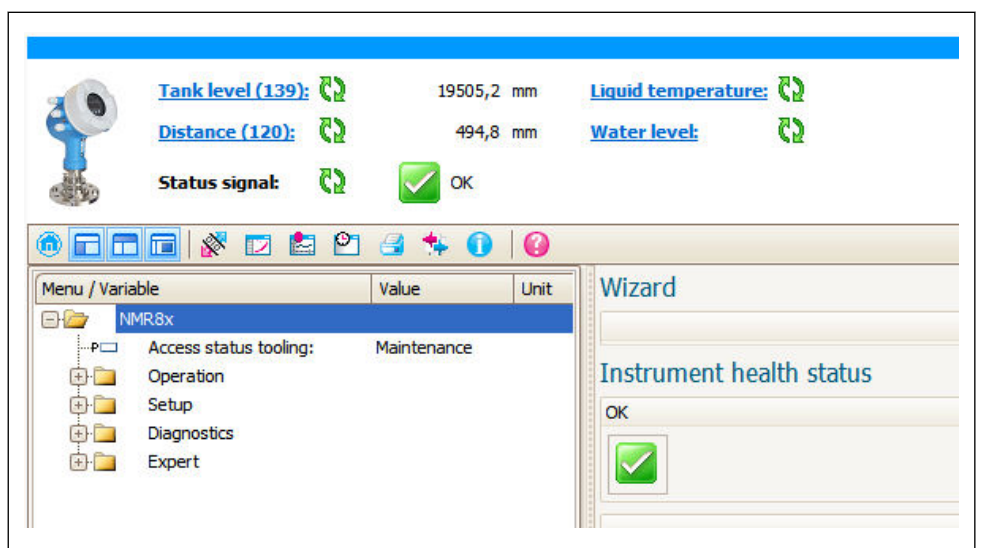

A0032933

↳ The device can be configured.

i The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup → Advanced setup → Administration → Device reset = Restart device.

This ensures correct operation of the device after the restore.

8 System integration


8.1 Overview of the Device Description files (DTM)

To integrate the device via HART into FieldCare, a Device Description file (DTM) according to the following specification is required:

Manufacturer ID	0x11
Device type (NMR8x)	0x112E
HART specification	7.0
DD files	For information and files see: www.endress.com

9 Commissioning

9.1 Terms related to tank measurement

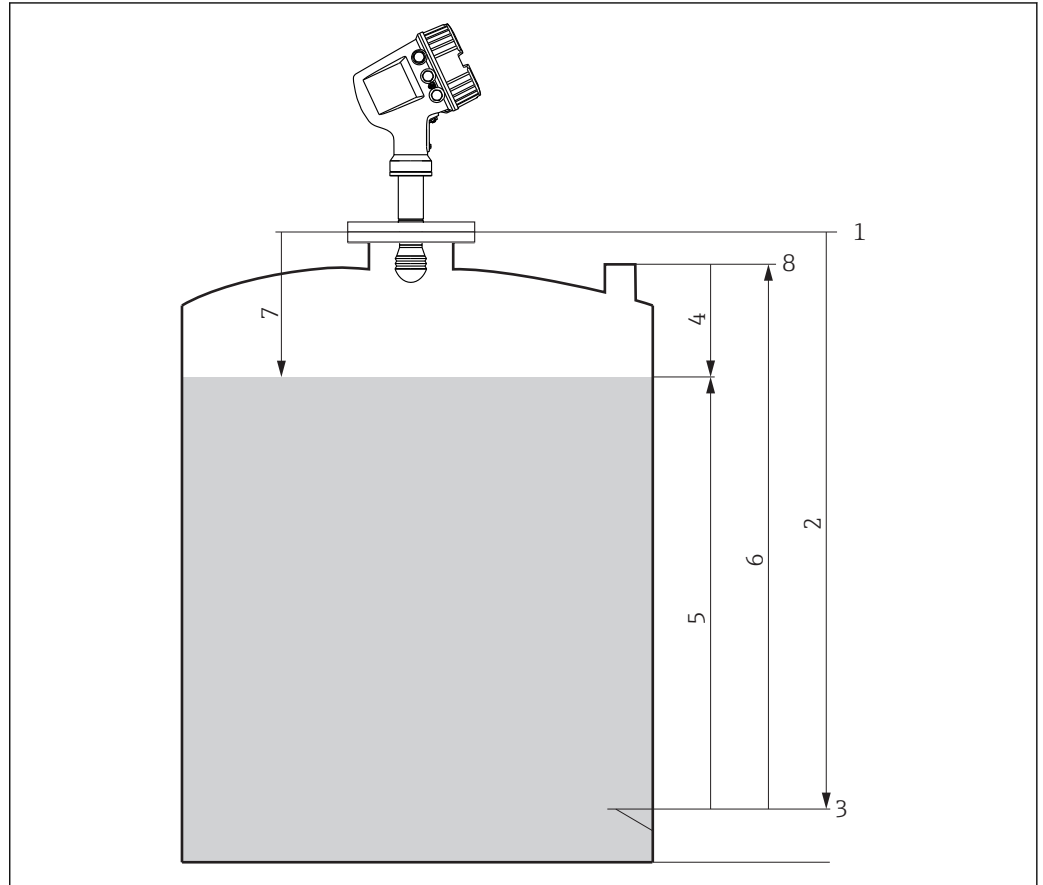

25 Terms related to radar tank measurement

- 1 Gauge reference height
- 2 Empty
- 3 Datum plate
- 4 Tank ullage
- 5 Tank level
- 6 Tank reference height
- 7 Distance
- 8 Dipping reference

9.2 Initial settings

9.2.1 Setting the display language

Setting the display language via the display module

1. While in the standard view (→ 39), press "E". If required, select **Keylock off** from the context menu and press "E" again.
 - ↳ The **Language** parameter appears.
2. Open the **Language** parameter and select the display language.

Setting the display language via an operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Display → Language

2. Select the display language.

i This setting only affects the language on the display module. To set the language in the operating tool use the language setting functionality of FieldCare or DeviceCare, respectively.


9.2.2 Setting the real-time clock

Setting the real-time clock via the display module


1. Navigate to: Setup → Advanced setup → Date / time → Set date
2. Use the following parameters to set the the real-time clock to the current date and time: **Year, Month, Day, Hour, Minutes**.

Setting the real-time clock via an operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Date / time
- 2.

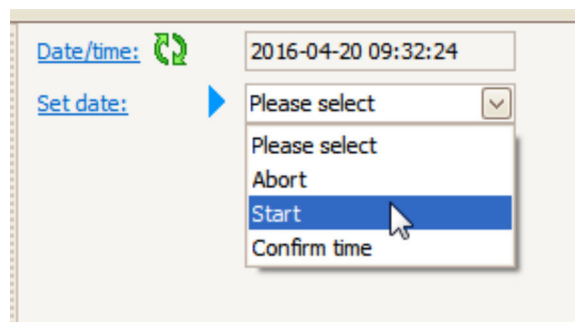



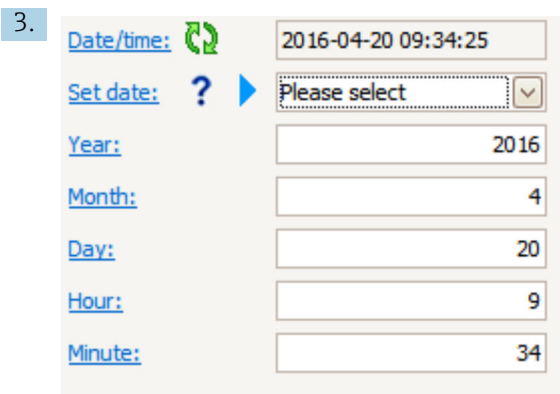


Go to the **Set date** parameter and select the **Start** option.



Use the following parameters to set the date and time: **Year, Month, Day, Hour, Minutes**.

4.


Date/time:		2016-04-20 09:35:49
Set date:	 	Please select 
Year:		Please select
Month:		Abort
Day:		Start
Hour:		Confirm time 
Minute:		
		9
		34

Go to the **Set date** parameter and select the **Confirm time** option.

↳ The real-time clock is set to the current date and time.






9.3 Configuring the measuring device


9.3.1 Configuration of the level measurement

The first parameters of the **Setup** menu are used to configure the measurement. A short description is given in the following sections. For a more detailed description refer to the parameter description in the appendix →  122.

Basic settings




Navigation path: Setup

Parameter	Meaning	Description
Setup → Device tag	Define a name to identify the measuring point within the plant.	→  122
Setup → Units preset	Select a set of units for length, pressure and temperature.	→  122
Setup → Empty	Enter the distance from the lower edge of the device flange to the datum plate.	→  123
Setup → Tank level	Shows the measured level. Check whether the indicated value matches the actual level.	→  113
Setup → Set level	Can be used to correct a constant shift of the measured level. If the indicated level does not match the actual level: Enter the actual level into this parameter. An offset for the measured level is then automatically defined.	→  124

 The **Set level** parameter can only be used to compensate for a constant level error. To eliminate errors resulting from interference echos, use the interference echo suppression (map).

Interference echo suppression (map) in an operating tool (e.g. FieldCare/DeviceCare)

Navigation path: Setup

Parameter	Meaning	Description
Setup → Distance	Shows the measured distance from the lower edge of the device flange to the product surface. Check whether this value is correct.	→  127
Setup → Confirm distance	Specify whether the measured distance matches the actual distance. The selection determines up to which distance an interference echo suppression is recorded.	→  124
Present mapping	Shows up to which distance a mapping has already been recorded.	
Setup → Mapping end point	Only visible for Confirm distance = Manual map . Determines up to which distance the new mapping will be recorded. Depending on the selection in Confirm distance a suitable value is preset in this parameter. Usually, there is no need to change this value.	
Setup → Record map	Only visible for Confirm distance = Manual map Select Record map . This starts the recording of the new map.	→  126

Interference echo suppression on the local display

Navigation path: Setup → Mapping

















 For the meaning of the parameters in this wizard see the table above.

Dip table

The dip table is used to correct the level readings using independently taken hand dips. The dip table is used in particular to adapt the level gauge to the specific application conditions such as a mechanical offset and the tank or stilling well design.


The dip table is managed in the **Dip-table** submenu →  206.

9.4 Configuring the tank gauging application

Configuration of the inputs:	Description
HART inputs	→  61
NMT532/539 connected via HART	→  63
4-20mA inputs	→  64
RTD input	→  65
Digital inputs	→  67
Configuration of the data processing in the device:	Description
Linking input values to tank variables	→  69
Tank calculation: Direct Level Measurement	→  70
Tank calculation: Hybrid Tank Measurement System (HTMS)	→  71
Tank calculation: Correction of the Hydrostatic Tank Deformation (HyTD)	→  72
Tank calculation: Thermal Tank Shell Correction (CTSh)	→  73
Alarms (limit evaluation)	→  74
Configuration of the signal output:	Description
4-20mA output	→  75
HART slave + 4-20mA output	→  76
Modbus	→  78
V1	→  79
Digital outputs	→  80

9.4.1 Configuration of the HART inputs

Connecting and addressing HART devices

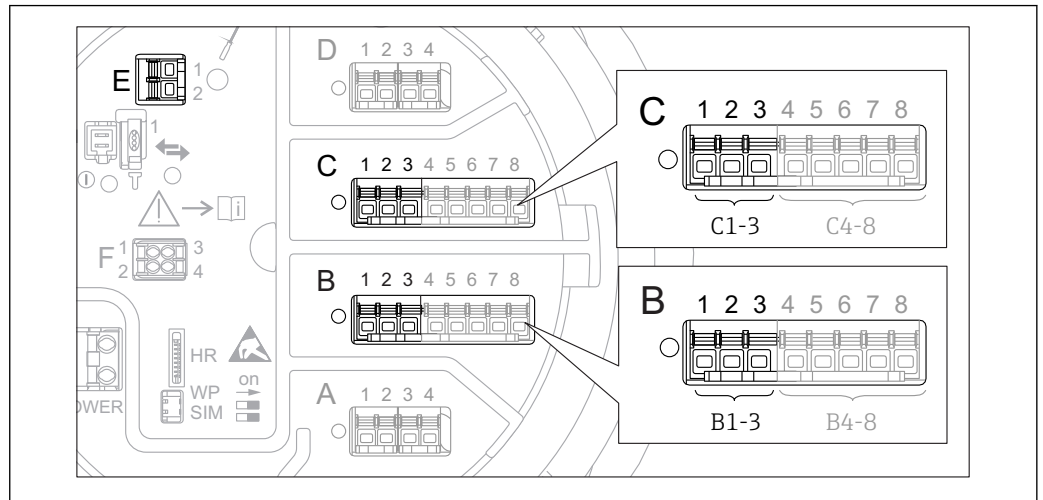

26 Possible terminals for HART loops

- B Analog I/O module in slot B (availability depending on device version → 22)
- C Analog I/O module in slot C (availability depending on device version → 22)
- E HART Ex is output (available in all device versions)

i HART devices must be configured and given a unique HART address in the range from 1 to 15 via their own user interface before they are connected to the Micropilot NMR8x²⁾. Make sure they are connected as defined by the terminal assignment → 28. Devices with an address larger than 15 are not recognized by the Micropilot.

Slot B or C: Setting the operating mode of the Analog I/O module



i This section is not relevant for the HART Ex is output (Slot E). This output always functions as a HART master for the connected HART slaves.

If HART devices are connected to an Analog I/O module (slot B or C in the terminal compartment), this module must be configured as follows:






1. Navigate to the submenu of the respective Analog I/O module: Setup → Advanced setup → Input/output → Analog I/O X1-3
2. Go to the **Operating mode** parameter (→ 142).
3. If only one HART device is connected to this loop:
Select the **HART master+4..20mA input** option. In this case the 4-20mA signal can be used in addition to the HART signal. For the configuration of the 4-20mA input: → 64.
4. If up to 6 HART devices are connected to this loop:
Select the **HART master** option.

2) The current software does not support HART devices with address 0 (zero).

Defining the type of measured value

-  This setting can be skipped for a connected Prothermo NMT5xx as the type of measured value is automatically recognized by the Micropilot NMR8x in this case.
- 
 - The measured values can only be used in the system if the unit of the assigned HART variable fits the type of measured value. The HART variable assigned to **Output temperature**, for example, has to be in °C or °F.
 - A HART variable with unit "%" can not be used for **Output level**. Instead, the HART variable must be in mm, m, ft or in.

The type of measured value must be specified for each HART variable (PV, SV, TV and QV). To do so, proceed as follows:

1. Navigate to: Setup → Advanced setup → Input/output → HART devices
 - ↳ There is a submenu for each connected HART device.
2. For each device go to the corresponding submenu.
3. If the device measures a pressure:
 - Go to the **Output pressure** parameter (→  132) and specify which of the four HART variables contains the measured pressure. Only a HART variable with a pressure unit may be selected.
4. If the device measures a density:
 - Go to the **Output density** parameter (→  133) and specify which of the four HART variables contains the measured density. Only a HART variable with a density unit may be selected.
5. If the device measures a temperature:
 - Go to the **Output temperature** parameter (→  133) and specify which of the four HART variables contains the measured temperature. Only a HART variable with a temperature unit may be selected.
6. If the device measures the vapor temperature:
 - Go to the **Output vapor temperature** parameter (→  134) and specify which of the four HART variables contains the measured vapor temperature. Only a HART variable with a temperature unit may be selected.
7. If the device measures a level:
 - Go to the **Output level** parameter (→  134) and specify which of the four HART variables contains the measured level. Only a HART variable with a level unit (not "%") may be selected.

Disconnecting HART devices

When a HART device is disconnected from the device, it must also be logically removed as follows:


1. Navigate to Setup → Advanced setup → Input/output → HART devices → Forget device → Forget device
2. Select the HART device to be removed.


-  This procedure is also necessary if a defective device is exchanged.

9.4.2 Configuration of a connected Prothermo NMT532/NMT539


If a Prothermo NMT532 or NMT539 temperature transmitter is connected via HART, it can be configured as follows:

1. Navigate to: Expert → Input/output → HART devices → HART Device(s) → NMT device config; here, **HART Device(s)** is the name of the connected Prothermo.
2. Go to the **Configure device?** parameter and select **Yes**.
3. Go to the **Bottom point** parameter and enter the position of the bottom temperature element (see picture below).

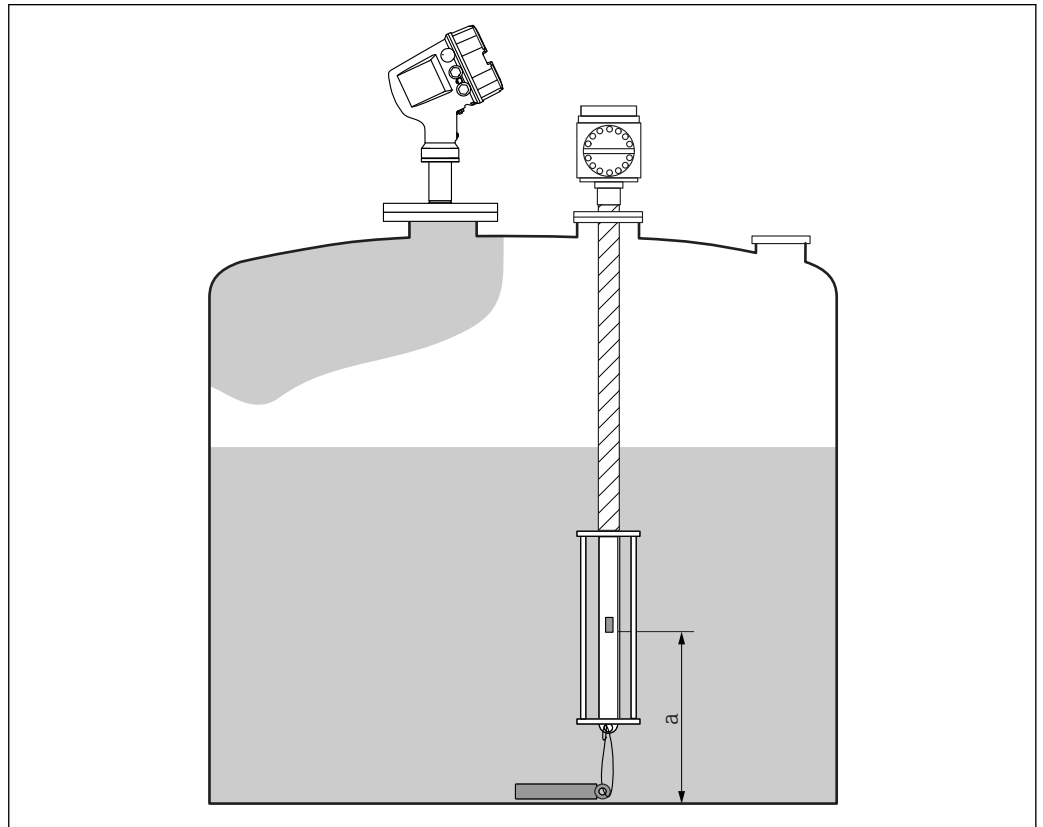


 27 Position of the bottom temperature element

a Distance from bottom temperature element to zero reference (tank bottom or datum plate). The standard factory default setting is 500 mm (19.69 in), and it can be adjusted according to the actual installation.

 To check the temperatures measured by the individual elements, go to the following submenu: Operation → Temperature → NMT element values → Element temperature

There is a **Element temperature X** parameter for each element of the Prothermo.


9.4.3 Configuration of the 4-20mA inputs

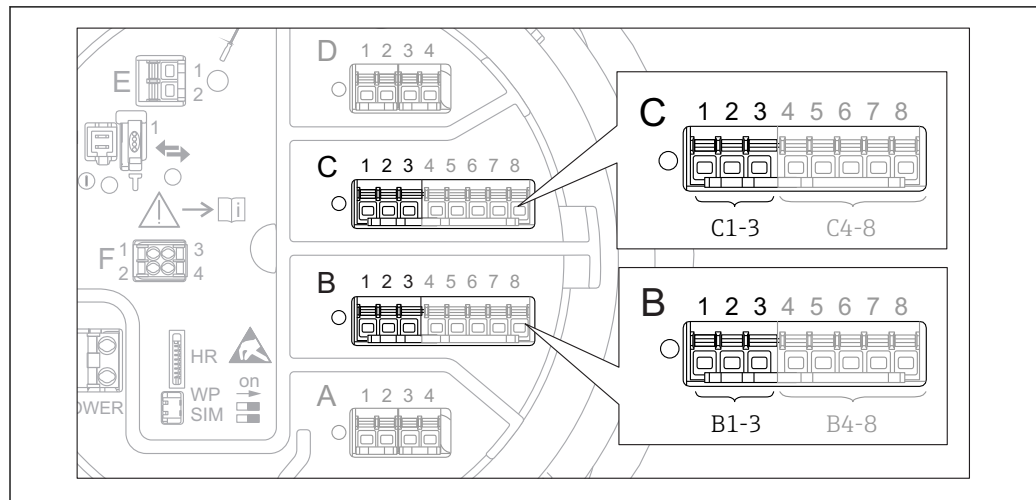

28 Possible locations of the Analog I/O modules, which can be used as a 4-20mA input. The order code of the device determines which of these modules is actually present → 22.

For each Analog I/O module to which a 4-20mA device is connected, proceed as follows:

1. Make sure the 4-20mA devices are connected as defined by the terminal assignment → 28.
2. Navigate to the submenu of the respective Analog I/O module: Setup → Advanced setup → Input/output → Analog I/O X1-3
3. Go to the **Operating mode** parameter (→ 142) and select **4..20mA input** or **HART master+4..20mA input**.
4. Go to the **Process variable** parameter (→ 148) and specify which process variable is transmitted by the connected device.
5. Go to the **Analog input 0% value** parameter (→ 148) and define which value of the process variable corresponds to an input current of 4 mA (see diagram below).
6. Go to the **Analog input 100% value** parameter (→ 148) and define which value of the process variable corresponds to an input current of 20 mA (see diagram below).
7. Go to the **Process value** parameter (→ 149) and check whether the indicated value matches the actual value of the process variable.

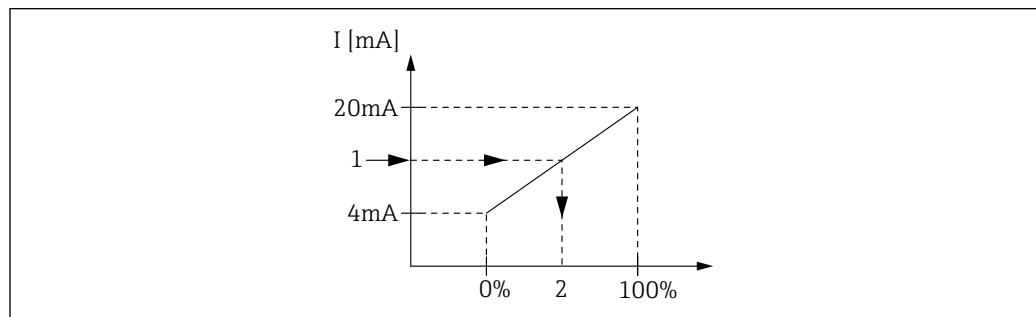


29 Scaling of the 4-20mA input to the process variable

- 1 Input value in mA
- 2 Process value

i The **Analog I/O** submenu contains additional parameters for a more detailed configuration of the Analog Input. For a description refer to : → 142


9.4.4 Configuration of a connected RTD

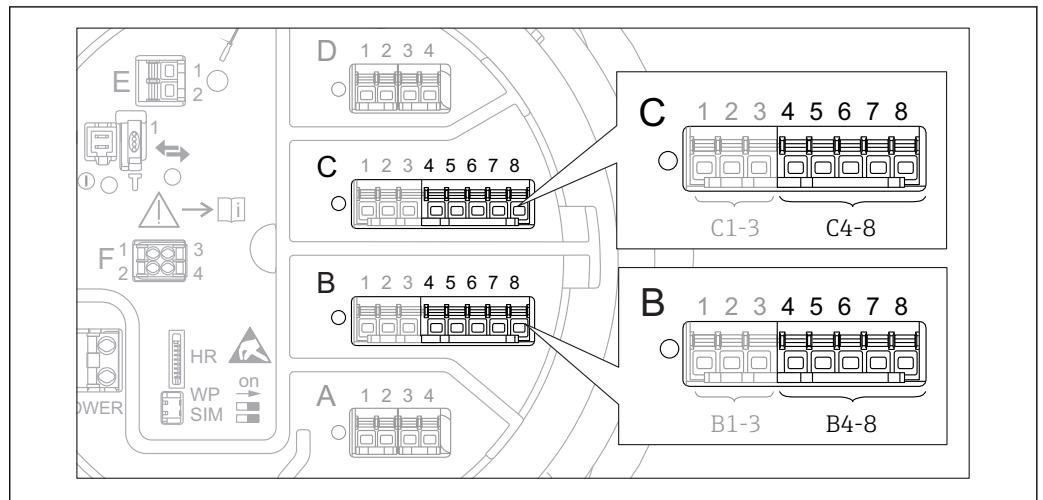

A0032465

30 Possible locations of the Analog I/O modules, to which an RTD can be connected. The order code of the device determines which of these modules is actually present → 22.

1. Make sure the RTD is connected as defined by the terminal assignment → 32.
2. Navigate to the submenu of the respective Analog I/O module: Setup → Advanced setup → Input/output → Analog IP X4-8.
3. Go to the **RTD type** parameter (→ 136) and specify the type of the connected RTD.

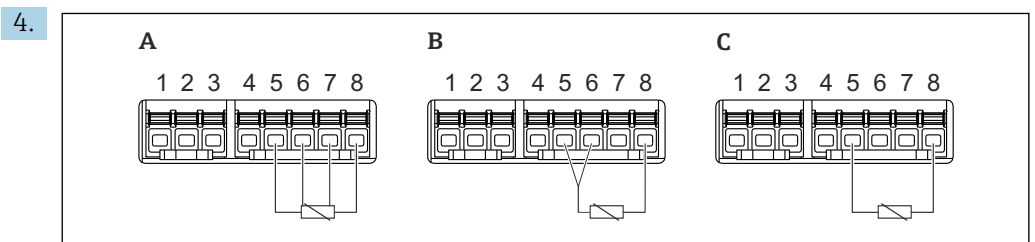

A0026371


31 RTD connection types

- A 2 wire RTD connection
- B 3 wire RTD connection
- C 4 wire RTD connection

Go to the **RTD connection type** parameter (→ 137) and specify the type of connection of the RTD (2-, 3- or 4-wire).

5. Go to the **Input value** parameter (→ 139) and check whether the indicated temperature matches the actual temperature.
6. Go to the **Minimum probe temperature** parameter (→ 139) and specify the minimum approved temperature of the connected RTD.
7. Go to the **Maximum probe temperature** parameter (→ 139) and specify the maximum approved temperature of the connected RTD.

8.

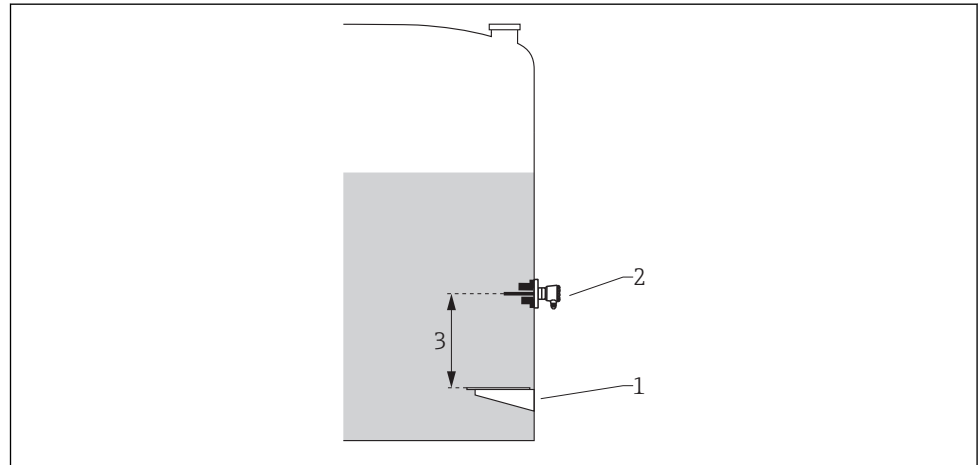

A0029269

- 1 Datum plate
- 2 RTD
- 3 Probe position (→ 140)

Go to the **Probe position** parameter and enter the mounting position of the RTD (measured from the datum plate).


- ↳ This parameter, in conjunction with the measured level, determines whether the measured temperature refers to the product or to the gas phase.

Offset for resistance and/or temperature



An offset for the resistance or the temperature can be defined in the following submenu: Expert → Input/output → Analog IP X4-8.


- **Ohms offset** is added to the measured resistance before the calculation of the temperature.
- **Temperature offset after conversion** is added to the measured temperature.

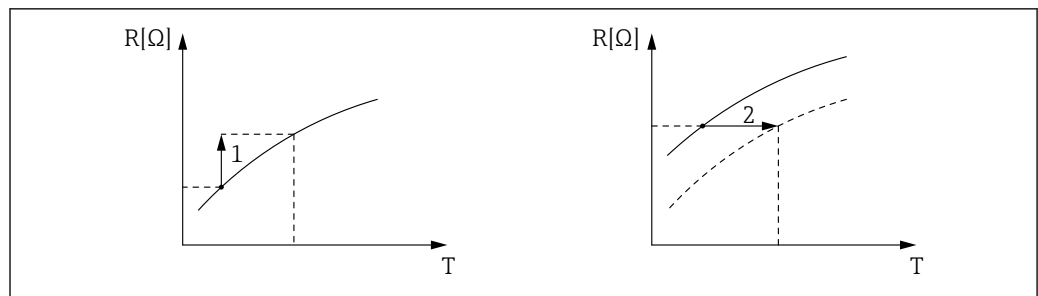

A0029265

- 1 Ohms offset
- 2 Temperature offset after conversion

9.4.5 Configuration of the digital inputs

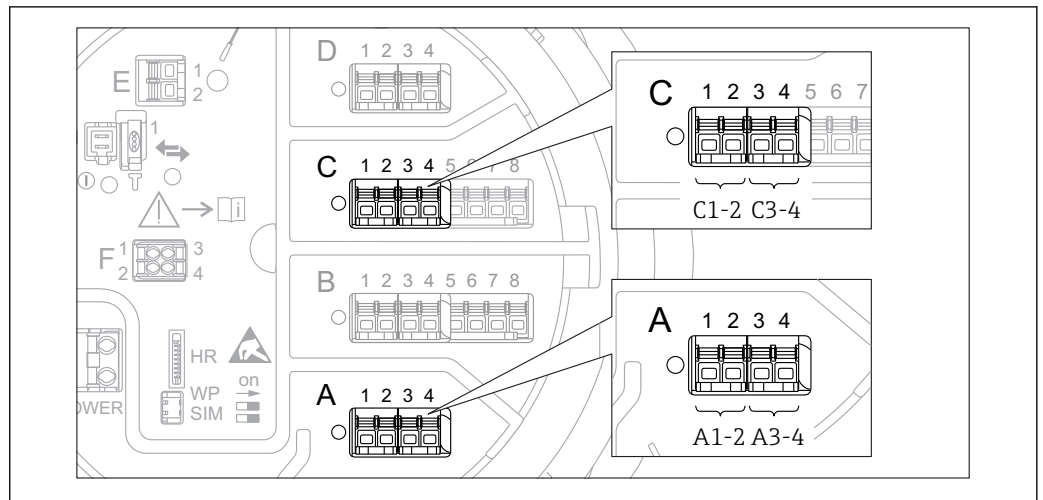


32 Possible locations of the Digital I/O modules (examples); the order code defines the number and location of digital input modules → 22.

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode** and **Contact type**.

The "Operating mode" parameter

Setup → Advanced setup → Input/output → Digital Xx-x → Operating mode

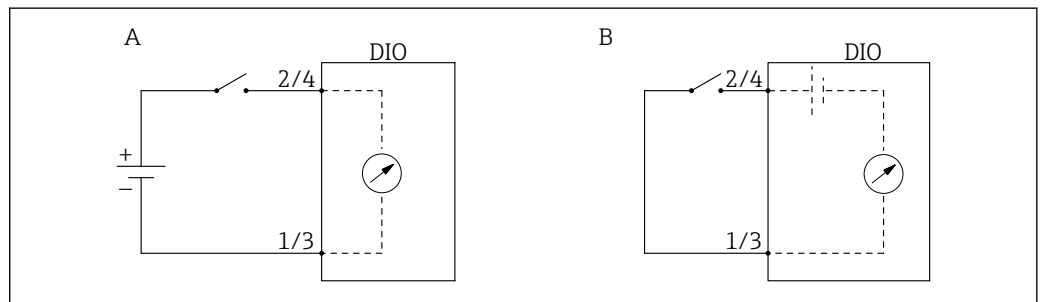

A "Operating mode" = "Input passive"
 B "Operating mode" = "Input active"

Meaning of the options

- **Input passive**

The DIO module measures the voltage provided by an external source. Depending on the status of the external switch, this voltage is 0 at the input (switch open) or exceeds a certain limit voltage (switch closed). These two states represent the digital signal.

- **Input active**


The DIO module provides a voltage and uses it to detect whether the external switch is open or closed.

The "Contact type" parameter

Setup → Advanced setup → Input/output → Digital Xx-x → Contact type

This parameter determines how the state of the external switch is mapped to the internal states of the DIO module:



State of the external switch	Internal state of the DIO module	
	Contact type = Normally open	Contact type = Normally closed
Open	Inactive	Active
Closed	Active	Inactive
Behavior in special situations:		
During start-up	Unknown	Unknown
Fault in measurement	Error	Error

- i
 - The internal state of the Digital Input can be transferred to a Digital Output or can be used to control the measurement.
 - The **Digital Xx-x** submenu contains additional parameters for a more detailed configuration of the Digital Input. For a description refer to →  152.

9.4.6 Linking input values to tank variables


Measured values must be linked to tank variables before they can be used in the Tank Gauging application. This is done by defining the source of each tank variable in the following parameters:

Tank variable	Parameter defining the source of this variable
Bottom water level	Setup → Advanced setup → Application → Tank configuration → Level → Water level source
Average or spot temperature of the product	<ul style="list-style-type: none"> ■ Setup → Liquid temp source ■ Setup → Advanced setup → Application → Tank configuration → Temperature → Liquid temp source
Temperature of the air surrounding the tank	Setup → Advanced setup → Application → Tank configuration → Temperature → Air temperature source
Temperature of the vapor above the product	Setup → Advanced setup → Tank configuration → Temperature → Vapor temp source
Density of the product	Setup → Advanced setup → Application → Tank configuration → Density → Observed density source
Bottom pressure (P1)	Setup → Advanced setup → Application → Tank configuration → Pressure → P1 (bottom) source
Top pressure (P3)	Setup → Advanced setup → Application → Tank configuration → Pressure → P3 (top) source

-  Depending on the application not all these parameters will be relevant in a given situation.
-  The product level is always the level measured by the Micropilot itself. It needs not to be linked.

9.4.7 Tank calculation: Direct level measurement

If no tank calculation is configured, level and temperature are measured directly.

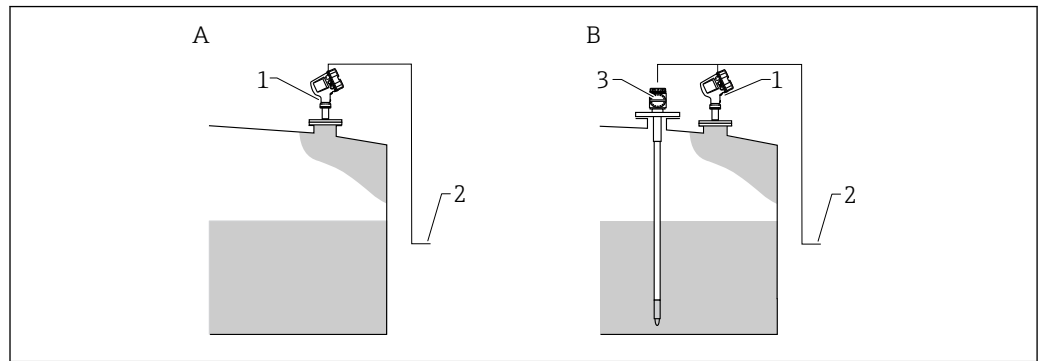

A0029255


- A Direct level measurement (without temperature)
- B Direct level and temperature measurement
- 1 Level transmitter
- 2 To inventory management system
- 3 Temperature transmitter

- ▶ If a temperature transmitter is connected:
Navigate to: "Setup → Liquid temp source" and specify from which device the temperature is obtained.

9.4.8 Tank calculation: Hybrid tank measurement system (HTMS)






HTMS uses level and pressure measurements to calculate the density of the medium.

i In non-atmospheric (i.e. pressurized) tanks it is recommended to use the **HTMS P1+P3** mode. Two pressure sensors are required in this case. In atmospheric (i.e. unpressurized) tanks the **HTMS P1** with only one pressure sensor is sufficient.

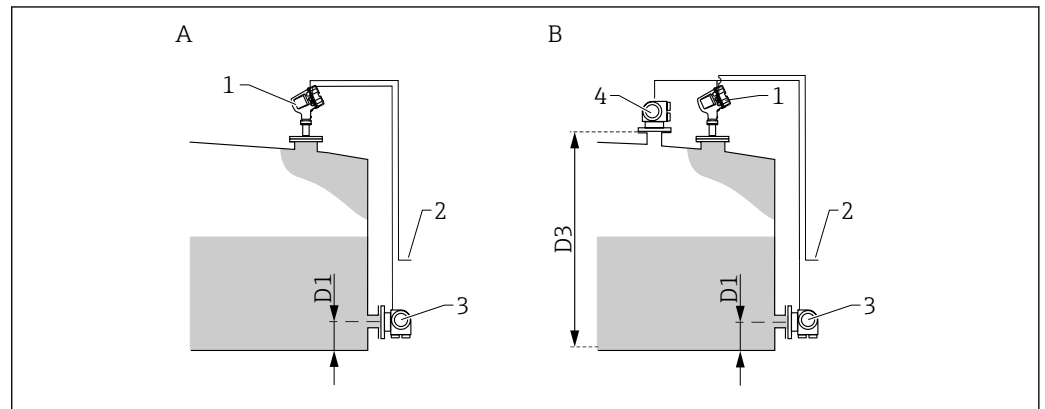


A0029256

- A "HTMS mode" parameter" = "HTMS P1" option"
 B "HTMS mode" parameter" = "HTMS P1+P3" option"
 D1 P1 position
 D3 P3 position
 1 Micropilot
 2 To inventory management system
 3 Pressure sensor (bottom)
 4 Pressure sensor (top)

1. Navigate to Setup → Advanced setup → Application → Tank configuration → Pressure
2. Go to **P1 (bottom) source** (→  185) and specify from which device the bottom pressure (P1) is obtained.
3. If a top pressure transmitter (P3) is connected:
Go to **P3 (top) source** (→  187) and specify from which device the bottom pressure (P1) is obtained.
4. Navigate to: Setup → Advanced setup → Application → Tank calculation → HTMS
5. Go to **HTMS mode** (→  202) and specify the HTMS mode.
6. Navigate to Setup → Advanced setup → Application → Tank configuration → Density
7. Go to **Observed density source** (→  183) and select **HTMS**.
8. Use the other parameters of the **HTMS** submenu to configure the calculation. For a detailed description: →  200

9.4.9 Tank calculation: Hydrostatic Tank Deformation (HyTD)

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels divided over the full range of the tank.

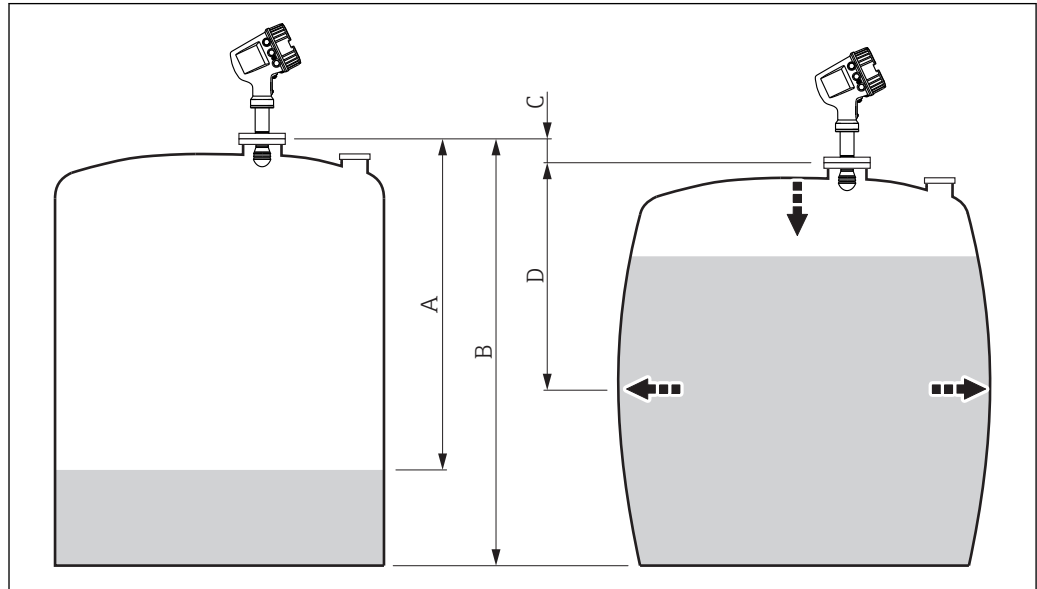




33 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (tank nearly empty)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (tank filled)

i The Correction of the Hydrostatic Tank Deformation is configured in the **HyTD** submenu (→ 192)


9.4.10 Tank calculation: Thermal tank shell correction (CTSh)

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

-  This correction is recommended for the following situations:
 - if the operating temperature deviates considerably from the temperature during calibration ($\Delta T > 10\text{ °C}$ (18 °F))
 - for extremely high tanks
 - for refrigerated, cryogenic or heated applications
-  As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.
-  This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

9.4.11 Configuration of the alarms (limit evaluation)

A limit evaluation can be configured for up to 4 tank variables. The limit evaluation issues an alarm if the value exceeds an upper limit or falls below a lower limit, respectively. The limit values can be defined by the user.

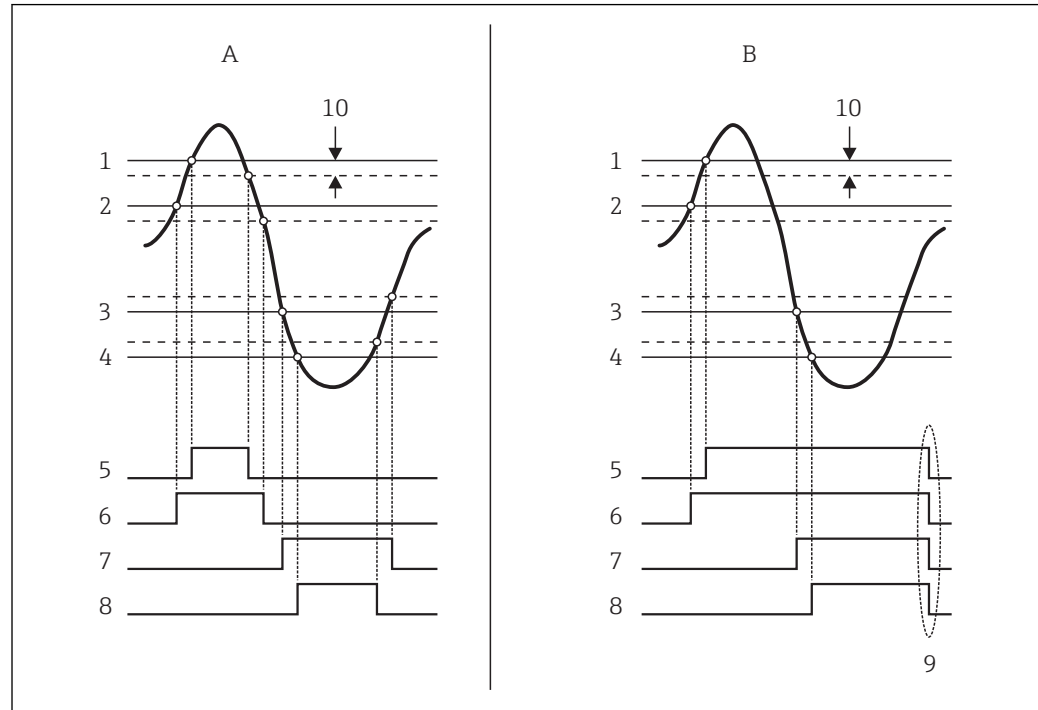

A0029539

34 Principle of the limit evaluation


- A Alarm mode = On
- B Alarm mode = Latching
- 1 HH alarm value
- 2 H alarm value
- 3 L alarm value
- 4 LL alarm value
- 5 HH alarm
- 6 H alarm
- 7 L alarm
- 8 LL alarm
- 9 "Clear alarm" = "Yes" or power off-on
- 10 Hysteresis

The limit evaluation is configured in the **Alarm 1 to 4** submenus.

Navigation path: Setup → Advanced setup → Alarm → Alarm 1 to 4

i For **Alarm mode = Latching** all alarms remain active until the user selects **Clear alarm = Yes** or the power is switched off and on.


9.4.12 Configuration of the 4-20mA output

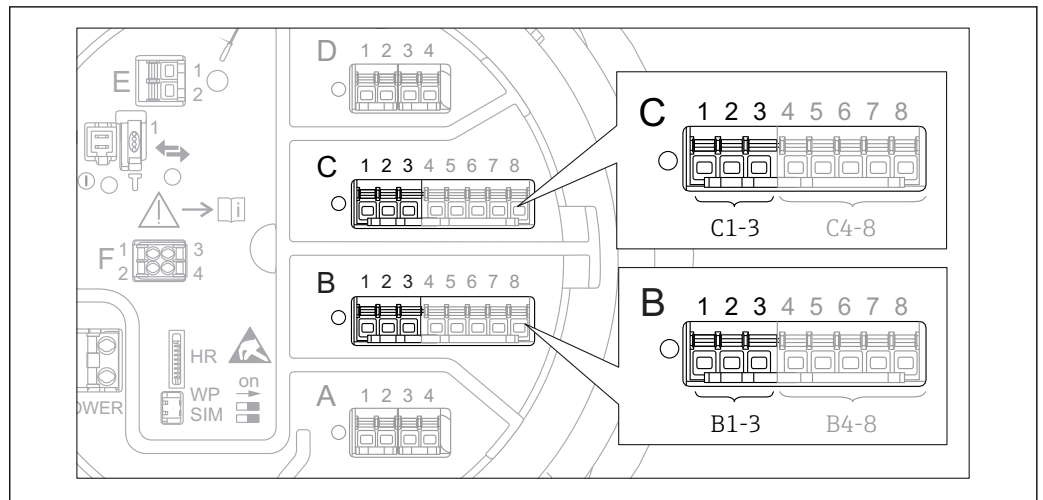

35 Possible locations of the Analog I/O modules, which can be used as a 4-20mA output. The order code of the device determines which of these modules is actually present → 22.

Each Analog I/O module of the device can be configured as a 4...20mA analog output. To do so, proceed as follows:

1. Navigate to: Setup → Advanced setup → Input/output → Analog I/O X1-3.
2. Go to the **Operating mode** parameter and select **4..20mA output** or **HART slave +4..20mA output³⁾**.
3. Go to the **Analog input source** parameter and select the tank variable which is to be transmitted via the 4...20mA output.
4. Go to the **0 % value** parameter and enter the value of the selected tank variable which will be mapped to 4 mA.
5. Go to the **100 % value** parameter and enter the value of the selected tank variable which will be mapped to 20 mA.

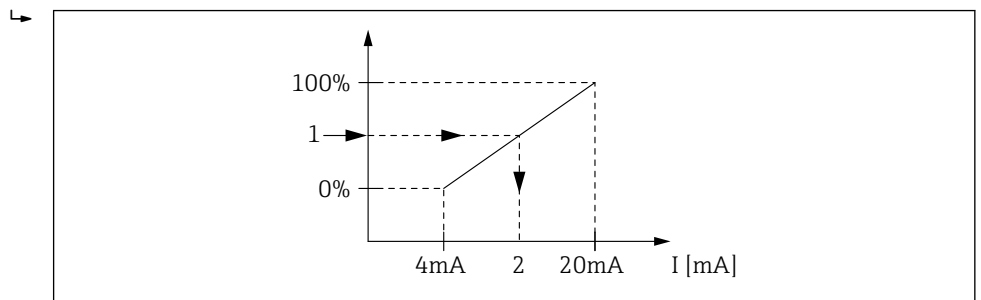

36 Scaling of the tank variable to the output current

- 1 Tank variable
- 2 Output current

- i** After startup of the device, as long as the assigned tank variable is not yet available, the output current assumes the defined error value.
- i** The **Analog I/O** submenu contains more parameters which can be used for a more detailed configuration of the analog output. For a description see → 142

3) "HART slave +4..20mA output" means that the Analog I/O module serves as a HART slave which cyclically sends up to four HART variables to a HART master. For the configuration of the HART output: → 76

9.4.13 Configuration of the HART slave + 4-20mA output

If **Operating mode = HART slave +4..20mA output** has been selected for an Analog I/O module, it serves as a HART slave which sends up to four HART variables to a HART master.

i The 4-20 mA signal can be used in this case, too. For its configuration: → 75

Standard case: PV = 4-20mA signal


By default, the Primary Variable (PV) is identical to the tank variable transmitted by the 4-20mA output. To define the other HART variables and to configure the HART output in more detail, proceed as follows:

1. Navigate to: Setup → Advanced setup → Communication → HART output → Configuration
2. Go to the **System polling address** parameter and set the HART slave address of the device.
3. Use the following parameters to assign tank variables to the second to fourth HART variable: **Assign SV**, **Assign TV**, **Assign QV**.
 - ↳ The four HART variables are transmitted to a connected HART Master.

Special case: PV ≠ 4-20mA signal

In exceptional cases it might be required that the Primary Variable (PV) transmits a different tank variable than the 4-20mA output. This is configured as follows.

1. Navigate to: Setup → Advanced setup → Communication → HART output → Configuration
2. Go to the **PV source** parameter and select **Custom**.
 - ↳ The following additional parameters appear in the submenu: **Assign PV**, **0 % value**, **100 % value** and **PV mA selector**.
3. Go to the **Assign PV** parameter and select the tank variable to be transmitted as the Primary Variable (PV).
4. Use the **0 % value** and **100 % value** parameters to define a range for the PV. The **Percent of range** parameter indicates the percentage for the actual value of the PV. It is included in the cyclical output to the HART master.

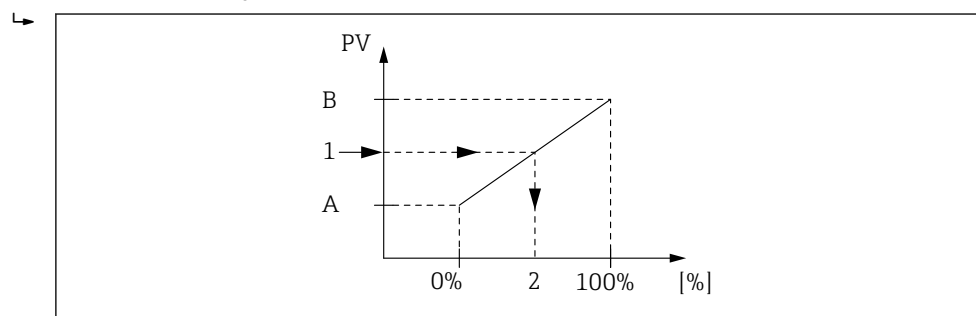



A0032954


37 *Scaling of the tank variable to the percentage*

- A 0 % value
- B 100 % value
- 1 Primary variable (PV)
- 2 Percent of range

5. Use the **PV mA selector** parameter to define whether the output current of an Analog I/O module is to be included in the cyclical HART output.

-  After startup of the device, as long as the assigned tank variable is not yet available, the output current assumes the defined error value.
-  The **PV mA selector** parameter does not influence the output current at the terminals of the Analog I/O module. It only defines whether the value of this current is part of the HART output or not.

9.4.14 Configuration of the Modbus output

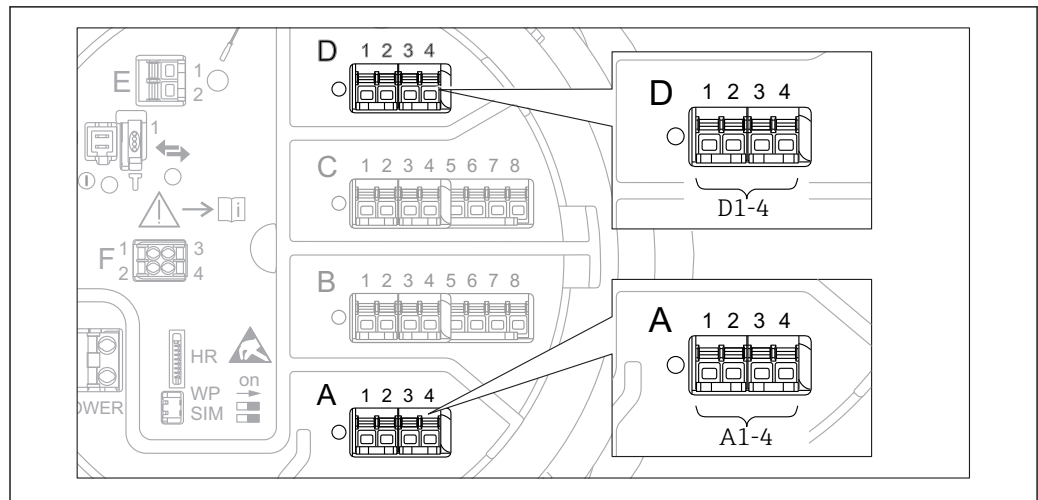

A0031200


38 Possible locations of the Modbus modules (examples); depending on the device version these modules may also be in slot B or C → 22.

The Micropilot NMR8x acts as a Modbus slave. Measured or calculated tank values are stored in registers which can be requested by a Modbus master.

The following submenu is used to configure the communication between the device and the Modbus master:

Setup → Advanced setup → Communication → Modbus X1-4 → Configuration (→ 158)

9.4.15 Configuration of the V1 output

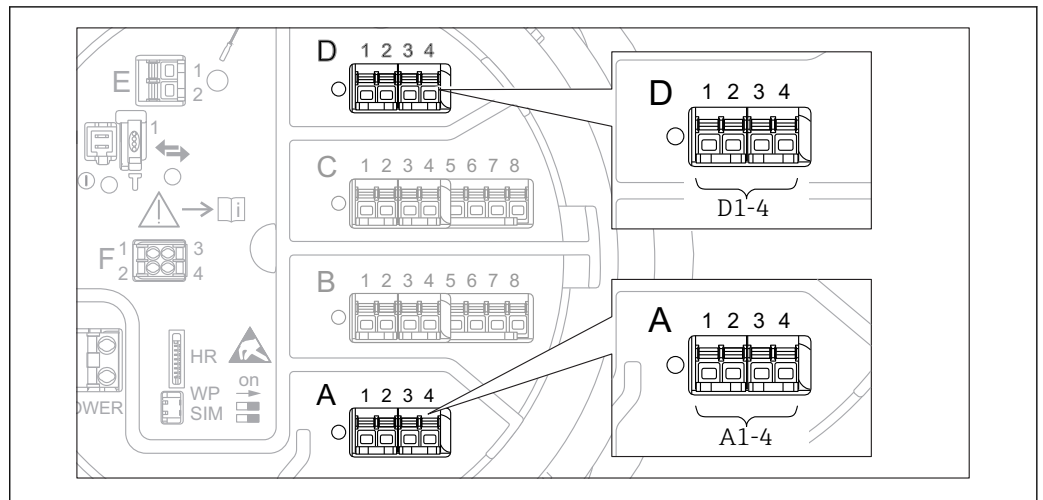


39 Possible locations of the V1 modules (examples); depending on the device version these modules may also be in slot B or C → 22.

The following submenus are used to configure the V1 communication between the device and the control system:


- Setup → Advanced setup → Communication → V1 X1-4 → Configuration (→ 161)
- Setup → Advanced setup → Communication → V1 X1-4 → V1 input selector (→ 164)

9.4.16 Configuration of the digital outputs

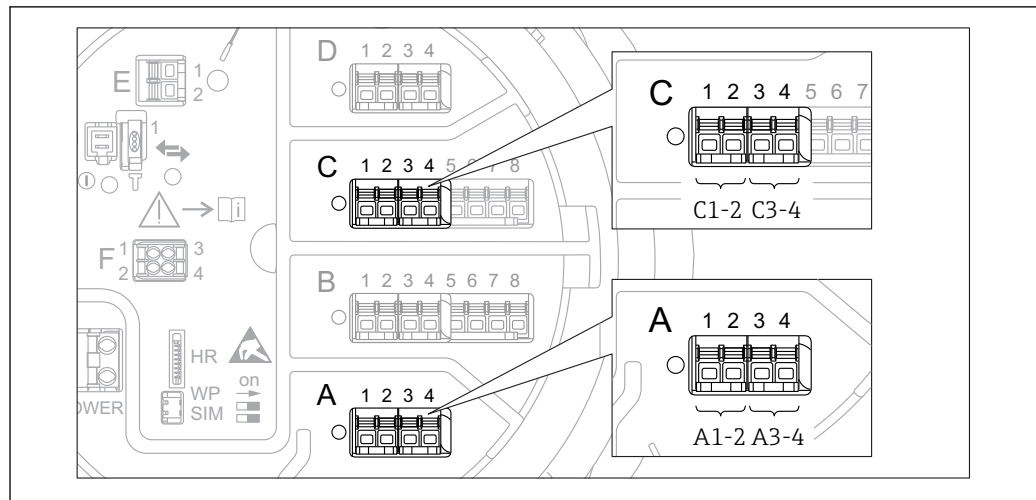

A0026424

40 Possible locations of the Digital I/O modules (examples); the order code defines the number and location of Digital I/O modules → 22.

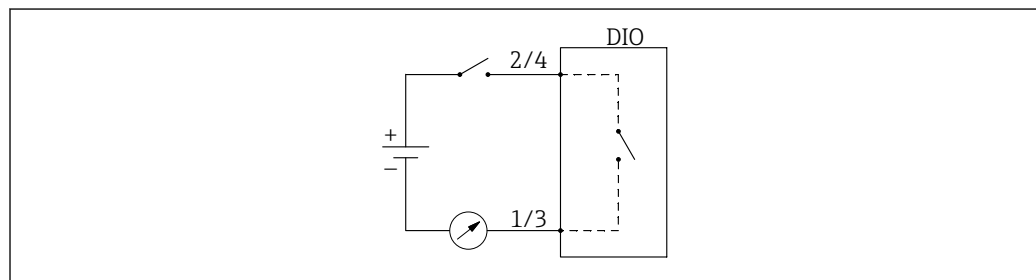

A0033029

41 Usage of the Digital I/O module as a digital output

There is a **Digital Xx-x** submenu for each digital I/O module of the device. "X" designates the slot in the terminal compartment, "x-x" the terminals within this slot. The most important parameters of this submenu are **Operating mode**, **Digital input source** and **Contact type**.



A digital output can be used to

- output the state of an alarm (if an alarm has been configured → 74)
- transmit the status of a digital input (if a digital input has been configured → 67)


To configure a digital output, proceed as follows:

1. Navigate to Setup → Advanced setup → Input/output → Digital Xx-x, where Xx-x designates the digital I/O module to be configured.
2. Go to the **Operating mode** parameter and select the **Output passive** option.
3. Go to the **Digital input source** parameter and select the alarm or digital input to be transmitted.
4. Go to the **Contact type** parameter and select how the internal state of the alarm or digital input is to be mapped to the digital output (see table below).


<ul style="list-style-type: none"> ▪ State of the alarm ▪ Internal state of the digital input 	Switching state of the digital output	
	Contact type = Normally open	Contact type = Normally closed
Inactive	Open	Closed
Active	Closed	Open

- 
 - For SIL applications, **Contact type** is automatically set to **Normally closed** by the device when starting the SIL confirmation procedure.
 - In case of a power supply failure, the switching state is always "open", irrespective of the selected option.
 - The **Digital Xx-x** submenu contains additional parameters for a more detailed configuration of the Digital Input. For a description refer to →  152.

9.5 Advanced settings



For a more detailed configuration of the signal inputs, the tank calculations and the signal outputs refer to the **Advanced setup** submenu (→  128).

9.6 Simulation

To check the correct configuration of the device and of the control system, it is possible to simulate different situations (measured values, diagnostic messages etc.). See the **Simulation** submenu (→  245) for details.

9.7 Protecting settings from unauthorized access



There are two possibilities to protect the settings from unauthorized access:

- By an access code (→  47)
This locks the access via the display and operating module.
- By the protection switch (→  48)
This locks the access to W&M-related parameters by any user interface (display and operating module, FieldCare, other configuration tools).


10 Operation

10.1 Reading off the device locking status

Depending on the locking state of the device some operations may be locked. The current locking status is indicated at: Setup → Advanced setup → Locking status. The following table summarizes the different locking statuses:

Locking status	Meaning	Unlocking procedure
Hardware locked	The device is locked by the write-protection switch in the terminal compartment.	→  48
SIL locked	The device is in SIL-locked mode.	See the SIL Safety manual
CT active - all parameters	The custody transfer mode is active.	→  48
WHG locked (in preparation)	The device is in WHG-locked mode.	in preparation
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed again.	Wait for completion of the device-internal processing.

A locking is indicated by the write protection symbol in the header of the display:

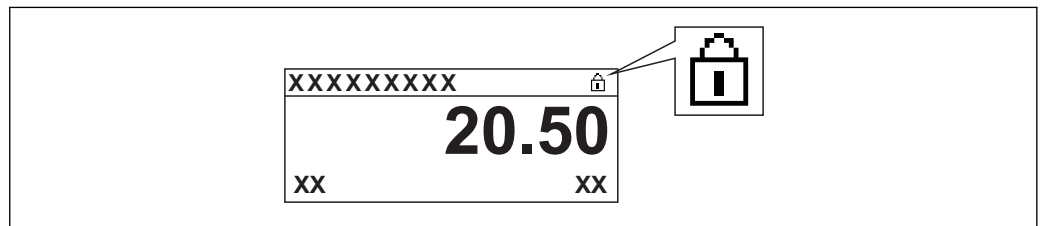

A0015870

10.2 Reading off measured values

Tank values can be read off in the following submenus:

- Operation → Level
- Operation → Temperature
- Operation → Density
- Operation → Pressure

11 Diagnostics and troubleshooting

11.1 General trouble shooting


11.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
	Display contrast too low.	Set Setup → Advanced setup → Display → Contrast display to a value $\geq 60\%$.
"Communication error" is indicated on the display when starting the device or connecting the display	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Exchange display.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer (e.g. FieldCare) and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

11.2 Diagnostic information on local display

11.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

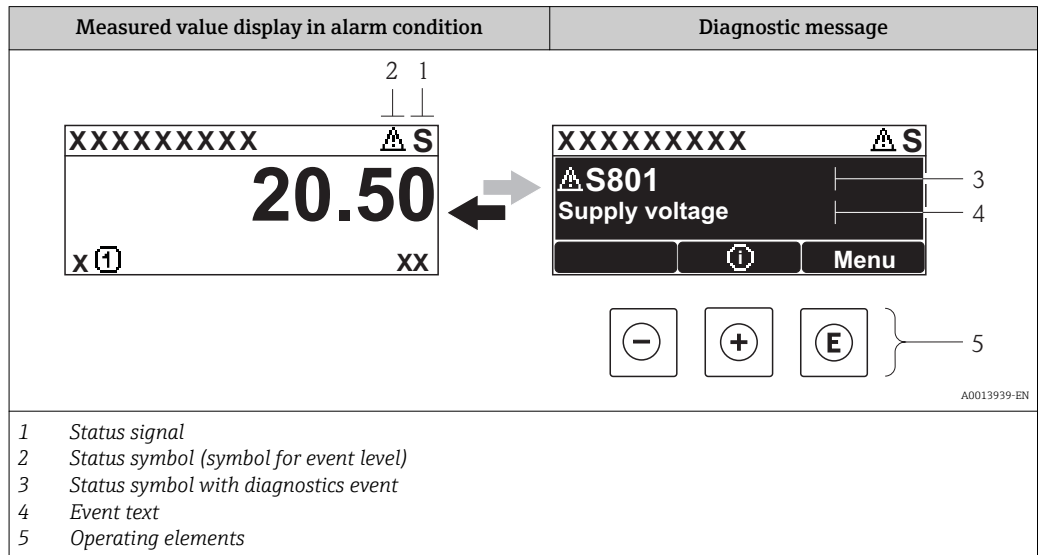

Status signals


F <small>A0013956</small>	"Failure" A device error is present. The measured value is no longer valid.
C <small>A0013959</small>	"Function check" The device is in service mode (e.g. during a simulation or a warning).
S <small>A0013958</small>	"Out of specification" The device is operated: <ul style="list-style-type: none"> ▪ Outside of its technical specifications (e.g. during startup or a cleaning) ▪ Outside of the configuration carried out by the user (e.g. level outside configured span)
M <small>A0013957</small>	"Maintenance required" Maintenance is required. The measured value is still valid.


Status symbol (symbol for event level)

 <small>A0013961</small>	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
 <small>A0013962</small>	"Warning" status The device continues to measure. A diagnostic message is generated.



Diagnostics event and event text

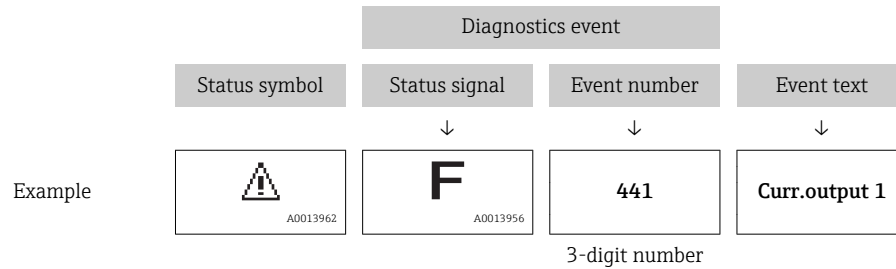The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.




If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in **Diagnostic list** submenu (→  241).

Operating elements

Operating functions in menu, submenu	
 A0013970	Plus key Opens the message about the remedial measures.
 A0013952	Enter key Opens the operating menu.

11.2.2 Calling up remedial measures

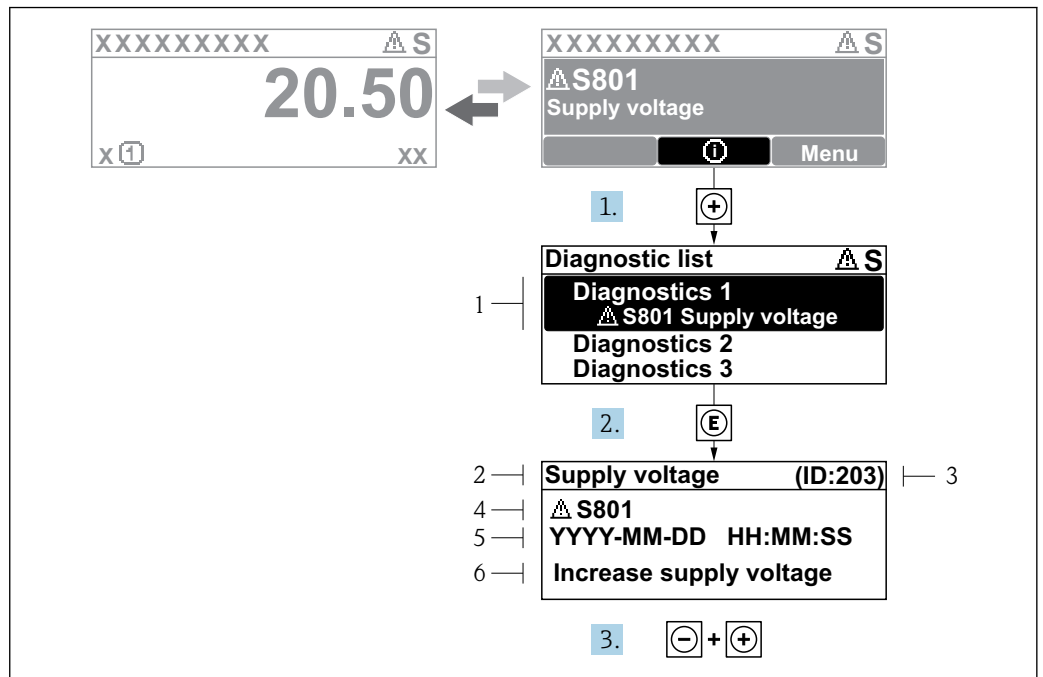

42 Message for remedial measures

A0032957-EN

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

A diagnostic message appears in the standard view (measured value display).


1. Press **+** (i symbol).
 - ↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E** .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **-** + **+** simultaneously.
 - ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or in the **Previous diagnostics**.

1. Press **E**.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
 - ↳ The message for the remedial measures closes.

11.3 Diagnostic information in FieldCare

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

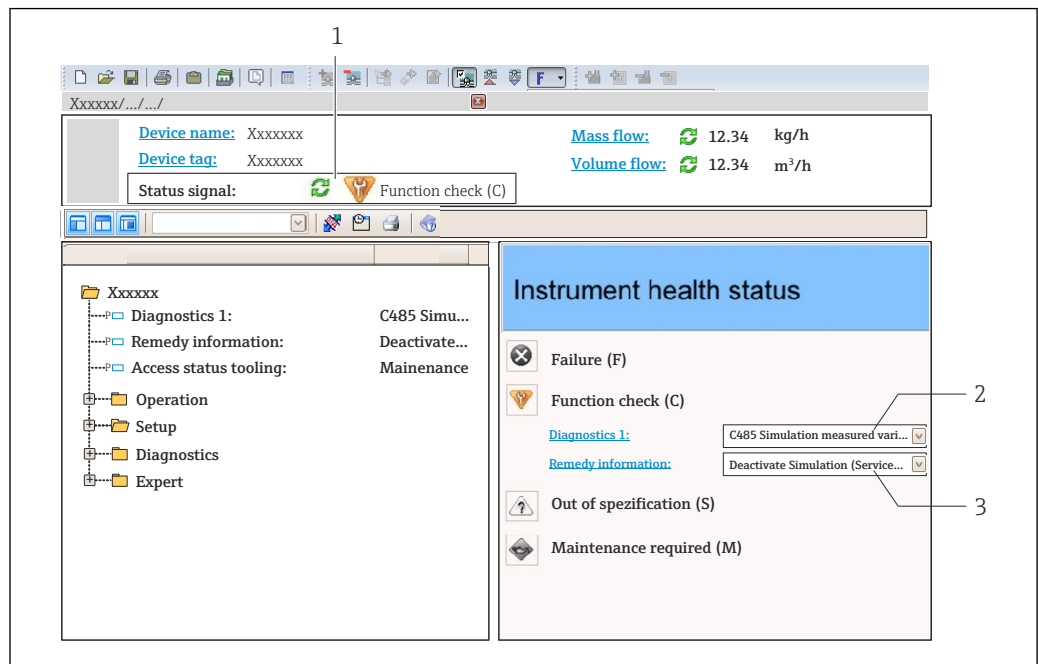

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with Service ID

i Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostic list** submenu.

11.3.1 Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
 A0017271	Failure A device error has occurred. The measured value is no longer valid.
 A0017278	Function check The device is in service mode (e.g. during a simulation or a warning).
 A0017277	Out of specification The device is operated outside its technical specification limits (e.g. outside the process temperature range)
 A0017276	Maintenance required Maintenance is required. The measured value is still valid.

i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

11.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
 - ↳ A tool tip with remedy information for the diagnostic event appears.

11.4 Overview of the diagnostic messages

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of sensor				
102	Sensor incompatible error	1. Restart device 2. Contact service	F	Alarm
150	Detector error	1. Restart device 2. Check electrical connections of detector 3. Replace detector unit	F	Alarm
151	Sensor electronic failure	Replace sensor electronic module	F	Alarm
Diagnostic of electronic				
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm
252	Modules incompatible	1. Check if correct electronic modul is plugged 2. Replace electronic module	F	Alarm
261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	F	Alarm
262	Module connection	1. Check module connections 2. Change electronic modules	F	Alarm
270	Main electronic failure	Replace main electronics	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	F	Alarm
275	I/O module failure	1. Restart device 2. Change I/O module	F	Alarm
276	I/O module faulty	1. Restart device 2. Change I/O module	F	Alarm
282	Data storage	1. Restart device 2. Contact service	F	Alarm
283	Memory content	1. Transfer data or reset device 2. Contact service	F	Alarm
284	Detector SW update in progress	Firmware update active, please wait!	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning
333	System recovery required	HW change detected System configuration recovery required Go to menu on device and perform recovery	F	Alarm
334	System recovery failure	HW changed, system recovery failure. Return to factory	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
381	Displacer distance invalid	1. Calibrate sensor 2. Restart device 3. Replace sensor electronics	F	Alarm
382	Sensor communication	1. Check connection of sensor electronics 2. Restart device 3. Replace sensor electronics	F	Alarm
Diagnostic of configuration				
400	AIO simulation output	Deactivate simulation AIO output	C	Warning
401	DIO simulation output	Deactivate simulation DIO output	C	Warning
403	Calibration AIO	1. Restart device 2. Change I/O module	F	Alarm
404	Calibration AIP	1. Restart device 2. Change I/O module	F	Alarm
405	COMM timeout DIO 1 to 8	1. Check wiring 2. Change I/O module	F	Alarm
406	IOM offline	1. Check wiring 2. Change I/O module	F	Alarm
407	COMM timeout AIO 1 to 2	1. Check wiring 2. Change I/O module	F	Alarm
408	Invalid range AIO 1 to 2	1. Check device configuration. 2. Check wiring.	C	Warning
409	RTD temp out of range 1 to 2	1. Check electronic modules 2. Change I/O or main electronic module	C	Warning
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
411	Hart device 1 to 15 has malfunction	1. Check HART device 2. Change HART device	F	Alarm ¹⁾
412	Processing download	Download active, please wait	C	Warning
413	NMT 1 to 15: element is open or short	1. Check NMT wiring connection 2. Replace NMT	C	Warning
415	Hart device 1 to 15 offline	1. Check HART device 2. Change HART device	C	Warning
434	Real time clock defective	Replace main electronics	C	Warning
436	Date/Time incorrect	Check date and time settings.	M	Warning
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
441	AIO 1 to 2 current output alarm	1. Check process 2. Check current output settings	F	Alarm
442	AIO 1 to 2 current output warning	1. Check process 2. Check current output settings	C	Warning
443	AIO 1 to 2 Input not HART compatible	Change PV source or AIO input source.	C	Warning
484	Failure mode simulation	Deactivate simulation	C	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
495	Diagnostic event simulation	Deactivate simulation	C	Warning
500	AIO C1-3 source no longer valid	Change input source	C	Warning
501	Level source no longer valid	Change input source	C	Warning
502	GP1 source no longer valid	Change input source	C	Warning
503	GP2 source no longer valid	Change input source	C	Warning
504	GP3 source no longer valid	Change input source	C	Warning
505	GP4 source no longer valid	Change input source	C	Warning
506	Water level source no longer valid	Change input source	C	Warning
507	Liquid temp source no longer valid	Change input source	C	Warning
508	Vapor temperatur source no longer valid	Change input source	C	Warning
509	Air temperature source no longer valid	Change input source	C	Warning
510	P1 source no longer valid	Change input source	C	Warning
511	P2 source no longer valid	Change input source	C	Warning
512	P3 source no longer valid	Change input source	C	Warning
513	Upper density source no longer valid	Change input source	C	Warning
514	Middle density source no longer valid	Change input source	C	Warning
515	Lower density source no longer valid	Change input source	C	Warning
516	Gauge command source no longer valid	Change input source	C	Warning
517	Gauge status source no longer valid	Change input source	C	Warning
518	Average density source no longer valid	Change input source	C	Warning
519	Upper interface source no longer valid	Change input source	C	Warning
520	Lower interface source no longer valid	Change input source	C	Warning
521	Bottom level source no longer valid	Change input source	C	Warning
522	Displacer position source not valid	Change input source	C	Warning
523	Distance source no longer valid	Change input source	C	Warning
524	Balance flag source no longer valid	Change input source	C	Warning
525	One time cmd source no longer valid	Change input source	C	Warning
526	Alarm 1 to 4 source no longer valid	Change input source	C	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
527	AIO B1-3 source no longer valid	Change input source	C	Warning
528	CTSh	1. Check device configuration. 2. Check wiring.	C	Warning
529	HTG	1. Check device configuration. 2. Check wiring.	C	Warning
530	HTMS	1. Check device configuration. 2. Check wiring.	C	Warning
531	HyTD correction value	1. Check device configuration. 2. Check wiring.	C	Warning
532	HART output: PV source not valid	Change input source	C	Warning
533	HART output: SV source not valid	Change input source	C	Warning
534	HART output: QV source not valid	Change input source	C	Warning
535	HART output: TV source not valid	Change input source	C	Warning
536	Display: source no longer valid	Change input source	C	Warning
537	Trend: source no longer valid	Change input source	C	Warning
538	HART output: PV mA source not valid	Change input source	C	Warning
539	Modbus 1-4 SP source invalid	Set valid SP input selector	C	Warning
540	V1 1-4 SP source invalid	Set valid SP input selector	C	Warning
541	Modbus 1-4 alarm source invalid	Set valid alarm input selector	C	Warning
542	V1 1-4 alarm source invalid	Set valid alarm input selector	C	Warning
543	Modbus 1-4 analog source invalid	Set valid analog input selector	C	Warning
544	V1 1-4 analog source invalid	Set valid analog input selector	C	Warning
545	Modbus 1-4 user value source invalid	Set valid user value input selector	C	Warning
546	Modbus 1-4 discrete value source invalid	Set valid user discrete input selector	C	Warning
547	V1 1-4 user value source invalid	Set valid user value input selector	C	Warning
548	V1 1-4 discrete value source invalid	Set valid user discrete input selector	C	Warning
549	Modbus 1-4 percent source invalid	Set valid percentage input selector	C	Warning
550	V1 1-4 percent source invalid	Set valid percentage input selector	C	Warning
560	Calibration mandatory	1. Carry out weight calibration 2. Carry out reference calibration 3. Carry out drum calibration	C	Alarm
564	DIO B1-2 source no longer valid	Change input source	C	Warning
565	DIO B3-4 source not valid	Change input source	C	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
566	DIO C1-2 source no longer valid	Change input source	C	Warning
567	DIO C3-4 source no longer valid	Change input source	C	Warning
568	DIO D1-2 source no longer valid	Change input source	C	Warning
569	DIO D3-4 source no longer valid	Change input source	C	Warning
585	Simulation distance	Deactivate simulation	C	Warning
586	Record map	Recording of mapping please wait	C	Warning
598	DIO A1-2 source no longer valid	Change input source	C	Warning
599	DIO A3-4 source no longer valid	Change input source	C	Warning
Diagnostic of process				
801	Energy too low	Increase supply voltage	S	Warning
803	Current loop	1. Check device configuration. 2. Check wiring.	F	Alarm
803	Current loop 1 to 2		M	Warning
803	Current loop		C	Warning
825	System temperature	1. Check ambient temperature 2. Check process temperature	S	Warning
825	System temperature		F	Alarm
826	Sensor temperature	1. Check ambient temperature 2. Check process temperature	S	Warning
826	Sensor temperature		F	Alarm
844	Process value out of specification	1. Check process value 2. Check application 3. Check sensor	S	Alarm ¹⁾
844	Process value out of specification		S	Warning
903	Current loop 1 to 2	1. Check device configuration. 2. Check wiring.	F	Alarm
904	Digital output 1 to 8	1. Check device configuration. 2. Check wiring.	F	Alarm
941	Echo lost	1. Check process value 2. Check application 3. Check sensor	S	Warning
942	In safety distance	1. Check level 2. Check safety distance 3. Reset self holding	S	Warning
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostics	Maintain your diagnostic event	M	Warning
961	Alarm 1 to 4 HighHigh	1. Check alarm source 2. Check configuration settings	C	Warning
962	Alarm 1 to 4 High	1. Check alarm source 2. Check configuration settings	C	Warning
963	Alarm 1 to 4 Low	1. Check alarm source 2. Check configuration settings	C	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
964	Alarm 1 to 4 LowLow	1. Check alarm source 2. Check configuration settings	C	Warning
965	Alarm 1 to 4 HighHigh	1. Check alarm source 2. Check configuration settings	F	Alarm
966	Alarm 1 to 4 High	1. Check alarm source 2. Check configuration settings	F	Alarm
967	Alarm 1 to 4 Low	1. Check alarm source 2. Check configuration settings	F	Alarm
968	Alarm 1 to 4 LowLow	1. Check alarm source 2. Check configuration settings	F	Alarm
970	Overtension	1. Check displacer and process conditions 2. Release overtension	C	Alarm
971	Undertension	Check displacer and process.	C	Alarm

- 1) Diagnostic behavior can be changed.




11.5 Diagnostic list

In the Diagnostic list submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.


Navigation path

Diagnostics → Diagnostic list


Calling up and closing the remedial measures

1. Press .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
 - ↳ The message about the remedial measures closes.

11.6 Reset measuring device

To reset the device to a defined state use the **Device reset** parameter (→  237).

11.7 Device information

Information on the device (order code, hardware and software version of the individual modules etc.) can be found in the **Device information** submenu (→  242).

11.8 Firmware history

Date	Software version	Modifications	Documentation (NMR81)		
			Operating Instructions	Description of Parameters	Technical Information
04.2016	01.00.zz	Original software	BA01450G/00/EN/01.16	GP01068G/00/EN/01.16	TI01252G/00/EN/01.16
12.2016	01.02.zz	Bugfixes and improvements	BA01450G/00/EN/02.17	GP01068G/00/EN/01.17	TI01252G/00/EN/02.17

12 Maintenance

12.1 Maintenance tasks

No special maintenance work is required.

12.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

12.2 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

13 Repair

13.1 General information on repairs

13.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

13.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

13.1.3 Replacement of a device or electronic module

After a complete device or the electronic mainboard has been replaced, the parameters can be downloaded into the instrument again via FieldCare.

Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

The "Save/Restore" function

After a device configuration has been saved to a computer and restored to the device using the **Save/Restore** function of FieldCare, the device must be restarted by the following setting:

Setup → **Advanced setup** → **Administration** → **Device reset** = **Restart device**.

This ensures correct operation of the device after the restore.

13.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer):
All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

13.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

13.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

13.5 Disposal


Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

14 Accessories

14.1 Device-specific accessories

14.1.1 Weather protection cover

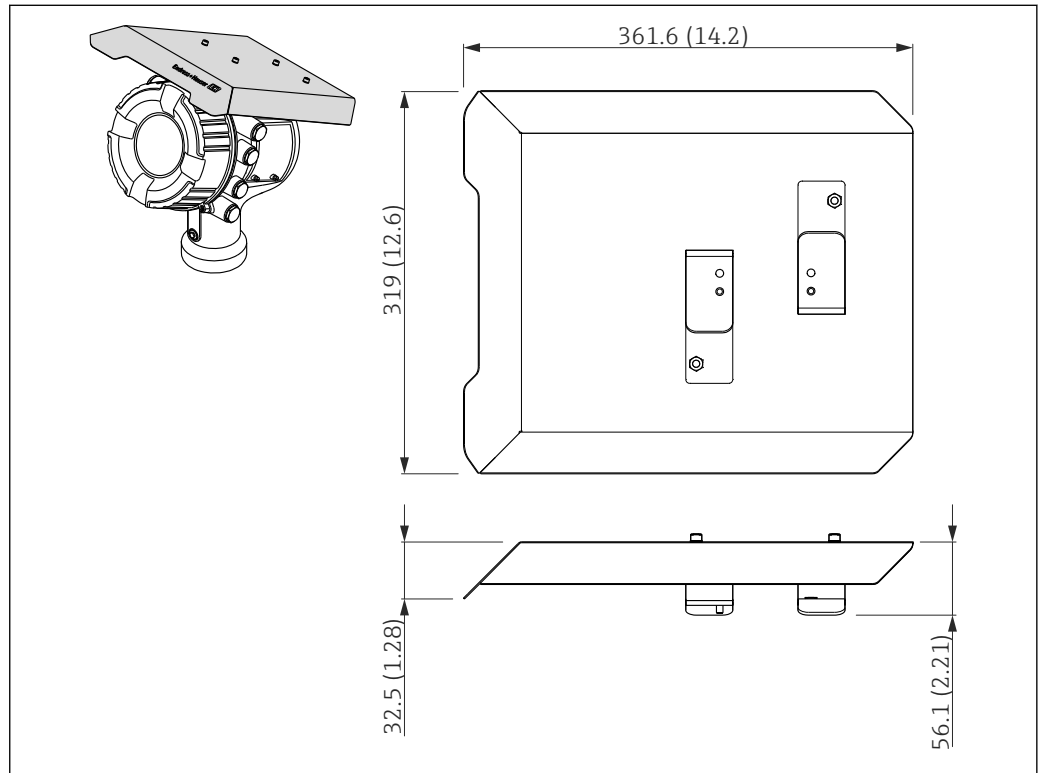

43 Weather protection cover; dimensions: mm (in)


A0028019

Materials

Part	Material
Protection cover and mounting brackets	316L (1.4404)
Screws and washers	A4

- i The weather protection cover can be ordered together with the device:
Ordering feature 620 "Accessory Enclosed", option PA "Weather Protection Cover")
- It can also be ordered as an accessory:
Order code: 71292751 (for NMR8x and NRF8x)

14.1.2 Adjustable seal

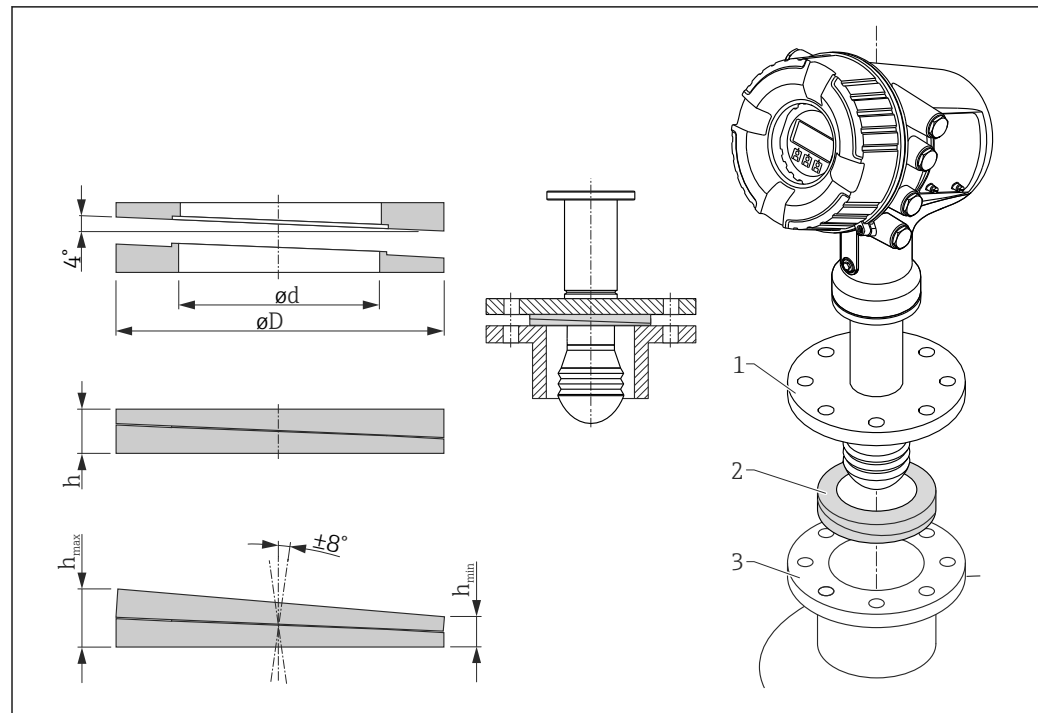


A0027787

44 Adjustable seal used to align the device by $\pm 8^\circ$


Property	Ordering feature 620 "Accessory Enclosed" ¹⁾		
	PS	PT	PU
Order code ²⁾	71285499	71285501	71285503
Compatible with	<ul style="list-style-type: none"> ▪ DN50 PN10-40 ▪ ASME 2" 150lbs ▪ JIS 50A 10K 	DN80 PM10-40	<ul style="list-style-type: none"> ▪ ASME 3" 150lbs ▪ JIS 80A 10K
Length of screws	100 mm (3.9 in)	100 mm (3.9 in)	100 mm (3.9 in)
Size of screws	M14	M14	M14
Material	FKM	FKM	FKM
Process pressure	-0.1 to +0.1 bar (-1.45 to +1.45 psi)		
Process temperature	-40 to +80 °C (-40 to +176 °F)		
$\varnothing D$	105 mm (4.13 in)	142 mm (5.59 in)	133 mm (5.24 in)
$\varnothing d$	60 mm (2.36 in)	89 mm (3.5 in)	89 mm (3.5 in)
h	16.5 mm (0.65 in)	22 mm (0.87 in)	22 mm (0.87 in)
h_{\min}	9 mm (0.35 in)	14 mm (0.55 in)	14 mm (0.55 in)
h_{\max}	24 mm (0.95 in)	30 mm (1.18 in)	30 mm (1.18 in)


- 1) With this ordering feature the adjustable seal is supplied together with the device.
 2) This order code must be used if the adjustable seal is ordered separately.


14.2 Communication-specific accessories

Accessory	Description
WirelessHART Adapter SWA70	<p>Connects field devices to a WirelessHART network. The WirelessHART adapter can be mounted directly at a HART device and is easily integrated into an existing HART network. It ensures safe data transmission and can be operated in parallel with other wireless networks.</p> <p> For details refer to Operating Instructions BA00061S</p>



14.3 Service-specific accessories

Accessory	Description
Commubox FXA195 HART	<p>For intrinsically safe HART communication with FieldCare via the USB interface.</p> <p> For details refer to Technical Information TI00404F</p>





Accessory	Description
Commubox FXA291	<p>Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer.</p> <p> For details refer to Technical Information TI00405C</p>

Accessory	Description
FieldCare	<p>Endress+Hauser's FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.</p> <p> For details refer to Operating Instructions BA00027S and BA00059S.</p>





14.4 System components

Accessory	Description
RIA15	<p>Compact process display unit with very low voltage drop for universal use to display 4 to 20 mA/HART signals</p> <p> For details refer to Technical Information TI01043K.</p>
Tankvision <ul style="list-style-type: none"> ▪ Tank Scanner NXA820 ▪ Data Concentrator NXA821 ▪ Host Link NXA822 	<p>Inventory Management System with completely integrated software for operation via standard web browser</p> <p> For details refer to Technical Information TI00419G.</p>















15 Operating menu



























-   : Navigation path for operating module at the device
-  : Navigation path for operating tool (e.g. FieldCare)
-  : Parameter can be locked via software locking

15.1 Overview of the operating menu

-  This section lists the parameters of the following menus:
 - Operation (→  113)
 - Setup (→  122)
 - Diagnostics (→  238)
- For the **Expert** menu refer to the "Description of Device Parameters" (GP) of the respective device.
- Depending on the device version and parametrization some parameters will not be available in a given situation. For details refer to the "Prerequisite" category in the description of the respective parameter.
- The representation essentially corresponds to the menu in an operating tool (e.g. FieldCare). On the local display there may be minor differences in the menu structure. Details are mentioned in the description of the respective submenu.

Navigation  Operating tool

Operation	→  113
▶ Level	→  113
Tank level	→  113
Tank Level %	→  113
Tank ullage	→  113
Tank ullage %	→  114
Upper interface level	→  114
Lower interface level	→  114
Water level	→  114
Measured level	→  115
Distance	→  115
▶ Temperature	→  115
Air temperature	→  115
Liquid temperature	→  115

























Vapor temperature	→  116
▶ NMT element values	→  116
▶ Element temperature	→  116
Element temperature 1 to 24	→  116
▶ Element position	→  117
Element position 1 to 24	→  117
▶ Density	→  117
Observed density	→  117
Vapor density	→  117
Air density	→  118
Measured upper density	→  118
Measured middle density	→  118
Measured lower density	→  118
▶ Pressure	→  119
P1 (bottom)	→  119
P3 (top)	→  119
▶ GP values	→  120
GP 1 to 4 name	→  120
GP Value 1	→  120
GP Value 2	→  120
GP Value 3	→  120
GP Value 4	→  121
 Setup	→  122
Device tag	→  122
Units preset	→  122

Empty	→ 123
Tank reference height	→ 123
Tank level	→ 113
Set level	→ 124
Confirm distance	→ 124
Present mapping	→ 125
Mapping end point	→ 126
Record map	→ 126
Distance	→ 127
Liquid temp source	→ 127
▶ Advanced setup	→ 128
Locking status	→ 128
Access status tooling	→ 128
Enter access code	→ 128
▶ Input/output	→ 129
▶ HART devices	→ 129
Number of devices	→ 129
▶ HART Device(s)	→ 130
▶ Forget device	→ 135
▶ Analog IP	→ 136
Operating mode	→ 136
RTD type	→ 136
RTD connection type	→ 137
Process value	→ 137
Process variable	→ 138






















0 % value	→ 138
100 % value	→ 138
Input value	→ 139
Minimum probe temperature	→ 139
Maximum probe temperature	→ 139
Probe position	→ 140
Damping factor	→ 140
Gauge current	→ 141
► Analog I/O	→ 142
Operating mode	→ 142
Current span	→ 143
Fixed current	→ 144
Analog input source	→ 144
Failure mode	→ 145
Error value	→ 146
Input value	→ 146
0 % value	→ 146
100 % value	→ 147
Input value %	→ 147
Output values	→ 147
Process variable	→ 148
Analog input 0% value	→ 148
Analog input 100% value	→ 148
Error event type	→ 149
Process value	→ 149

	Input value in mA	→ 149
	Input value percent	→ 150
	Damping factor	→ 150
	Used for SIL/WHG	→ 150
	Expected SIL/WHG chain	→ 151
	► Digital Xx-x	→ 152
	Operating mode	→ 152
	Digital input source	→ 153
	Input value	→ 154
	Contact type	→ 154
	Output simulation	→ 154
	Output values	→ 155
	Readback value	→ 155
	Used for SIL/WHG	→ 156
	► Communication	→ 157
	► Communication interface 1 to 2	
	Communication interface protocol	→ 157
	► Configuration	→ 158
	► Configuration	→ 161
	► V1 input selector	→ 164
	► HART output	→ 166
	► Configuration	→ 166
	► Information	→ 174

▶ Application	→ 176
▶ Tank configuration	→ 176
▶ Level	→ 176
▶ Temperature	→ 179
▶ Density	→ 183
▶ Pressure	→ 185
▶ Tank calculation	→ 190
▶ HyTD	→ 192
▶ CTSh	→ 197
▶ HTMS	→ 202
▶ Dip-table	→ 209
▶ Alarm	
▶ Alarm 1 to 4	→ 211
▶ Safety settings	→ 219
Output echo lost	→ 219
Delay time echo lost	→ 219
Safety distance	→ 219
▶ Sensor config	→ 221
▶ Information	→ 221
Signal quality	→ 221
Absolute echo amplitude	→ 221


Relative echo amplitude	→  221
Distance	→  127
► Echo tracking	→  223
Evaluation mode	→  223
History reset	→  223
► Display	→  224
Language	→  224
Format display	→  224
Value 1 to 4 display	→  225
Decimal places 1 to 4	→  226
Separator	→  226
Number format	→  227
Header	→  227
Header text	→  227
Display interval	→  228
Display damping	→  228
Backlight	→  228
Contrast display	→  229
► System units	→  230
Units preset	→  122
Distance unit	→  230
Pressure unit	→  231
Temperature unit	→  231
Density unit	→  231

▶ Date / time	→ 233
Date/time	→ 233
Set date	→ 233
Year	→ 233
Month	→ 234
Day	→ 234
Hour	→ 234
Minute	→ 235
▶ SIL confirmation	→ 236
▶ Deactivate SIL/WHG	→ 236
▶ Administration	→ 237
Define access code	→ 237
Device reset	→ 237
Diagnostics	→ 238
Actual diagnostics	→ 238
Timestamp	→ 238
Previous diagnostics	→ 238
Timestamp	→ 239
Operating time from restart	→ 239
Operating time	→ 239
Date/time	→ 233
▶ Diagnostic list	→ 241
Diagnostics 1 to 5	→ 241
Timestamp 1 to 5	→ 241

▶ Device information	→  242
Device tag	→  242
Serial number	→  242
Firmware version	→  242
Firmware CRC	→  242
Weight and measures configuration CRC	→  243
Device name	→  243
Order code	→  243
Extended order code 1 to 3	→  243
▶ Simulation	→  245
Device alarm simulation	→  245
Diagnostic event simulation	→  245
Simulation distance on	→  245
Simulation distance	→  246
Current output 1 simulation	→  246
Simulation value	→  246
▶ Device check	→  248
Start device check	→  248
Result device check	→  248
Level signal	→  248
Near distance	→  249

15.2 "Operation" menu

The **Operation** menu (→  113) shows the most important measured values.

Navigation   Operation

15.2.1 "Level" submenu

Navigation   Operation → Level

Tank level

Navigation   Operation → Level → Tank level

Description Shows the distance from the zero position (tank bottom or datum plate) to the product surface.

Additional information

Read access	Operator
Write access	-

Tank Level %

Navigation   Operation → Level → Tank Level %

Description Shows the level as a percentage of the full measuring range.

Additional information

Read access	Operator
Write access	-

Tank ullage

Navigation   Operation → Level → Tank ullage

Description Shows the remaining empty space in the tank.

Additional information

Read access	Operator
Write access	-

Tank ullage %

Navigation  Operation → Level → Tank ullage %

Description Shows the remaining empty space in percentage related to parameter tank reference height.

Additional information

Read access	Operator
Write access	-

Upper interface level

Navigation  Operation → Level → Upper interface level

Description Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid Interface measurement.

Additional information

Read access	Maintenance
Write access	-

Lower interface level

Navigation  Operation → Level → Lower interface level

Description Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.

Additional information

Read access	Maintenance
Write access	-

Water level

Navigation  Operation → Level → Water level

Description Shows the bottom water level.

Additional information

Read access	Operator
Write access	-

Measured level

Navigation  Operation → Level → Measured level

Description Shows the measured level without any correction from the tank calculations.

Additional information

Read access	Operator
Write access	-

Distance

Navigation  Operation → Level → Distance

Description Distance from lower edge of device flange to product surface.

Additional information

Read access	Operator
Write access	-

15.2.2 "Temperature" submenu

Navigation  Operation → Temperature

Air temperature

Navigation  Operation → Temperature → Air temperature

Description Shows the air temperature.

Additional information

Read access	Operator
Write access	-

Liquid temperature

Navigation  Operation → Temperature → Liquid temperature

Description Shows the average or spot temperature of the measured liquid.

Additional information

Read access	Operator
Write access	-

Vapor temperature

Navigation   Operation → Temperature → Vapor temperature


Description Shows the measured vapor temperature.

Additional information

Read access	Operator
Write access	-

"NMT element values" submenu


 This submenu is only visible if a Prothermo NMT is connected.

Navigation  Operation → Temperature → NMT element values

"Element temperature" submenu

Navigation  Operation → Temperature → NMT element values → Element temperature

Element temperature 1 to 24

Navigation  Operation → Temperature → NMT element values → Element temperature → Element temperature 1 to 24

Description Shows the temperature of an element in the NMT.

Additional information

Read access	Operator
Write access	-

"Element position" submenu

Navigation  Operation → Temperature → NMT element values → Element position

Element position 1 to 24

Navigation  Operation → Temperature → NMT element values → Element position → Element position 1 to 24

Description Shows the position of the selected element in the NMT.



Additional information

Read access	Operator
Write access	-

15.2.3 "Density" submenu

Navigation   Operation → Density



Observed density

Navigation   Operation → Density → Observed density

Description Calculated density of the product.



Additional information

Read access	Operator
Write access	-

 This value is calculated from different measured variables depending on the selected calculation method →  190.

Vapor density



Navigation   Operation → Density → Vapor density

Description Defines the density of the gas phase in the tank.

User entry 0.0 to 500.0 kg/m³

Factory setting 1.2 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Air density**Navigation**

Operation → Density → Air density

Description

Defines the density of the air surrounding the tank.

User entry

0.0 to 500.0 kg/m³

Factory setting

1.2 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Measured upper density**Navigation**

Operation → Density → Measured upper density

Description

Shows the density of the upper phase.

Additional information

Read access	Operator
Write access	-

Measured middle density**Navigation**

Operation → Density → Measured middle density

Description

Density of the middle phase.

Additional information

Read access	Operator
Write access	-

Measured lower density**Navigation**

Operation → Density → Measured lower density

Description

Density of the lower phase.

Additional information

Read access	Maintenance
Write access	-

15.2.4 "Pressure" submenu

Navigation  Operation → Pressure

P1 (bottom)**Navigation**

 Operation → Pressure → P1 (bottom)


Description

Shows the pressure at the tank bottom.

Additional information

Read access	Operator
Write access	-

P3 (top)**Navigation**

 Operation → Pressure → P3 (top)

Description

Shows the pressure (P3) at the top transmitter.


Additional information

Read access	Operator
Write access	-

15.2.5 "GP values" submenu

Navigation  Operation → GP values

GP 1 to 4 name

Navigation  Operation → GP values → GP 1 name

Description Defines the label associated with the respective GP value.

Factory setting GP Value 1

Additional information

Read access	Operator
Write access	Maintenance

GP Value 1

Navigation  Operation → GP values → GP Value 1

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 2


Navigation  Operation → GP values → GP Value 2

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 3

Navigation  Operation → GP values → GP Value 3

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 4

Navigation Operation → GP values → GP Value 4**Description**




Displays the value that will be used as general purpose value.


Additional information

Read access	Operator
Write access	-





15.3 "Setup" menu

Navigation  Setup

Device tag 					
Navigation	 Setup → Device tag				
Description	Enter a unique name for the measuring point to identify the device quickly within the plant.				
Factory setting	NMR8x				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				
Units preset 					

Navigation	 Setup → Units preset				
Description	Defines a set of units for length, pressure and temperature.				
Selection	<ul style="list-style-type: none"> ■ mm, bar, °C ■ m, bar, °C ■ mm, PSI, °C ■ ft, PSI, °F ■ ft-in-16, PSI, °F ■ ft-in-8, PSI, °F ■ Customer value 				
Factory setting	mm, bar, °C				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

If the **Customer value** option is selected, the units are defined in the following parameters:

- Distance unit (→  230)
- Pressure unit (→  231)
- Temperature unit (→  231)
- Density unit (→  231)

In any other case these are read-only parameters used to indicate the respective unit.

Empty

Navigation   Setup → Empty

Description Distance from reference point to zero position (tank bottom or datum plate).






User entry 0 to 10 000.00 mm

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

 The reference point is the lower edge of the device flange.

-  After changing the **Empty** parameter (→  123), the **Table mode** parameter (→  209) is automatically set to **Disable**.
- If **Empty** (→  123) has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
- The dip table values are not affected by a change of the **Empty** parameter (→  123).

Tank reference height

Navigation   Setup → Tank reference height

Description Defines the distance from the dipping reference point to the zero position (tank bottom or datum plate).

User entry 0 to 10 000.00 mm

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Tank level

Navigation   Setup → Tank level

Description Shows the distance from the zero position (tank bottom or datum plate) to the product surface.

Additional information

Read access	Operator
Write access	-

Set level



Navigation Setup → Set level

Description If the level measured by the device does not match the actual level obtained by a manual dip, enter the correct level into this parameter.

User entry 0 to 10 000.00 mm

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

The device adjusts the **Empty** parameter (→ 123) according to the entered value, such that the measured level will match the actual level.

- After the change of the **Empty** parameter (→ 123), the **Table mode** parameter (→ 209) is automatically set to **Disable**.
- If **Empty** has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
- The dip table values are not affected by a change of the **Empty** parameter.

Confirm distance



Navigation Setup → Confirm distance

Description Specify, whether the measured distance matches the real distance. Depending on the selection the device automatically sets the range of mapping.

- Selection**
- Distance ok
 - Distance unknown
 - Distance too small *
 - Distance too big *
 - Tank empty
 - Manual map
 - Factory map

Factory setting Distance unknown

Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

Meaning of the options


- **Distance ok**

To be selected if the measured distance matches the actual distance. The device performs a mapping.


- **Distance unknown**

To be selected if the actual distance is unknown. No mapping will be recorded in this case.


- **Distance too small** ⁴⁾

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter (→  124). The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting "**Distance ok**" option.


- **Distance too big** ⁴⁾

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter (→  124). The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting "**Distance ok**" option.

- **Tank empty**

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Empty** parameter (→  123).

- **Manual map**

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→  126). In this case it is not necessary to confirm the distance.

- **Factory map**

To be selected if the present mapping curve (if one exists) is to be deleted. The factory map is used, instead.




When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.



If the teaching procedure with the **Distance too small** or **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

Present mapping

Navigation


 Setup → Present mapping

Description

Present end of mapping.

Additional information

Read access	Operator
Write access	-

4) Only available for "Evaluation mode (→  223)" = "Short time history"

Mapping end point



Navigation	☰ Setup → Mapping end point				
Prerequisite	Confirm distance (→ ☰ 124) = Manual map				
Description	Defines up to which distance the new mapping has to be recorded. Remark: Make sure the level signal is not covered by the mapping.				
User entry	100 to 999 999.9 mm				
Factory setting	100 mm				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				


Record map



Navigation	☰ Setup → Record map				
Prerequisite	Confirm distance (→ ☰ 124) = Manual map				
Description	Controls the recording of the map.				
Selection	<ul style="list-style-type: none"> ▪ No ▪ Record map ▪ Overlay map ▪ Factory map ▪ Delete partial map 				
Factory setting	No				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Meaning of the options

- **No**
The map is not recorded.
- **Record map**
The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing .
- **Recalculate map**
Used internally by the software. Initiates a new calculation of the map from the new data points.
- **Overlay map**
The new mapping curve is generated by overlaying the old and the current envelope curves.

- **Factory map**
The factory map stored in the ROM of the device is used.
- **Delete partial map**
The mapping curve is deleted up to **Mapping end point** (→  126).
- **Stop overlay**
Stops the overlaying of the map.

Distance

Navigation   Setup → Distance

Description Distance from lower edge of device flange to product surface.

Additional information

Read access	Operator
Write access	-

Liquid temp source



Navigation   Setup → Liquid temp source

Description Defines source from which the liquid temperature is obtained.

- Selection**
- Manual value
 - HART device 1 ... 15 temperature
 - AIO B1-3 value
 - AIO C1-3 value
 - AIP B4-8 value
 - AIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

15.3.1 "Advanced setup" submenu

Navigation  Setup → Advanced setup

Locking status


Navigation  Setup → Advanced setup → Locking status

Description Indicates the write protection with the highest priority that is currently active.

Additional information

Read access	Operator
Write access	-

Access status tooling

Navigation  Setup → Advanced setup → Access status tooling

Description Shows the access authorization to the parameters via the operating tool.

Additional information

Read access	Operator
Write access	-

Enter access code


Navigation  Setup → Advanced setup → Enter access code

Description Enter access code to disable write protection of parameters.

Additional information

Read access	Operator
Write access	Operator

"Input/output" submenu

Navigation  Setup → Advanced setup → Input/output

"HART devices" submenu

Navigation  Setup → Advanced setup → Input/output → HART devices

Number of devices


Navigation  Setup → Advanced setup → Input/output → HART devices → Number of devices


Description Shows the number of devices on the HART bus.

Additional information

Read access	Operator
Write access	-


"HART Device(s)" submenu

 There is a **HART Device(s)** submenu for each HART slave device found on the HART loop.

Navigation  Setup → Advanced setup → Input/output → HART devices → HART Device(s)

Device name

Navigation

 Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Device name

Description


Shows the name of the transmitter.

Additional information

Read access	Operator
Write access	-

Polling address

Navigation

 Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Polling address

Description


Shows the polling address of the transmitter.

Additional information

Read access	Operator
Write access	-

Device tag

Navigation

 Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Device tag

Description

Shows the device tag of the transmitter.

Additional information

Read access	Operator
Write access	-

Operating mode



Navigation Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Operating mode

Prerequisite Not available if the HART device is a Prothermo NMT.

Description Selection of the operation mode PV only or PV,SV,TV,QV. Devines which values are polled from the connected HART Device.

- Selection**
- PV only
 - PV,SV,TV & QV
 - Level ⁵⁾
 - Measured level ⁵⁾

Factory setting PV,SV,TV & QV

Additional information

Read access	Operator
Write access	Maintenance

Communication status

Navigation Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Communication status

Description Shows the operating status of the transmitter.

- User interface**
- Operating normally
 - Device offline

Additional information

Read access	Operator
Write access	-

#blank# (HART PV - designation dependent on device)

Navigation Setup → Advanced setup → Input/output → HART devices → HART Device(s) → #blank#




Description Shows the first HART variable (PV).

Additional information




Read access	Operator
Write access	-

5) only visible if the conneced device is a Micropilot




#blank# (HART SV - designation dependent on device)

Navigation	  Setup → Advanced setup → Input/output → HART devices → HART Device(s) → #blank#				
Prerequisite	For HART devices other than NMT: Operating mode (→  131) = PV,SV,TV & QV				
Description	Shows the second HART variable (SV).				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				



#blank# (HART TV - designation dependent on device)

Navigation	  Setup → Advanced setup → Input/output → HART devices → HART Device(s) → #blank#				
Prerequisite	For HART devices other than NMT: Operating mode (→  131) = PV,SV,TV & QV				
Description	Shows the third HART variable (TV).				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

#blank# (HART QV - designation dependent on device)

Navigation	  Setup → Advanced setup → Input/output → HART devices → HART Device(s) → #blank#				
Prerequisite	For HART devices other than NMT: Operating mode (→  131) = PV,SV,TV & QV				
Description	Shows the fourth HART variable (QV).				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

Output pressure

Navigation	  Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output pressure
Prerequisite	Not available for Micropilot S FMR5xx and Prothermo 53x. (In these cases the measured variables are allocated automatically).

Description Defines which HART variable is the pressure.

Selection



- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting No value

Additional information

Read access	Operator
Write access	Maintenance

Output density

Navigation   Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output density

Prerequisite Not available for Micropilot S FMR5xx and Prothermo 53x. (In these cases the measured variables are allocated automatically).

Description Defines which HART variable is the density.

Selection



- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting No value

Additional information

Read access	Operator
Write access	Maintenance

Output temperature

Navigation   Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output temperature

Prerequisite Not available for Micropilot S FMR5xx and Prothermo 53x. (In these cases the measured variables are allocated automatically).

Description Defines which HART variable is the temperature.

Selection

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting No value

Additional information

Read access	Operator
Write access	Maintenance

Output vapor temperature



Navigation

Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output vapor temperature

Prerequisite

Not available for Micropilot S FMR5xx and Prothermo 53x. (In these cases the measured variables are allocated automatically).

Description

Defines which HART variable is the vapor temperature.

Selection

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting

No value

Additional information

Read access	Operator
Write access	Maintenance

Output level



Navigation

Setup → Advanced setup → Input/output → HART devices → HART Device(s) → Output level

Prerequisite

Not available for Micropilot S FMR5xx and Prothermo 53x. (In these cases the measured variables are allocated automatically).

Description

Defines which HART variable is the level.

Selection

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting


No value



Additional information

Read access	Operator
Write access	Maintenance

"Forget device" wizard



Read access	Maintenance
--------------------	-------------

 This submenu is only visible if **Number of devices** (→  **129**) ≥ 1.

Navigation   Setup → Advanced setup → Input/output → HART devices → Forget device

Forget device



Navigation   Setup → Advanced setup → Input/output → HART devices → Forget device → Forget device

Description With this function an offline device can be deleted from the device list.

- Selection**
- HART Device 1 *
 - HART Device 2 *
 - HART Device 3 *
 - HART Device 4 *
 - HART Device 5 *
 - HART Device 6 *
 - HART Device 7 *
 - HART Device 8 *
 - HART Device 9 *
 - HART Device 10 *
 - HART Device 11 *
 - HART Device 12 *
 - HART Device 13 *
 - HART Device 14 *
 - HART Device 15 *
 - None

Factory setting None


Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

"Analog IP" submenu

i There is a **Analog IP** submenu for each Analog I/O module of the device. This submenu refers to terminals 4 to 8 of this module (the analog input). They are primarily used to connect an RTD. For terminals 1 to 3 (analog input or output) refer to → 142.

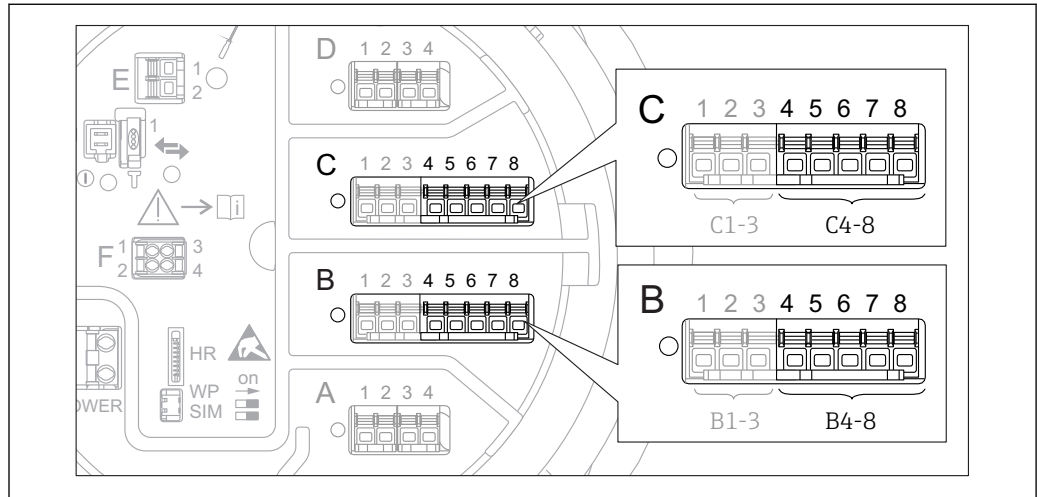

45 Terminals for the "Analog IP" submenu ("B4-8" or "C4-8", respectively)

Navigation Setup → Advanced setup → Input/output → Analog IP

Operating mode

Navigation Setup → Advanced setup → Input/output → Analog IP → Operating mode

Description Defines the operating mode of the analog input.

- Selection
- Disabled
 - RTD temperature input
 - Gauge power supply

Factory setting Disabled

Additional information

Read access	Operator
Write access	Maintenance

RTD type

Navigation Setup → Advanced setup → Input/output → Analog IP → RTD type

Prerequisite **Operating mode** (→ 136) = RTD temperature input

Description Defines the type of the connected RTD.

- Selection**
- Cu50 (w=1.428, GOST)
 - Cu53 (w=1.426, GOST)
 - Cu90; 0°C (w=1.4274, GOST)
 - Cu100; 25°C (w=1.4274, GOST)
 - Cu100; 0°C (w=1.4274, GOST)
 - Pt46 (w=1.391, GOST)
 - Pt50 (w=1.391, GOST)
 - Pt100(385) (a=0.00385, IEC751)
 - Pt100(389) (a=0.00389, Canadian)
 - Pt100(391) (a=0.003916, JIS1604)
 - Pt100 (w=1.391, GOST)
 - Pt500(385) (a=0.00385, IEC751)
 - Pt1000(385) (a=0.00385, IEC751)
 - Ni100(617) (a=0.00617, DIN43760)
 - Ni120(672) (a=0.00672, DIN43760)
 - Ni1000(617) (a=0.00617, DIN43760)

Factory setting Pt100(385) (a=0.00385, IEC751)

Additional information

Read access	Operator
Write access	Maintenance

RTD connection type



Navigation Setup → Advanced setup → Input/output → Analog IP → RTD connection type

Prerequisite **Operating mode (→ 136) = RTD temperature input**

Description Defines the connection type of the RTD.

- Selection**
- 4 wire RTD connection
 - 2 wire RTD connection
 - 3 wire RTD connection

Factory setting 4 wire RTD connection

Additional information

Read access	Operator
Write access	Maintenance

Process value

Navigation Setup → Advanced setup → Input/output → Analog IP → Process value

Prerequisite **Operating mode (→ 136) ≠ Disabled**

Description Shows the measured value received via the analog input.

Additional information

Read access	Operator
Write access	-

Process variable**Navigation**

Setup → Advanced setup → Input/output → Analog IP → Process variable

Prerequisite

Operating mode (→ 136) ≠ RTD temperature input

Description

Determines type of measured value.

Selection

- Level linearized
- Temperature
- Pressure
- Density

Factory setting

Level linearized

Additional information

Read access	Operator
Write access	Maintenance

0 % value**Navigation**

Setup → Advanced setup → Input/output → Analog IP → 0 % value

Prerequisite

Operating mode (→ 136) = 4..20mA input

Description

Defines the value represented by a current of 4mA.

User entry

-100 000 to 100 000 mm

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

100 % value**Navigation**

Setup → Advanced setup → Input/output → Analog IP → 100 % value

Prerequisite

Operating mode (→ 136) = 4..20mA input

Description

Defines the value represented by a current of 20mA.



User entry -100 000 to 100 000 mm

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

Input value

Navigation   Setup → Advanced setup → Input/output → Analog IP → Input value

Prerequisite **Operating mode (→  136) ≠ Disabled**


Description Shows the value received via the analog input.


Additional information

Read access	Operator
Write access	-

Minimum probe temperature



Navigation   Setup → Advanced setup → Input/output → Analog IP → Minimum probe temperature

Prerequisite **Operating mode (→  136) = RTD temperature input**

Description Minimum approved temperature of the connected probe. If the temperature falls below this value, the W&M status will be 'invalid'.

User entry -213 to 927 °C



Factory setting -100 °C


Additional information

Read access	Operator
Write access	Maintenance

Maximum probe temperature



Navigation   Setup → Advanced setup → Input/output → Analog IP → Maximum probe temperature

Prerequisite **Operating mode (→  136) = RTD temperature input**


Description Maximum approved temperature of the connected probe. If the temperature rises above this value, the W&M status will be 'invalid'.

User entry -213 to 927 °C


Factory setting 250 °C

Additional information

Read access	Operator
Write access	Maintenance

Probe position 

Navigation   Setup → Advanced setup → Input/output → Analog IP → Probe position

Prerequisite **Operating mode (→  136) = RTD temperature input**


Description Position of the temperature probe, measured from zero position (tank bottom or datum plate). This parameter, in conjunction with the measured level, determines whether the temperature probe is still covered by the product. If this is no longer the case, the status of the temperature value will be 'invalid'.

User entry -5 000 to 30 000 mm

Factory setting 5 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Damping factor 

Navigation   Setup → Advanced setup → Input/output → Analog IP → Damping factor

Prerequisite **Operating mode (→  136) ≠ Disabled**

Description Defines the damping constant (in seconds).



User entry 0 to 999.9 s

Factory setting 0 s

Additional information

Read access	Operator
Write access	Maintenance

Gauge current

Navigation Setup → Advanced setup → Input/output → Analog IP → Gauge current**Prerequisite****Operating mode (→  136) = Gauge power supply****Description**


Shows the current on the power supply line for the connected device.

Additional information

Read access	Operator
Write access	-

"Analog I/O" submenu

i There is a **Analog I/O** submenu for each Analog I/O module of the device. This submenu refers to terminals 1 to 3 of this module (an analog input or output). For terminals 4 to 8 (always an analog input) refer to → 136.

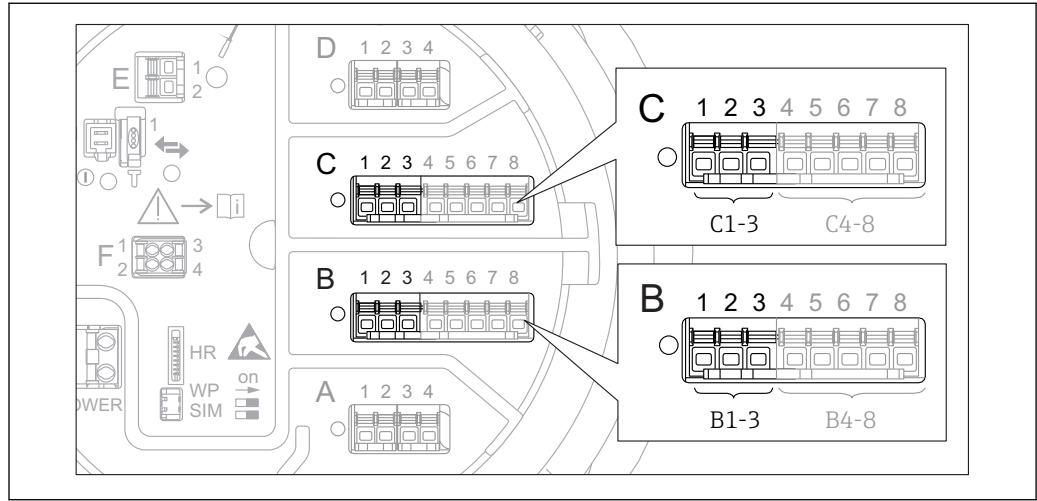

46 Terminals for the "Analog I/O" submenu ("B1-3" or "C1-3", respectively)

Navigation Setup → Advanced setup → Input/output → Analog I/O

Operating mode

Navigation Setup → Advanced setup → Input/output → Analog I/O → Operating mode

Description Defines the operating mode of the analog I/O module.

- Selection
- Disabled
 - 4..20mA input
 - HART master+4..20mA input
 - HART master
 - 4..20mA output
 - HART slave +4..20mA output


Factory setting Disabled

Additional information

Read access	Operator
Write access	Maintenance


Meaning of the options

Operating mode (→ 142)	Direction of signal	Type of signal
Disabled	-	-
4..20mA input	Input from 1 external device	Analog (4...20mA)
HART master+4..20mA input	Input from 1 external device	<ul style="list-style-type: none"> ■ Analog (4...20mA) ■ HART
HART master	Input from up to 6 external devices	HART




Operating mode (→  142)	Direction of signal	Type of signal
4...20mA output	Output to higher-level unit	Analog (4...20mA)
HART slave +4...20mA output	Output to higher-level unit	<ul style="list-style-type: none"> ■ Analog (4...20mA) ■ HART

Depending on the terminals used, the Analog I/O module is used in the passive or active mode.

Mode	Terminals of the I/O module		
	1	2	3
Passive (power supply from external source)	-	+	not used
Active (power supplied by the device itself)	not used	-	+

-  In the active mode the following conditions must be met:
- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
 - Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
 - Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

Current span


Navigation	  Setup → Advanced setup → Input/output → Analog I/O → Current span				
Prerequisite	Operating mode parameter (→  142) ≠ Disabled option or HART master option				
Description	Defines the current range for the measured value transmission.				
Selection	<ul style="list-style-type: none"> ■ 4...20 mA NAMUR ■ 4...20 mA US ■ 4...20 mA ■ Fixed current * 				
Factory setting	4...20 mA NAMUR				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				


Meaning of the options

Option	Current range for process variable	Lower alarm signal level	Upper alarm signal level
4...20 mA	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA NAMUR	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA



* Visibility depends on order options or device settings

Option	Current range for process variable	Lower alarm signal level	Upper alarm signal level
4...20 mA US	3.9 to 20.8 mA	< 3.6 mA	> 21.95 mA
Fixed current	Constant current, defined in the Fixed current parameter (→ ⓘ 144).		

 In the case of an error, the output current assumes the value defined in the **Failure mode** parameter (→ ⓘ 145).

Fixed current 

Navigation

  Setup → Advanced setup → Input/output → Analog I/O → Fixed current

Prerequisite

Current span (→ ⓘ 143) = **Fixed current**

Description

Defines the fixed output current.

User entry


4 to 22.5 mA

Factory setting

4 mA

Additional information

Read access	Operator
Write access	Maintenance

Analog input source 

Navigation

  Setup → Advanced setup → Input/output → Analog I/O → Analog input source

Prerequisite

- **Operating mode** (→ ⓘ 142) = **4..20mA output** or **HART slave +4..20mA output**
- **Current span** (→ ⓘ 143) ≠ **Fixed current**

Description

Defines the process variable transmitted via the AIO.

Selection

- None
- Tank level
- Tank level %
- Tank ullage
- Tank ullage %
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature

- Observed density value
- Average profile density ⁶⁾
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 ... 4 value
- AIO B1-3 value ⁶⁾
- AIO B1-3 value mA ⁶⁾
- AIO C1-3 value ⁶⁾
- AIO C1-3 value mA ⁶⁾
- AIP B4-8 value ⁶⁾
- AIP C4-8 value ⁶⁾
- Element temperature 1 ... 24 ⁶⁾
- HART device 1...15 PV ⁶⁾
- HART device 1 ... 15 PV mA ⁶⁾
- HART device 1 ... 15 PV % ⁶⁾
- HART device 1 ... 15 SV ⁶⁾
- HART device 1 ... 15 TV ⁶⁾
- HART device 1 ... 15 QV ⁶⁾

Factory setting

Tank level

Additional information

Read access	Operator
Write access	Maintenance

Failure mode



Navigation

Setup → Advanced setup → Input/output → Analog I/O → Failure mode

Prerequisite

Operating mode (→ 142) = 4..20mA output or HART slave +4..20mA output

Description

Defines the output behavior in case of an error.

Selection

- Min.
- Max.
- Last valid value
- Actual value
- Defined value

Factory setting

Max.

Additional information

Read access	Operator
Write access	Maintenance

⁶⁾ Visibility depends on order options or device settings

Error value


Navigation Setup → Advanced setup → Input/output → Analog I/O → Error value

Prerequisite **Failure mode (→ 145) = Defined value**

Description Defines the output value in case of an error.

User entry 3.4 to 22.6 mA

Factory setting 22 mA

Additional information

Read access	Operator
Write access	Maintenance

Input value

Navigation Setup → Advanced setup → Input/output → Analog I/O → Input value

Prerequisite

- **Operating mode (→ 142) = 4..20mA output or HART slave +4..20mA output**
- **Current span (→ 143) ≠ Fixed current**

Description Shows the input value of the analog I/O module.

Additional information

Read access	Operator
Write access	-

0 % value


Navigation Setup → Advanced setup → Input/output → Analog I/O → 0 % value

Prerequisite

- **Operating mode (→ 142) = 4..20mA output or HART slave +4..20mA output**
- **Current span (→ 143) ≠ Fixed current**

Description Value corresponding to an output current of 0% (4mA).

User entry Signed floating-point number

Factory setting 0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

100 % value



Navigation	Setup → Advanced setup → Input/output → Analog I/O → 100 % value				
Prerequisite	<ul style="list-style-type: none"> ▪ Operating mode (→ 142) = 4..20mA output or HART slave +4..20mA output ▪ Current span (→ 143) ≠ Fixed current 				
Description	Value corresponding to an output current of 100% (20mA).				
User entry	Signed floating-point number				
Factory setting	0 Unitless				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Input value %

Navigation	Setup → Advanced setup → Input/output → Analog I/O → Input value %				
Prerequisite	<ul style="list-style-type: none"> ▪ Operating mode (→ 142) = 4..20mA output or HART slave +4..20mA output ▪ Current span (→ 143) ≠ Fixed current 				
Description	Shows the output value as a percentage of the complete 4...20mA range.				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

Output value

Navigation	Setup → Advanced setup → Input/output → Analog I/O → Output value				
Prerequisite	Operating mode (→ 142) = 4..20mA output or HART slave +4..20mA output				
Description	Shows the output value in mA.				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

Process variable



Navigation Setup → Advanced setup → Input/output → Analog I/O → Process variable

Prerequisite **Operating mode (→ 142) = 4..20mA input or HART master+4..20mA input**

Description Defines the type of measuring variable.

- Selection**
- Level linearized
 - Temperature
 - Pressure
 - Density

Factory setting Level linearized

Additional information

Read access	Operator
Write access	Maintenance

Analog input 0% value



Navigation Setup → Advanced setup → Input/output → Analog I/O → Analog input 0% value

Prerequisite **Operating mode (→ 142) = 4..20mA input or HART master+4..20mA input**

Description Value corresponding to an input current of 0% (4mA).

User entry -100 000 to 100 000 mm

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

Analog input 100% value



Navigation Setup → Advanced setup → Input/output → Analog I/O → Analog input 100% value

Prerequisite **Operating mode (→ 142) = 4..20mA input or HART master+4..20mA input**

Description Value corresponding to an input current of 100% (20mA).

User entry -100 000 to 100 000 mm

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

Error event type



Navigation

Setup → Advanced setup → Input/output → Analog I/O → Error event type

Prerequisite

Operating mode (→ 142) ≠ Disabled or HART master

Description

Defines the type of event message (alarm/warning) in case of an error or output out of range in the analog I/O module.

Selection

- None
- Warning
- Alarm

Factory setting

Warning

Additional information

Read access	Operator
Write access	Maintenance

Process value

Navigation

Setup → Advanced setup → Input/output → Analog I/O → Process value

Prerequisite

Operating mode (→ 142) = 4..20mA input or HART master+4..20mA input

Description

Shows the input value scaled to customer units.

Additional information

Read access	Operator
Write access	-

Input value in mA

Navigation

Setup → Advanced setup → Input/output → Analog I/O → Input value in mA

Prerequisite

Operating mode (→ 142) = 4..20mA input or HART master+4..20mA input


Description


Shows the input value in mA.

Additional information

Read access	Operator
Write access	-

Input value percent

Navigation  Setup → Advanced setup → Input/output → Analog I/O → Input value percent

Prerequisite **Operating mode (→  142) = 4..20mA input or HART master+4..20mA input**


Description Shows the input value as a percentage of the complete 4...20mA current range.


Additional information

Read access	Operator
Write access	-

Damping factor



Navigation  Setup → Advanced setup → Input/output → Analog I/O → Damping factor

Prerequisite **Operating mode (→  142) ≠ Disabled or HART master**

Description Defines the damping constant (in seconds).

User entry 0 to 999.9 s


Factory setting 0 s

Additional information


Read access	Operator
Write access	Maintenance

Used for SIL/WHG



Navigation  Setup → Advanced setup → Input/output → Analog I/O → Used for SIL/WHG

Prerequisite

- **Operating mode (→  142) = 4..20mA output or HART slave +4..20mA output**
- The device has a SIL approval.

Description Determines whether the discrete I/O module is in SIL/WHG mode.

Selection

- Enabled
- Disabled


Factory setting Disabled

Additional information


Read access	Operator
Write access	Maintenance

Expected SIL/WHG chain

Navigation

 Setup → Advanced setup → Input/output → Analog I/O → Expected SIL/WHG chain

Prerequisite


- **Operating mode (→  142) = 4..20mA output or HART slave +4..20mA output**
- The device has a SIL approval.

Additional information

Read access	Operator
Write access	-

"Digital Xx-x" submenu

- i
 - In the operating menu, each digital input or output is designated by the respective slot of the terminal compartment and two terminals within this slot. **A1-2**, for example, denotes terminals 1 and 2 of slot **A**. The same is valid for slots **B**, **C** and **D** if they contain a Digital IO module.
 - In this document, **Xx-x** designates any of these submenus. The structure of all these submenus is the same.

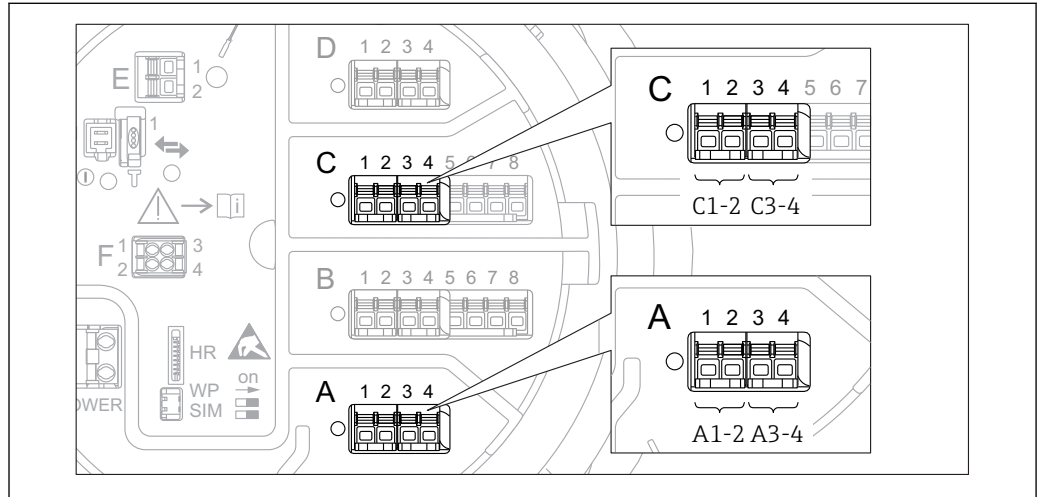


47 Designation of the digital inputs or outputs (examples)

Navigation Setup → Advanced setup → Input/output → Digital Xx-x

Operating mode

Navigation	Setup → Advanced setup → Input/output → Digital Xx-x → Operating mode
Description	Defines the operating mode of the discrete I/O module.
Selection	<ul style="list-style-type: none"> ▪ Disabled ▪ Output passive ▪ Input passive ▪ Input active
Factory setting	Disabled

Additional information

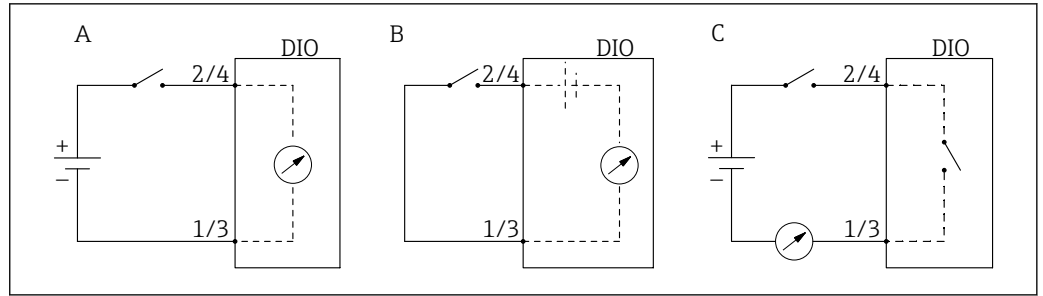

48 Operating modes of the Digital I/O module

- A Input passive
- B Input active
- C Output passive

A0033028

Digital input source



Navigation

Setup → Advanced setup → Input/output → Digital Xx-x → Digital input source

Prerequisite

Operating mode (→ 152) = Output passive

Description

Defines which device state is indicated by the digital output.

Selection

- None
- Alarm x any
- Alarm x High
- Alarm x HighHigh
- Alarm x High or HighHigh
- Alarm x Low
- Alarm x LowLow
- Alarm x Low or LowLow
- Digital Xx-x
- Pri. Modbus x
- Sec. Modbus x

Factory setting

None

Additional information

Meaning of the options

- Alarm x any, Alarm x High, Alarm x HighHigh, Alarm x High or HighHigh, Alarm x Low, Alarm x LowLow, Alarm x Low or LowLow

The digital output indicates if the selected alarm is currently active. The alarms themselves are defined in the **Alarm 1 to 4** submenus.

- Digital Xx-x⁷⁾

The digital signal present at the digital input Xx-x is passed through to the digital output.



- Modbus A1-4 Discrete x
- Modbus B1-4 Discrete x
- Modbus C1-4 Discrete x
- Modbus D1-4 Discrete x

The digital value written by the Modbus Master device to the **Modbus discrete x** parameter⁸⁾ is passed to the digital output. For details refer to Special Documentation SD02066G.

7) Only present if "Operating mode (→ 152)" = "Input passive" or "Input active" for the respective Digital I/O module.

8) Expert → Communication → Modbus Xx-x → Modbus discrete x

Input value



- Navigation**  Setup → Advanced setup → Input/output → Digital Xx-x → Input value
- Prerequisite** **Operating mode (→  152) = "Input passive" option or "Input active" option**
- Description** Shows the digital input value.

Additional information

Read access	Operator
Write access	-



Contact type



- Navigation**  Setup → Advanced setup → Input/output → Digital Xx-x → Contact type
- Prerequisite** **Operating mode (→  152) ≠ Disabled**
- Description** Determines the switching behavior of the input or output.
- Selection**
 - Normally open
 - Normally closed
- Factory setting** Normally open

Output simulation




- Navigation**  Setup → Advanced setup → Input/output → Digital Xx-x → Output simulation
- Prerequisite** **Operating mode (→  152) = Output passive**
- Description** Sets the output to a specific simulated value.
- Selection**
 - Disable
 - Simulating active
 - Simulating inactive
 - Fault 1
 - Fault 2
- Factory setting** Disable

Additional information

Read access	Operator
Write access	Maintenance

The digital output consists of two relays connected in series:

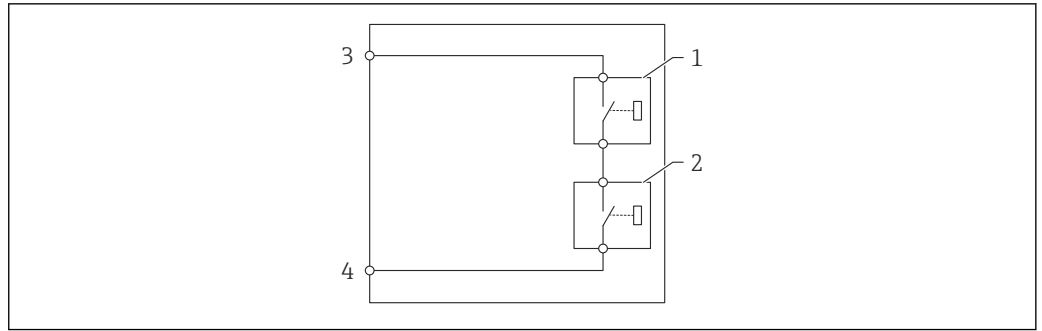

A0028602

49 The two relays of a digital output

1/2 The relays

3/4 The terminals of the digital output

The switching state of these relays is defined by the **Output simulation** parameter as follows:

Output simulation	State of relay 1	State of relay 2	Expected result on the terminals of the I/O module
Simulating active	Closed	Closed	Closed
Simulating inactive	Open	Open	Open
Fault 1	Closed	Open	Open
Fault 2	Open	Closed	Open

i The **Fault 1** and **Fault 2** options can be used to check the correct switching behavior of the two relays.

Output value

Navigation Setup → Advanced setup → Input/output → Digital Xx-x → Output values

Prerequisite **Operating mode (→ 152) = Output passive**

Description Shows the digital output value.

Additional information

Read access	Operator
Write access	-

Readback value

Navigation Setup → Advanced setup → Input/output → Digital Xx-x → Readback value

Prerequisite **Operating mode (→ 152) = Output passive**

Description Shows the value read back from the output.

Additional information

Read access	Operator
Write access	-

Used for SIL/WHG**Navigation**

Setup → Advanced setup → Input/output → Digital Xx-x → Used for SIL/WHG

Prerequisite

- **Operating mode (→ 152) = Output passive**
- The device has a SIL certificate.

Description

Determines whether the discrete I/O module is in SIL/WHG mode.

Selection

- Enabled
- Disabled

Factory setting


Disabled

Additional information

Read access	Operator
Write access	Maintenance

"Communication" submenu

This menu contains a submenu for each digital communication interface of the device. The communication interfaces are designated by "X1-4" where "X" specifies the slot in the terminal compartment and "1-4" the terminals within this slot.

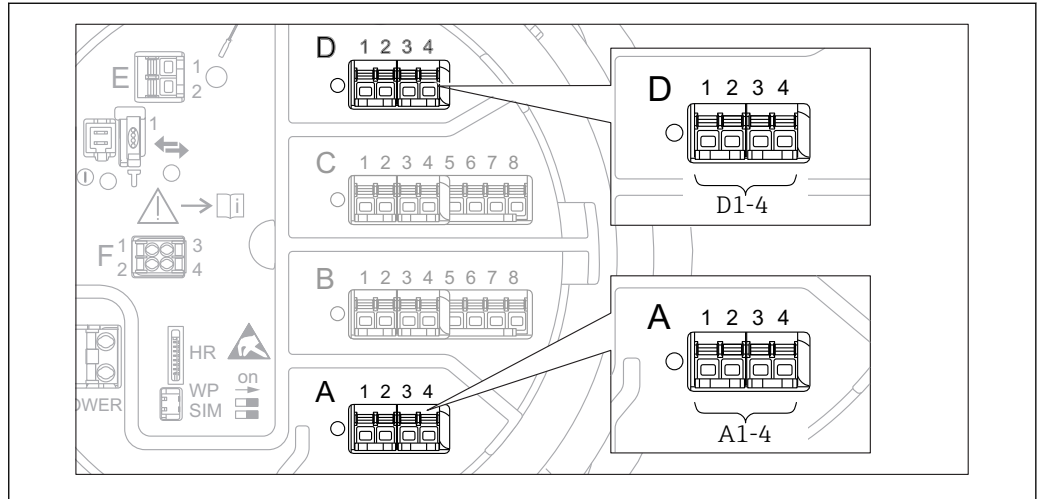

A0031200

50 Designation of the "Modbus" or "V1" modules (examples); depending on the device version these modules may also be in slot B or C.

Navigation Setup → Advanced setup → Communication

"Modbus X1-4" or "V1 X1-4" submenu

This submenu is only present for devices with **MODBUS** and/or **V1** communication interface. There is one submenu of this type for each communication interface.

Navigation Setup → Advanced setup → Communication → Modbus X1-4 / V1 X1-4

Communication interface protocol

Navigation Setup → Advanced setup → Communication → Modbus X1-4 / V1 X1-4 → Communication interface protocol


Description Shows the type of communication protocol.

Additional information


Read access	Operator
Write access	-


"Configuration" submenu

This submenu is only present for devices with a **MODBUS** communication interface.

Navigation  Setup → Advanced setup → Communication → Modbus X1-4 → Configuration

Baudrate 

Navigation  Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Baudrate

Prerequisite **Communication interface protocol (→  157) = MODBUS**

Description Defines the baud rate of the Modbus communication.


- Selection**
- 300 BAUD
 - 600 BAUD
 - 1200 BAUD
 - 2400 BAUD
 - 4800 BAUD
 - 9600 BAUD
 - 19200 BAUD


Factory setting 9600 BAUD

Additional information

Read access	Operator
Write access	Maintenance

Parity 

Navigation  Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Parity

Prerequisite **Communication interface protocol (→  157) = MODBUS**

Description Defines the parity of the Modbus communication.

- Selection**
- Odd
 - Even
 - None / 1 stop bit
 - None / 2 stop bits

Factory setting None / 1 stop bit

Additional information

Read access	Operator
Write access	Maintenance

Modbus address



Navigation Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Device ID

Prerequisite **Communication interface protocol (→ 157) = MODBUS**

Description Defines the Modbus address of the device.

User entry 1 to 247

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Float swap mode



Navigation Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Float swap mode

Prerequisite **Communication interface protocol (→ 157) = MODBUS**

Description Sets the format of how the floating point value is transferred on Modbus.

- Selection**
- Normal 3-2-1-0
 - Swap 0-1-2-3
 - WW Swap 1-0-3-2

Factory setting Swap 0-1-2-3

Additional information

Read access	Operator
Write access	Maintenance

Bus termination



Navigation Setup → Advanced setup → Communication → Modbus X1-4 → Configuration → Bus termination

Prerequisite **Communication interface protocol (→ 157) = MODBUS**

Description Activates or deactivates the bus termination at the device. Should only be activated on the last device in a loop.

- Selection**
- Off
 - On


Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

"Configuration" submenu

This submenu is only present for devices with a **V1** communication interface.

Navigation  Setup → Advanced setup → Communication → V1 X1-4 → Configuration

Communication interface protocol variant 

Navigation  Setup → Advanced setup → Communication → V1 X1-4 → Configuration → Communication interface protocol variant


Description Determines which variant of the V1 protocol is used.


User interface None
 V1*


Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

V1 address 

Navigation  Setup → Advanced setup → Communication → V1 X1-4 → Configuration → V1 address

Prerequisite **Communication interface protocol variant (→  161) = V1**

Description Identifier of the device for the V1 communication.

User entry 0 to 99

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

V1 address



Navigation Setup → Advanced setup → Communication → V1 X1-4 → Configuration → V1 address

Prerequisite **Communication interface protocol variant (→ 161)**

Description Identifier of the previous device for V1 communication.

User entry 0 to 255

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Level mapping



Navigation Setup → Advanced setup → Communication → V1 X1-4 → Configuration → Level mapping

Prerequisite **Communication interface protocol (→ 157) = V1**

Description Determines the transmittable range of levels.

Selection

- +ve
- +ve & -ve

Factory setting +ve

Additional information

Read access	Operator
Write access	Maintenance

In V1, the level is always represented by a number in the range from 0 to 999 999. This number corresponds to a level as follows:

"Level mapping" = "+ve"

Number	Corresponding level
0	0.0 mm
999 999	99 999.9 mm

"Level mapping" = "+ve & -ve"

Number	Corresponding level
0	0.0 mm
500 000	50 000.0 mm

Number	Corresponding level
500 001	-0.1 mm
999 999	-49 999.9 mm

Line impedance


Navigation Setup → Advanced setup → Communication → V1 X1-4 → Configuration → Line impedance

Prerequisite **Communication interface protocol (→ 157) = V1**

Description Adjusts the impedance of the communication line.

User entry 0 to 15

Factory setting 15

Additional information


Read access	Operator
Write access	Maintenance


The line impedance affects the voltage difference between a logical 0 and a logical 1 on the message of the device to the bus. The default setting is suitable for most applications.

"V1 input selector" submenu

This submenu is only present for devices with a **V1** communication interface.

Navigation  Setup → Advanced setup → Communication → V1 X1-4 → V1 input selector

Alarm 1 input source 

Navigation  Setup → Advanced setup → Communication → V1 X1-4 → V1 input selector → Alarm 1 input source

Description Determines which discrete value will be transmitted as V1 alarm 1 status.


- Selection**
- None
 - Alarm 1-4 any
 - Alarm 1-4 HighHigh
 - Alarm 1-4 High or HighHigh
 - Alarm 1-4 High
 - Alarm 1-4 Low
 - Alarm 1-4 Low or LowLow
 - Alarm 1-4 LowLow

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Alarm 2 input source 

Navigation  Setup → Advanced setup → Communication → V1 X1-4 → V1 input selector → Alarm 2 input source

Description Determines which discrete value will be transmitted as V1 alarm 2 status.

- Selection**
- None
 - Alarm 1-4 any
 - Alarm 1-4 HighHigh
 - Alarm 1-4 High or HighHigh
 - Alarm 1-4 High
 - Alarm 1-4 Low
 - Alarm 1-4 Low or LowLow
 - Alarm 1-4 LowLow

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Value percent selector



Navigation

Setup → Advanced setup → Communication → V1 X1-4 → V1 input selector → Value percent selector

Description

Selects which value shall be transmitted as a 0..100% value in the V1 Z0/Z1 message.

Selection

- None
- Tank level %
- Tank ullage %
- AIO B1-3 value % *
- AIO C1-3 value % *

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance


* Visibility depends on order options or device settings


"HART output" submenu

Navigation  Setup → Advanced setup → Communication → HART output

"Configuration" submenu

Navigation  Setup → Advanced setup → Communication → HART output
→ Configuration

System polling address 

Navigation  Setup → Advanced setup → Communication → HART output → Configuration
→ System polling address

Description Device address for HART communication.

User entry 0 to 63

Factory setting 15

Additional information

Read access	Operator
Write access	Maintenance

No. of preambles 

Navigation  Setup → Advanced setup → Communication → HART output → Configuration → No.
of preambles


Description Defines the number of preambles in the HART telegram.

User entry 5 to 20

Factory setting 5

Additional information

Read access	Operator
Write access	Maintenance

PV source 

Navigation  Setup → Advanced setup → Communication → HART output → Configuration → PV
source

Description Decides, if the PV configuration is according to an analog output (HART slave) or
customized (in case of HART tunneling only).

- Selection**
- AIO B1-3 *
 - AIO C1-3 *
 - Custom

Factory setting Custom

Additional information

Read access	Maintenance
Write access	Maintenance

Assign PV



Navigation Setup → Advanced setup → Communication → HART output → Configuration → Assign PV

Prerequisite PV source (→ 166) = Custom

Description Assigns a tank variable to the primary HART variable (PV).

- Selection**
- None
 - Tank level
 - Tank ullage
 - Measured level
 - Distance
 - Displacer position
 - Water level
 - Upper interface level
 - Lower interface level
 - Bottom level
 - Tank reference height
 - Liquid temperature
 - Vapor temperature
 - Air temperature
 - Observed density value
 - Average profile density
 - Upper density
 - Middle density
 - Lower density
 - P1 (bottom)
 - P2 (middle)
 - P3 (top)
 - GP 1 value
 - GP 2 value
 - GP 3 value
 - GP 4 value

Factory setting Tank level

* Visibility depends on order options or device settings

Additional information


Read access	Operator
Write access	Maintenance

 The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

0 % value



Navigation

 Setup → Advanced setup → Communication → HART output → Configuration → 0 % value

Prerequisite

PV source = Custom

Description

0% value of the primary variable (PV).

User entry

-100 000 to 100 000 mm

Factory setting

0 mm


Additional information

Read access	Operator
Write access	Maintenance

100 % value



Navigation

 Setup → Advanced setup → Communication → HART output → Configuration → 100 % value

Prerequisite

PV source = Custom

Description

100% value of the primary variable (PV).

User entry

-100 000 to 100 000 mm

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

PV mA selector



Navigation

 Setup → Advanced setup → Communication → HART output → Configuration → PV mA selector

Prerequisite

PV source = Custom

Description Assigns a current to the primary HART variable (PV).


- Selection**
- None
 - AIO B1-3 value mA *
 - AIO C1-3 value mA *

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Primary variable (PV)


Navigation  Setup → Advanced setup → Communication → HART output → Configuration → Primary variable (PV)

Description Shows the value of the primary HART variable (PV).

Additional information

Read access	Operator
Write access	-

Percent of range

Navigation  Setup → Advanced setup → Communication → HART output → Configuration → Percent of range


Description Shows the value of the primary variable (PV) as a percentage of the defined 0% to 100% range.

Additional information

Read access	Operator
Write access	-

Assign SV



Navigation  Setup → Advanced setup → Communication → HART output → Configuration → Assign SV

Description Assigns a tank variable to the secondary HART variable (SV).

- Selection**
- None
 - Tank level
 - Tank ullage

* Visibility depends on order options or device settings

- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting

Liquid temperature


Additional information

Read access	Operator
Write access	Maintenance

 The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Secondary variable (SV)

Navigation

 Setup → Advanced setup → Communication → HART output → Configuration → Secondary variable (SV)

Prerequisite

Assign SV (→  169) ≠ None

Description

Shows the value of the secondary HART variable (SV).

Additional information

Read access	Operator
Write access	-

Assign TV



Navigation Setup → Advanced setup → Communication → HART output → Configuration → Assign TV

Description Assigns a tank variable to the third HART variable (TV).

- Selection**
- None
 - Tank level
 - Tank ullage
 - Measured level
 - Distance
 - Displacer position
 - Water level
 - Upper interface level
 - Lower interface level
 - Bottom level
 - Tank reference height
 - Liquid temperature
 - Vapor temperature
 - Air temperature
 - Observed density value
 - Average profile density
 - Upper density
 - Middle density
 - Lower density
 - P1 (bottom)
 - P2 (middle)
 - P3 (top)
 - GP 1 value
 - GP 2 value
 - GP 3 value
 - GP 4 value

Factory setting Water level

Additional information

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Tertiary variable (TV)

Navigation Setup → Advanced setup → Communication → HART output → Configuration → Tertiary variable (TV)

Prerequisite Assign TV (→ 171) ≠ None

Description Shows the value of the third HART variable (TV).

Additional information

Read access	Operator
Write access	-

Assign QV



Navigation

Setup → Advanced setup → Communication → HART output → Configuration → Assign QV

Description

Assigns a tank variable to the fourth HART variable (QV).

Selection

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting

Observed density value

Additional information

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Quaternary variable (QV)

Navigation

 Setup → Advanced setup → Communication → HART output → Configuration
→ Quaternary variable (QV)

Prerequisite

Assign QV (→  172) ≠ **None**

Description


Shows the value of the fourth HART variable (QV).


Additional information

Read access	Operator
Write access	-

"Information" submenu

Navigation  Setup → Advanced setup → Communication → HART output → Information

HART short tag 


Navigation  Setup → Advanced setup → Communication → HART output → Information → HART short tag


Description Defines the short tag for the measuring point. Maximum length: 8 characters Allowed characters: A-Z, 0-9, certain special characters.

Factory setting NMR8x

Additional information

Read access	Operator
Write access	Maintenance

Device tag 

Navigation  Setup → Advanced setup → Communication → HART output → Information → Device tag


Description Enter a unique name for the measuring point to identify the device quickly within the plant.

Factory setting NMR8x

Additional information

Read access	Operator
Write access	Maintenance

HART descriptor 

Navigation  Setup → Advanced setup → Communication → HART output → Information → HART descriptor

Description User defined HART descriptor (16 characters).

Factory setting NMR8x

Additional information

Read access	Operator
Write access	Maintenance

HART message



Navigation Setup → Advanced setup → Communication → HART output → Information → HART message

Description User defined HART message (32 characters).

Factory setting NMR8x

Additional information

Read access	Operator
Write access	Maintenance

HART date code



Navigation Setup → Advanced setup → Communication → HART output → Information → HART date code


Description Enter date of the last configuration change. Use this format yyyy-mm-dd.

Factory setting 2009-07-20


Additional information

Read access	Operator
Write access	Maintenance


"Application" submenu

Navigation  Setup → Advanced setup → Application

"Tank configuration" submenu

Navigation  Setup → Advanced setup → Application → Tank configuration

"Level" submenu

Navigation  Setup → Advanced setup → Application → Tank configuration → Level

Empty 

Navigation  Setup → Advanced setup → Application → Tank configuration → Level → Empty

Description Distance from reference point to zero position (tank bottom or datum plate).

User entry 0 to 10 000.00 mm


Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

 The reference point is the lower edge of the device flange.

Tank reference height 

Navigation  Setup → Advanced setup → Application → Tank configuration → Level → Tank reference height

Description Defines the distance from the dipping reference point to the zero position (tank bottom or datum plate).

User entry 0 to 10 000.00 mm

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Tank level

Navigation  Setup → Advanced setup → Application → Tank configuration → Level → Tank level

Description Shows the distance from the zero position (tank bottom or datum plate) to the product surface.

Additional information

Read access	Operator
Write access	-

Set level



Navigation  Setup → Advanced setup → Application → Tank configuration → Level → Set level


Description If the level measured by the device does not match the actual level obtained by a manual dip, enter the correct level into this parameter.

User entry 0 to 10 000.00 mm

Factory setting 0 mm



Additional information

Read access	Operator
Write access	Maintenance

The device adjusts the **Empty** parameter (→  123) according to the entered value, such that the measured level will match the actual level.

Water level source



Navigation   Setup → Advanced setup → Application → Tank configuration → Level → Water level source

Description Defines the source of the bottom water level.


Selection



- Manual value
- Bottom level
- HART device 1 ... 15 level
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

Manual water level 

Navigation   Setup → Advanced setup → Application → Tank configuration → Level → Manual water level

Prerequisite **Water level source (→  177) = Manual value**

Description Defines the manual value of the bottom water level.



User entry -2 000 to 5 000 mm

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance


Water level

Navigation   Setup → Advanced setup → Application → Tank configuration → Level → Water level

Description Shows the bottom water level.

Additional information

Read access	Operator
Write access	-

Blocking distance 

Navigation   Setup → Advanced setup → Application → Tank configuration → Level → Blocking distance

Description No echos are evaluated within the blocking distance BD. Therefore, BD can be used to suppress interference echos in the vicinity of the antenna.

User entry Positive floating-point number


Factory setting 800 mm


Additional information


Read access	Operator
Write access	Maintenance

"Temperature" submenu

Read access	Maintenance
-------------	-------------

Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature

Liquid temp source 

Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature → Liquid temp source


Description Defines source from which the liquid temperature is obtained.


- Selection**
- Manual value
 - HART device 1 ... 15 temperature
 - AIO B1-3 value
 - AIO C1-3 value
 - AIP B4-8 value
 - AIP C4-8 value


Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance

Manual liquid temperature 

Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature → Manual liquid temperature

Prerequisite **Liquid temp source (→  127) = Manual value**

Description Defines the manual value of the liquid temperature.


User entry -50 to 300 °C

Factory setting 25 °C

Additional information

Read access	Operator
Write access	Maintenance

Liquid temperature

Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature → Liquid temperature

Description Shows the average or spot temperature of the measured liquid.

Additional information

Read access	Operator
Write access	-

Air temperature source



Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature → Air temperature source

Description Defines source from which the air temperature is obtained.

Selection

- Manual value
- HART device 1 ... 15 temperature
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

Factory setting


Manual value


Additional information

Read access	Operator
Write access	Maintenance

Manual air temperature



Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature → Manual air temperature

Prerequisite **Air temperature source** (→  180) = **Manual value**

Description Defines the manual value of the air temperature.


User entry -50 to 300 °C

Factory setting 25 °C

Additional information

Read access	Operator
Write access	Maintenance

Air temperature

Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature → Air temperature


Description Shows the air temperature.

Additional information

Read access	Operator
Write access	-

Vapor temp source



Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature → Vapor temp source

Description Defines the source from which the vapor temperature is obtained.

- Selection**
- Manual value
 - HART device 1 ... 15 vapor temp
 - AIO B1-3 value
 - AIO C1-3 value
 - AIP B4-8 value
 - AIP C4-8 value


Factory setting Manual value


Additional information

Read access	Operator
Write access	Maintenance

Manual vapor temperature



Navigation  Setup → Advanced setup → Application → Tank configuration → Temperature → Manual vapor temperature

Prerequisite **Vapor temp source (→  181) = Manual value**

Description Defines the manual value of the vapor temperature.

User entry -50 to 300 °C


Factory setting 25 °C

Additional information

Read access	Operator
Write access	Maintenance

Vapor temperature

Navigation

 Setup → Advanced setup → Application → Tank configuration → Temperature
→ Vapor temperature

Description


Shows the measured vapor temperature.


Additional information

Read access	Operator
Write access	-

"Density" submenu

Navigation  Setup → Advanced setup → Application → Tank configuration → Density

Observed density source 

Navigation  Setup → Advanced setup → Application → Tank configuration → Density → Observed density source

Description Determines how the density is obtained.


- Selection**
- HTG *
 - HTMS *
 - Average profile density *
 - Upper density
 - Middle density
 - Lower density

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance


Observed density

Navigation  Setup → Advanced setup → Application → Tank configuration → Density → Observed density

Description Shows the measured or calculated density.

Additional information

Read access	Operator
Write access	-

Air density 

Navigation  Setup → Advanced setup → Application → Tank configuration → Density → Air density

Description Defines the density of the air surrounding the tank.

User entry 0.0 to 500.0 kg/m³

* Visibility depends on order options or device settings

Factory setting 1.2 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Vapor density



Navigation

Setup → Advanced setup → Application → Tank configuration → Density → Vapor density

Description

Defines the density of the gas phase in the tank.

User entry

0.0 to 500.0 kg/m³


Factory setting


1.2 kg/m³


Additional information

Read access	Operator
Write access	Maintenance

"Pressure" submenu

Navigation  Setup → Advanced setup → Application → Tank configuration → Pressure

P1 (bottom) source 

Navigation  Setup → Advanced setup → Application → Tank configuration → Pressure → P1 (bottom) source

Description Defines the source of the bottom pressure (P1).


- Selection**
- Manual value
 - HART device 1 ... 15 pressure
 - AIO B1-3 value
 - AIO C1-3 value
 - AIP B4-8 value
 - AIP C4-8 value

Factory setting Manual value

Additional information

Read access	Operator
Write access	Maintenance


P1 (bottom)


Navigation  Setup → Advanced setup → Application → Tank configuration → Pressure → P1 (bottom)

Description Shows the pressure at the tank bottom.

Additional information

Read access	Operator
Write access	-

P1 (bottom) manual pressure 

Navigation  Setup → Advanced setup → Application → Tank configuration → Pressure → P1 (bottom) manual pressure

Prerequisite P1 (bottom) source (→  185) = Manual value


Description Defines the manual value of the bottom pressure (P1).



User entry -25 to 25 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P1 position 

Navigation   Setup → Advanced setup → Application → Tank configuration → Pressure → P1 position


Description Defines the position of the bottom pressure transmitter (P1), measured from zero position (tank bottom or datum plate).


User entry -10 000 to 100 000 mm

Factory setting 5 000 mm

Additional information

Read access	Operator
Write access	Maintenance

P1 offset 

Navigation   Setup → Advanced setup → Application → Tank configuration → Pressure → P1 offset

Description Offset for the bottom pressure (P1). The offset is added to the measured pressure prior to any tank calculation.

User entry -25 to 25 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P1 absolute / gauge 

Navigation   Setup → Advanced setup → Application → Tank configuration → Pressure → P1 absolute / gauge

Description Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.

Selection

- Absolute
- Gauge

Factory setting

Gauge

Additional information

Read access	Operator
Write access	Maintenance

P3 (top) source**Navigation**

Setup → Advanced setup → Application → Tank configuration → Pressure → P3 (top) source

Description

Defines the source of the top pressure (P3).

Selection

- Manual value
- HART device 1 ... 15 pressure
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

Factory setting

Manual value

Additional information

Read access	Operator
Write access	Maintenance

P3 (top)**Navigation**

Setup → Advanced setup → Application → Tank configuration → Pressure → P3 (top)

Description

Shows the pressure (P3) at the top transmitter.

Additional information

Read access	Operator
Write access	-

P3 (top) manual pressure**Navigation**

Setup → Advanced setup → Application → Tank configuration → Pressure → P3 (top) manual pressure

Prerequisite

P3 (top) source (→ 187) = Manual value

Description

Defines the manual value of the top pressure (P3).

User entry

-2.5 to 2.5 bar

Factory setting

0 bar

Additional information

Read access	Operator
Write access	Maintenance

P3 position**Navigation**

Setup → Advanced setup → Application → Tank configuration → Pressure → P3 position

Description

Defines the position of the top pressure transmitter (P3), measured from zero position (tank bottom or datum plate).

User entry

0 to 100 000 mm

Factory setting

20 000 mm

Additional information

Read access	Operator
Write access	Maintenance

P3 offset**Navigation**

Setup → Advanced setup → Application → Tank configuration → Pressure → P3 offset

Description

Offset for the top pressure (P3). The offset is added to the measured pressure prior to any tank calculation.

User entry

-2.5 to 2.5 bar

Factory setting

0 bar

Additional information

Read access	Operator
Write access	Maintenance

P3 absolute / gauge**Navigation**

Setup → Advanced setup → Application → Tank configuration → Pressure → P3 absolute / gauge

Description

Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.

Selection

- Absolute
- Gauge

Factory setting

Gauge

Additional information

Read access	Operator
Write access	Maintenance

Ambient pressure



Navigation

Setup → Advanced setup → Application → Tank configuration → Pressure → Ambient pressure

Description

Defines the manual value of the ambient pressure.

User entry

0 to 2.5 bar

Factory setting

1 bar

Additional information


Read access	Operator
Write access	Maintenance

"Tank calculation" submenu


Navigation  Setup → Advanced setup → Application → Tank calculation

*"HyTD" submenu**Overview*

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels distributed over the full range of the tank.

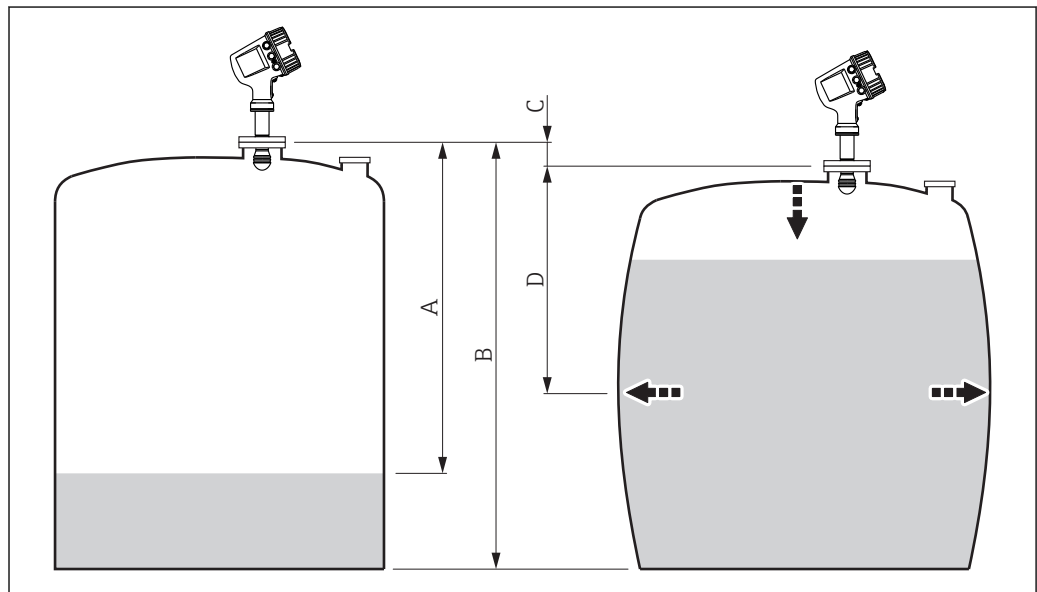


A0028722

 51 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (level below L_0 → "HyTD correction value" = 0)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (level above L_0 → "HyTD correction value" > 0)

Linear approximation of the HyTD correction

The real amount of deformation varies non-linearly with the level due to the construction of the tank. However, as the correction values are typically small compared to the measured level, a simple straight line method can be used with good results.

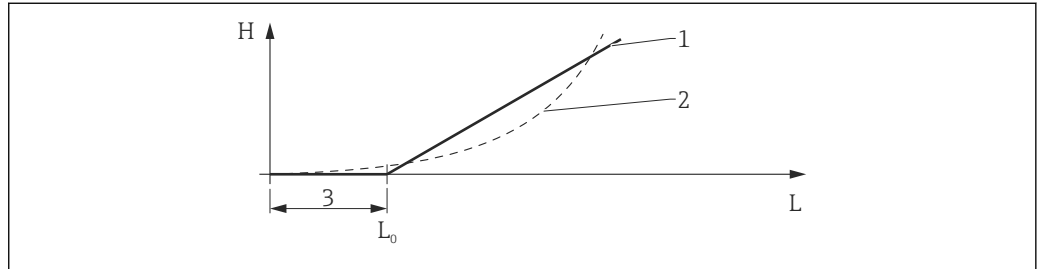

A0028724

52 Calculation of the HyTD correction

- 1 Linear correction according to "Deformation factor (→ 193)"
- 2 Real correction
- 3 Starting level (→ 192)
- L Measured level
- H HyTD correction value (→ 192)

Calculation of the HyTD correction

$$L \leq L_0 \Rightarrow C_{HyTD} = 0$$

$$L > L_0 \Rightarrow C_{HyTD} = - (L - L_0) \times D$$


A0028715

L	Measured level
L₀	Starting level
C_{HyTD}	HyTD correction value
D	Deformation factor

Description of parameters

Navigation  Setup → Advanced setup → Application → Tank calculation → HyTD

HyTD correction value

Navigation  Setup → Advanced setup → Application → Tank calculation → HyTD → HyTD correction value

Description Shows the correction value from the Hydrostatic Tank Deformation.

Additional information

Read access	Operator
Write access	-

HyTD mode

Navigation  Setup → Advanced setup → Application → Tank calculation → HyTD → HyTD mode

Description Activates or deactivates the calculation of the Hydrostatic Tank Deformation.

Selection

- No
- Yes

Factory setting No

Additional information

Read access	Operator
Write access	Maintenance

Starting level

Navigation  Setup → Advanced setup → Application → Tank calculation → HyTD → Starting level

Description Defines the starting level for the Hydrostatic Tank Deformation. Levels below this value are not corrected.

User entry 0 to 5 000 mm

Factory setting 500 mm

Additional information

Read access	Operator
Write access	Maintenance

Deformation factor



Navigation Setup → Advanced setup → Application → Tank calculation → HyTD → Deformation factor

Description Defines the deformation factor for the HyTD (change of device position per change of level).

User entry -1.0 to 1.0 %




Factory setting 0.2 %

Additional information


Read access	Operator
Write access	Maintenance

*"CTSh" submenu**Overview*

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

-  This correction is recommended for the following situations:
 - if the operating temperature deviates considerably from the temperature during calibration ($\Delta T > 10\text{ °C}$ (18 °F))
 - for extremely high tanks
 - for refrigerated, cryogenic or heated applications
-  As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.
-  This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

CTSh: Calculation of the wall temperature

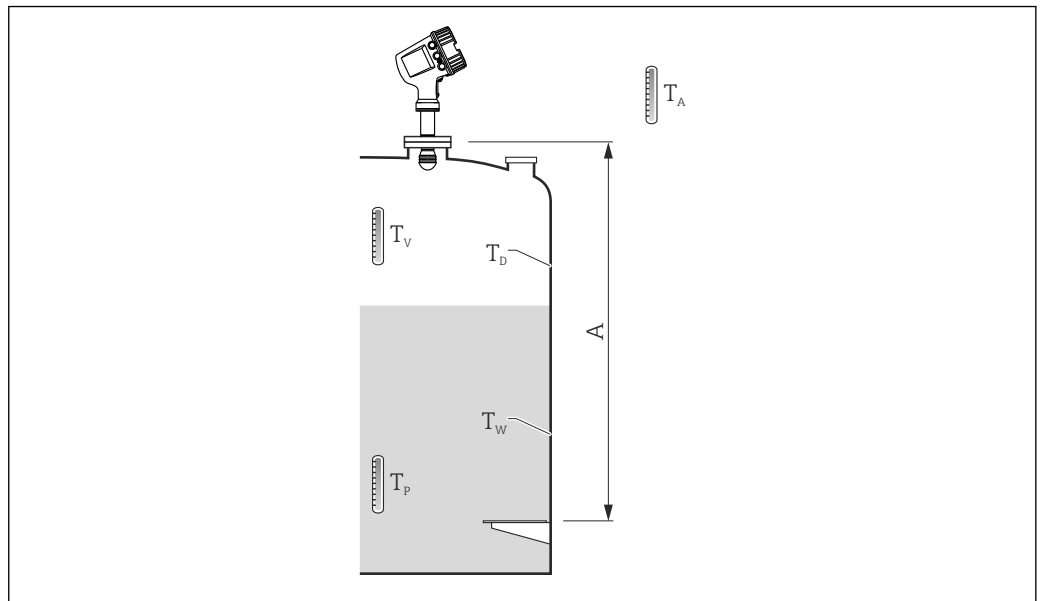

A0028712

53 Parameters for the CTSh calculation

A Gauge Reference Height (GRH)


T_W	Temperature of the wetted part of the tank shell
T_D	Temperature of the dry part of the tank shell
T_P	Product temperature
T_V	Vapor temperature (in the tank)
T_A	Ambient temperature (atmosphere surrounding the tank)

CTSh: Calculation of the wall temperature

Depending on the parameters **Covered tank** (→ 197) and **Stilling well** (→ 198), the temperatures T_W of the wetted and T_D of the dry part of the tank wall are calculated as follows:

Covered tank (→ 197)	Stilling well (→ 198)	T_W	T_D
Covered	Yes ¹⁾	T_P	T_V
	No	$(7/8) T_P + (1/8) T_A$	$(1/2) T_V + (1/2) T_A$
Open top	Yes	T_P	T_A
	No	$(7/8) T_P + (1/8) T_A$	T_A

1) This option is also valid for insulated tanks without a stilling well. This is due to the temperature inside and outside of the tank shell being the same due to the insulation of the tank.

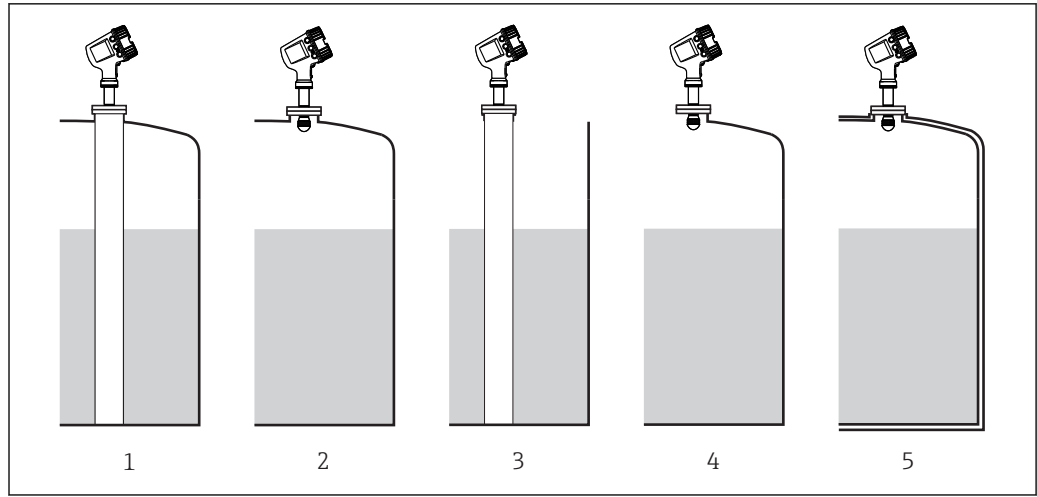

A0030382

- 1 Covered tank (→ 197) = Covered; Stilling well (→ 198) = Yes
- 2 Covered tank (→ 197) = Covered; Stilling well (→ 198) = No
- 3 Covered tank (→ 197) = Open top; Stilling well (→ 198) = Yes
- 4 Covered tank (→ 197) = Open top; Stilling well (→ 198) = No
- 5 Insulated tank: Covered tank (→ 197) = Open top; Stilling well (→ 198) = Yes

CTSh: Calculation of the correction

$$C_{CTSh} = \alpha (H - L)(T_D - T_{cal}) + \alpha L (T_W - T_{cal})$$


A0028716

H	Gauge Reference Height
L	Measured level
T_D	Temperature of the dry part of the tank shell (calculated from T _p , T _v and T _A)
T_W	Temperature of the wetted part of the tank shell (calculated from T _p , T _v and T _A)
T_{cal}	Temperature at which the measurement has been calibrated
α	Linear expansion coefficient
c_{CTSh}	CTSh correction value

Description of parameters

Navigation  Setup → Advanced setup → Application → Tank calculation → CTSh

CTSh correction value

Navigation  Setup → Advanced setup → Application → Tank calculation → CTSh → CTSh correction value

Description Shows the CTSh correction value.

Additional information

Read access	Operator
Write access	-

CTSh mode



Navigation  Setup → Advanced setup → Application → Tank calculation → CTSh → CTSh mode

Description Activates or deactivates the CTSh.

Selection

- No
- Yes
- With wire *
- Only wire *

Factory setting No

Additional information

Read access	Operator
Write access	Maintenance

Covered tank



Navigation  Setup → Advanced setup → Application → Tank calculation → CTSh → Covered tank

Description Determines whether the tank is covered.

Selection

- Open top
- Covered

Factory setting Open top


* Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

 The **Covered** option is only valid for fixed tank roofs. For a floating roof select **Open top**.

Stilling well**Navigation**

 Setup → Advanced setup → Application → Tank calculation → CTSh → Stilling well

Description

Determines whether the device is mounted on a stilling well.

Selection

- No
- Yes


Factory setting

No

Additional information

Read access	Operator
Write access	Maintenance

Calibration temperature**Navigation**

 Setup → Advanced setup → Application → Tank calculation → CTSh → Calibration temperature

Description

Specify temperature at which the measurement has been calibrated.

User entry

-50 to 250 °C


Factory setting

25 °C

Additional information

Read access	Operator
Write access	Maintenance

Linear expansion coefficient**Navigation**

 Setup → Advanced setup → Application → Tank calculation → CTSh → Linear expansion coefficient

Description

Defines the linear expansion coefficient of the tank shell material.

User entry

0 to 100 ppm

Factory setting

15 ppm

Additional information

Read access	Operator
Write access	Maintenance

Wire expansion coefficient**Navigation**

Setup → Advanced setup → Application → Tank calculation → CTSh → Wire expansion coefficient

Description

Defines the expansion coefficient of the wire material of the drum. Value is programmed in factory.

User entry

0 to 100 ppm

Factory setting


15 ppm

"HTMS" submenu

Overview

The Hybrid Tank Measurement System (HTMS) is a method to calculate the density of a product in a tank based on both a (top mounted) level and at least one (bottom mounted) pressure measurement. An additional pressure sensor can be installed at the top of the tank to provide information about the vapor pressure and to make the density calculation more accurate. The calculation method also takes into account a possible level of water at the bottom of the tank to make density calculations as accurate as possible.

HTMS parameters

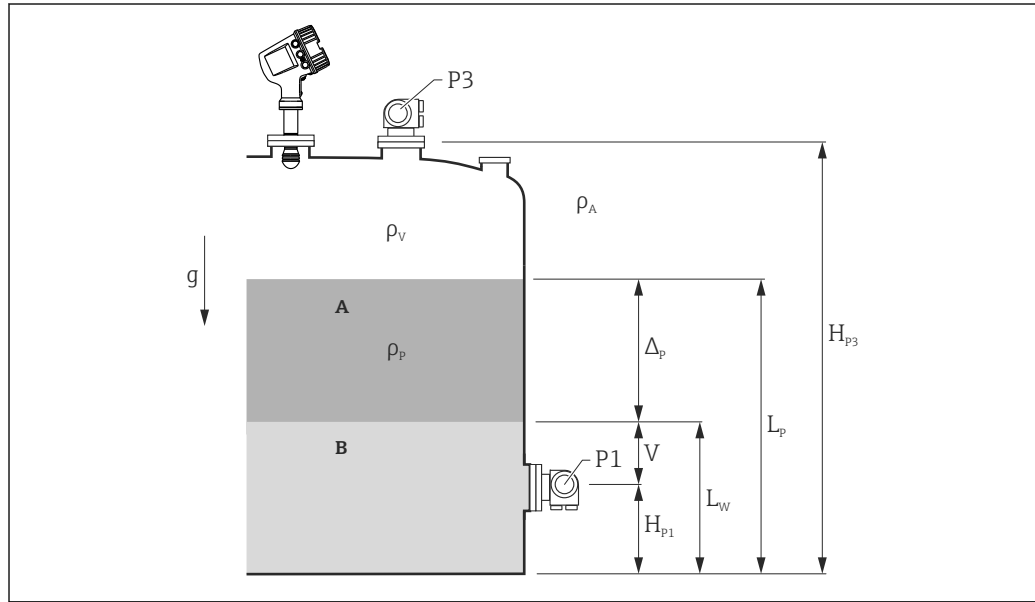

54 HTMS parameters

- A Product
- B Water

Parameter	Navigation path
P1 (Bottom pressure)	Setup → Advanced setup → Tank configuration → Pressure → P1 (bottom)
H_{p1} (Position of P1 transmitter)	Setup → Advanced setup → Tank configuration → Pressure → P1 position
P3 (Top pressure)	Setup → Advanced setup → Tank configuration → Pressure → P3 (top)
H_{p3} (Position of P3 transmitter)	Setup → Advanced setup → Tank configuration → Pressure → P3 position
ρ_p (Density of the product ¹⁾)	<ul style="list-style-type: none"> ■ Measured value: Setup → Advanced setup → Calculation → HTMS → Density value ■ User-defined value: Setup → Advanced setup → Calculation → HTMS → Manual upper density
ρ_v (Vapor density)	Expert → Application → Tank configuration → Density → Vapor density
ρ_A (Ambient air temperature)	Setup → Advanced setup → Tank configuration → Density → Air density
g (Local gravity)	Expert → Application → Tank Calculation → Local gravity
L_p (Level of the product)	Operation → Tank level
L_w (Bottom water level)	Operation → Water level
$V = L_w + L_p$	
$\Delta p = L_p - L_w = L_p - V - H_{p1}$	

1) Depending on the situation this parameter is measured or a user-defined value is used.

HTMS modes

Two HTMS modes can be selected in the **HTMS mode** parameter (→ 202). The mode determines whether one or two pressure values are used. Depending on the selected mode a number of additional parameters are required for the calculation of the product density.

i The **HTMS P1+P3** option must be used in pressurized tanks in order to compensate for the pressure of the vapor phase.

HTMS mode (→ 202)	Measured variables	Required additional parameters	Calculated variables
HTMS P1	<ul style="list-style-type: none"> ▪ P₁ ▪ L_p 	<ul style="list-style-type: none"> ▪ g ▪ H_{p1} ▪ L_w (optional) 	ρ _p
HTMS P1+P3	<ul style="list-style-type: none"> ▪ P₁ ▪ P₃ ▪ L_p 	<ul style="list-style-type: none"> ▪ ρ_v ▪ ρ_A ▪ g ▪ H_{p1} ▪ H_{p3} ▪ L_w (optional) 	ρ _p (more precise calculation for pressurized tanks)

Minimum level

The density of the product can only be calculated if the product has a minimum thickness :

$$\Delta_p \geq \Delta_{p, \min}$$

A0028864

This is equivalent to the following condition for the product level:

$$L_p - V \geq \Delta_{p, \min} + H_{p1} = L_{\min}$$

A0028863


L_{min} is defined in the **Minimum level** parameter (→ 203). As can be seen from the formula it always must be bigger than H_{p1}.

If L_p - V falls below this limit, the density is calculated as follows:

- If a previous calculated value is available, this value will be kept as long as no new calculation is possible.
- If no value was previously calculated, the manual value (defined in the **Manual upper density** parameter) will be used.

Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level** (→ 203)), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

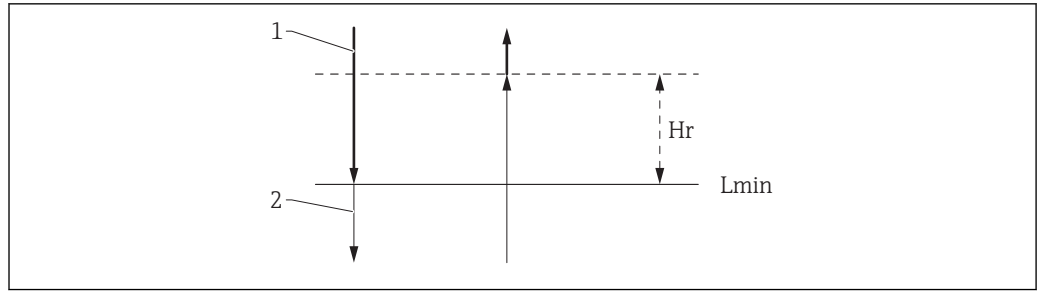

A0029148

55 HTMS hysteresis

- 1 Value calculated
- 2 Value held/manual
- L_{min} Minimum level (→ 203)
- H_r Hysteresis (→ 204)

Description of parameters

Navigation Setup → Advanced setup → Application → Tank calculation → HTMS

HTMS mode

Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → HTMS mode				
Description	Defines the HTMS mode. Depending on the mode one or two pressure transmitters are used.				
Selection	<ul style="list-style-type: none"> ■ HTMS P1 ■ HTMS P1+P3 				
Factory setting	HTMS P1				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Meaning of the options

- HTMS P1
Only a bottom pressure transmitter (P1) is used.
- HTMS P1+P3
A bottom (P1) and top (P3) pressure transmitter are used. This option should be selected for pressurized tanks.

Manual density

Navigation	Setup → Advanced setup → Application → Tank calculation → HTMS → Manual density
Description	Defines the manual density.

User entry 0 to 3 000 kg/m³

Factory setting 800 kg/m³

Additional information

Read access	Maintenance
Write access	Maintenance

Density value

Navigation  Setup → Advanced setup → Application → Tank calculation → HTMS → Density value


Description Shows the calculated product density.

Additional information

Read access	Operator
Write access	-

Minimum level



Navigation  Setup → Advanced setup → Application → Tank calculation → HTMS → Minimum level

Description Defines the minimum product level for a HTMS calculation. If Lp - V falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.

User entry 0 to 20 000 mm


Factory setting 7 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Minimum pressure



Navigation  Setup → Advanced setup → Application → Tank calculation → HTMS → Minimum pressure

Description Defines the minimum pressure for a HTMS calculation. If the pressure P1 (or the difference P1 - P3) falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.

User entry 0 to 100 bar

Factory setting 0.1 bar

Additional information

Read access	Operator
Write access	Maintenance

Safety distance**Navigation**

Setup → Advanced setup → Application → Tank calculation → HTMS → Safety distance

Description

Defines the minimum level which must be present above the bottom pressure sensor before its signal is used for the calculation.

User entry

0 to 10 000 mm

Factory setting

2 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Hysteresis**Navigation**

Setup → Advanced setup → Application → Tank calculation → HTMS → Hysteresis

Description

Defines the hysteresis for the HTMS calculation. Prevents constant switching if the level is near the switch-over point.

User entry

0 to 2 000 mm

Factory setting

50 mm

Additional information

Read access	Operator
Write access	Maintenance

Water density**Navigation**

Setup → Advanced setup → Application → Tank calculation → HTMS → Water density

Description

Density of the water in the tank.

User entry

Signed floating-point number

Factory setting

1 000 kg/m³

Additional information








Read access	Operator
Write access	Maintenance

*"Dip-table" submenu**Dip table*

The dip table is used to correct the level readings using independently taken hand dips. The dip table is used in particular to adapt the level gauge to the specific application conditions such as a mechanical offset and the tank or stilling well design. Depending on national regulations, national inspectors will dip the tank at one to three levels during a calibration run and check the level readings.

Only one value pair must be entered into the dip table to correct the measurement offset. If a second value pair is entered into the dip table, the device accepts the corrected measured values identically for both value pairs. All other measured values are determined by linear extrapolation.

If more than two value pairs are entered, the system carries out a linear interpolation between adjacent value pairs. Outside these value pairs, extrapolation is also linear.

-  The offset should **not** be determined and entered within the close range of the antenna or immediately in the range of the tank bottom, because within these ranges interferences of the radar signal may occur.
- The entries of the dip table must be arranged in an ascending order of levels. If table values have not been entered in the correct order, they can automatically be rearranged by selecting **Table settings** (→  209) = **Sort table**
-  After changing the **Empty** parameter (→  123), the **Table mode** parameter (→  209) is automatically set to **Disable**.
- If **Empty** (→  123) has been changed by more than 20 mm (0.8 in), it is recommended to delete the dip table.
- The dip table values are not affected by a change of the **Empty** parameter (→  123).

Semiautomatic creation of a dip table


In order not to mix up measurement values corrected by the dip table with uncorrected measurement values, it is recommended to enter new data pairs semiautomatically into the table. This means: the uncorrected level is measured by the device and the user only enters the corresponding dip value.

The first dip value should be entered immediately after the basic calibration. Further dip points should be entered only after a level change of at least 2 m (6.6 ft) and a deviation between the uncorrected measurement value and the hand dip value of at least 4 mm (0.16 in).

If this procedure can not be followed, then **no** value pair should be entered into the dip table after basic calibration. Measurement data and hand dip values should be collected over the full measurement range and be evaluated with regard to a good linear fit. Only then characteristic value pairs should be entered into the dip table using the "manual mode" (see below).


Manual creation of a dip table

Before creating a dip table manually, measured levels and dip values should be collected over the full measurement range and be evaluated with regard to a linear fit. Only then characteristic value pairs from this fit should be entered into the dip table using the manual mode. In the manual mode both, the measured level (without correction) and the corresponding dip value are entered by the user.

-  If further linearisation is needed, further hand dip values should be entered using only the "semi-automatic" mode (see above).

The table editor on the local display

1. Navigate to Setup → Advanced setup → Application → Tank calculation → Dip-table → Table mode and select the **Disable** option.
2. Navigate to Setup → Advanced setup → Application → Calculation → Dip-table → Edit table

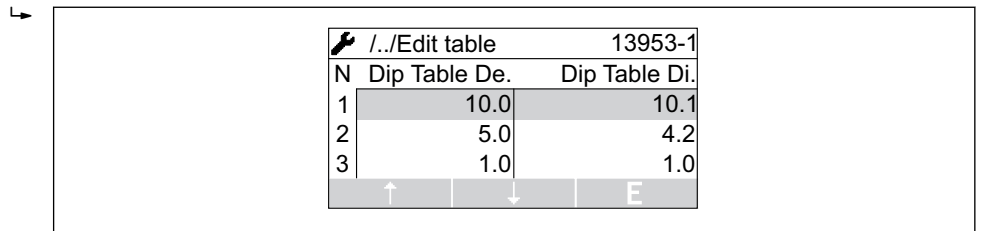


A0029166-EN

56 The dip table editor on the local display


N Number of the line
 De. Device level
 Di. Dip level

3. Use the "↑" and "↓" keys to move to the line you want to edit.

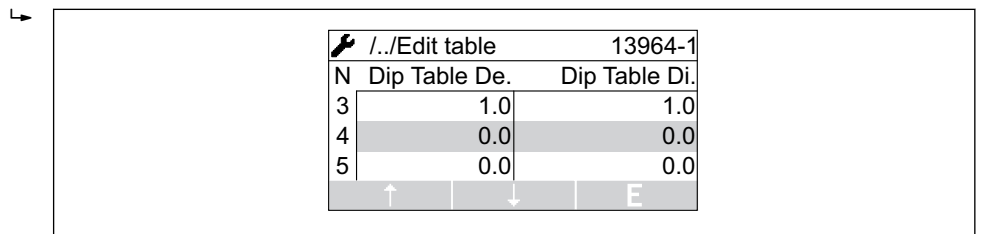

A0029167-EN

4. Press "E" to open the line.
5. Use "→" to select the cell you want to edit.

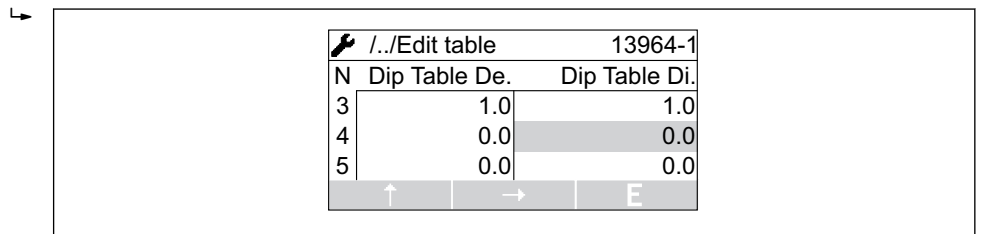


A0029168-EN

6. Press "E" to open the cell.
7. Enter the required number → 44.
8. Continue until all required table points have been entered.
9. Press "-" and "+" simultaneously to quit the table editor.
10. Navigate to Setup → Advanced setup → Application → Tank calculation → Dip-table → Table settings and select the **Sort table** option.
 - ↳ The table points are arranged in an ascending order.
11. Navigate to Setup → Advanced setup → Application → Tank calculation → Dip-table → Table mode and select the **Enable** option.
 - ↳ The new dip table is active.

The table editor in FieldCare

i In the FieldCare table editor the dip table can only be entered manually. Even if the semiautomatic method has been selected in the **Table settings** parameter (→ 209), the complete table will be written from the editor to the device in the manual mode.

1.

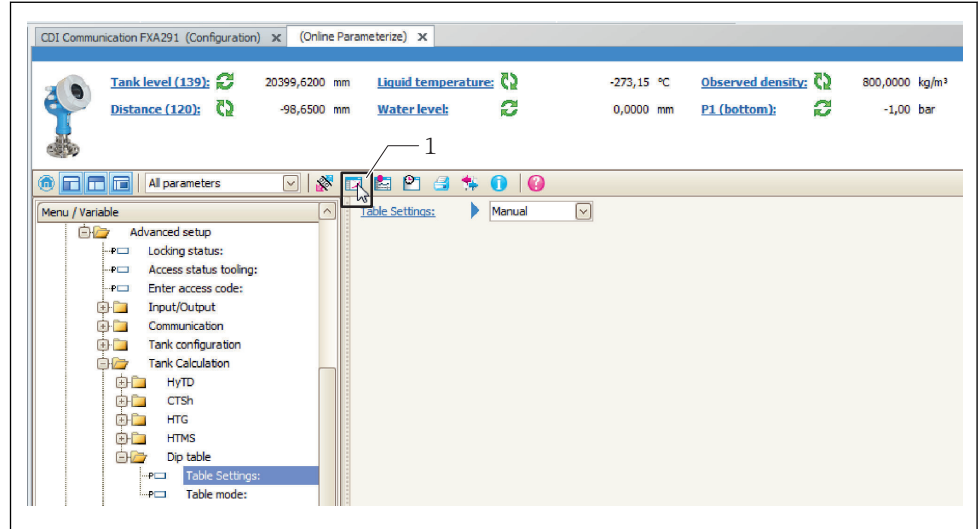


A0029162

1 Table icon; calls up the table editor.

Open the table editor by clicking on the table icon.

↳ The graphical table editor appears:

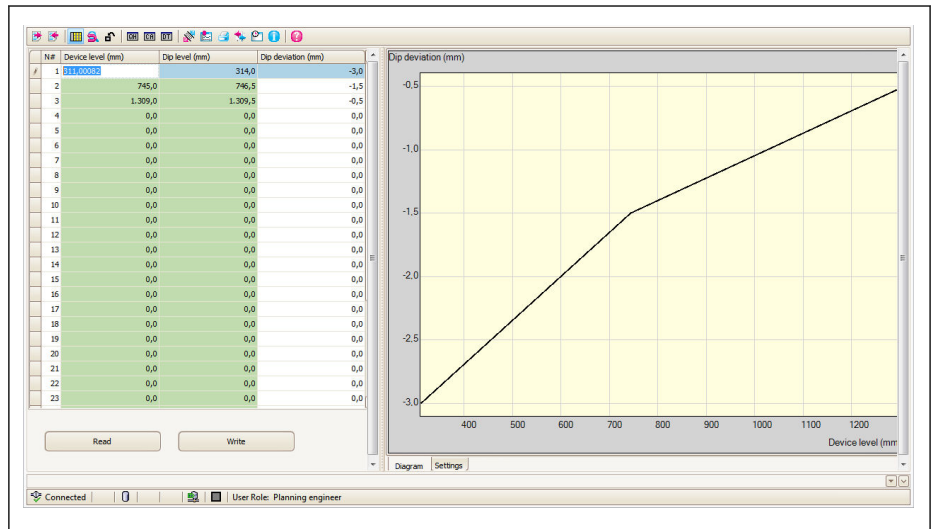

A0029161

2. If the device already contains a dip table: Click "Read" to load it into the editor.
3. Enter or change table values in the table on the right. A graphical representation of the table is shown in the diagram on the right.
4. Click "Write" to write the table back to the device.

Description of parameters



Navigation  Setup → Advanced setup → Application → Tank calculation → Dip-table

Table settings 

Navigation  Setup → Advanced setup → Application → Tank calculation → Dip-table → Table settings

Description Defines the dip-table operation to be performed.

- Selection**
- Manual
 - Semiautomatic
 - Clear table
 - Sort table


Factory setting Manual

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

- Manual
Both, the device level and the dip level for each table point have to be entered manually.
- Semiautomatic
The device level of each table point is measured by the device itself, the corresponding dip level must be entered manually.
- Clear table
Deletes the complete dip table.
- Sort table
Sorts the table points into an ascending order. This must be performed if table values have not been entered in the correct order.

Table mode 

Navigation  Setup → Advanced setup → Application → Tank calculation → Dip-table → Table mode

Description Enables or disables the dip-table.


- Selection**
- Disable
 - Enable

Factory setting Disable

Additional information


Read access	Operator
Write access	Maintenance

"Alarm" submenu

Navigation  Setup → Advanced setup → Application → Alarm → Alarm → Alarm mode

Alarm mode



Navigation  Setup → Advanced setup → Application → Alarm → Alarm → Alarm mode

Description Defines the alarm mode of the selected alarm.


- Selection**
- Off
 - On
 - Latching


Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

- **Off**
No alarms are generated.
- **On**
An alarm disappears if the alarm condition is no longer present (taking into consideration the hysteresis).
- **Latching**
All alarms remain active until the user selects **Clear alarm** (→  217) = **Yes** or the power is switched off and on.

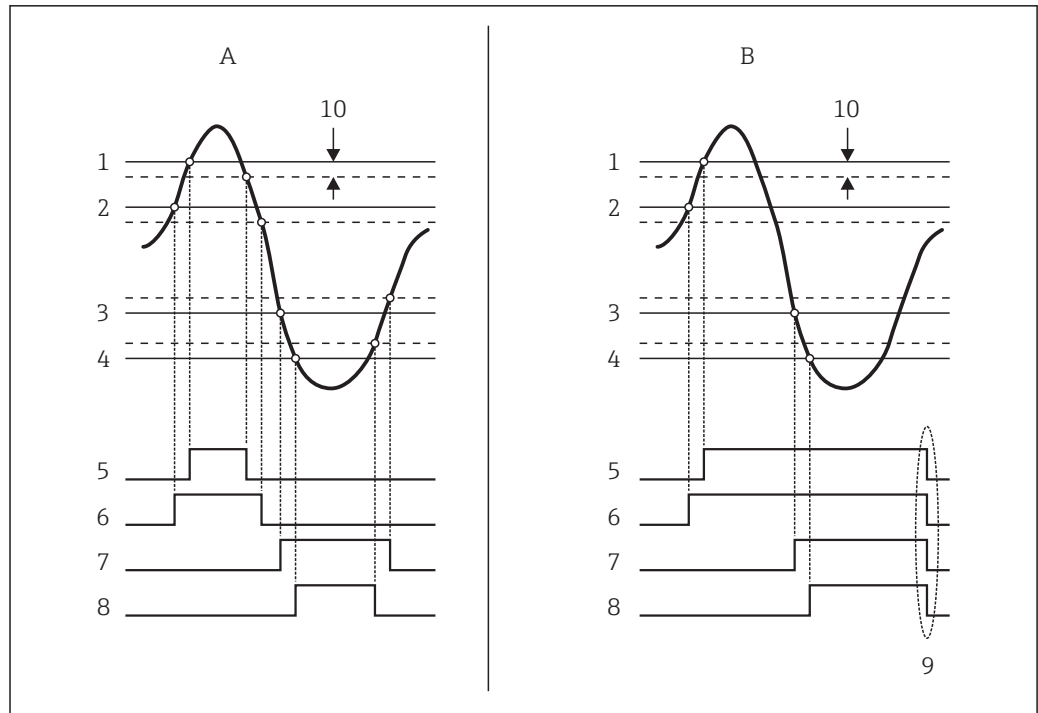

A0029539

57 Principle of the limit evaluation

- A Alarm mode (→ 211) = On
- B Alarm mode (→ 211) = Latching
- 1 HH alarm value (→ 214)
- 2 H alarm value (→ 214)
- 3 L alarm value (→ 215)
- 4 LL alarm value (→ 215)
- 5 HH alarm (→ 215)
- 6 H alarm (→ 216)
- 7 L alarm (→ 216)
- 8 LL alarm (→ 216)
- 9 "Clear alarm (→ 217)" = "Yes" or power off-on
- 10 Hysteresis (→ 218)

Error value



Navigation

Setup → Advanced setup → Application → Alarm → Alarm → Error value

Prerequisite

Alarm mode (→ 211) ≠ Off

Description

Defines the alarm to be issued if the input value is invalid.

Selection

- No alarm
- HH+H alarm
- H alarm
- L alarm
- LL+L alarm
- All alarms

Factory setting

All alarms

Additional information

Read access	Operator
Write access	Maintenance

Alarm value source



Navigation Setup → Advanced setup → Application → Alarm → Alarm → Alarm value source

Prerequisite **Alarm mode (→ 211) ≠ Off**

Description Determines the process variable to be monitored.


- Selection**
- Tank level
 - Liquid temperature
 - Vapor temperature
 - Water level
 - P1 (bottom)
 - P2 (middle)
 - P3 (top)
 - Observed density value
 - Volume
 - Flow velocity
 - Volume flow
 - Vapor density
 - Middle density
 - Upper density
 - Correction
 - Tank level %
 - GP 1...4 value
 - Measured level
 - P3 position
 - Tank reference height
 - Local gravity
 - P1 position
 - Manual density
 - Tank ullage
 - Average profile density
 - Lower density
 - Upper interface level
 - Lower interface level
 - Bottom level
 - Displacer position
 - HART device 1...15 PV
 - HART device 1...15 SV
 - HART device 1...15 TV
 - HART device 1...15 QV
 - HART device 1...15 PV mA
 - HART device 1...15 PV %
 - Element temperature 1...24
 - AIO B1-3 value
 - AIO C1-3 value
 - AIP B4-8 value
 - AIP C4-8 value
 - None


Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Alarm value

Navigation  Setup → Advanced setup → Application → Alarm → Alarm → Alarm value

Prerequisite **Alarm mode (→  211) ≠ Off**

Description Shows the current value of the process variable being monitored.

User interface Signed floating-point number


Factory setting 0 None


Additional information

Read access	Operator
Write access	-

HH alarm value



Navigation  Setup → Advanced setup → Application → Alarm → Alarm → HH alarm value

Prerequisite **Alarm mode (→  211) ≠ Off**

Description Defines the high-high(HH) limit value.

User entry Signed floating-point number


Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

H alarm value



Navigation  Setup → Advanced setup → Application → Alarm → Alarm → H alarm value

Prerequisite **Alarm mode (→  211) ≠ Off**

Description Defines the high(H) limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

L alarm value



Navigation Setup → Advanced setup → Application → Alarm → Alarm → L alarm value

Prerequisite **Alarm mode (→ 211) ≠ Off**

Description Defines the low limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

LL alarm value



Navigation Setup → Advanced setup → Application → Alarm → Alarm → LL alarm value

Prerequisite **Alarm mode (→ 211) ≠ Off**

Description Defines the low-low(LL) limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

HH alarm

Navigation Setup → Advanced setup → Application → Alarm → Alarm → HH alarm


Prerequisite **Alarm mode (→ 211) ≠ Off**

Description Shows whether an HH alarm is currently active.

Additional information

Read access	Operator
Write access	-

H alarm

Navigation  Setup → Advanced setup → Application → Alarm → Alarm → H alarm


Prerequisite **Alarm mode (→  211) ≠ Off**


Description Shows whether an H alarm is currently active.

Additional information

Read access	Operator
Write access	-

HH+H alarm

Navigation  Setup → Advanced setup → Application → Alarm → Alarm → HH+H alarm

Prerequisite **Alarm mode (→  211) ≠ Off**

Description Shows whether an HH or H alarm is currently active.

Additional information

Read access	Operator
Write access	-

L alarm

Navigation  Setup → Advanced setup → Application → Alarm → Alarm → L alarm

Prerequisite **Alarm mode (→  211) ≠ Off**

Description Shows whether an L alarm is currently active.

Additional information

Read access	Operator
Write access	-

LL alarm

Navigation  Setup → Advanced setup → Application → Alarm → Alarm → LL alarm

Prerequisite **Alarm mode (→  211) ≠ Off**

Description Shows whether an LL alarm is currently active.

Additional information


Read access	Operator
Write access	-

LL+L alarm

Navigation

 Setup → Advanced setup → Application → Alarm → Alarm → LL+L alarm

Prerequisite

Alarm mode (→  211) ≠ Off

Description


Shows whether an LL or L alarm is currently active.

Additional information


Read access	Operator
Write access	-

Any error

Navigation

 Setup → Advanced setup → Application → Alarm → Alarm → Any error

Prerequisite

Alarm mode (→  211) ≠ Off

Description

Show whether any alarm is currently active.

User interface

- Unknown
- Inactive
- Active
- Error

Factory setting

Unknown

Additional information

Read access	Operator
Write access	-

Clear alarm



Navigation

 Setup → Advanced setup → Application → Alarm → Alarm → Clear alarm

Prerequisite

Alarm mode (→  211) = Latching

Description

Deletes an alarm which is still active although the alarm condition is no longer present.

Selection

- No
- Yes

Factory setting

No

Additional information

Read access	Operator
Write access	Maintenance

Alarm hysteresis**Navigation**

Setup → Advanced setup → Application → Alarm → Alarm → Alarm hysteresis

Prerequisite

Alarm mode (→ 211) ≠ Off

Description

Defines the hysteresis for the limit values. The hysteresis prevents constant changes of the alarm state if the level is near one of the limit values.

User entry

Signed floating-point number

Factory setting

0.001

Additional information

Read access	Maintenance
Write access	Maintenance

Damping factor**Navigation**

Setup → Advanced setup → Application → Alarm → Alarm → Damping factor

Description

Defines the damping constant (in seconds).

User entry

0 to 999.9 s


Factory setting


0 s


Additional information

Read access	Operator
Write access	Maintenance

"Safety settings" submenu

Navigation  Setup → Advanced setup → Safety settings

Output echo lost 

Navigation  Setup → Advanced setup → Safety settings → Output echo lost


Description Defines the output behavior in case of a lost echo.

Additional information

Read access	Operator
Write access	Service

Meaning of the options

- **Last valid value**
The last value before the occurrence of the echo is kept.
- **Alarm**
The device generates an alarm.

Delay time echo lost 

Navigation  Setup → Advanced setup → Safety settings → Delay time echo lost


Description Time between the echo loss and the reaction defined for the output.

User entry 0 to 99 999.9 s

Factory setting 60.0 s

Additional information

Read access	Operator
Write access	Maintenance

Safety distance 

Navigation  Setup → Advanced setup → Safety settings → Safety distance

Description Defines the safety distance (measured from the reference point). A warning is issued if the level rises into the safety distance.


User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

"Sensor config" submenu

Navigation  Setup → Advanced setup → Sensor config

"Information" submenu

Navigation  Setup → Advanced setup → Sensor config → Information

Signal quality

Navigation  Setup → Advanced setup → Sensor config → Information → Signal quality

Description Shows the quality of the evaluated level signal.

Additional information

Read access	Operator
Write access	-

Absolute echo amplitude

Navigation  Setup → Advanced setup → Sensor config → Information → Absolute echo amplitude

Description Shows the absolute amplitude of the evaluated level signal.

Additional information

Read access	Operator
Write access	-

Relative echo amplitude

Navigation  Setup → Advanced setup → Sensor config → Information → Relative echo amplitude

Description Shows the relative amplitude (i.e. the distance to the evaluation curve) of the evaluated level signal.

Additional information

Read access	Operator
Write access	-

Distance

Navigation Setup → Advanced setup → Sensor config → Information → Distance**Description**

Distance from lower edge of device flange to product surface.


Additional information

Read access	Operator
Write access	-

"Echo tracking" submenu

Navigation  Setup → Advanced setup → Sensor config → Echo tracking

Evaluation mode 

Navigation  Setup → Advanced setup → Sensor config → Echo tracking → Evaluation mode

Description Defines the evaluation mode for the echo tracking.

- Selection**
- Short time history
 - History off


Factory setting Short time history


Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

- **Short time history**
In addition to the static algorithms a dynamic echo trace is continuously generated and evaluated.
- **History off**
The envelope curve is evaluated only statically.

History reset 

Navigation  Setup → Advanced setup → Sensor config → Echo tracking → History reset

Description Resets the history of the echo tracking.

- Selection**
- Reset done
 - Restart echo tracking
 - Delete history


Factory setting Reset done

Additional information


Read access	Operator
Write access	Maintenance

"Display" submenu

This menu is only visible if the device has a local display.

Navigation  Setup → Advanced setup → Display

Language**Navigation**

 Setup → Advanced setup → Display → Language

Prerequisite

The device has a local display.

Description

Set display language.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- العربية (Arabic) *
- Bahasa Indonesia *
- ภาษาไทย (Thai) *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting

English

Additional information

Read access	Operator
Write access	Operator

Format display**Navigation**

 Setup → Advanced setup → Display → Format display

Prerequisite

The device has a local display.

Description

Select how measured values are shown on the display.



* Visibility depends on order options or device settings

- Selection**
- 1 value, max. size
 - 1 bargraph + 1 value
 - 2 values
 - 1 value large + 2 values
 - 4 values

Factory setting 1 value, max. size



Additional information

Read access	Operator
Write access	Operator

- The **Value 1 to 4 display** (→  225) parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→  228).

Value 1 to 4 display



Navigation   Setup → Advanced setup → Display → Value 1 display

Prerequisite The device has a local display.

Description Select the measured value that is shown on the local display.

- Selection**
- None ⁹⁾
 - Tank level
 - Measured level
 - Tank level %
 - Water level ⁹⁾
 - Liquid temperature ⁹⁾
 - Vapor temperature ⁹⁾
 - Air temperature ⁹⁾
 - Tank ullage
 - Tank ullage %
 - Observed density value ⁹⁾
 - P1 (bottom) ⁹⁾
 - P2 (middle) ⁹⁾
 - P3 (top) ⁹⁾
 - GP 1 value ⁹⁾
 - GP 2 value ⁹⁾
 - GP 3 value ⁹⁾
 - GP 4 value ⁹⁾
 - Gauge command ⁹⁾
 - Gauge status ⁹⁾
 - AIO B1-3 value ⁹⁾
 - AIO B1-3 value mA ⁹⁾
 - AIO B1-3 value % ⁹⁾
 - AIO C1-3 value ⁹⁾
 - AIO C1-3 value mA ⁹⁾
 - AIO C1-3 value % ⁹⁾

⁹⁾ not available for the **Value 1 display** parameter



- AIP B4-8 value ⁹⁾
- AIP B4-8 value mA ⁹⁾
- AIP B4-8 value % ⁹⁾
- AIP C4-8 value ⁹⁾
- AIP C4-8 value mA ⁹⁾
- AIP C4-8 value % ⁹⁾

Factory setting Depending on device version

Additional information

Read access	Operator
Write access	Maintenance

Decimal places 1 to 4 

Navigation   Setup → Advanced setup → Display → Decimal places 1

Prerequisite The device has a local display.


Description This selection does not affect the measurement and calculation accuracy of the device.



- Selection**
- X
 - X.X
 - X.XX
 - X.XXX
 - X.XXXX

Factory setting x.x

Additional information

Read access	Operator
Write access	Maintenance

Separator 

Navigation   Setup → Advanced setup → Display → Separator

Prerequisite The device has a local display.

Description Select decimal separator for displaying numerical values.

- Selection**
- .
 - ,

Factory setting .

Additional information

Read access	Operator
Write access	Maintenance

Number format



Navigation Setup → Advanced setup → Display → Number format

Prerequisite The device has a local display.

Description Choose number format for the display.

- Selection**
- Decimal
 - ft-in-1/16"

Factory setting Decimal

Additional information

Read access	Operator
Write access	Maintenance

The **ft-in-1/16"** option is only valid for distance values.

Header



Navigation Setup → Advanced setup → Display → Header

Prerequisite The device has a local display.

Description Select header contents on local display.

- Selection**
- Device tag
 - Free text

Factory setting Device tag

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

- **Device tag**
The header contents is defined in the **Device tag** parameter (→ 242).
- **Free text**
The header contents is defined in the **Header text** parameter (→ 227).

Header text



Navigation Setup → Advanced setup → Display → Header text

Prerequisite Header (→ 227) = Free text


Description Enter display header text.

Factory setting TG-Platform

Additional information

Read access	Operator
Write access	Maintenance

Display interval

Navigation  Setup → Advanced setup → Display → Display interval

Description Set time measured values are shown on display if display alternates between values.


User entry 1 to 10 s

Factory setting 5 s

Additional information

Read access	Operator
Write access	Operator

Display damping

Navigation  Setup → Advanced setup → Display → Display damping

Prerequisite The device has a local display.

Description Set display reaction time to fluctuations in the measured value.

User entry 0.0 to 999.9 s

Factory setting 0.0 s

Additional information

Read access	Operator
Write access	Maintenance

Backlight

Navigation  Setup → Advanced setup → Display → Backlight

Prerequisite The device has a local display.

Description Switch the local display backlight on and off.

Selection


- Disable
- Enable

Factory setting Enable

Additional information

Read access	Operator
Write access	Operator

Contrast display

Navigation  Setup → Advanced setup → Display → Contrast display

Prerequisite The device has a local display.

Description Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).


User entry 20 to 80 %


Factory setting 30 %


Additional information

Read access	Operator
Write access	Operator

"System units" submenu

Navigation  Setup → Advanced setup → System units

Units preset 

Navigation  Setup → Advanced setup → System units → Units preset

Description Defines a set of units for length, pressure and temperature.





- Selection**
- mm, bar, °C
 - m, bar, °C
 - mm, PSI, °C
 - ft, PSI, °F
 - ft-in-16, PSI, °F
 - ft-in-8, PSI, °F
 - Customer value

Factory setting mm, bar, °C


Additional information

Read access	Operator
Write access	Maintenance

If the **Customer value** option is selected, the units are defined in the following parameters:

- Distance unit (→  230)
- Pressure unit (→  231)
- Temperature unit (→  231)
- Density unit (→  231)

In any other case these are read-only parameters used to indicate the respective unit.

Distance unit 


Navigation  Setup → Advanced setup → System units → Distance unit

Description Select distance unit.

- Selection**
- | | |
|--|--|
| <p><i>SI units</i></p> <ul style="list-style-type: none"> ■ m ■ mm ■ cm | <p><i>US units</i></p> <ul style="list-style-type: none"> ■ ft ■ in ■ ft-in-16 ■ ft-in-8 |
|--|--|

Factory setting mm

Additional information

Read access	Operator
Write access	Maintenance (if Units preset (→  122) = Customer value)

Pressure unit



Navigation Setup → Advanced setup → System units → Pressure unit

Description Select process pressure unit.

Selection

<i>SI units</i> ■ bar ■ Pa ■ kPa ■ MPa ■ mbar a	<i>US units</i> psi	<i>Other units</i> ■ inH2O ■ inH2O (68°F) ■ ftH2O (68°F) ■ mmH2O ■ mmHg
--	------------------------	--

Factory setting bar

Additional information

Read access	Operator
Write access	Maintenance (if Units preset (→ 122) = Customer value)

Temperature unit



Navigation Setup → Advanced setup → System units → Temperature unit

Description Select temperature unit.

Selection

<i>SI units</i> ■ °C ■ K	<i>US units</i> ■ °F ■ °R
--------------------------------	---------------------------------

Factory setting °C

Additional information

Read access	Operator
Write access	Maintenance (if Units preset (→ 122) = Customer value)

Density unit



Navigation Setup → Advanced setup → System units → Density unit


Description Select density unit.

Selection


<i>SI units</i> ■ g/cm ³ ■ g/ml ■ g/l ■ kg/l ■ kg/dm ³ ■ kg/m ³	<i>US units</i> ■ lb/ft ³ ■ lb/gal (us) ■ lb/in ³ ■ STon/yd ³	<i>Other units</i> ■ °API ■ SGU
--	--	---------------------------------------

Factory setting kg/m³


Additional information

Read access	Operator
Write access	Maintenance (if Units preset (→  122) = Customer value)

"Date / time" submenu

Navigation  Setup → Advanced setup → Date / time

Date/time

Navigation  Setup → Advanced setup → Date / time → Date/time


Description Displays the device internal real time clock.

Additional information

Read access	Operator
Write access	-

Set date



Navigation  Setup → Advanced setup → Date / time → Set date

Description Controls the setting of the real-time clock.

Selection

- Please select
- Abort
- Start
- Confirm time

Factory setting Please select

Additional information

Read access	Operator
Write access	Maintenance


Meaning of the options

- **Please select**
Prompts the user to select an action.
- **Abort**
Discards the entered date and time.
- **Start**
Starts the setting of the real time clock.
- **Confirm time**
Sets the real-time clock to the entered date and time.

Year



Navigation  Setup → Advanced setup → Date / time → Year

Prerequisite Set date (→  233) = Start

Description Enter the current year.


User entry 2 016 to 2 079


Factory setting 2 016

Additional information

Read access	Operator
Write access	Maintenance

Month

Navigation  Setup → Advanced setup → Date / time → Month

Prerequisite **Set date (→  233) = Start**

Description Enter the current month.

User entry 1 to 12


Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Day

Navigation  Setup → Advanced setup → Date / time → Day

Prerequisite **Set date (→  233) = Start**

Description Enter the current day.

User entry 1 to 31


Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Hour

Navigation  Setup → Advanced setup → Date / time → Hour

Prerequisite **Set date (→  233) = Start**

Description Enter the current hour.

User entry 0 to 23

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

Minute



Navigation Setup → Advanced setup → Date / time → Minute

Prerequisite Set date (→ 233) = Start

Description Enter the current minute.


User entry 0 to 59


Factory setting 0

Additional information


Read access	Operator
Write access	Maintenance

"SIL confirmation" wizard

-  The **SIL confirmation** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently **not** in the SIL- or WHG-locked state.
- The **SIL confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.


Navigation  Setup → Advanced setup → SIL confirmation


"Deactivate SIL/WHG" wizard

-  The **Deactivate SIL/WHG** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overfill prevention") which are currently in the SIL- or WHG-locked state.
- The **Deactivate SIL/WHG** wizard is required to undo the locking of the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of this wizard.

Navigation  Setup → Advanced setup → Deactivate SIL/WHG

"Administration" submenu

Navigation  Setup → Advanced setup → Administration

Define access code 

Navigation  Setup → Advanced setup → Administration → Define access code





Description Define release code for write access to parameters.

User entry 0 to 9999

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

-  If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
-  The write protection affects all parameters marked with the  symbol in this document.
-  Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter.

Device reset 

Navigation   Setup → Advanced setup → Administration → Device reset

Description Reset the device configuration - either entirely or in part - to a defined state.

Selection

- Cancel
- To fieldbus defaults **
- To factory defaults *
- Restart device

Factory setting Cancel

Additional information

Read access	Operator
Write access	Maintenance

** Visibility depends on communication
 * Visibility depends on order options or device settings

15.4 "Diagnostics" menu

Navigation  Diagnostics

Actual diagnostics

Navigation  Diagnostics → Actual diagnostics


Description Shows the current occurred diagnostic event along with its diagnostic information.



Additional information

Read access	Operator
Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation  Diagnostics → Timestamp

Description Displays the timestamp for the currently active diagnostic message.

Additional information

Read access	Operator
Write access	-

Previous diagnostics

Navigation  Diagnostics → Previous diagnostics


Description Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.


Additional information

Read access	Operator
Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the ⓘ symbol on the display.

Timestamp

Navigation  Diagnostics → Timestamp

Description Shows the timestamp of the previous diagnostic message.

Additional information

Read access	Operator
Write access	-

Operating time from restart

Navigation  Diagnostics → Operating time from restart

Description Shows the time the device has been in operation since the last device restart.

Additional information

Read access	Operator
Write access	-

Operating time

Navigation  Diagnostics → Operating time

Description Indicates how long the device has been in operation.

Additional information

Read access	Operator
Write access	-

Date/time

Navigation Diagnostics → Date/time**Description**

Displays the device internal real time clock.



Additional information

Read access	Operator
Write access	-


15.4.1 "Diagnostic list" submenu

Navigation   Diagnostics → Diagnostic list


Diagnostics 1 to 5

Navigation	  Diagnostics → Diagnostic list → Diagnostics 1 to 5
Description	Display the current diagnostics messages with the highest to fifth-highest priority.
Additional information	The display consists of: <ul style="list-style-type: none">■ Symbol for event behavior■ Code for diagnostic behavior■ Operating time of occurrence■ Event text

Timestamp 1 to 5

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Timestamp of the diagnostic message.

15.4.2 "Device information" submenu

Navigation  Diagnostics → Device information

Device tag

Navigation  Diagnostics → Device information → Device tag


Description Shows the device tag.

Factory setting NMS8x

Additional information

Read access	Operator
Write access	-

Serial number


Navigation  Diagnostics → Device information → Serial number

Description Shows the serial number of the measuring device.

Additional information

Read access	Operator
Write access	-

Firmware version


Navigation  Diagnostics → Device information → Firmware version

Description Shows the device firmware version installed.

Additional information

Read access	Operator
Write access	-

Firmware CRC


Navigation  Diagnostics → Device information → Firmware CRC

Description Result of the cyclic redundancy check of the firmware.

Additional information

Read access	Operator
Write access	-

Weight and measures configuration CRC**Navigation**

 Diagnostics → Device information → Weight and measures configuration CRC


Description

Result of the cyclic redundancy check of the weights and measure relevant parameters.

Additional information

Read access	Operator
Write access	-

Device name**Navigation**

 Diagnostics → Device information → Device name


Description

Shows the name of the transmitter.

Additional information

Read access	Operator
Write access	-

Order code**Navigation**

 Diagnostics → Device information → Order code

Description

Shows the device order code.

Additional information

Read access	Operator
Write access	Service

Extended order code 1 to 3**Navigation**

 Diagnostics → Device information → Extended order code 1

Description

Display the three parts of the extended order code.


Additional information

Read access	Operator
Write access	Service

The extended order code indicates the selected option of all ordering features and thus uniquely identifies the device.

15.4.3 "Simulation" submenu

Read access	Maintenance
-------------	-------------

Navigation  Diagnostics → Simulation

Device alarm simulation

Navigation   Diagnostics → Simulation → Device alarm simulation

Description Switch the device alarm on and off.

Selection



- Off
- On

Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

Diagnostic event simulation

Navigation   Diagnostics → Simulation → Diagnostic event simulation


Description Select a diagnostic event to simulate this event.

Selection The diagnostic events of the device


Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

 To terminate the simulation, select **Off**.

Simulation distance on

Navigation   Diagnostics → Simulation → Simulation distance on

Description Switches the distance simulation on or off.


Selection



- Off
- On


Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

Simulation distance 

Navigation   Diagnostics → Simulation → Simulation distance

Prerequisite **Simulation distance on (→  245) = On**


Description Defines the distance value to be simulated.



User entry Signed floating-point number



Factory setting 0 mm

Additional information


Read access	Operator
Write access	Maintenance

Current output simulation 

Navigation   Diagnostics → Simulation → Current output 1 simulation

  Diagnostics → Simulation → Current output 2 simulation

Prerequisite

- The device has an Anlog I/O module.
- **Operating mode (→  142) = 4..20mA output or HART slave +4..20mA output**

Description Switches the simulation of the current on or off.


Selection

- Off
- On



Factory setting Off


Additional information

Read access	Operator
Write access	Maintenance

Simulation value 

Navigation   Diagnostics → Simulation → Simulation value

  Diagnostics → Simulation → Simulation value

Prerequisite **Current output simulation (→  246) = On**

Description Defines the current to be simulated.

User entry 3.4 to 23 mA

Factory setting The current at the time the simulation was started.


Additional information

Read access	Operator
Write access	Maintenance

15.4.4 "Device check" submenu

Navigation  Diagnostics → Device check

Start device check

Navigation  Diagnostics → Device check → Start device check

Description Starts the device check.

Selection


- No
- Yes

Factory setting No

Additional information

Read access	Operator
Write access	Maintenance

Result device check

Navigation  Diagnostics → Device check → Result device check

Description Shows the overall result of the device check.

Additional information

Read access	Operator
Write access	-

The device has a function that detects and reports any interference by unfavorable installation situation. Here, the amplitudes of measured signals are monitored, which refer to interference in the near range.

Level signal

Navigation  Diagnostics → Device check → Level signal

Prerequisite Only visible after a device check.

Description Shows the result of the device check for the level signal.

Additional information

Read access	Operator
Write access	-

Near distance

Navigation Diagnostics → Device check → Near distance**Prerequisite**

Only visible after a device check

Description

Shows the result of the device check for the near distance area.

Additional information

Read access	Operator
Write access	-

Index

Symbols

#blank# (Parameter) 131, 132

0 ... 9

0 % value (Parameter) 138, 146, 168

100 % value (Parameter) 138, 147, 168

A

Absolute echo amplitude (Parameter) 221

Access status tooling (Parameter) 128

Accessories

 Communication specific 103

 Service specific 103

Actual diagnostics (Parameter) 238

Administration (Submenu) 237

Advanced setup (Submenu) 128

Air density (Parameter) 118, 183

Air temperature (Parameter) 115, 181

Air temperature source (Parameter) 180

Alarm (Submenu) 211

Alarm 1 input source (Parameter) 164

Alarm 2 input source (Parameter) 164

Alarm hysteresis (Parameter) 218

Alarm mode (Parameter) 211

Alarm value (Parameter) 214

Alarm value source (Parameter) 213

Ambient pressure (Parameter) 189

Analog I/O (Submenu) 142

Analog input 0% value (Parameter) 148

Analog input 100% value (Parameter) 148

Analog input source (Parameter) 144

Analog IP (Submenu) 136

Any error (Parameter) 217

Application 10

 Residual risk 10

Application (Submenu) 176

Assign PV (Parameter) 167

Assign QV (Parameter) 172

Assign SV (Parameter) 169

Assign TV (Parameter) 171

B

Backlight (Parameter) 228

Baudrate (Parameter) 158

Blocking distance (Parameter) 178

Bus termination (Parameter) 159

C

Calibration temperature (Parameter) 198

CE mark 11

Cleaning

 Exterior cleaning 98

Clear alarm (Parameter) 217

Communication (Submenu) 157

Communication interface protocol (Parameter) 157

Communication interface protocol variant (Parameter) 161

Communication status (Parameter) 131

Configuration (Submenu) 158, 161, 166

Confirm distance (Parameter) 124

Contact type (Parameter) 154

Contrast display (Parameter) 229

Covered tank (Parameter) 197

CTSh (Submenu) 197

CTSh correction value (Parameter) 197

CTSh mode (Parameter) 197

Current output 1 simulation (Parameter) 246

Current output 2 simulation (Parameter) 246

Current span (Parameter) 143

D

Damping factor (Parameter) 140, 150, 218

Date / time (Submenu) 233

Date/time (Parameter) 233, 240

Day (Parameter) 234

DD 54

Deactivate SIL/WHG (Wizard) 236

Decimal places 1 (Parameter) 226

Declaration of Conformity 11

Define access code (Parameter) 237

Deformation factor (Parameter) 193

Delay time echo lost (Parameter) 219

Density (Submenu) 117, 183

Density unit (Parameter) 231

Density value (Parameter) 203

Designated use 10

Device alarm simulation (Parameter) 245

Device check (Submenu) 248

Device Descriptions 54

Device ID (Parameter) 159

Device information (Submenu) 242

Device name (Parameter) 130, 243

Device replacement 99

Device reset (Parameter) 237

Device tag (Parameter) 122, 130, 174, 242

Diagnostic event simulation (Parameter) 245

Diagnostic events 85

Diagnostic information

 FieldCare 88

Diagnostic list 96

Diagnostic list (Submenu) 241

Diagnostic message 85

Diagnostics

 Symbols 85

Diagnostics (Menu) 238

Diagnostics 1 to 5 (Parameter) 241

Diagnostics event 86

Digital input source (Parameter) 153

Digital Xx-x (Submenu) 152

DIP switch

 see Write protection switch

Dip-table (Submenu) 209

Display (Submenu) 224

- Display damping (Parameter) 228
 Display interval (Parameter) 228
 Disposal 100
 Distance (Parameter) 115, 127, 222
 Distance unit (Parameter) 230
 Document
 Function 4
 Document function 4
- E**
 Echo tracking (Submenu) 223
 Element position (Submenu) 117
 Element position 1 to 24 (Parameter) 117
 Element temperature (Submenu) 116
 Element temperature 1 to 24 (Parameter) 116
 Empty (Parameter) 123, 176
 Endress+Hauser services
 Maintenance 98
 Repair 100
 Enter access code (Parameter) 128
 Error event type (Parameter) 149
 Error value (Parameter) 146, 212
 Evaluation mode (Parameter) 223
 Event level
 Explanation 85
 Symbols 85
 Event text 86
 Expected SIL/WHG chain (Parameter) 151
 Extended order code 1 (Parameter) 243
 Exterior cleaning 98
- F**
 Failure mode (Parameter) 145
 Firmware CRC (Parameter) 242
 Firmware version (Parameter) 242
 Fixed current (Parameter) 144
 Float swap mode (Parameter) 159
 Forget device (Parameter) 135
 Forget device (Wizard) 135
 Format display (Parameter) 224
- G**
 Gauge current (Parameter) 141
 GP 1 name (Parameter) 120
 GP Value 1 (Parameter) 120
 GP Value 2 (Parameter) 120
 GP Value 3 (Parameter) 120
 GP Value 4 (Parameter) 121
 GP values (Submenu) 120
- H**
 H alarm (Parameter) 216
 H alarm value (Parameter) 214
 Hardware write protection 48
 HART date code (Parameter) 175
 HART descriptor (Parameter) 174
 HART Device(s) (Submenu) 130
 HART devices (Submenu) 129
 HART message (Parameter) 175
 HART output (Submenu) 166
- HART short tag (Parameter) 174
 Header (Parameter) 227
 Header text (Parameter) 227
 HH alarm (Parameter) 215
 HH alarm value (Parameter) 214
 HH+H alarm (Parameter) 216
 History reset (Parameter) 223
 Hour (Parameter) 234
 HTMS (Submenu) 202
 HTMS mode (Parameter) 202
 Hysteresis (Parameter) 204
 HyTD (Submenu) 192
 HyTD correction value (Parameter) 192
 HyTD mode (Parameter) 192
- I**
 Information (Submenu) 174, 221
 Input value (Parameter) 139, 146, 154
 Input value % (Parameter) 147
 Input value in mA (Parameter) 149
 Input value percent (Parameter) 150
 Input/output (Submenu) 129
- L**
 L alarm (Parameter) 216
 L alarm value (Parameter) 215
 Language (Parameter) 224
 Level (Submenu) 113, 176
 Level mapping (Parameter) 162
 Level signal (Parameter) 248
 Line impedance (Parameter) 163
 Linear expansion coefficient (Parameter) 198
 Liquid temp source (Parameter) 127, 179
 Liquid temperature (Parameter) 115, 180
 LL alarm (Parameter) 216
 LL alarm value (Parameter) 215
 LL+L alarm (Parameter) 217
 Local display
 see Diagnostics message
 see In alarm condition
 Locking status (Parameter) 128
 Lower interface level (Parameter) 114
- M**
 Maintenance 98
 Manual air temperature (Parameter) 180
 Manual density (Parameter) 202
 Manual liquid temperature (Parameter) 179
 Manual vapor temperature (Parameter) 181
 Manual water level (Parameter) 178
 Mapping end point (Parameter) 126
 Maximum probe temperature (Parameter) 139
 Measured level (Parameter) 115
 Measured lower density (Parameter) 118
 Measured materials 10
 Measured middle density (Parameter) 118
 Measured upper density (Parameter) 118
 Menu
 Diagnostics 238

Operation	113
Setup	122
Minimum level (Parameter)	203
Minimum pressure (Parameter)	203
Minimum probe temperature (Parameter)	139
Minute (Parameter)	235
Month (Parameter)	234

N

Near distance (Parameter)	249
NMT element values (Submenu)	116
No. of preambles (Parameter)	166
Number format (Parameter)	227
Number of devices (Parameter)	129

O

Observed density (Parameter)	117, 183
Observed density source (Parameter)	183
Operating elements	
Diagnostics message	86
Operating mode (Parameter)	131, 136, 142, 152
Operating time (Parameter)	239
Operating time from restart (Parameter)	239
Operation (Menu)	113
Operational safety	11
Order code (Parameter)	243
Output density (Parameter)	133
Output echo lost (Parameter)	219
Output level (Parameter)	134
Output pressure (Parameter)	132
Output simulation (Parameter)	154
Output temperature (Parameter)	133
Output value (Parameter)	147, 155
Output values (Parameter)	155
Output vapor temperature (Parameter)	134

P

P1 (bottom) (Parameter)	119, 185
P1 (bottom) manual pressure (Parameter)	185
P1 (bottom) source (Parameter)	185
P1 absolute / gauge (Parameter)	186
P1 offset (Parameter)	186
P1 position (Parameter)	186
P3 (top) (Parameter)	119, 187
P3 (top) manual pressure (Parameter)	187
P3 (top) source (Parameter)	187
P3 absolute / gauge (Parameter)	188
P3 offset (Parameter)	188
P3 position (Parameter)	188
Parity (Parameter)	158
Percent of range (Parameter)	169
Polling address (Parameter)	130
Present mapping (Parameter)	125
Pressure (Submenu)	119, 185
Pressure unit (Parameter)	231
Previous diagnostics (Parameter)	238
Primary variable (PV) (Parameter)	169
Probe position (Parameter)	140
Process value (Parameter)	137, 149

Process variable (Parameter)	138, 148
Product safety	11
PV mA selector (Parameter)	168
PV source (Parameter)	166

Q

Quaternary variable (QV) (Parameter)	173
--	-----

R

Readback value (Parameter)	155
Recalibration	98
Record map (Parameter)	126
Relative echo amplitude (Parameter)	221
Remedial measures	
Calling up	87
Closing	87
Repair concept	99
Replacing a device	99
Requirements for personnel	10
Result device check (Parameter)	248
Return	100
RTD connection type (Parameter)	137
RTD type (Parameter)	136

S

Safety distance (Parameter)	204, 219
Safety instructions	
Basic	10
Safety settings (Submenu)	219
Secondary variable (SV) (Parameter)	170
Sensor config (Submenu)	221
Separator (Parameter)	226
Serial number (Parameter)	242
Set date (Parameter)	233
Set level (Parameter)	124, 177
Setup (Menu)	122
Signal quality (Parameter)	221
SIL confirmation (Wizard)	236
Simulation (Submenu)	245
Simulation distance (Parameter)	246
Simulation distance on (Parameter)	245
Simulation value (Parameter)	246
Start device check (Parameter)	248
Starting level (Parameter)	192
Status signals	85, 88
Stilling well (Parameter)	198
Submenu	
Administration	237
Advanced setup	128
Alarm	211
Analog I/O	142
Analog IP	136
Application	176
Communication	157
Configuration	158, 161, 166
CTSh	197
Date / time	233
Density	117, 183
Device check	248

- Device information 242
 - Diagnostic list 241
 - Digital Xx-x 152
 - Dip-table 209
 - Display 224
 - Echo tracking 223
 - Element position 117
 - Element temperature 116
 - GP values 120
 - HART Device(s) 130
 - HART devices 129
 - HART output 166
 - HTMS 202
 - HyTD 192
 - Information 174, 221
 - Input/output 129
 - Level 113, 176
 - NMT element values 116
 - Pressure 119, 185
 - Safety settings 219
 - Sensor config 221
 - Simulation 245
 - System units 230
 - Tank calculation 190
 - Tank configuration 176
 - Temperature 115, 179
 - V1 input selector 164
 - System components 103
 - System polling address (Parameter) 166
 - System units (Submenu) 230
- T**
- Table mode (Parameter) 209
 - Table settings (Parameter) 209
 - Tank calculation (Submenu) 190
 - Tank configuration (Submenu) 176
 - Tank level (Parameter) 113, 123, 177
 - Tank Level % (Parameter) 113
 - Tank reference height (Parameter) 123, 176
 - Tank ullage (Parameter) 113
 - Tank ullage % (Parameter) 114
 - Temperature (Submenu) 115, 179
 - Temperature unit (Parameter) 231
 - Tertiary variable (TV) (Parameter) 171
 - Timestamp (Parameter) 238, 239, 241
 - Trouble shooting 84
- U**
- Units preset (Parameter) 122, 230
 - Upper interface level (Parameter) 114
 - Used for SIL/WHG (Parameter) 150, 156
- V**
- V1 address (Parameter) 161, 162
 - V1 input selector (Submenu) 164
 - Value 1 display (Parameter) 225
 - Value percent selector (Parameter) 165
 - Vapor density (Parameter) 117, 184
 - Vapor temp source (Parameter) 181
 - Vapor temperature (Parameter) 116, 182
- W**
- Water density (Parameter) 204
 - Water level (Parameter) 114, 178
 - Water level source (Parameter) 177
 - Weight and measures configuration CRC (Parameter) 243
 - Wire expansion coefficient (Parameter) 199
 - Wizard
 - Deactivate SIL/WHG 236
 - Forget device 135
 - SIL confirmation 236
 - Workplace safety 11
 - Write protection
 - Via write protection switch 48
 - Write protection switch 48
- Y**
- Year (Parameter) 233



www.addresses.endress.com
