

Rosemount™ 705 Wireless Totalizing Transmitter



Contents

Section 1: Introduction

1.1 Using this manual	1
1.2 Product recycling/disposal.....	1

Section 2: Configuration

2.1 Safety messages.....	7
2.2 Connecting the turbine meter or pulse output device	7
2.3 Configuring the transmitter on the bench	8
2.4 Supported engineering unit codes.....	9
2.5 Joining the device to a network.....	10

Section 3: Mounting

3.1 Safety messages.....	11
3.2 Installing the transmitter	12
3.2.1 Installing the transmitter in a direct mount configuration	12
3.2.2 Installing the transmitter in a remote mount configuration	14
3.3 Wireless considerations	15
3.3.1 Selected an installation location and position.....	16
3.3.2 Electrical.....	17
3.3.3 Verifying operating atmosphere	17
3.4 Remote antenna (optional)	18
3.4.1 WN remote antenna option	18
3.5 LCD display	19
3.6 Grounding the transmitter.....	19

Section 4: Commissioning

4.1 Safety messages.....	21
4.2 Configuring the transmitter to communicate with the wireless network.....	22
4.3 Using AMS Device Manager to configure the transmitter	23
4.4 Using a Field Communicator to change parameters within the device	23
4.5 K-factor consideration	23
4.6 Verifying operation	25
4.6.1 AMS Device Manager.....	26

Section 5: Operation and Maintenance

5.1 Basic operation	29
5.1.1 Rollover information	29
5.1.2 Enabling the LCD continuous operation feature	30
5.2 Determining device health	30
5.3 Interpreting LCD screen messages	30
5.3.1 Startup screen sequence	30
5.3.2 Diagnostic button screen sequence	32
5.3.3 Network connection status screens	33
5.3.4 Device diagnostic screens	35
5.4 Replacing the power module	37
5.5 Modbus®, EtherNet/IP™ and OPC mapping	38
5.6 Reset/restore device	39
5.7 Suspend (pause) the totalization in the device	39
5.8 Average flow rate filtering period	39
5.9 Low-Flow cut-off	40
5.10 Input sensitivity	40
5.11 How to reset the totalized volume	40
5.12 Service support	40

Appendix A: Specifications and Reference Data

A.1 Specifications	43
A.1.1 Functional specifications	43
A.1.2 Physical specifications	43
A.1.3 Frequency input specifications	44
A.1.4 Performance specifications	44
A.2 Dimensional drawings	45
A.3 Ordering information	47

Appendix B: Product Certifications

B.1 European Directive Information	49
B.2 Telecommunication Compliance	49
B.3 FCC and IC	49
B.4 Ordinary Location Certification from CSA	49
B.5 Installing in North America	49
B.6 USA	49
B.7 Canada	50
B.8 Europe	50

B.9 International	50
B.10 Brazil	51
B.11 EAC - Belarus, Kazakhstan, Russia	51
B.12 Installation drawings	52

Appendix C: High Gain Remote Antenna Option

C.1 Safety messages	55
C.2 Functional specifications	56
C.2.1 Output	56
C.2.2 Coaxial length	56
C.2.3 Coaxial material	56
C.2.4 Antenna	56
C.2.5 Physical specifications	56
C.2.6 RF lightning arrestor	56
C.2.7 Ratings	56
C.2.8 Vibration	56
C.3 Installation considerations	57
C.3.1 Antenna mounting	57
C.3.2 Antenna height	57
C.3.3 Coaxial cable	57
C.3.4 Installing coaxial drip loop	57
C.3.5 Applying coaxial sealant moisture protection	57
C.4 Transient/lightning considerations	57
C.4.1 Gateway transient protection	57
C.4.2 RF lightning arrestor ground connection	57
C.5 Dimensional drawings	58
C.6 Installing the high gain remote antenna	59

Appendix D: Mapping of Alert Messages in the HART® Command 48 Additional Status

Rosemount™ 705 Wireless Totalizing Transmitter

NOTICE

Read this manual before working with the product. For personal and system safety, and for optimum product performance, make sure to thoroughly understand the contents before installing, using, or maintaining this product.

The United States has two toll-free assistance numbers and one international number.

Customer Central

1 800 999 9307 (7:00 a.m. to 7:00 p.m. CST)

National Response Center

1 800 654 7768 (24 hours a day)

Equipment service needs

International

1 952 906 8888

The Rosemount 705 Transmitter and all other wireless devices should be installed only after the Smart Wireless Gateway has been installed and is functioning properly. Wireless devices should also be powered up in order of proximity from the Gateway, beginning with the closest. This will result in a simpler and faster network installation.

⚠ CAUTION

The products described in this document are NOT designed for nuclear-qualified applications.

Using non-nuclear qualified products in applications that require nuclear-qualified hardware or products may cause inaccurate readings.

For information on Rosemount nuclear-qualified products, contact an Emerson™ Sales Representative.

⚠ WARNING

Failure to follow these installation guidelines could result in death or serious injury.

- Only qualified personnel should perform the installation.

Explosions could result in death or serious injury.

- Before connecting a Field Communicator in an explosive atmosphere, make sure the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

Electrical shock could cause death or serious injury.

- Use extreme caution when making contact with the leads and terminals.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

- This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

NOTICE

Shipping considerations for wireless products:

The unit was shipped to you without the power module installed. Remove the power module prior to shipping.

Each power module contains two “C” size primary lithium batteries. Primary lithium batteries are regulated in transportation by the U. S. Department of Transportation, and are also covered by IATA (International Air Transport Association), ICAO (International Civil Aviation Organization), and ARD (European Ground Transportation of Dangerous Goods). It is the responsibility of the shipper to ensure compliance with these or any other local requirements. Consult current regulations and requirements before shipping.

Power module considerations:

The power module with the wireless unit contains two “C” size primary lithium/thionyl chloride batteries. Each battery contains approximately 2.5 grams of lithium, for a total of 5 grams in each pack. Under normal conditions, the battery materials are self-contained and are not reactive as long as the batteries and the pack integrity are maintained. Care should be taken to prevent thermal, electrical, or mechanical damage. Contacts should be protected to prevent premature discharge.

Battery hazards remain when cells are discharged.

Power modules should be stored in a clean and dry area. For maximum battery life, storage temperature should not exceed 30 °C.

The power module has surface resistivity greater than one gigaohm and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

Section 1 Introduction

1.1 Using this manual

The sections in this manual provide information on installing, operating, and maintaining the Rosemount™ 705 Wireless Totalizing Transmitter. The sections are organized as follows:

- [Section 2: Configuration](#) provides instruction on commissioning and operating Rosemount 705 Transmitter. Information on software functions, configuration parameters, and online variables is also included.
- [Section 3: Mounting](#) contains mechanical and electrical installation instructions.
- [Section 4: Commissioning](#) contains techniques for properly commissioning the device.
- [Section 5: Operation and Maintenance](#) contains operation and maintenance techniques.
- [Appendix A: Specifications and Reference Data](#) supplies reference and specification data, as well as ordering information.
- [Appendix B: Product Certifications](#) contains approval information.
- [Appendix C: High Gain Remote Antenna Option](#) contains specification data and installation of high gain antenna.
- [Appendix D: Mapping of Alert Messages in the HART® Command 48 Additional Status](#) contains important alerts in the HART command 48 additional status field for the Rosemount 705 Transmitter.

1.2 Product recycling/disposal

Recycling of equipment and packaging should be taken into consideration. The product and packaging should be disposed of in accordance with local and national legislation.

Section 2 Configuration

Safety messages	page 7
Connecting the turbine meter or pulse output device	page 7
Configuring the transmitter on the bench	page 8
Supported engineering unit codes	page 9
Joining the device to a network	page 10

2.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

⚠ WARNING

Failure to follow these installation guidelines could result in death or serious injury.

- Only qualified personnel should perform the installation.

Explosions could result in death or serious injury.

- Before connecting a Field Communicator in an explosive atmosphere, make sure the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

Electrical shock could cause death or serious injury.

- Use extreme caution when making contact with the leads and terminals.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

- This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.
-

2.2 Connecting the turbine meter or pulse output device

The Rosemount™ 705 Wireless Totalizing Transmitter is compatible with a number of simple turbine meters or pulse output devices. When ordered in the optional configuration for direct connection, option code D1, the Rosemount 705 Transmitter is compatible with one inch turbine meter direct connections. [Figure 2-1 on page 8](#) shows the correct input connections to the pulse terminals on the transmitter. To ensure a proper turbine meter connection, anchor the turbine meter lead wires into the appropriate compression terminals and tighten the screws. In noisy environments, be sure to properly ground the transmitter using the ground terminal.

Wiring the transmitter

⚠ For the R1 option (remote mount), if the turbine meter or pulse output device is installed in a high-voltage environment and a fault condition or installation error occurs, the sensor leads and transmitter terminals could carry lethal voltage. Use extreme caution when making contact with the leads and terminals.

Use the following steps to wire the sensor and power supply to the transmitter:


1. Remove the transmitter enclosure cover.
2. Attach the turbine meter leads according to the diagram [Figure 2-1 on page 8](#).

Note

For noisy electrical environments, it is best practice to ground the loop accordingly.

3. Connect the black power module.
4. Verify the connection and power by viewing the LCD display and seeing the power up sequence.
5. Replace the cover and tighten.

Figure 2-1. Rosemount 705 Transmitter Terminal Block

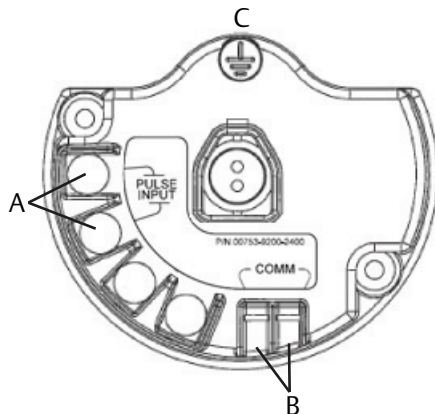

- A. Pulse input connection
- B. HART® terminal connection
- C. Terminal block ground connection

Note

Connections are not polarity sensitive.

2.3 Configuring the transmitter on the bench

When using a Field Communicator, any configuration changes must be sent to the transmitter using the **Send** key (**F2**). AMS™ Device Manager configuration changes are implemented when the **Apply** button is clicked.

Configuring on the bench with AMS Device Manager

AMS Device Manager is capable of connecting to devices directly, using a HART modem, or with the Gateway. When configuring on the bench with a HART modem, double click the device icon, then select the **Configure/Setup** tab (or right click and select **Configure/Setup**). Configure the device settings using the *Direct Connection* menu. When configuring with the Gateway, double click the device icon then select the **Configure/Setup** tab (or right click and select **Configure/Setup**). Configure the device settings using the *Wireless Connection* menu. To check or change sensor configuration using a Field Communicator, enter the following Fast Key sequence: **2, 1, 2**.

2.4 Supported engineering unit codes

The following engineering units are supported by the Rosemount 705 Transmitter.

Total volume	Volumetric flow rate
US gallons	US gallons per second
	US gallons per minute
	US gallons per hour
	US gallons per day
Liters	Liters per second
	Liters per minute
	Liters per hour
Imperial gallons	Imperial gallons per second
	Imperial gallons per minute
	Imperial gallons per hour
	Imperial gallons per day
Cubic meters	Cubic meters per second
	Cubic meters per minute
	Cubic meters per hour
	Cubic meters per day
Cubic yards	Cubic yards per second
	Cubic yards per minute
	Cubic yards per hour
	Cubic yards per day
Cubic inches	Cubic inches per second
	Cubic inches per minute
	Cubic inches per hour
	Cubic inches per day
Pulses	Hertz

If a custom volume unit is desired, the Rosemount 705 Transmitter can be configured to report the totalized pulses, and a custom conversion can be done on the host system side. Similarly, if a custom flow rate unit is desired, the transmitter can be configured to report pulses per second (Hertz), and a custom conversion can be done on the host system side. When reporting pulses or hertz, the configured K-factor has no affect on the reported values.

Units	Fast key
Volume	2, 1, 2
Flow	2, 2, 1

2.5 Joining the device to a network

To communicate with the Gateway, and ultimately the Host System, the transmitter must be configured to communicate with the wireless network.

Using a Field Communicator or AMS Device Manager, enter the Network ID and Join Key so they match the Network ID and Join Key of the Gateway and the other devices in the network. If the Network ID and Join Key are not identical, the transmitter will not communicate with the network. The Network ID and Join Key may be obtained from the Gateway on the *Network>Settings* page on the web server or by clicking network information in the upper right hand corner. Using a Field Communicator, the Network ID and Join Key can be configured using a Field Communicator with the Fast Key Sequence: **2, 1, 3**.

The final device network configuration piece is the update rate which, by default, is one minute. It can be changed at commissioning, or at any time, by using AMS Device Manager or the Gateway's web server. The update rate should be between one second and 60 minutes. To change the update rate with a Field Communicator, use the Fast Key sequence: **2, 1, 4**.

If doing a bench top initial configuration, after completion remove the power module until installation. When the device is installed, insert the power module and close the housing cover securely. Always ensure a proper seal so metal touches metal, but do not over tighten.

Section 3 Mounting

Safety messages	page 11
Installing the transmitter	page 12
Wireless considerations	page 15
Remote antenna (optional)	page 18
LCD display	page 19
Grounding the transmitter	page 19

3.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

⚠ WARNING

Failure to follow these installation guidelines could result in death or serious injury.

- Only qualified personnel should perform the installation.

Explosions could result in death or serious injury.

- Before connecting a Field Communicator in an explosive atmosphere, make sure the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

Electrical shock could cause death or serious injury.

- Use extreme caution when making contact with the leads and terminals.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

3.2 Installing the transmitter


The Rosemount™ 705 Wireless Totalizing Transmitter can be installed in one of two configurations:

Direct mount (D1): The turbine meter is connected directly to the Rosemount 705 Transmitter housing's conduit entry. For installation instructions, see "Installing the transmitter in a direct mount configuration" on page 12.

Remote mount (R1): The turbine meter or pulse output device is mounted separate from the Rosemount 705 Transmitter housing, then connected to the transmitter via conduit. For installation instructions, see "Installing the transmitter in a remote mount configuration" on page 14.

3.2.1 Installing the transmitter in a direct mount configuration

Figure 3-1. Direct Mount

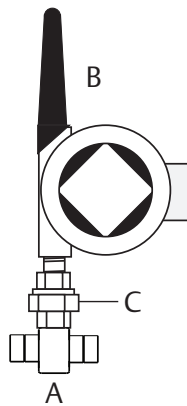


- A. Turbine meter
- B. Rosemount 705 Transmitter
- C. 1-in. NPT connection to flow meter and two piece pipe union

Note

Direct mount installation should not be employed when using tubing and connectors such as Swagelok® fittings.

1. Install the turbine meter according to standard installation practices making sure to use thread sealant on all of the connections.
2. Attach the turbine meter wiring to the terminals as indicated on the wiring diagram (Figure 3-2). This procedure is already included for the D1 (direct mount) option.

Figure 3-2. Rosemount 705 Terminal Block

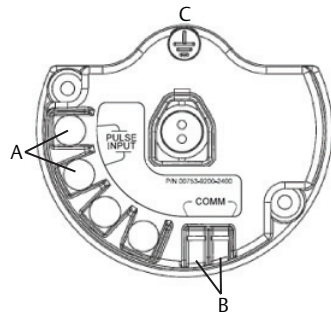

- A. Pulse input connection
- B. HART® terminal connection
- C. Terminal block ground connection

3. Attach the transmitter housing to the turbine meter using the threaded conduit entry.
4. Seal threads on 1-in. NPT turbine meter connection. Take union apart and turn on bottom fitting to turbine meter.
5. Attach mill spec connector to turbine meter pickup.
6. Screw on the remaining union part.

Note


Sealant should already be applied to threads on the D1 (direct mount) option.

Note

Wireless devices should only be powered up after the Smart Wireless Gateway, in order of proximity from the Smart Wireless Gateway beginning with the closest device. This results in a simpler and faster network installation.


7. Connect the black power module

Figure 3-3. Power Module Installation

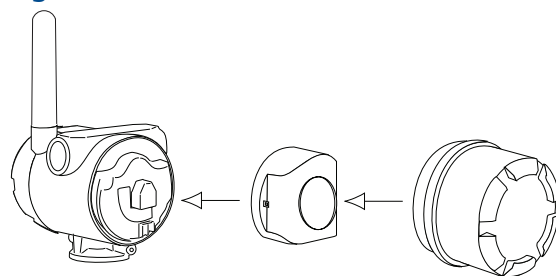


8. Close the housing cover and tighten to safety specification. Always ensure a proper seal so metal touches metal, but do not over tighten.
9. Position the antenna so it is vertical, either straight up or straight down.
 - a. The antenna should be approximately 3 ft. (0.91 m) from any large structures or buildings, to allow clear communication to other devices.

Figure 3-4. Antenna Positioning

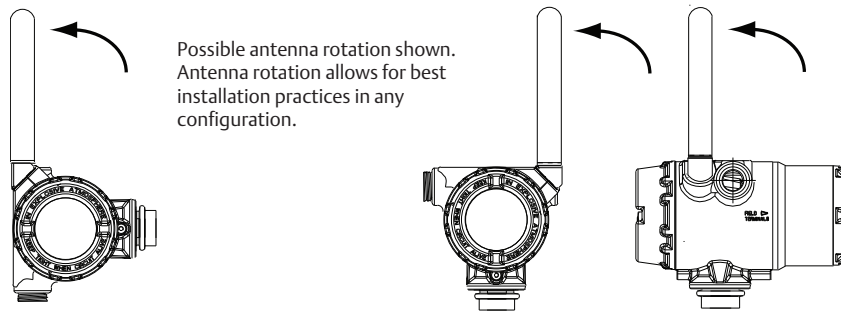

3.2.2 Installing the transmitter in a remote mount configuration

Figure 3-5. Remote Mount Installation

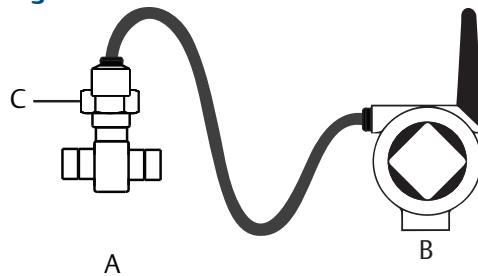

- A. Turbine meter
- B. Rosemount 705 Transmitter
- C. 1-in. supplied cable gland adapter for turbine meter.

Included:
(1) Cable gland
(1) Cable gland adapter for turbine meter
10 ft.. of cable connection wiring

1. Install the turbine meter or pulse output device according to standard installation practices being sure to use thread sealant on all of the connections.
2. Pull the cable connection wiring through the supplied cable gland adapter for the turbine meter. Then pull the cable wiring through the transmitter cable gland.

Note

Pay attention to the orientation of the cable gland to ensure proper connection to transmitter.

3. Attach the turbine meter or pulse output device wiring to the terminals as shown in the wiring diagrams beginning on [page 8](#).

Note

Wireless devices should only be powered up after the Smart Wireless Gateway, in order of proximity from the Gateway beginning with the closest device. This results in a simpler and faster network installation.

4. If commissioning the Rosemount 705 Transmitter, connect the power module as shown in [Figure 3-3 on page 13](#).
5. Close the housing cover and tighten to safety specifications. Always ensure a proper seal by installing the electronic housing covers so metal touches metal, but do not over tighten.
6. Position the antenna vertically, either straight up or straight down, as shown in [Figure 3-4 on page 14](#).
 - The antenna should be approximately 3 ft. (1 m) from any large structures or buildings, to allow clear communication to other devices.

3.3 Wireless considerations


Power up sequence

The Smart Wireless Gateway should be installed and functioning properly before any wireless field devices are powered. Install the Black Power Module, SmartPower™ Solutions model number 701PBKKF into the Rosemount 705 Transmitter to power the device. Wireless devices should also be powered up in order of proximity from the Gateway, beginning with the closest. This will result in a simpler and faster network installation. Enable Active Advertising on the Gateway to ensure that new devices join the network faster. For more information see the Smart Wireless Gateway [Reference Manual](#).

Antenna position

The antenna should be positioned vertically, either straight up or straight down, and it should be approximately 3 ft. (1 m) from any large structure, building, or conductive surface to allow for clear communication to other devices.


Figure 3-6. Antenna Position

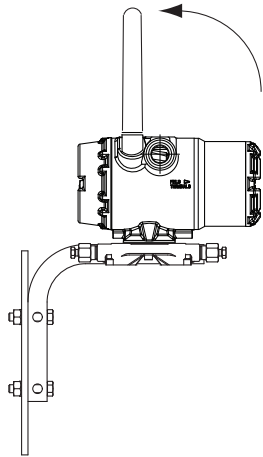

Preparing (or sealing) the conduit entries

Due to possible damage from moisture after installation, ensure that each conduit entry is either sealed with a conduit plug with appropriate thread sealant, or has an installed conduit fitting or cable gland with appropriate thread sealant.

Figure 3-7. Locating Conduit Entries

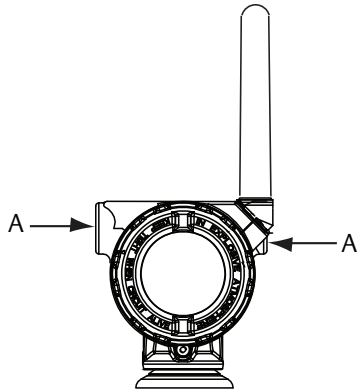


A. Conduit entry

Connecting the Field Communicator to the transmitter

The power module needs to be connected for the Field Communicator to interface with the Rosemount 705 Transmitter.

Figure 3-8. Field Communicator Connections

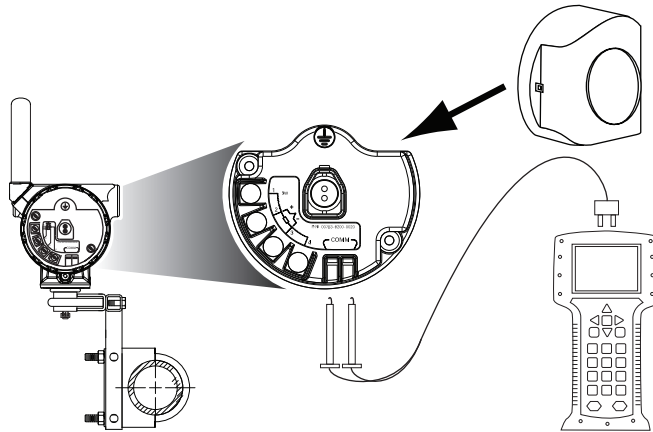

3.3.1 Selected an installation location and position

When choosing an installation location and position, take into account access to the transmitter. For best performance, the antenna should be vertical with space between objects in a parallel metal plane, such as a pipe or metal framework, as the pipes or framework may adversely affect the antenna's performance.

3.3.2 Electrical

Caring for the power module

The Rosemount 705 Transmitter is self-powered. The included Black Power Module contains two “C” size primary lithium/thionyl chloride batteries. Each battery contains approximately 2.5 grams of lithium, for a total of 5 grams in each pack. Under normal conditions, the battery materials are self-contained and are not reactive as long as the batteries and the power module are maintained. Care should be taken to prevent thermal, electrical, or mechanical damage. Contacts should be protected to prevent premature discharge.

Making turbine meter connections

Make turbine meter connections through the cable entry in the side of the connection head. Be sure to provide adequate clearance for cover removal and lead attachments (remote option).

3.3.3 Verifying operating atmosphere

Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

Isolating the transmitter from sources of heat

The transmitter will operate within specifications for ambient temperatures between –40 and 185 °F (–40 and 85 °C). Heat from the process is transferred from the switch to the transmitter housing. If the expected process temperature is near or beyond specification limits, consider using an extension, or remote mount the transmitter to thermally isolate it from the process.

Temperature limits

Options	Operating limit	Storage limit
With LCD display	–4 to 175 °F –20 to 80 °C	–40 to 185 °F –40 to 85 °C
Without LCD display	–40 to 185 °F –40 to 85 °C	–40 to 185 °F –40 to 85 °C

3.4 Remote antenna (optional)

The remote antenna option provides flexibility for mounting the Rosemount 705 Totalizer based on wireless connectivity, lightning protection, and current work practices.

⚠ WARNING

When installing remote mount antennas for the transmitter, always use established safety procedures to avoid falling or contact with high-power electrical lines.

Install remote antenna components for the transmitter in compliance with local and national electrical codes and use best practices for lightning protection.

Before installing, consult with the local area electrical inspector, electrical officer, and work area supervisor.

The transmitter remote antenna option is specifically engineered to provide installation flexibility while optimizing wireless performance and local spectrum approvals.

To maintain wireless performance and avoid non-compliance with spectrum regulations, do not change the length of cable or the antenna type.

If the supplied remote mount antenna kit is not installed per these instructions, Emerson is not responsible for wireless performance or non-compliance with spectrum regulations.

The remote mount antenna kit includes coaxial sealant that is for the cable connections, lightning arrester, and antenna. Find a location where the remote antenna has optimal wireless performance. Ideally this will be 15–25 ft. (4.6–7.6 m) above the ground or 6 ft. (2 m) above obstructions or major infrastructure. To install the remote antenna, use one of the following procedures. The WN option is 25 ft. (7.6 m).

3.4.1 WN remote antenna option

1. Mount the antenna on a 1.5- to 2-in. pipe mast using the supplied mounting equipment.
2. Connect the lightning arrester directly to the top of the Rosemount 705 Totalizer.
3. Install the grounding lug, lock washer, and nut on top of lightning arrester.
4. Connect the antenna to the lightning arrester using the supplied LMR-400 coaxial cable ensuring the drip loop is not closer than 1 ft. (0.3 m) from the lightning arrester.
5. Use the coaxial sealant to seal each connection between the wireless field device, lightning arrester, cable, and antenna.
6. Ensure the mounting mast and lightning arrester are grounded according to local/national electrical code.

Note

Any spare lengths of coaxial cable should be placed in 12-in. (0.3 m) coils.

3.5 LCD display

If an LCD display is ordered, it will be shipped attached to the transmitter.

The optional LCD display can be rotated in 90° increments by squeezing the two tabs, pulling out, rotating and snapping back into place.

If the LCD display pins are inadvertently removed from the interface board, carefully re-insert the pins before snapping the LCD display back into place.

Installing the LCD display

To install the LCD display, use [Figure 3-9 on page 19](#) and the following instructions:

1. Remove the LCD display cover. Do not remove the instrument cover in explosive environments when the circuit is live.
2. Put the four-pin connector into the LCD display, rotate to the desired position and snap into place.

Note the following LCD display temperature limits:


- Operating: -4 to 175 °F (-20 to 80 °C)
- Storage: -40 to 185 °F (-40 to 85 °C)

3. Replace the transmitter cover.

Note

Only use Rosemount Wireless LCD display part number: 00753-9004-0002. The transmitted data may not match data displayed on LCD display due to differences in update rate and screen refresh rate.

Figure 3-9. Optional LCD Display

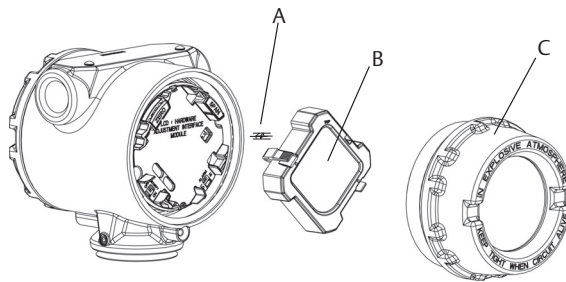

- A. LCD pins
- B. LCD display
- C. LCD cover


3.6 Grounding the transmitter

The Rosemount 705 Transmitter operates best with the housing grounded. Floating systems, however, can cause extra noise that may affect the accuracy of the transmitter. If the signal appears noisy or erratic, grounding at a single point may solve the problem. Grounding of the electronics enclosure should be done in accordance with local and national installation codes. Grounding is accomplished through the process connection using the internal or external case grounding terminal.

Determining grounding requirements

Each process installation has different grounding requirements. Use the options recommended by the facility for the specific turbine meter or pulse output device.

1. Connect turbine meter wiring shield to the grounded transmitter housing.
2. Ensure the transmitter housing is electrically isolated from the turbine meter or pulse output device wiring.

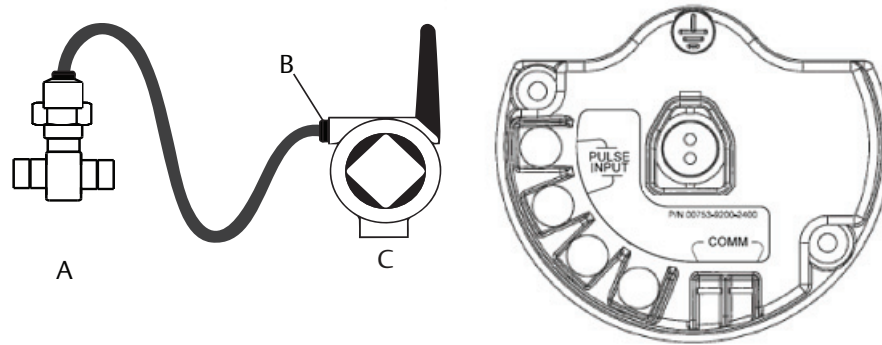

- A. Turbine meter
- B. Transmitter ground point
- C. Rosemount 705 Transmitter

Section 4 Commissioning

Safety messages	page 21
Configuring the transmitter to communicate with the wireless network	page 22
Using AMS Device Manager to configure the transmitter	page 23
Using a Field Communicator to change parameters within the device	page 23
K-factor consideration	page 23
Verifying operation	page 25

4.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

⚠ WARNING

Failure to follow these installation guidelines could result in death or serious injury.

- Only qualified personnel should perform the installation.

Explosions could result in death or serious injury.

- Before connecting a Field Communicator in an explosive atmosphere, make sure the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

Electrical shock could cause death or serious injury.

- Use extreme caution when making contact with the leads and terminals.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

- This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

Note


The Rosemount™ 705 Wireless Totalizing Transmitter and all other wireless devices should be installed only after the Smart Wireless Gateway has been installed and is functioning properly.

Wireless devices should be powered up in order of proximity from the Gateway, beginning with the device closest to the Gateway. This will result in a simpler and faster network installation.

4.2 Configuring the transmitter to communicate with the wireless network

In order to communicate with the Smart Wireless Gateway, and ultimately the Host System, the transmitter must be configured to communicate with the wireless network. This step is the wireless equivalent of connecting wires from a transmitter to the Host System. Using a Field Communicator or AMS™ Device Manager, enter the Network ID and Join Key so they match the Network ID and Join Key of the gateway and other devices in the network. If the Network ID and Join Key are not identical, the Rosemount 705 Transmitter will not communicate with the network. The Network ID and Join Key may be obtained from the Smart Wireless Gateway on the *Setup>Network>Settings* page on the web server, shown in Figure 4-1.

Figure 4-1. Gateway Network Settings

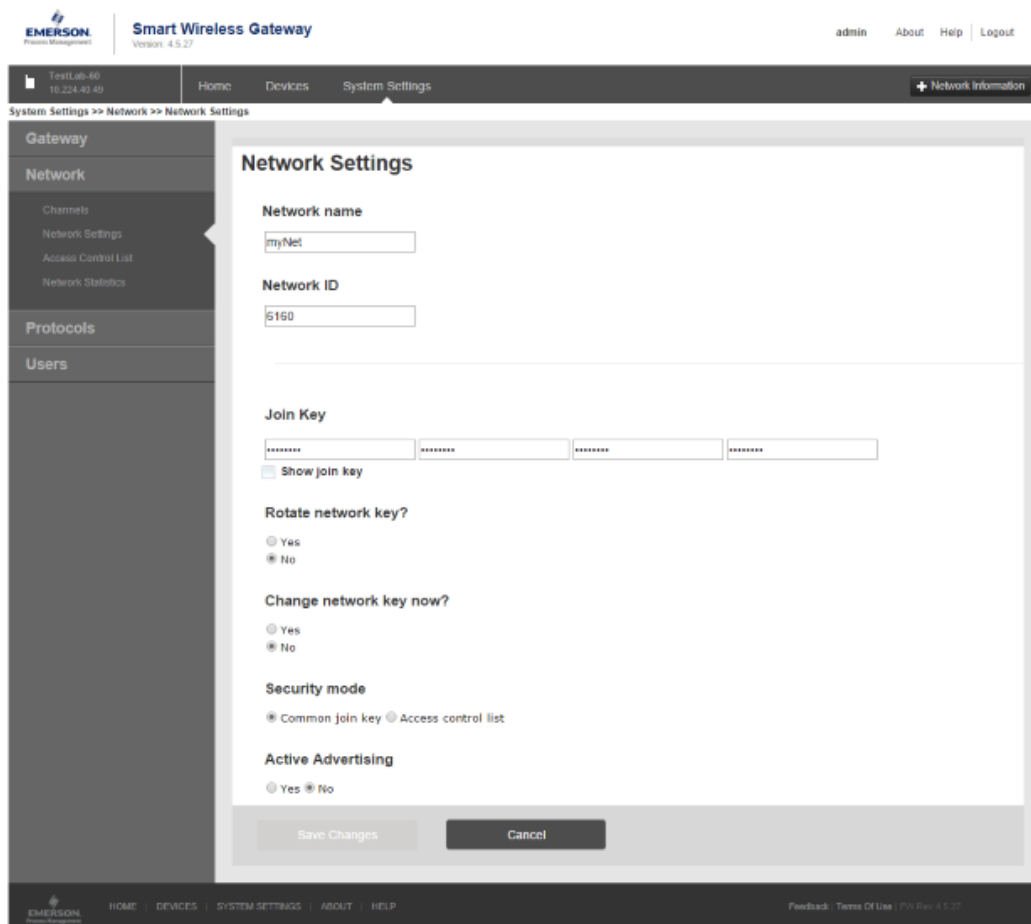

4.3 Using AMS Device Manager to configure the transmitter

1. Right click on the Rosemount 705 Transmitter and select **Configure**.
2. When the menu opens, select **Join Device to Network** and follow the method to enter the Network ID and Join Key.

4.4 Using a Field Communicator to change parameters within the device

The most common parameters changed are the Network ID and Join Key. The Network ID and Join Key may be changed in the wireless device by using the following Fast Key sequence. Set both Network ID and Join Key.

Function	Fast Key sequence	Menu items
Wireless setup	2, 1, 1	Network ID, Set Join Key


4.5 K-factor consideration

The K-factor value is used to tell the Rosemount 705 Transmitter how much volume corresponds to an input pulse. The K-factor is entered in units of “Pulses per Gallon”. It is important to configure the transmitter with the proper K-factor that corresponds to the turbine meter that it is attached to. If the K-factor is not configured properly, the accuracy of the reported totalized volume and flow rate may be adversely affected. Any time the attached turbine meter is replaced, the K-factor setting should be verified and/or modified accordingly to maintain a proper match.

If the K-factor is not specified to be pre-configured when ordering the Rosemount 705 Transmitter, it will be shipped without any K-factor configured. In this case, the K-factor must be configured before any valid values can be obtained for the totalized volume or the average flow rate. The transmitter will report a value of NaN (Not a Number) when the K-factor has not been configured.

When changing the K-factor, the Rosemount 705 Transmitter will recalculate a new totalized volume assuming that all captured input pulses correspond to the new K-factor value. This means the current value of the totalized volume held in the transmitter may change as a result of changing the K-factor. If this is not desired, the value of totalized volume can be noted, and reset the volume to the original value after the new K-factor has been configured. To avoid any loss of volume accumulation, this procedure should only be done when the flow through the attached turbine meter has been stopped.

Figure 4-2. Handheld Tree

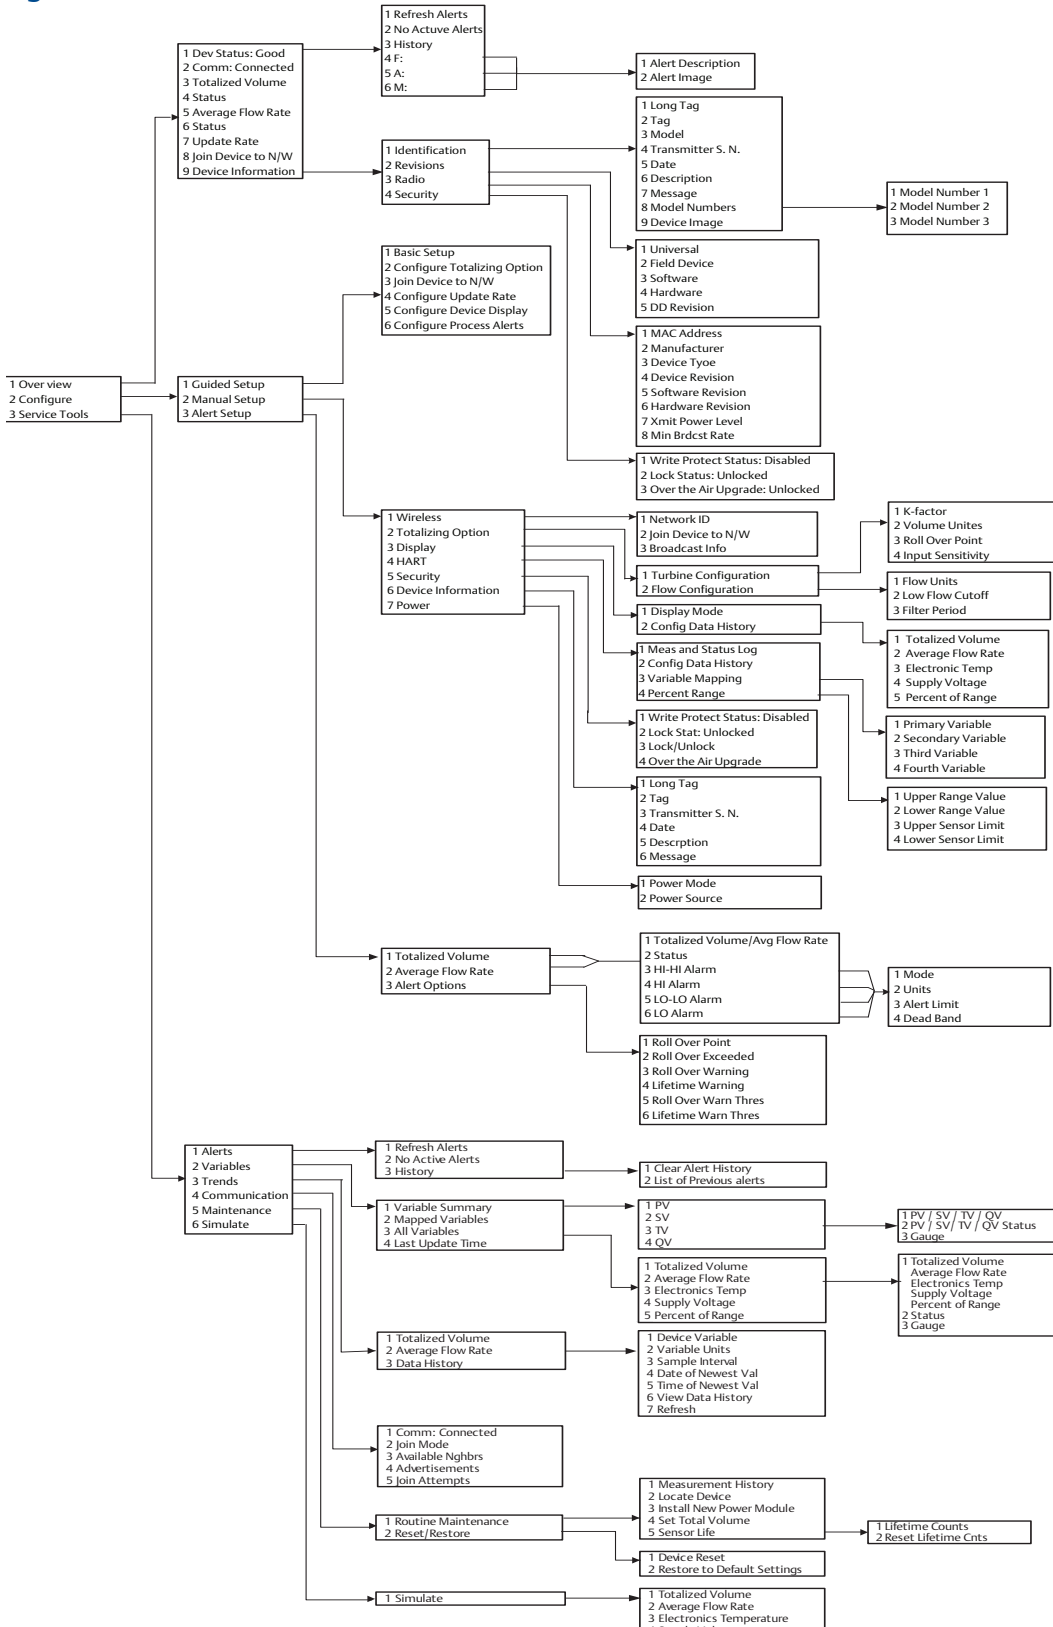

4.6 Verifying operation

There are four ways to verify operation: using the optional local display (LCD), using the Field Communicator, using the Smart Wireless Gateway's integrated web interface, or by using AMS Suite. If the Rosemount 705 Transmitter was configured with the Network ID and Join Key, and sufficient time has passed, the transmitter will be connected to the network.

Troubleshooting

If the device is not joined to the network after power up, verify the correct configuration of the Network ID and Join Key, and verify that Active Advertising has been enabled on the Gateway. The Network ID and Join Key in the device must match the Network ID and Join Key of the Gateway.

Operating the local display


The LCD displays the configured values at the update rate, or can optionally be enabled for continuous display. See [Enabling the LCD continuous operation feature](#).

Diagnostic button display sequence

More detailed diagnostic information can be obtained by removing the display cover of the Rosemount 705 Transmitter, and momentarily depressing the **DIAG** button. The LCD will display the diagnostic screens as shown in [Figure 4-4](#).

Press the **Diagnostic** button to display the TAG, Device ID, Software Revision, Network ID, Network Join Status and Device Status screens.


Figure 4-3. Diagnostic Screen Sequence

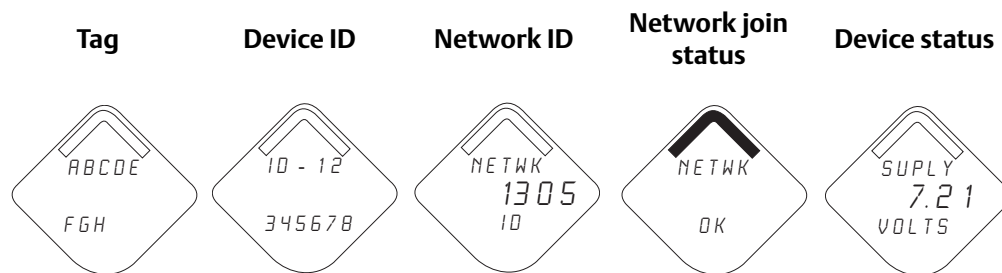

Network join status

The chevron-shaped status bar at the top of the screen indicates the progress of the network join process. When the status bar is filled, the device is successfully connected to the wireless network. This is shown, in [Figure 4-4 on page 26](#).

Figure 4-4. Network Join Status Screens

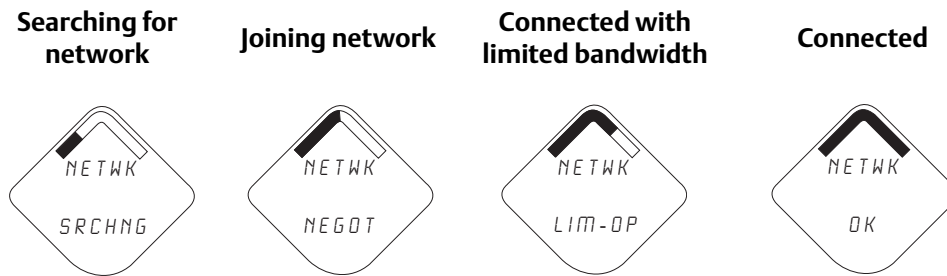

Connecting with a Field Communicator

A Rosemount 705 DD is required for HART® Communication.

Function	Fast Key sequence	Menu items
Communications	2, 1, 3	Join Status, Communication Status, Join Mode, Number of Available Neighbors, Number of Advertisements Heard, Number of Join Attempts

Checking for communication using the Smart Wireless Gateway


In the integrated web interface from the Gateway, navigate to the devices page. This page shows whether the device has joined the network and if it is communicating properly.

Note

The time to join the new device(s) to the network is dependent upon the number of devices being joined and the number of devices in the current network. For one device joining an existing network with multiple devices, it may take up to five minutes. It may take up to 60 minutes for multiple new devices to join the existing network.

4.6.1 AMS Device Manager

When the device has joined the network, it will appear in the AMS Device Manager as illustrated below.

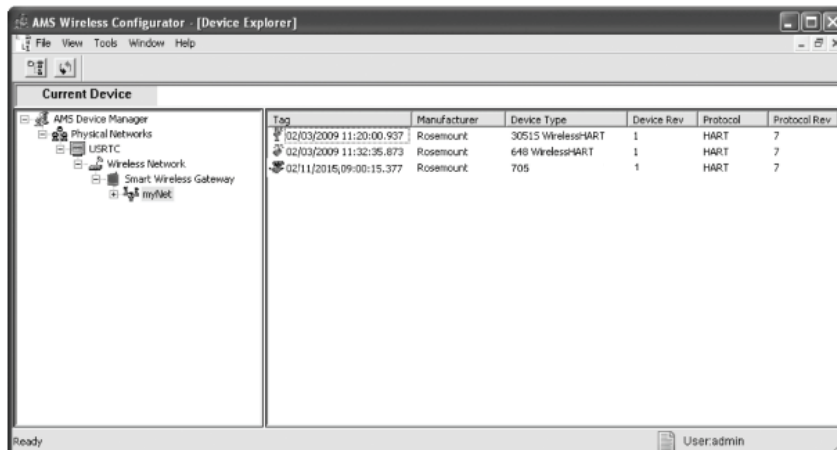

Troubleshooting

If the device is not joined to the network after power up, verify the correct configuration of the Network ID and Join Key, and verify that Active Advertising has been enabled on the Gateway. The Network ID and Join Key in the device must match the Network ID and Join Key of the Gateway.

The Network ID and Join Key may be obtained from the Gateway in the upper right hand corner labeled network information. The Network ID and Join Key may be changed in the wireless device by using the following Fast Key sequence.

Function	Fast Key sequence	Menu items
Wireless	2,1,3	Join Device to Network

Section 5 Operation and Maintenance

Basic operation	page 29
Determining device health	page 30
Interpreting LCD screen messages	page 30
Replacing the power module	page 37
Modbus®, EtherNet/IP™ and OPC mapping	page 38
Reset/restore device	page 39
Suspend (pause) the totalization in the device	page 39
Average flow rate filtering period	page 39
Low-Flow cut-off	page 40
Input sensitivity	page 40
How to reset the totalized volume	page 40
Service support	page 40

5.1 Basic operation

5.1.1 Rollover information

The totalized volume will automatically restart at a volume of zero when the configured rollover point has been reached. The table below describes some estimates to how long a rollover will take at max values of 10 million. Best practices are to reset the total before the device rollover occurs. The totalized volume will accumulate in the transmitter up to a configurable rollover point. Once the totalized volume reaches the rollover point, the totalized value will automatically continue totalizing the volume starting from zero. The rollover point defaults to 100 million, but can be configured to any value between one and two billion. Note the resolution of the totalized volume is reduced as the value gets larger. Refer to the table below or see the menu tree:

Configured units code	Earliest rollover	Typical longest LCD wait	Typical longest value wait
Cu.M	75 years	137 days	39 minutes
L	27 days	3 hours	2 seconds
UK Gal	125 days	15 hours	10 seconds
US Gal	104 days	12 hours	9 seconds
Barrel	11 years	21 days	6 minutes
Cu.F	2 years	3 days	1 minute
Cu.Y	57 years	105 days	30 minutes
Cu.l	0 day	3 minutes	0 seconds
Pulses	1 day	50 seconds	0 seconds

Note

The rollover value itself is not affected by the volume engineering units. For example, if the rollover value is configured to 100 million with engineering units of gallons, a change to volume units of cubic meters will cause the rollover value to still be 100 million, but will rollover at 100 million cubic meters rather than 100 million gallons.

5.1.2 Enabling the LCD continuous operation feature

The Rosemount™ 705 Wireless Totalizing Transmitter has the ability to keep the LCD always on for local indication of the total volume and average flow for the attached output device. Power module life will be reduced when operating in this mode. For example, at a one minute update rates the power module life would be reduced from a 10 year life to an estimated eight year life. More information on the power module life impact for various update rates can be found at Emerson.com/Rosemount/Power-Module-Life-Estimator

Enabling continuous LCD updates

AMS™ Device Manager

1. Connect the Rosemount 705 Transmitter to the HART® Communicator and access the Rosemount 705 DD.
2. Double click on the **Rosemount 705** icon and select *Configure>Guided Setup> Configure Device Display*

Through the handheld

1. Connect the Rosemount 705 Transmitter to the HART Handheld device.
2. Fast keys **2, 1, 5** (*Configure>Manual Setup> Display> Display Mode*)

5.2 Determining device health


In addition, system considerations must be observed to ensure the device is still connected to the wireless network and reporting values. On an Emerson Smart Wireless Gateway, this can be done by referring to the parameter: PV_HEALTHY. The PV_HEALTHY has a “True” state when the device is on the network and its updates are current, not late or stale, and the PV value is functioning properly. A “False” state of PV_HEALTHY means the device is either off of the network, the data updates are not current, or there is an issue measuring PV. In the case of a “False” state of PV_HEALTHY, it is recommended to assume the device is not connected to the network and to take appropriate action.

5.3 Interpreting LCD screen messages


The transmitted data may not match data displayed on LCD display due to differences in update rate and screen refresh rate.

5.3.1 Startup screen sequence


The following screens will display when the power module is first connected to the Rosemount 705 Transmitter.

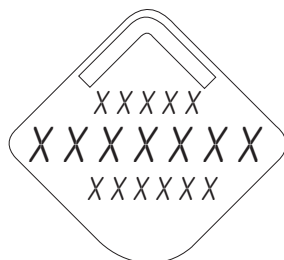

All segments On: used to visually determine if there are any bad segments on the LCD display

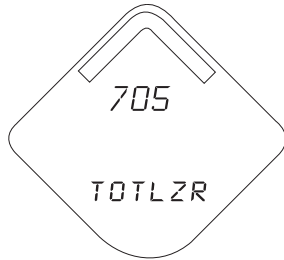


Device identification: used to determine Device Type

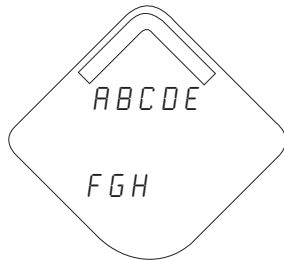

Device information - Tag: user entered tag which is eight characters long - will not display if all characters are blank




Totalized volume screen: accumulated total volume over time

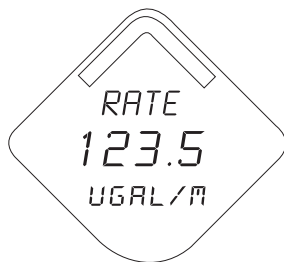


Average rate screen: average rate value



Electronics screen: feature board temperature value, can be modified to a specific variable in the DD

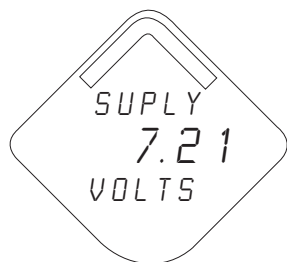


Supply voltage screen: voltage reading at the power module terminals, can be modified to a specific variable in the DD

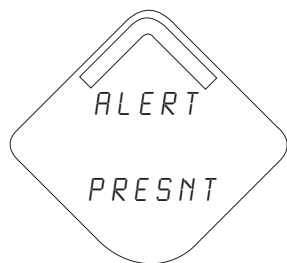


Alert screen: at least one alert is present - this screen will not display if no alerts are present

5.3.2 Diagnostic button screen sequence


The following five screens will display when the device is operating properly and the Diagnostic Button has been pressed:

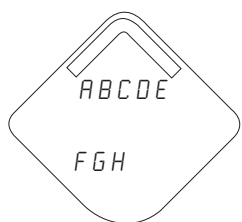


Device information - Tag: User entered tag which is 8 characters long - will not display if all characters are blank

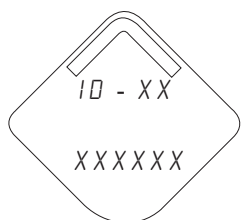

Device identification: Used to determine Device ID

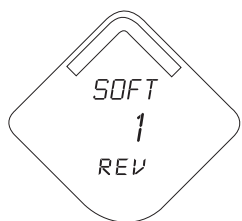


Software revision: Indication of the software revision of the device

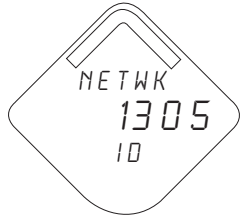

Network ID: Assuming the device has the correct join key, this ID tells the user what network the device can connect with



Network connection status: The device has joined a network and has been fully configured and has multiple parents

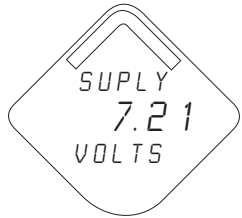


Supply voltage: Voltage reading at the power module terminals

5.3.3 Network connection status screens


These screens display the network status of the device. Only one will be shown in the fourth position of the diagnostic button screen sequence.




Diagnostic button screen 4.1: The device is attempting to start the radio

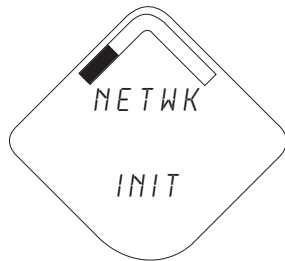


Diagnostic button screen 4.2: The device has just restarted

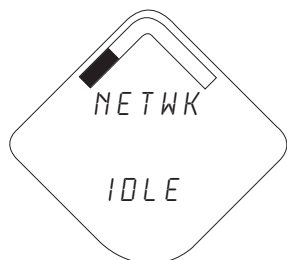


Diagnostic button screen 4.3: The device is starting to join the process

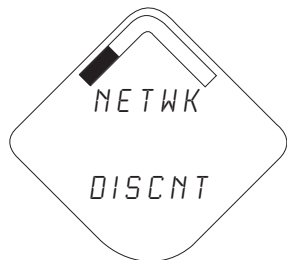


Diagnostic button screen 4.4: the device is in a disconnected state and requires a “Force Join” command to join the network

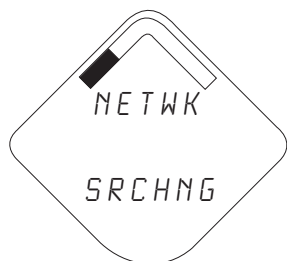


Diagnostic button screen 4.5: The device is searching for the Network

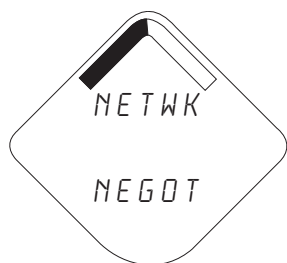

Diagnostic button screen 4.6: The device is attempting to join a network

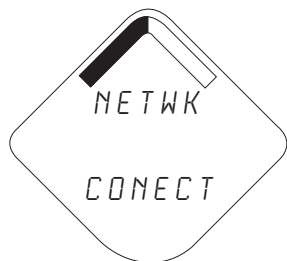

Diagnostic button screen 4.7: The device is connected to the Network, but is in a “Quarantined” state

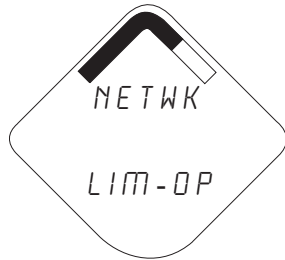


Diagnostic button screen 4.8: The device is joined and operational, but is running with limited bandwidth for sending periodic data




Diagnostic button screen 4.9: the device has joined a network and has been fully configured and has multiple parents

5.3.4 Device diagnostic screens


The following screens will show the device diagnostics depending on the state of the device, continuing after Diagnostic Button Screen 5.

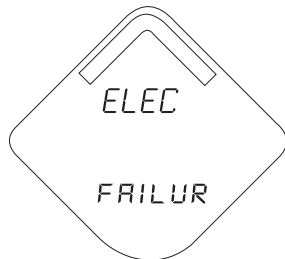


Diagnostic button screen 6.1: There is a critical error which may prevent the electronics board from operating correctly

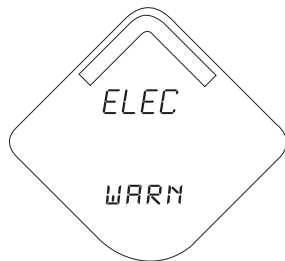


Diagnostic button screen 6.2: There is a warning which should be addressed, but should not affect the device output

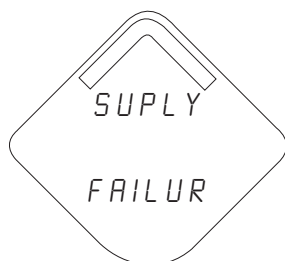


Diagnostic button screen 7.1: Terminal voltage has dropped below level of operating limit. Replace the Black Power Module model number 701PBKKF (part number: 00753-9220-0001)

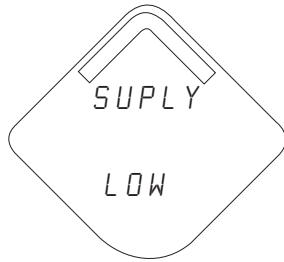


Diagnostic button screen 7.2: Terminal voltage is below the recommended operating range - if this is a self-operated device, the power module should be replaced - for line powered devices, the supply voltage should be increased

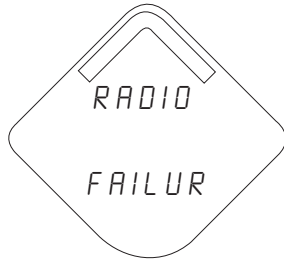


Diagnostic button screen 8: device cannot retrieve information from the radio in the device - the device may still be operational and publishing HART data

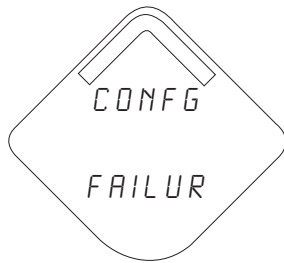

Diagnostic button screen 9: Configuration of the transmitter is invalid such that critical operation of the device may be affected - check the extended configuration status to identify which configuration item(s) need to be corrected

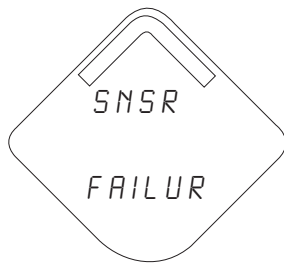

Diagnostic button screen 10: Switch attached to the transmitter has failed, and valid readings from that switch are no longer possible - check the switch and switch wiring connections - check additional status for more detailed information of the failure source

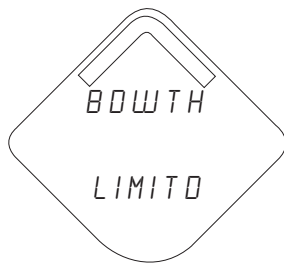

Diagnostic button screen 11: Device has not yet received all of the requested wireless bandwidth needed to operate as configured

Note

Use Rosemount Wireless LCD display part number: 00753-9004-0002.

5.4 Replacing the power module

When the power module needs to be replaced, remove the power module cover and the depleted power module. Replace the power module with a new Black Power Module, SmartPower™ Solutions model number 701PBKKF (part number: 00753-9220-0001). Then replace the cover and tighten it to specification. Always ensure a proper seal so metal touches metal, but do not over-tighten. After the power module has been replaced, navigate to AMS Device Manager to reset the power module function. This also can be done via the handheld **3, 5, 1, 3**.


⚠ WARNING

When replacing the power module, the device will stop totalizing data. The device will resume from where the last total was periodically recorded (within a five minute window). Example: The best practice when replacing the power module is to make note of the totalized volume before removing the power module. After installing a new power module, the totalized volume can be set to the previous recorded value.

Handling the power module

The black power module with the wireless unit contains two “C” size primary lithium/thionyl chloride batteries. Each battery contains approximately 2.5 grams of lithium, for a total of 5 grams in each pack. Under normal conditions, the battery materials are self-contained and are not reactive as long as the batteries and the battery pack integrity are maintained. Care should be taken to prevent thermal, electrical or mechanical damage. Contacts should be protected to prevent premature discharge.

Use caution when handling the power module, it may be damaged if dropped from heights in excess of 20 ft.

 Battery hazards remain when cells are discharged.

Environmental considerations

As with any battery, local environmental rules and regulations should be consulted for proper management of spent batteries. If no specific requirements exist, recycling through a qualified recycler is encouraged. Consult the materials safety data sheet for battery specific information.

Shipping considerations

The unit was shipped to you without the power module installed. Remove the power module prior to shipping.

Each power module contains two “C” size primary lithium batteries. Primary lithium batteries are regulated in transportation by the U.S. Department of Transportation, and are also covered by International Air Transport Association (IATA), International Civil Aviation Organization (ICAO), and European Ground Transportation of Dangerous Goods (ARD). It is the responsibility of the shipper to ensure compliance with these or any other local requirements. Consult current regulations and requirements before shipping.

5.5 Modbus®, EtherNet/IP™ and OPC mapping

Following is a table of parameters that can be used for Modbus, EtherNet/IP and OPC mapping. These parameters are used by the Smart Wireless Gateway and can be found in the web interface of the Gateway. Some of these parameters are analog values and some are discrete, and this is noted in the description. The Setpoint parameters are used to drive the output channel and for the readback of the state of the output channel.


Table 5-1. Parameters for Modbus, EtherNet/IP, and OPC Mapping

Parameter name	Description	Read/Write
SUPPLY_VOLTAGE	Maps the supply voltage of the device. For monitoring the health of your power module use SUPPLY_VOLTAGE_HEALTHY	Read
ELECTRONICS_TEMPERATURE	Maps the electronics temperature	Read
TOTALIZED_VOLUME	Maps the totalized volume the device has measured	Read
AVERAGE_FLOW_RATE	Maps the instantaneous flow rate over that period of time set by the DD	Read
ACCUMULATOR_RESET	Use this parameter to reset the number of total counts on the device	Write
ACCUMULATOR_STATE	What is the current totalized value of the device	Read

Mapping the Rosemount 705 Transmitter parameters

Below is the Gateway screen where the accumulator reset, accumulator state, totalized_volume, average_flow variables and parameter can be mapped. This is important to understand how to reset the totalized volume of the device via Modbus, OPC, or EtherNet/IP.

Figure 5-1. Smart Wireless Gateway Modbus Register Map

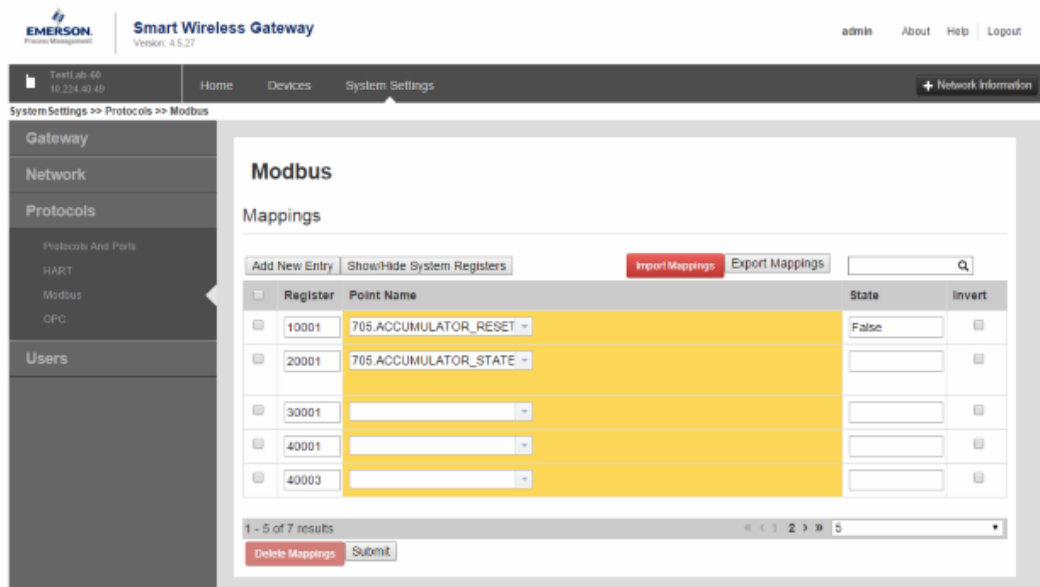

To reset the total of the Rosemount 705 Transmitter via Modbus, follow the steps below.

1. Navigate to *Modbus* connection.
2. Map **705.Accumulaor_Reset**.
3. **Submit**.

To reset the total of the Rosemount 705 Transmitter via OPC, follow the steps below.

1. Navigate to *OPC* connection.
2. Map **705.Accumulaor_Reset**.
3. **Submit**.

To reset the total of the Rosemount 705 Transmitter via EtherNet/IP, follow the steps below.

1. Navigate to *EtherNet/IP* connection.
2. Map **705.Accumulaor_Reset**.
3. **Submit**.

5.6 Reset/restore device

The Rosemount 705 Transmitter can be reset remotely over the wireless network, or locally via the wired maintenance port. Resetting the device will cause the device to temporarily drop offline and rejoin to the configured wireless network. When resetting the device, you can choose to reset the device with the same configuration as it already has, or to revert the configuration settings to the original values that were present when the device left the manufacturer. When reverting the configuration settings to original values, not the turbine meter K-factor will also be reverted, so the turbine meter should be verified to ensure the correct K-factor is being used.

Fast Keys	3, 5, 2
------------------	---------

5.7 Suspend (pause) the totalization in the device

The Rosemount 705 Transmitter allows the totalization to be stopped, which will hold the current totalized volume value and ignore any new input pulses. This can be done through a host connection to the wireless gateway.

5.8 Average flow rate filtering period

The average flow rate filtering period controls how heavily the average flow rate is filtered. The default setting of one second will cause the Rosemount 705 Transmitter to report the average flow rate over a time interval of one second. Setting the period to a larger value will reduce noisy flow rate measurements, but will increase the time constant of the reported value.

Fast Keys	2, 2, 2, 2, 3
------------------	---------------

5.9 Low-Flow cut-off

The low flow cutoff value can be configured to cause the Rosemount 705 Transmitter to report zero flow for any rates below the configured threshold. Totalized volume will be unaffected by the low flow cutoff setting. The transmitter will continue to totalize any detectable volume - even for very small flow rates.

Fast Keys	2, 2, 2, 2, 2
------------------	---------------

5.10 Input sensitivity

The input sensitivity setting is used to adjust the minimum input voltage required for the Rosemount 705 Transmitter to count pulses. There are two settings “Normal” and “Reduced”. Under most circumstances, the “Normal” setting will provide the most accurate flow readings. The “Reduced” setting should be used in environments where outside interference is causing a degradation of transmitter performance, such as picking up extra counts/showing a flow rate when the turbine meter is not rotating. If the “Reduced” setting is selected, care should be taken to verify the device is properly reporting flow, particularly at low frequencies.

Fast Keys	2, 2, 2, 1, 4
------------------	---------------

5.11 How to reset the totalized volume

The totalized volume can be reset via the wireless network, through the wireless gateway, using a button located behind the electronics/LCD display side housing cover, or by connecting to the local wired maintenance port. To avoid any loss of volume accumulation, the totalizer should only be reset when the flow through the attached turbine meter has been stopped.

Fast Keys	3, 5, 1, 4
------------------	------------

5.12 Service support

To expedite the return process outside of the United States, contact the nearest Emerson representative.

Within the United States, call the Emerson Instrument and Valves Response Center using the 1-800-654-RSMT (7768) toll-free number. This center, available 24 hours a day, will assist you with any needed information or materials.

The center will ask for the following information:

- Product model
- Serial numbers
- The last process material to which the product was exposed

The center will provide:

- A Return Material Authorization (RMA) number
- Instructions and procedures that are necessary to return goods that were exposed to hazardous substances.

⚠ CAUTION

Individuals who handle products exposed to a hazardous substance can avoid injury if they are informed of and understand the hazard. If the product being returned was exposed to a hazardous substance as defined by OSHA, a copy of the required Material Safety Data Sheet (MSDS) for each hazardous substance identified must be included with the returned goods.

Appendix A Specifications and Reference Data

Specifications	page 43
Dimensional drawings	page 45
Ordering information	page 47
Spare parts and accessories	page 48

A.1 Specifications

A.1.1 Functional specifications

Wireless output

IEC 62591 (WirelessHART®) 2.4 GHz DSSS

Radio frequency power output from antenna

External (WK option) antenna: Maximum of 10 mW (10 dBm) EIRP

Extended Range, External (WM option) antenna: Maximum of 18 mW (12.5 dBm) EIRP

High Gain, Remote (WN option) antenna: Maximum of 40 mW (16 dBm) EIRP

Local display

The optional integral LCD display can display discrete state and diagnostic information. Display updates at each wireless update or constantly when the device has the optional LCD display always on option.

Humidity limits

0–99 percent relative humidity

Wireless update rate

User selectable, one second to 60 minutes.

A.1.2 Physical specifications

Electrical connections

Wireless power module

Replaceable, Intrinsically Safe Lithium-Thionyl Chloride power module with PBT polymer enclosure. Ten year life at one minute update rate.⁽¹⁾

Note

Continuous exposure to ambient temperature limits (–40 °F or 185 °F) (–40 °C or 85 °C) may reduce specified power module life by less than 20 percent.

1. Reference conditions are 70 °F (21 °C), and routing data for three additional network devices.

Field Communicator connections

Communication terminals

Terminal tabs are permanently fixed to terminal block

Materials of construction

Enclosure

Housing - Low-copper aluminum, or stainless steel

Paint - Polyurethane

Cover O-ring - Buna-N

Terminal block and power module pack

PBT

Antenna

PBT/PC integrated omni-directional antenna

Conduit entries

1/2–14 NPT

Weight

Low - copper aluminum

Rosemount™ 705 Wireless Totalizing Transmitter without LCD display - 4.6 lb (2.0 kg)

Rosemount 705 Transmitter with M5 LCD display - 4.7 lb (2.1 kg)

Stainless steel

Rosemount 705 Transmitter without LCD display - 8.0 lb (3.6 kg)

Rosemount 705 Transmitter with M5 LCD display - 8.1 lb (3.7 kg)

Enclosure ratings (705)

NEMA 4X, and IP66/67

Mounting

Transmitters may be attached directly to switch, brackets also permit remote mounting. See “Dimensional drawings” on page 45.

A.1.3 Frequency input specifications

0 to 10 kHz

A.1.4 Performance specifications

Electromagnetic Compatibility (EMC)

All models

Meets all industrial environment requirements of EN61326 and NAMUR NE-21. Maximum deviation <1% span during EMC disturbance.⁽¹⁾

Vibration effect

Wireless output unaffected when tested per the requirements of IEC60770-1 field or pipeline with high vibration level (10–60 Hz 0.21 mm displacement peak amplitude/60-2000 Hz 3g).

Wireless output unaffected when tested per the requirements of IEC60770-1 field with general application or pipeline with low vibration level(10–60 Hz 0.15 mm displacement peak amplitude/60–500 Hz 2 g).

Temperature limits


Description	Operating limit	Storage limit
Without LCD display	–40 to 185 °F –40 to 85 °C	–40 to 185 °F –40 to 85 °C
With LCD display	–4 to 175 °F –20 to 80 °C	–40 to 185 °F –40 to 85 °C

1. During surge event device may exceed maximum EMC deviation limit or reset; however, device will self-recover and return to normal operation with specified start-up time.


A.2 Dimensional drawings

Figure A-1. Rosemount 705 Transmitter


Shown with 2.4 GHz/WirelessHART extended range antenna

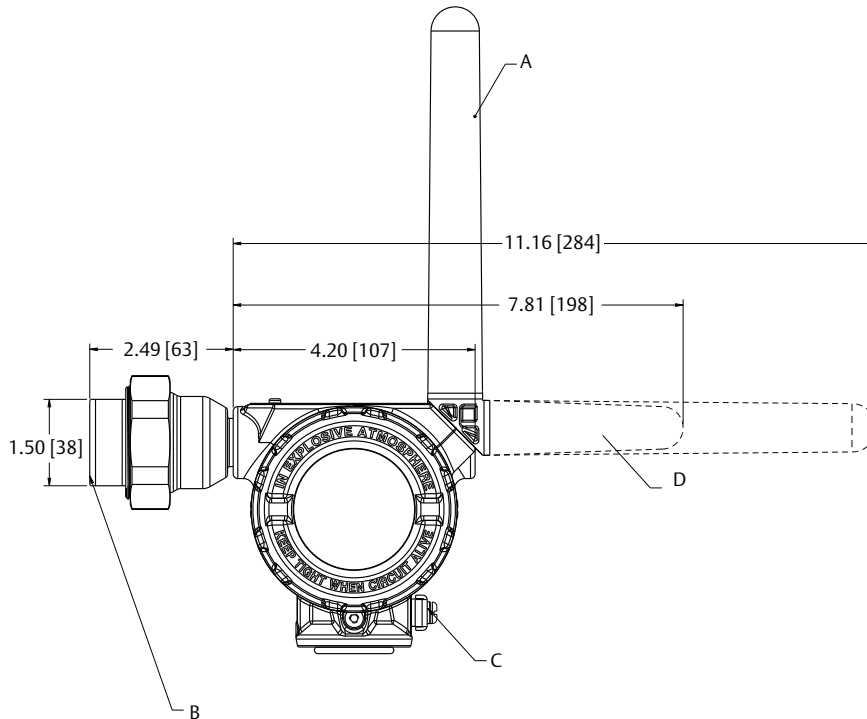

Shown with optional digital display
 and 2.4 GHz/WirelessHART Antenna

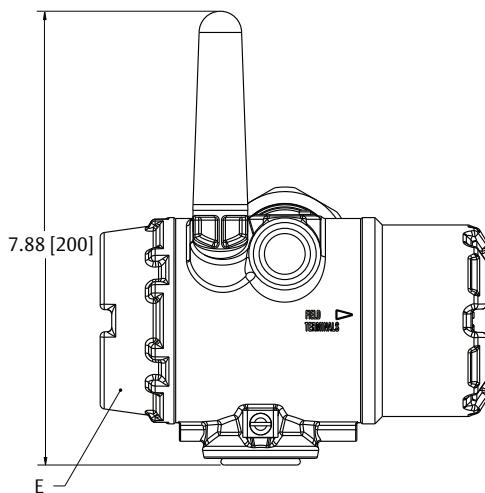


Shown without optional digital display

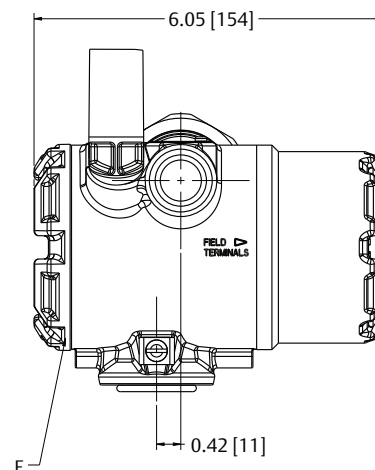

- A. 2.4 GHz/WirelessHART extended range antenna
 - B. 1-in. NPT connection to flow meter
 - C. Ground screw assembly
- Dimensions are in inches (millimeters).

- D. Possible antenna rotation
- E. Digital display cover
- F. Transmitter electronics

Figure A-2. Rosemount 705 Transmitter Mounting Configurations with Optional Pipe Mounting Bracket

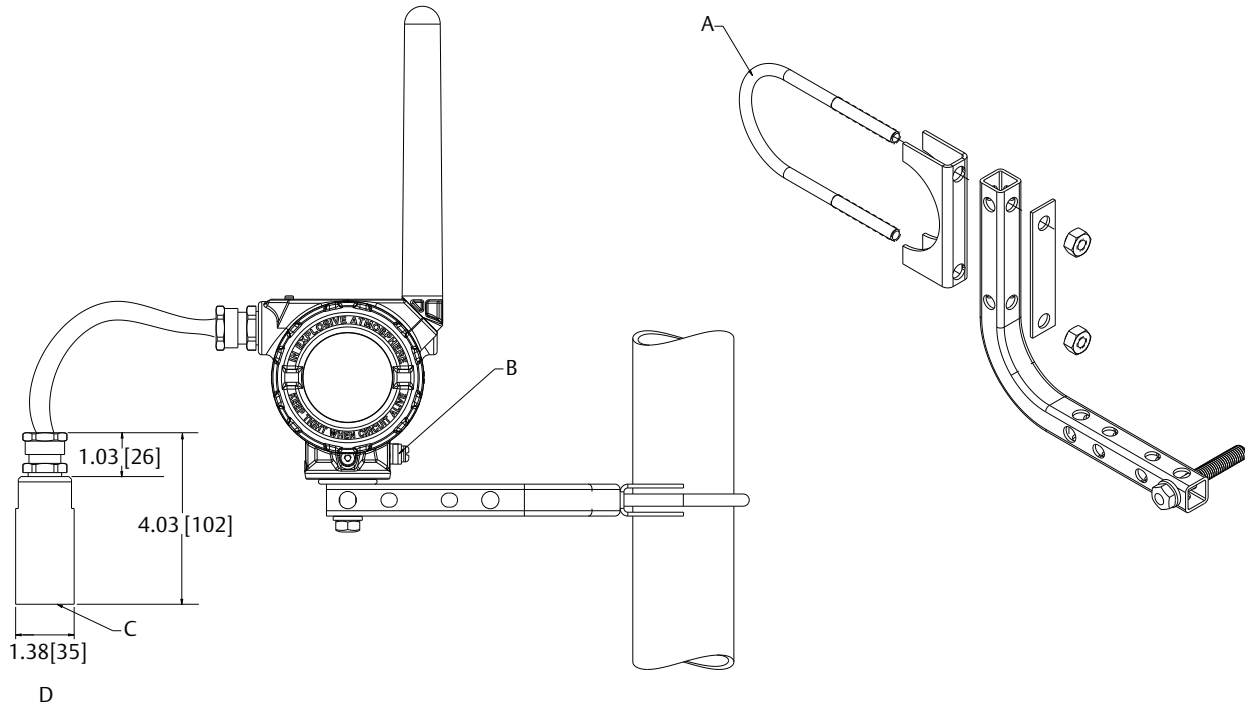

A. 2-in. U-bolt for pipe mounting
B. Ground screw assembly

C. 1-in. NPT connection to flow meter
D. Turbine meter connection

Dimensions are in inches (millimeters).

A.3 Ordering information

Table A-1. Rosemount 705 Wireless Totalizing Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Product description		
705	Totalizing Transmitter (with connector mil-c-5015)	★
Transmitter output		
X	Wireless	★
Transmitter type		
D1	Direct mount	★
R1	Remote mount (10 ft. leads included)	★
Housing		
D	Dual compartment housing - aluminum	★
E	Dual compartment housing - SST	★
Conduit threads		
1	1/2-14 NPT	★
Certifications		
NA	No Hazardous Location Approval	
I5	U.S.A Intrinsically Safe	★
I6	Canada Intrinsically Safe	★
N5	U.S.A. Division 2, Non-incendive	★
N6	Canada Division 2, Non-incendive	★
I1	ATEX Intrinsic Safety	★
IU	ATEX Intrinsic Safety for Zone 2	★
I7	IECEX Intrinsic Safety	★
IY	IECEX Intrinsic Safety for Zone 2	★

Wireless options

Wireless update rate, operating frequency and protocol		
WA3	User configurable update rate, 2.4 GHz DSSS, IEC 62591 (<i>WirelessHART</i>)	★
Omni directional wireless antenna and SmartPower solutions ⁽¹⁾		
WK1	External antenna, adapter for black power module (I.S. power module sold separately)	★
WM1	Extended range, external antenna, adapter for black power module (I.S. power module sold separately)	★
WJ1	Remote antenna, adapter for black power module (I.S. power module sold separately)	
WN1 ⁽²⁾	High-gain, remote antenna, adapter for black power module (I.S. power module sold separately)	

Other options

Display		
M5	LCD display	★

Table A-1. Rosemount 705 Wireless Totalizing Transmitter Ordering Information

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Mounting bracket		
B4	Universal L mounting bracket for 2-in. pipe mounting - SST bracket and bolts	★
Configuration		
C1	Calibration Factor (k-factor) Configuration. Factory configure date, descriptor, message fields, and wireless parameters	★
Typical model number: 705 X D1 D 1 I6 WA3 M5 B4 C1		

1. Black Power Module must be shipped separately, order model 701PBKKF or part number: 00753-9220-000.
2. Limited availability, consult factory for details.

Spare parts and accessories

Spare parts and accessories	
00705-9000-0001	Cable assembly, 1 ft. long for direct mount option
00705-9000-0002	Cable Assembly, 10 ft. long for remote mount option
03151-9270-0003	Remote housing bracket kit
701PBKKF	Black power module

Appendix B Product Certifications

Rev 1.1

European Directive Information	page 49
Telecommunication Compliance	page 49
FCC and IC	page 49
Ordinary Location Certification from CSA	page 49
Installing in North America	page 49
USA	page 49
Canada	page 50
Europe	page 50
International	page 50
Brazil	page 51
EAC - Belarus, Kazakhstan, Russia	page 51
Installation drawings	page 52

B.1 European Directive Information

A copy of the EC Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EC Declaration of Conformity can be found at Emerson.com/Rosemount.

B.2 Telecommunication Compliance

All wireless devices require certification to ensure that they adhere to regulations regarding the use of the RF spectrum. Nearly every country requires this type of product certification. Emerson™ is working with governmental agencies around the world to supply fully compliant products and remove the risk of violating country directives or laws governing wireless device usage.

B.3 FCC and IC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation. This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

B.4 Ordinary Location Certification from CSA

The transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by CSA, a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

B.5 Installing in North America

The US National Electrical Code® (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

B.6 USA

- I5** U.S.A. Intrinsically Safe (IS)
Certificate: CSA 70011131
Standards: FM 3600 – 2011, FM 3610 – 2010,
UL Standard 50 – Eleventh Edition,
UL 61010-1 – 3rd Edition,
ANSI/ISA-60079-0 (12.00.01) – 2013,
ANSI/ISA-60079-11 (12.02.01) – 2013,
ANSI/IEC 60529 – 2004
Markings: IS CL I, DIV 1, GP A, B, C, D T4; Class 1, Zone 0, AEx
ia IIC T4 Ga; T4 (-50 °C ≤ T_a ≤ +70 °C) when
installed per Rosemount™ drawing 00705-1020;
Type 4X; IP66
See the table at the end of this section for entity parameters
- N5** U.S.A. Division 2, Nonincendive
Certificate: CSA 70011131
Standards: FM 3600 – 2011, FM 3611 – 2004,
UL Standard 50 – Eleventh Edition,
UL 61010-1 (3rd Edition),
ANSI/IEC 60529 – 2004
Markings: NI CL I, DIV 2, GP A, B, C, D T4;
T4 (-50 °C ≤ T_a ≤ +70 °C); Type 4X; IP66

Special Conditions for Safe Use (X):

1. For use only with the Model 701P or Rosemount P/N 753-9220-XXXX Smart Power Battery Module.
2. The surface resistivity of the antenna is greater than 1GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.

B.7 Canada

I6 Canada Intrinsically Safe (IS)

Certificate: CSA 70011131

Standards: CAN/CSA C22.2 No. 0-10,
CAN/CSA C22.2 No. 94-M91,
CSA Std C22.2 No.142-M1987,
CAN/CSA-60079-0 - 2011,
CAN/CSA-60079-11 - 2014,
CSA Std C22.2 No. 60529 - 2005,
CAN/CSA-C22.2 No. 61010-1 - 2012

Markings: IS CL I, DIV 1, GP A, B, C, D T4;
Ex ia IIC T4 Ga, T4; T4 (-50 °C ≤ T_a ≤ +70 °C)
when installed per Rosemount drawing
00705-1020; Type 4X; IP66

See the table at the end of this section for entity parameters.

N6 Canada Division 2, Nonincendive

Certificate: CSA 70011131

Standards: CAN/CSA C22.2 No. 0-10,
CAN/CSA C22.2 No. 94-M91,
CSA Std C22.2 No. 213-M1987 (R2013),
CAN/CSA-60079-0 - 2011,
CAN/CSA Std C22.2 No. 60529 - 2005,
CAN/CSA-C22.2 No. 61010-1 - 2012

Markings: Suitable for Class 1, Division 2,
Groups A, B, C, D T4; T4 (-50 °C ≤ T_a ≤ +70 °C);
Type 4X; IP66

Special Conditions for Safe Use (X):

1. For use only with the Model 701P or Rosemount P/N 753-9220-XXXX Smart Power Battery Module.
2. The surface resistivity of the antenna is greater than 1GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.

B.8 Europe

I1 ATEX Intrinsic Safety

Certificate: Baseefa14ATEX0375X

Standards: EN 60079-0: 2012, EN 60079-11: 2012

Markings: Ⓔ II 1 G Ex ia IIC T4 Ga, T4(-60 °C ≤ T_a ≤ +70 °C)

For use with Rosemount SmartPower™ power module part
number 753-9220-0001, or for use with Emerson
SmartPower option 701PBKKF.

See the table at the end of this section for entity parameters.

Special Conditions for Safe Use (X):

1. The surface resistivity of the antenna is greater than 1GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.
2. The Rosemount 705 Transmitter enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 area.

IU ATEX Intrinsic Safety for Zone 2

Certificate: Baseefa14ATEX0375X

Standards: EN 60079-0: 2012, EN 60079-11: 2012

Markings: Ⓔ II 3 G Ex ic IIC T4 Gc, T4(-60 °C ≤ T_a ≤ +70 °C)

For use with Rosemount SmartPower Power Module part
number 753-9220-0001, or for use with Emerson
SmartPower option 701PBKKF.
See the table at the end of this section for entity parameters.

Special Conditions for Safe Use (X):

1. The surface resistivity of the antenna is greater than 1GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.
2. The Model 701PBKKF Power Module may be replaced in a hazardous area. The Power Modules have a surface resistivity greater than 1GΩ and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.
3. The Rosemount 705 Transmitter enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 area.

B.9 International

I7 IECEx Intrinsic Safety

Certificate: IECEx BAS 14.0173X

Standards: IEC 60079-0: 2011, IEC 60079-11: 2011

Markings: Ex ia IIC T4 Ga, T4 (-60 °C ≤ T_a ≤ +70 °C)

For use with Rosemount SmartPower power module part
number 753-9220-0001, or for use with Emerson
SmartPower option 701PBKKF.

See the table at the end of this section for entity parameters.

Special Conditions for Safe Use (X):

1. The surface resistivity of the antenna is greater than 1 GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.
2. The Rosemount 705 Transmitter enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 area.

IY IECEx Intrinsic Safety for Zone 2
 Certificate: IECEx BAS 14.0173X
 Standards: IEC 60079-0: 2011, IEC 60079-11: 2011
 Markings: Ex ic IIC T4 Gc, T4 (-60 °C ≤ T_a ≤ +70 °C)
 For use with Rosemount SmartPower power module part number 753-9220-0001, or for use with Emerson SmartPower option 701PBKKF.
 See the table at the end of this section for entity parameters

Special Conditions for Safe Use (X):

1. The surface resistivity of the antenna is greater than 1 GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.
2. The Rosemount 705 Transmitter enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 area.

B.10 Brazil

I2 INMETRO Intrinsic Safety
 Certificate: UL-BR 17.0019X
 Standards: ABNT NBR IEC 60079-0:2008 + Errata 1:2011, ABNT NBR IEC 60079-11:2009
 Markings: Ex ia IIC T4 Ga, T4 (-60 °C ≤ T_a ≤ +70 °C)
 See the table at the end of this section for entity parameters

Special Condition for Safe Use (X):

1. See certificate for special conditions.

B.11 EAC - Belarus, Kazakhstan, Russia

IM Technical Regulation Customs Union (EAC) Intrinsic Safety
 Certificate: TC RU C-US.MIO62.B.03122
 Markings: 0Ex ia IIC T4 Ga X, T4 (-60 °C ≤ T_a ≤ +70 °C)
 See the table at the end of this section for entity parameters


Special Conditions for Safe Use (X):


1. See certificate for special conditions.

Turbine meter terminal output parameters	Turbine meter terminal input parameters
$V_{oc}/U_o = 2.5 V$	$V_{max}/U_i = 10 V$
$I_{sc}/I_o = 253 \mu A$	$I_{max}/I_i = 1 mA$
$P_{max}/P_o = 640 \mu W$	$P_{max}/P_i = 1 mW$
$C_a/C_o = 2.9 \mu F$	$C_i = 2.2 nF$
$L_a/L_o = 500 mH$	$L_i = 4.7 mH$

B.12 Installation drawings

Figure B-1. Rosemount 705 Wireless Totalizing Transmitter

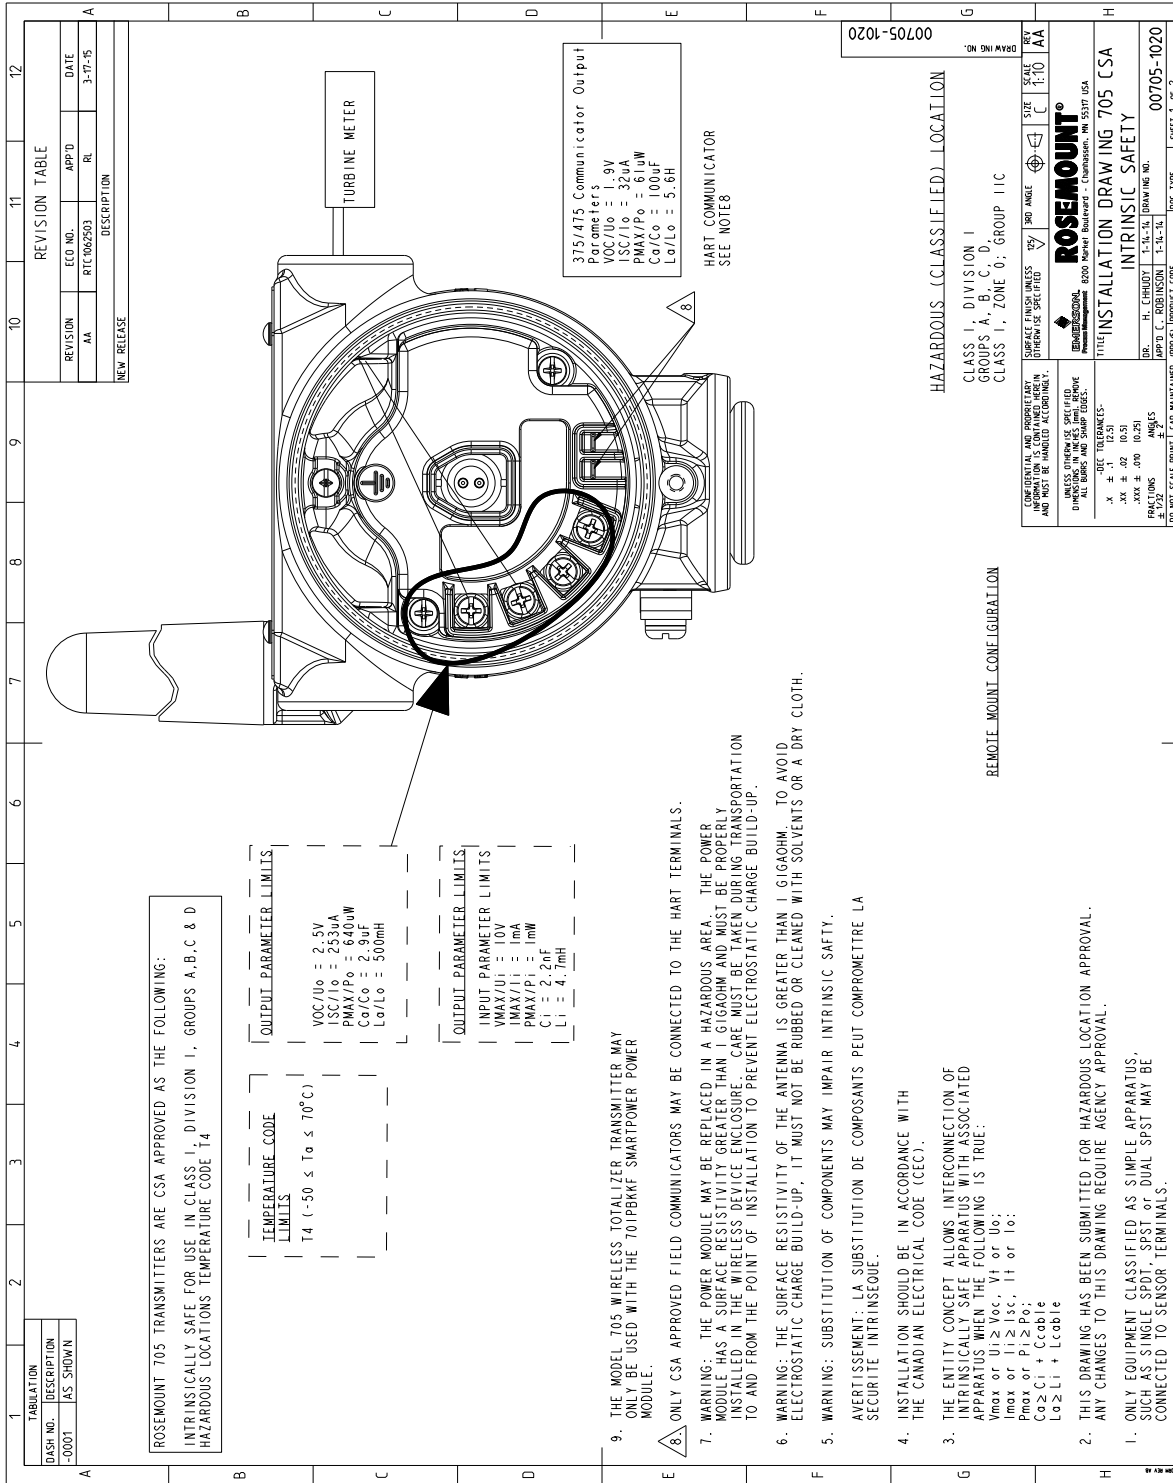

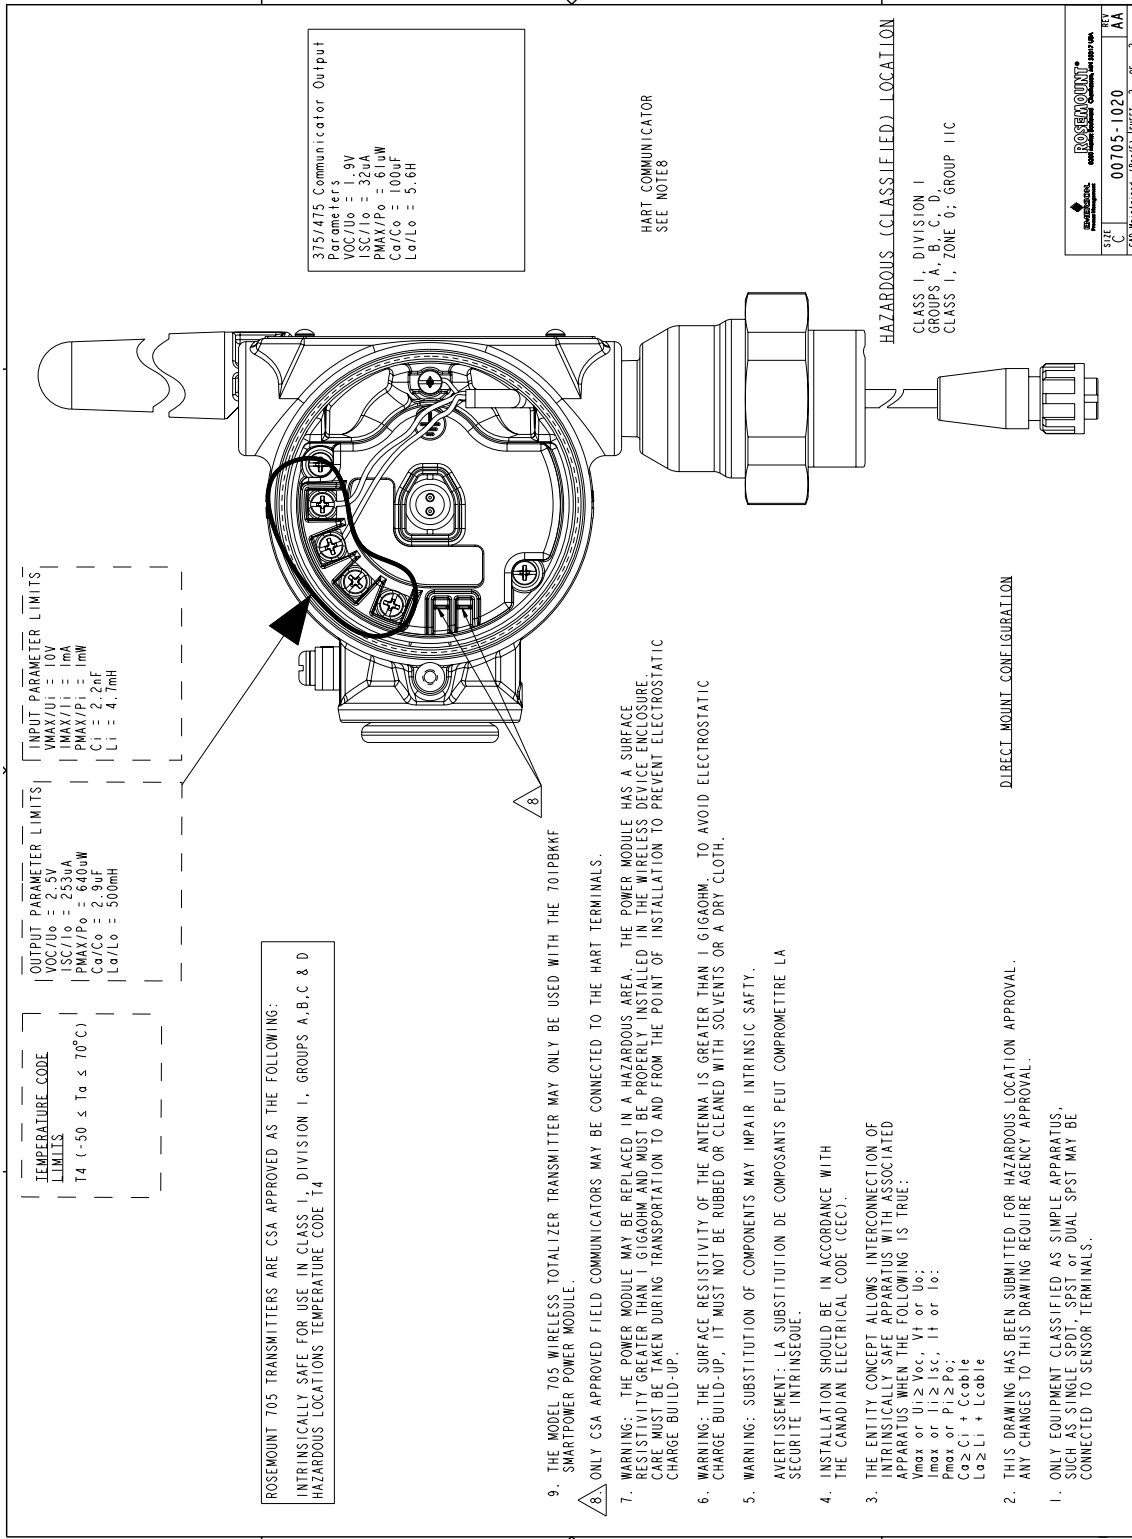

Appendix C High Gain Remote Antenna Option

Safety messages	page 55
Functional specifications	page 56
Installation considerations	page 57
Transient/lightning considerations	page 57
Dimensional drawings	page 58
Installing the high gain remote antenna	page 59

C.1 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

⚠ WARNING

When installing remote mount antennas for the wireless field device, always use established safety procedures to avoid falling or contact with high-power electrical lines.

Install remote antenna components for the wireless field device in compliance with local and national electrical codes and use best practices for lightning protection.

Before installing consult with the local area electrical inspector, electrical officer, and work area supervisor.

The wireless field device remote antenna option is specifically engineered to provide installation flexibility while optimizing wireless performance and local spectrum approvals. To maintain wireless performance and avoid non-compliance with spectrum regulations, do not change the length of cable or the antenna type.

If the supplied remote mount antenna kit is not installed per these instructions, Emerson™ is not responsible for wireless performance or non-compliance with spectrum regulations.

Be aware of overhead electrical power lines.

C.2 Functional specifications

C.2.1 Output

WirelessHART® 2.4 GHz DSSs (direct sequence spread spectrum)

Radio Frequency Power Output from Antenna:

- High gain remote (WN option) antenna:
Maximum of 40 mW (16 dBm) EIRP (Equivalent Isotropically Radiated Power)
- High gain remote antenna (WJ1 option):
Maximum of 40 mW (16 dBm) EIRP 25 ft. of cable.

C.2.2 Coaxial length

25 ft. (7.6 m) with Type N Connections

C.2.3 Coaxial material

- Heavy duty, low loss LMR400 cable
- Minimum coaxial bend diameter: 1.0 ft. (0.3 m)

C.2.4 Antenna

- Remote mount omni directional antenna
- Fiberglass and aluminum construction
- 8 Db Gain WJ1 - 6dBi
- Meets MIL-STD-810G (Method 510.5, Procedure I and II)

C.2.5 Physical specifications

Weight: 1.0 lb. (0.4 kg)

C.2.6 RF lightning arrestor

In-line lightning arrestor

Electrical connection: Lightning arrestor MUST be grounded per local electrical codes and regulations.

Mounting bracket

- Horizontal or vertical mast accommodation
- Supported mast diameter: 1.0 to 2.5-in. (2.5 to 6.4 cm)
- Aluminum bracket
- Nickel/zinc plated mounting U-bolts

C.2.7 Ratings

NEMA® 4X, and IP66/67

C.2.8 Vibration

3 g Max vibration

C.3 Installation considerations

C.3.1 Antenna mounting

Mount antenna vertically ($\pm 5^\circ$)

C.3.2 Antenna height

Mount antenna 14 ft. (4.3 m) above infrastructure with clear line of sight.


C.3.3 Coaxial cable

Ensure that coaxial cable is securely affixed to the mast to avoid excessive cable movement.

C.3.4 Installing coaxial drip loop

Ensure a drip loop is installed not closer than 1.0 ft. (0.3 m) from the transmitter. It may also be convenient to affix the drip loop to the lower portion of the mast ensuring condensation or rainwater will flow away from the coaxial connections.

Figure C-1. Drip Loop Location

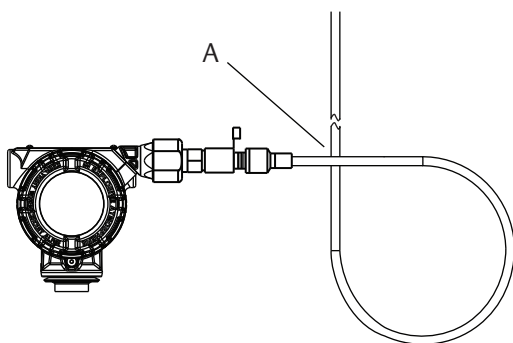

A. Coaxial drip loop

C.3.5 Applying coaxial sealant moisture protection

Utilize the coaxial sealant that is included in the high gain remote mounting kit package. Follow included instructions for application on the coaxial connection.

C.4 Transient/lightning considerations

C.4.1 Gateway transient protection


When installing, consider including transient/lightning protection on interface connections (Ethernet, Modbus[®], and coaxial connections) to other equipment.

C.4.2 RF lightning arrestor ground connection

Ensure grounding connection is made on the RF lightning arrestor ground connection point.

C.5 Dimensional drawings

Figure C-2. Device Connection and RF Lightning Arrestor

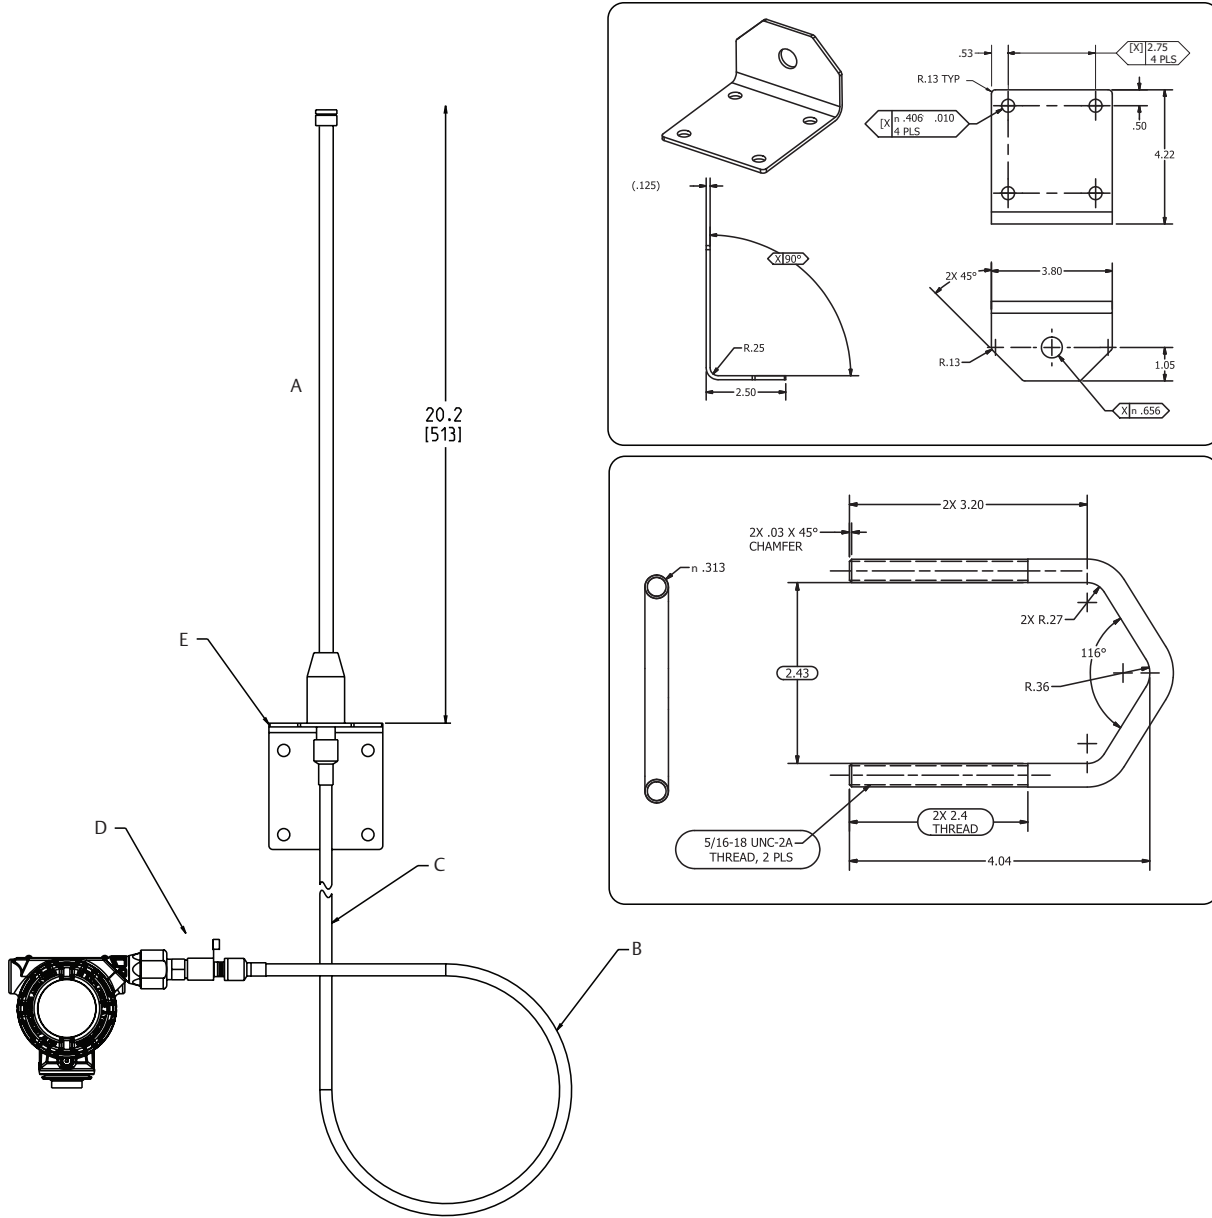


- A. Antenna
- B. Min drip loop \varnothing 12-in. (0.3 m)
- C. 25 ft. (7.6 m) Cable

- D. Lightning arrestor
- E. Mounting bracket


C.6 Installing the high gain remote antenna

1. Mount the transmitter following best practice mounting procedures as outlined in the Quick Installation Guide and this manual.
2. Connect the RF Lightning protector to the device and tighten.

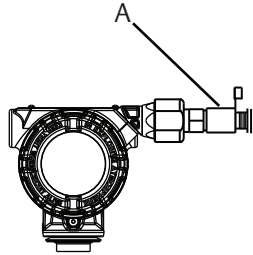


A. RF lightning protector


3. Connect antenna to mounting bracket and tighten nut carefully.

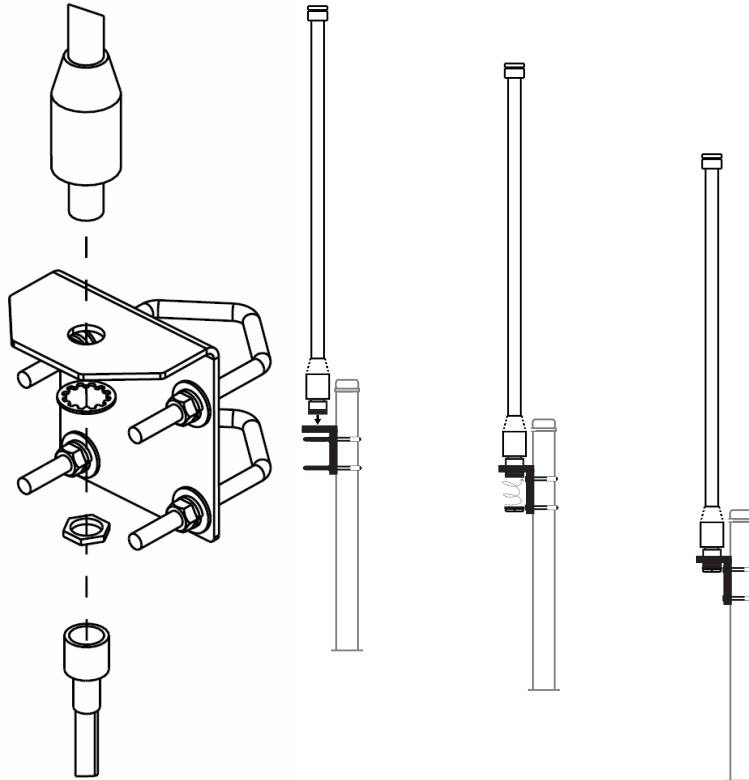


4. Unwind coaxial cable and connect the cable to both the antenna and the lightning protector connected to the transmitter, leaving one loop minimum for a drip loop. Ensure the drip loop is lower than the device, allowing water to flow away from the device.

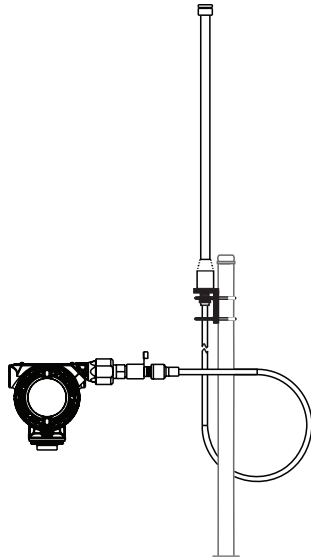


5. Apply the coaxial sealant around each of the coaxial connections and at the lightning arrester, making sure the RF connections are completely sealed.

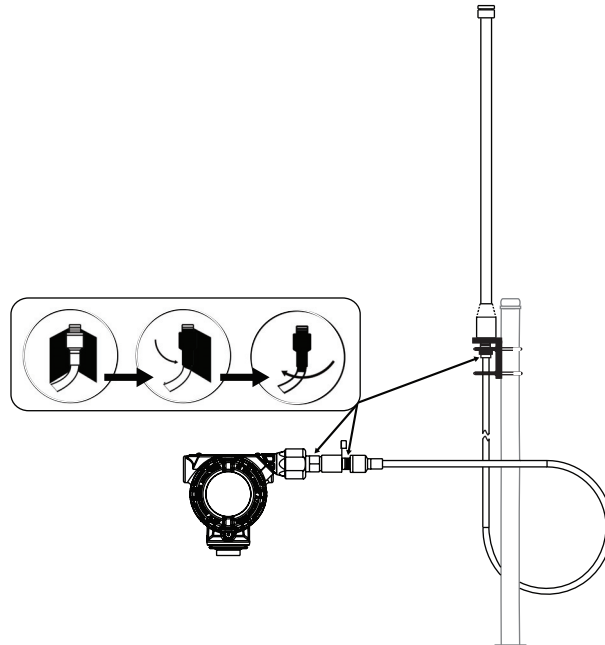

6. Attach U-bolts to mounting bracket in correct orientation ensuring antenna will be positioned in a vertical position.

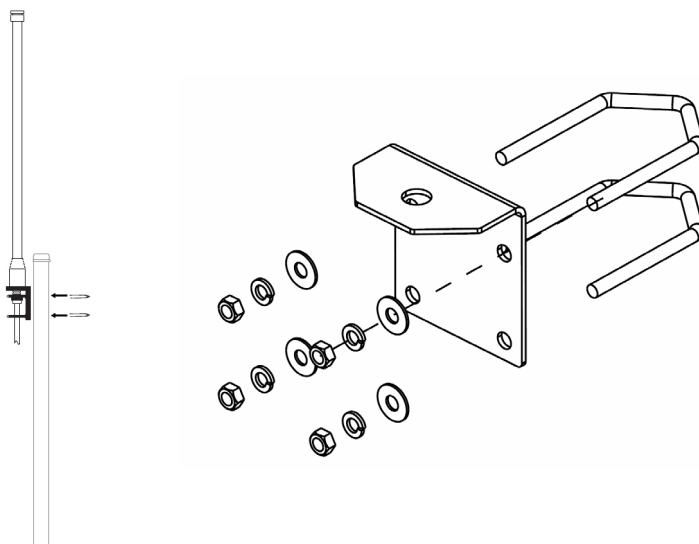

7. Tighten U-bolts to mast and ensure antenna is pointed in a vertical direction.

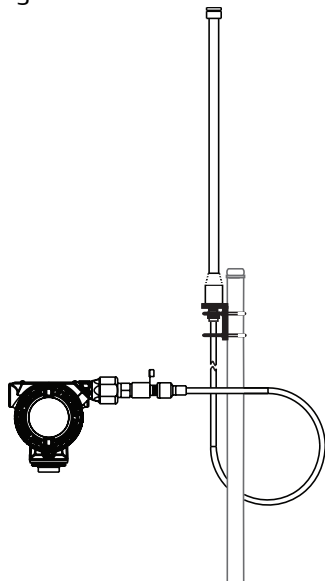

Appendix D Mapping of Alert Messages in the HART® Command 48 Additional Status

This appendix outlines the most important alerts in the HART command 48 Additional Status Field for the Rosemount™ 705 Wireless Totalizing Transmitter. The information in this section can be used by DeltaV™ for alert monitoring, and in the Smart Wireless Gateway for Additional Status mapping in Modbus®, OPC, etc.

A complete list of Additional Status bits is available in the Smart Wireless Gateway.

Table D-1 to Table D-2 displays the device variable and variable mapping indexes for the Rosemount 705 Transmitter.

Table D-3 to Table D-5 shows a list of the most important alert messages that may be displayed in the AMS™ Device Manager and Field Communication together with the location of the Alert in the HART command 48 Additional Status field.

To view Active Alerts, from the Home screen, go to *Service Tools>Active Alerts*.

Table D-1. Device Variable Index

Device variable	Index
0	Supply voltage
1	Electronics temperature
2	Totalized volume
3	Average flow rate

Table D-2. Default Variable Mapping Index (can be modified)

Variables	Index
PV	Totalized volume
SV	Average flow rate
TV	Electronics temperature
QV	Supply voltage

Table D-3. Failure Alerts (F:)

Message	Additional status ⁽¹⁾	Description
Electronics Failure	Byte 8 :: Bit 6	A failure has been detected in the device memory and/or electronics
Configuration Error	Byte 2 :: Bit 6	The device has detected a configuration error based on a change to the device
Radio Failure	Byte 1 :: Bit 6	The wireless radio has detected a failure or stopped communicating
Supply Voltage Failure	Byte 6 :: Bit 2	The supply voltage is too low for the device to broadcast

1. Location of the Alert in the HART command 48 Status field.

Table D-4. Maintenance Alerts (M:)

Message	Additional status ⁽¹⁾	Description
Totalized Volume Rollover	Byte 3 :: Bit 2	The totalized volume has exceeded the maximum value and automatically reset to zero
Average Flow Rate Saturated	Byte 3 :: Bit 0	The average flow rate is beyond the operating limits of the device and the reported value is saturated
Electronics Temperature Beyond Limits	Byte 8 :: Bit 5	The terminal temperature has exceeded the transmitter's maximum range
Supply Voltage Low	Byte 8 :: Bit 4	The supply voltage is low and may soon affect broadcast updates

1. Location of the Alert in the HART command 48 Status field.

Table D-5. Advisory Alerts (A:)

Message	Additional status ⁽¹⁾	Description
Database Memory Warning	Byte 0 :: Bit 2	The device has failed to write to the database memory. Any data written during this time may have been lost
Totalized Volume Warning	Byte 3 :: Bit 1	The totalized volume has exceeded the warning threshold value
Totalized Volume Stopped	Byte 3 :: Bit 5	The totalized volume accumulation has been suspended by user
Sensor Input Life Alert	Byte 3 :: Bit 3	The lifetime pulse count value has exceeded the configured warning threshold
HI HI Volume Alert	Byte 5 :: Bit 4	A process value has surpassed the user defined limit
HI Volume Alert	Byte 5 :: Bit 5	A process value has surpassed the user defined limit
LO Volume Alert	Byte 5 :: Bit 6	A process value has surpassed the user defined limit
LO LO Volume Alert	Byte 5 :: Bit 7	A process value has surpassed the user defined limit
HI HI Flow Alert	Byte 5 :: Bit 0	A process value has surpassed the user defined limit
HI Flow Alert	Byte 5 :: Bit 1	A process value has surpassed the user defined limit
LO Flow Alert	Byte 5 :: Bit 2	A process value has surpassed the user defined limit
LO LO Flow Alert	Byte 5 :: Bit 3	A process value has surpassed the user defined limit
Button Stuck	Byte 1 :: Bit 5	A button on the Electronics Board is detected as stuck in the active position
Non-Critical User Data Warning	Byte 2 :: Bit 1	A user written parameter does not match expected value
Simulation Active	Byte 8 :: Bit 0	The device is in simulation mode and may not be reporting actual information

1. Location of the Alert in the HART command 48 Status field.

Global Headquarters

Emerson Automation Solutions

6021 Innovation Blvd.
Shakopee, MN 55379, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RFQ.RMD-RCC@Emerson.com

North America Regional Office

Emerson Automation Solutions

8200 Market Blvd.
Chanhassen, MN 55317, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RMT-NA.RCCRFQ@Emerson.com

Latin America Regional Office

Emerson Automation Solutions

1300 Concord Terrace, Suite 400
Sunrise, FL 33323, USA
+1 954 846 5030
+1 954 846 5121
RFQ.RMD-RCC@Emerson.com

Europe Regional Office

Emerson Automation Solutions Europe GmbH

Neuhofstrasse 19a P.O. Box 1046
CH 6340 Baar
Switzerland
+41 (0) 41 768 6111
+41 (0) 41 768 6300
RFQ.RMD-RCC@Emerson.com

Asia Pacific Regional Office

Emerson Automation Solutions Asia Pacific Pte Ltd

1 Pandan Crescent
Singapore 128461
+65 6777 8211
+65 6777 0947
Enquiries@AP.Emerson.com

Middle East and Africa Regional Office

Emerson Automation Solutions

Emerson FZE P.O. Box 17033
Jebel Ali Free Zone - South 2
Dubai, United Arab Emirates
+971 4 8118100
+971 4 8865465
RFQ.RMTMEA@Emerson.com



[Linkedin.com/company/Emerson-Automation-Solutions](https://www.linkedin.com/company/Emerson-Automation-Solutions)



[Twitter.com/Rosemount_News](https://twitter.com/Rosemount_News)



[Facebook.com/Rosemount](https://www.facebook.com/Rosemount)



[Youtube.com/user/RosemountMeasurement](https://www.youtube.com/user/RosemountMeasurement)



[Google.com/+RosemountMeasurement](https://plus.google.com/+RosemountMeasurement)

Standard Terms and Conditions of Sale can be found on the [Terms and Conditions of Sale page](#).

The Emerson logo is a trademark and service mark of Emerson Electric Co. SmartPower, DeltaV, AMS, Rosemount, and Rosemount logotype are trademarks of Emerson.

HART and WirelessHART are registered trademarks of the FieldComm Group.

Swagelok is a registered trademark of Swagelok Company.

EtherNet/IP is a trademark of ControlNet International under license by ODVA.

Modbus is registered trademark of Gould Inc.

National Electrical Code is a registered trademark of National Fire Protection Association, Inc.

All other marks are the property of their respective owners.

© 2017 Emerson. All rights reserved.