

Additel/LogII Wireless Data Logging Software

User Manual

Additel Corporation

2013-8

Contents

Chapter One: Overview.....	3
1. Introduction.....	3
2. System Requirements.....	3
3. Software Installation	3
Chapter Two: Functions	5
1. Automatic Scanning.....	6
2. Action Scope of Buttons	6
3. Settings	7
4. Logging.....	9
5. Clear.....	9
6. Unit	9
7. View	11
8. Data Manager	11

Chapter One: Overview

1. Introduction

Additel/LogII Wireless is specially designed to collect real-time data of pressure units under test (UUT). It is a necessary software in pressure data logging.

The features of Additel/LogII Wireless:

- It can automatically scan pressure gauges connected to the computer.
- Graphical interface can display the real-time pressure value and draw the curve for UUTS.
- Supports multiple instruments under test at the same time.
- To store pressure value according to the defined time.
- Supports data exporting in 3 formats.
- Multilingual user interface.

2. System Requirements

Hardware Requirements

CPU: Intel Pentium III (At least)

Memory: 1GB (At least)

Hard Disk free space: 2GB (At least)

Hardware must has serial port

Software Requirements

Operating System:

Windows XP/Windows 2003/Windows Vista/Windows7/Windows8

3. Software Installation

First, Open the file Setup.exe to start the installation.

Second, Install driver will detect whether the following components are installed in system or not. If not, they will be installed automatically; otherwise it will be skipped.

- Windows Installer 3.1
- Windows Imaging Component
- Microsoft .NET Framework 4

Third, The Wizard interface will appear as shown in below picture. Users can finish the installation by following this Wizard.

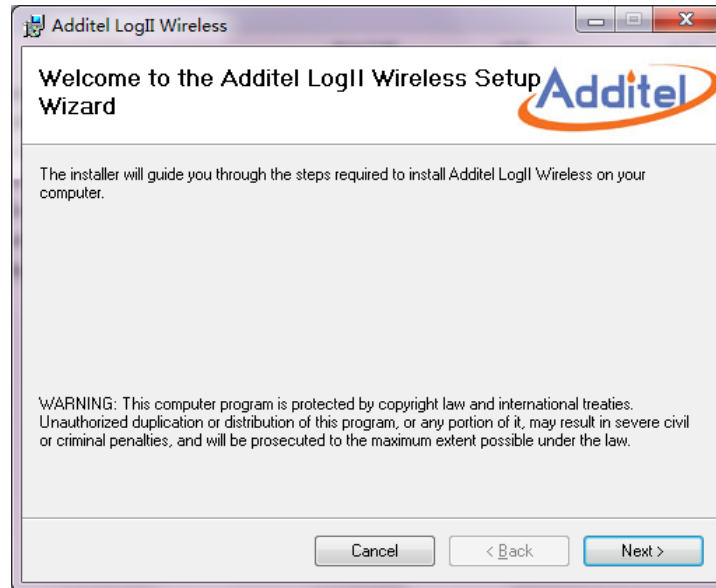


Figure 1-1

When the installation is finished, the following icon will be shown on the desktop. As below picture 1-2.



Figure 1-2

If your computer could not check out the Wireless Master, please installing the WMD970 driver for the Wireless Master which can be found in the installation CD "Tools\WMD970 Driver" folder.

Chapter Two: Functions

Start the software by double-clicking above icon, the main interface will be shown as below.

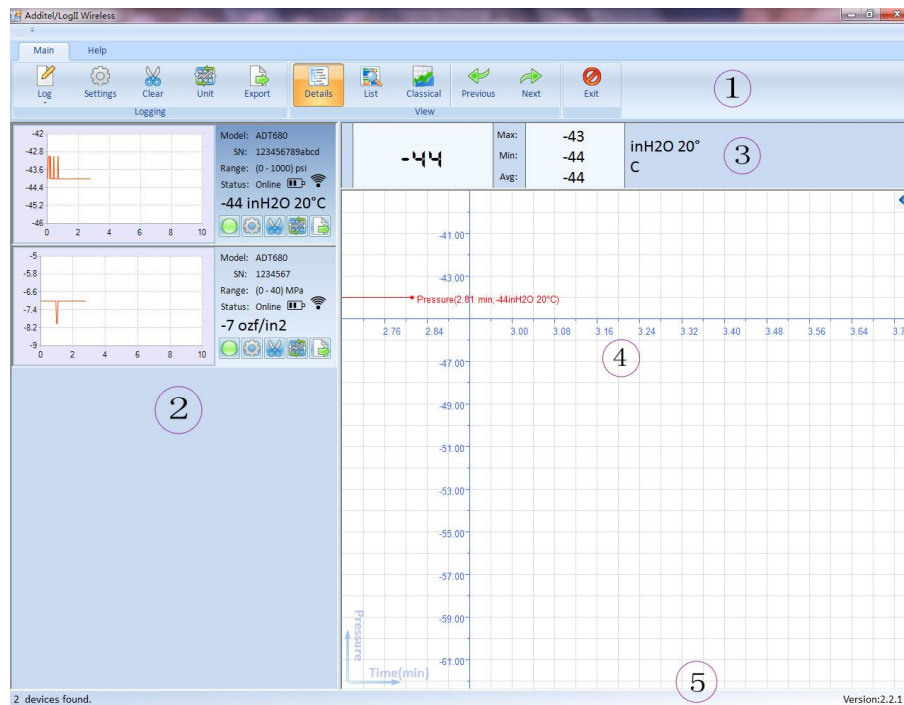


Figure 2-1

The main interface consists of 5 parts:

No.	Name	Description
1	Toolbar	It includes all the functions.
2	UUTs' list	The list will display all the connected UUTs. It shows the UUTs' information, real-time pressure value, real-time curve and main function buttons.
3	Real-time pressure display area	This area will display the real-time pressure, max pressure, min pressure and average value of selected UUT.
4	Pressure value curve display area	This area shows the whole curve of selected UUT.
5	Status bar	This area shows information like prompt message and software version.

1. Automatic Scanning

Once it starts, the software will automatically scan the connected UUTS without manual operation. And the relevant UUT information frame will be displayed in the UUTs' list area (#2).

The real-time pressure value and curve of selected UUT will be displayed separately in area #3 and #4 too.

If the software cannot detect the connected UUT, please check the following items.

- Please check whether the WMD970 driver is installed and the Wireless Master station is connected correctly.
- Please check whether the UUT is turned on.
- Please check whether the Channel of UUT matches the software.
- Please make sure there is no other Wireless Master's Channel occupied the Channel used by UUT.
- Please make sure there is no other software of PC occupied the serial port of instrument using.

2. Action Scope of Buttons

The functions of "Log", "Setting", "Clear", "Unit" and "Export" are same with the five buttons on the each frame of UUTs. And they are one to one correlate. As shown in picture 2-2.

The difference is the buttons on the toolbar could control all the connected UUTs, however the buttons on each frame could only control the relevant one.

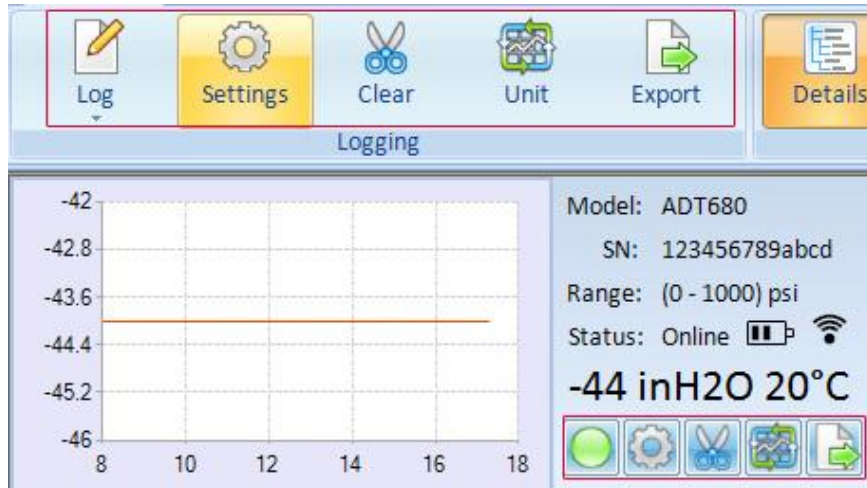



Figure 2-2

3. Settings



Click the button  on toolbar, the Settings interface appears as below.

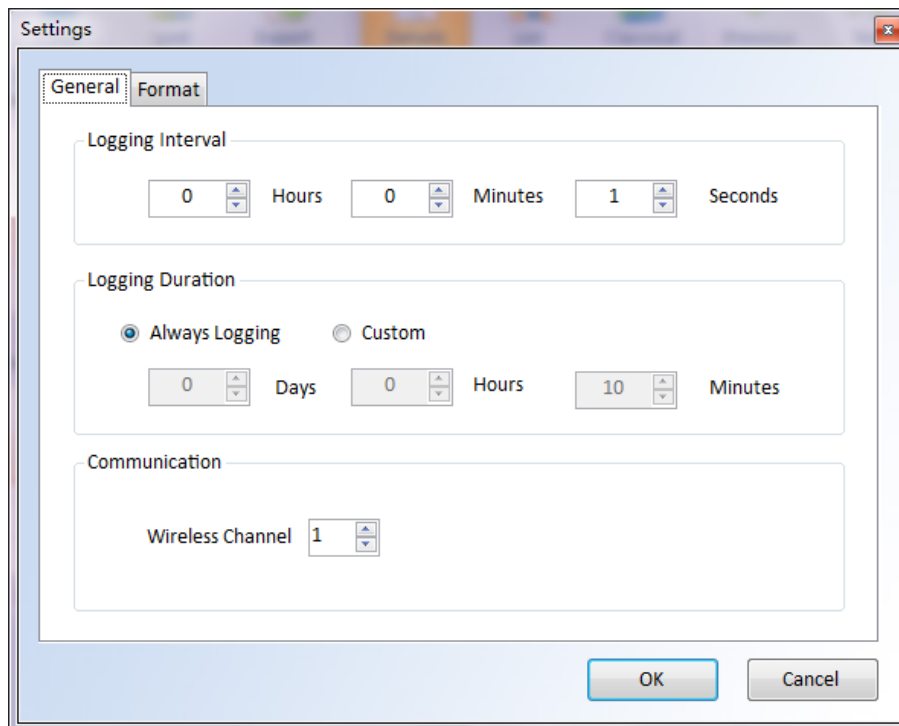


Figure 2-3


General

- Logging Interval
It means the interval time between 2 stored data.
- Logging Duration
Means the total time of the whole logging process will last. The default value will never stop the logging process, users can decide when to stop it according to requirements. Please set time before logging.
- Communication
The default value of channel of the Wireless Master station is 1. Please change it in your mind.

Format

- Chart Style
To set the display mode of the Chart.
- Date Format
To set the display mode of the Date.



Click the button  on UUT frame to enter the below window. There is another tab (Gauge Profile) in the Settings.

Settings

General Format Gauge Profile

Scale

Reading multiplying factor 1.000 (range: 0.900 to 1.100)

Reading offset value 0.000000 bar

Resolution

Number Digits 5

Default...

OK Cancel


Figure 2-4

Gauge Profile


- Scale
Reading multiplying factor (range: 0.900 to 1.100). Standard value should be 1.000.
If display is 1.500, when we key-in the reading multiplying factor to 1.1. The display will change to read 1.650 (1.500 x 1.100)
Reading offset value. If we offset the reading of 0.123, then all the reading will be minus 0.123 even you off the power and on again. It is different from the zeroing.
- Resolution
Selection of Resolution. It is able to select the decimal point at which position. In the down list, you can select 5 or 6.

4. Logging



Software will display the real-time pressure value and the real-time chart. However it has not stored these data yet, users need to click the “start all” under the “log” menu or to click

the  button on each frame of UUTs to start storing.


When users want to stop storing data, they can click the “Stop All” under “Log” menu or

 buttons on each frame of UUTs.

5. Clear

Users can delete the stored data by clicking button  on toolbar or  on each frame of UUTs. When the deleting operation is finished, it will re-start another logging task automatically.

6. Unit

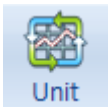Users can define engineering unit by clicking button  on toolbar. There is a field for users to define engineering unit by themselves. The Reference Unit can be kPa or PSI.

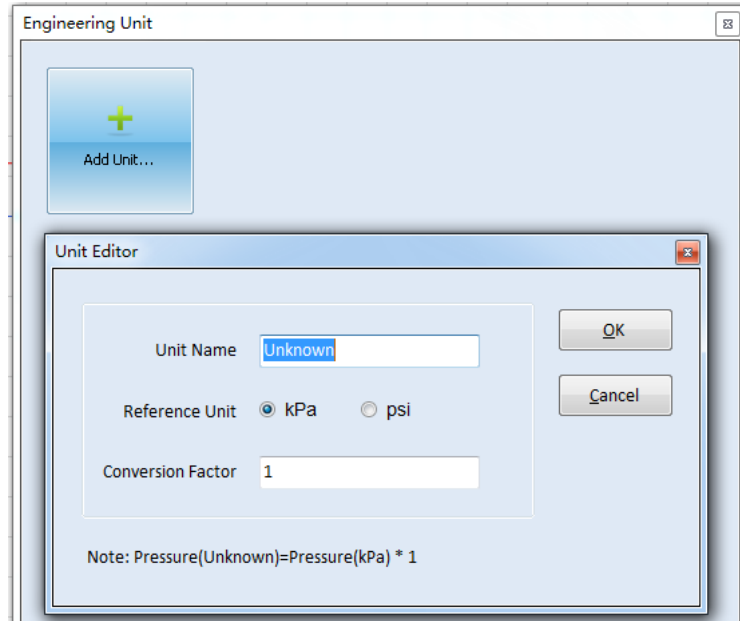



Figure 2-5

Users can change the pressure unit by clicking button  on each frame of UUTs. If you want to change the current pressure unit, please select the Custom Mode. And in the Custom Mode you can find the pressure unit which is defined by yourself. The Automatic Mode is checked in system by default.

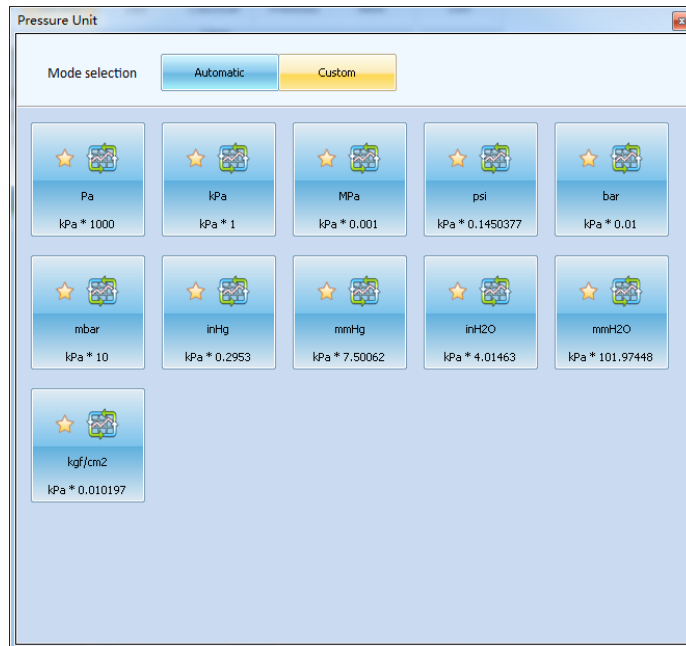


Figure 2-6

7. View

There are 3 different kinds of view for the interface, Details, List and Classical. The default is Details, as shown in below picture 2-1. Users can switch among them as per requirements by clicking the buttons in the “view” menu.


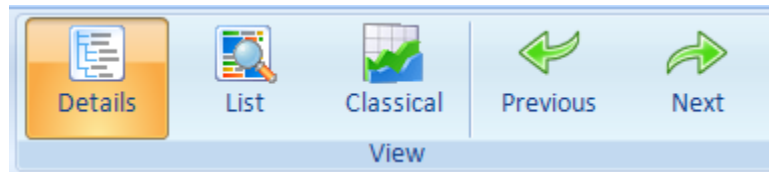



Figure 2-7

8. Data Manager

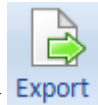

Click **Export** button on the toolbar or  buttons on each frame of UUTs to enter into the data managing window. This window includes the following functions.

- Search
Users can search the stored data by setting time or inputting S/N of UUTs.
- Browse
Users can view the details information of selected data by clicking the “Open” on toolbar or double-click it.
- Export
The recorded data can be exported out as 3 formats, Excel workbook, XML Sheet and CSV Text File.
- Delete records
- Backup, recover or compress database.

Data Manager

Export Open Delete Clear Advanced Cancel

Seek Options

Today
 Week
 Month
 All
 Custom
 2012-08-18 - 2012-11-16

S/N

File Format

Excel Workbook
 XML Sheet
 CSV Text File

ID	S/N	Model	Range	Number	Start DateTime	End DateTime	Interval(HH:mm:ss.s)	RealUnit	Ma
1	211155408979	ADT681	(0-60)bar	3	2012-11-16 17:13:34	2012-11-16 17:13:37	00:00:01.0	bar	1.
2	211155408266	ADT681	(0-60)bar	3	2012-11-16 17:13:34	2012-11-16 17:13:37	00:00:01.0	bar	1.
3	211155402823	ADT681	(0-60)bar	3	2012-11-16 17:13:34	2012-11-16 17:13:37	00:00:01.0	bar	1.
4	211155356788	ADT681	(0-60)bar	4	2012-11-16 17:13:34	2012-11-16 17:13:37	00:00:01.0	bar	1.
5	211155408979	ADT681	(0-60)bar	22	2012-11-16 17:12:50	2012-11-16 17:13:12	00:00:01.0	bar	1.
6	211155408266	ADT681	(0-60)bar	23	2012-11-16 17:12:50	2012-11-16 17:13:13	00:00:01.0	bar	1.
7	211155402823	ADT681	(0-60)bar	23	2012-11-16 17:12:50	2012-11-16 17:13:13	00:00:01.0	bar	1.
8	211155356788	ADT681	(0-60)bar	23	2012-11-16 17:12:50	2012-11-16 17:13:13	00:00:01.0	bar	1.
9	211155408979	ADT681	(0-60)bar	16	2012-11-16 17:12:34	2012-11-16 17:12:50	00:00:01.0	bar	1.
10	211155408266	ADT681	(0-60)bar	16	2012-11-16 17:12:33	2012-11-16 17:12:50	00:00:01.0	bar	1.
11	211155402823	ADT681	(0-60)bar	17	2012-11-16 17:12:33	2012-11-16 17:12:50	00:00:01.0	bar	1.
12	211155356788	ADT681	(0-60)bar	17	2012-11-16 17:12:33	2012-11-16 17:12:50	00:00:01.0	bar	1.

12 records found.

Figure 2-8